


Step 1:

Unfold the table top, then place the Plastic Pegs (RF40004) into the predrilled holes under the table top as per diagram 1.

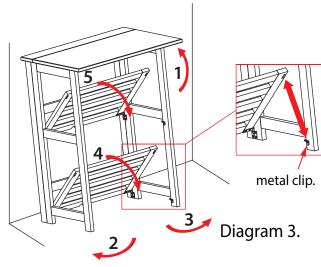


Step 3:

Unfold the top, left and right side panels and two shelves following the sequence shown on diagram 3. *Make sure each shelf rests on the metal clips on the side panels*.



Step 2:

Gently lean the kitchen cart (A) against the wall as per diagram 2.

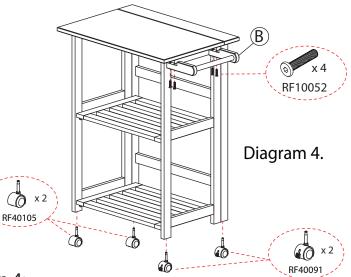

Step 4:

- Attach the Handle (B) to the unit by using Screws (RF10052).

- Insert the Casters Free (RF40105) into the holes underneath the left side panel and Caster Lock (RF40091) into the holes underneath the right side panel as per diagram 4.