


CAROLINA CHAIR & TABLE COMPANY





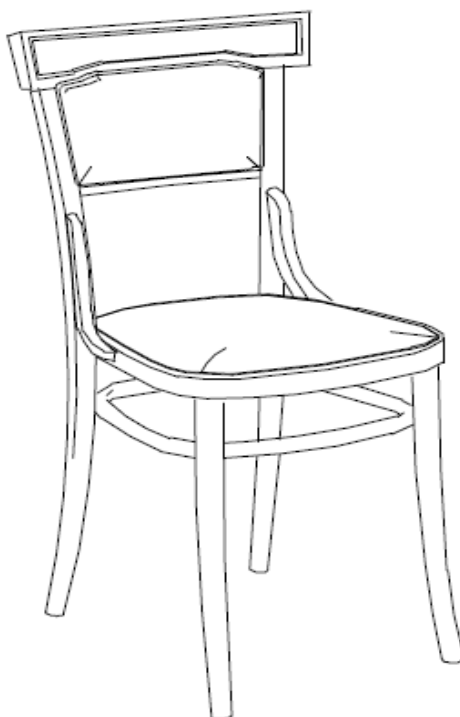

Assembly Instructions

ITEM : CH-1937-UB











Thank you for purchasing Carolina Chair & Table Company product. This product has been designed for for easy assembly and constructed durability. Please take the time to read and follow the assembly instructions carefully. If a part or hardware is missing or you have any difficulties in assembling this product, please contact us Toll Free at 1-800-228-3876.




PARTS LIST (FOR 2 NOS. OF CHAIR):

| | | | |
|----|----------------|---|-------|
| P1 | SEAT |  | 2 PCS |
| P2 | RING STRETCHER |  | 2 PCS |
| P3 | BACK LEG FRAME |  | 2 PCS |
| P4 | STUMPS-RIGHT |  | 2 PCS |
| P5 | STUMPS-LEFT |  | 2 PCS |
| P6 | FRONT LEG |  | 4 PCS |


HARDWARE LIST (FOR 2 NOS. OF CHAIR):

| | | | |
|----|-----------------------|---|--------|
| H1 | M6 x 35mm JCBC SCREW |  | 20 PCS |
| H2 | M6 x 80mm JCBC SCREW |  | 4 PCS |
| H3 | SPRING WASHER |  | 8 PCS |
| H4 | FLAT WASHER |  | 8 PCS |
| H5 | ALLEN KEY |  | 1 PC |
| H6 | WOOD BUTTON |  | 8 PCS |
| H7 | METAL BRACKET |  | 4 PCS |
| H8 | CSK SCREW M3.5 x 16mm |  | 8 PCS |




STEP 1

| | |
|-----------|---|
| H2 x 2 |  |
| M6 x 80mm | |
| H3 x 2 |  |
| H4 x 2 |  |

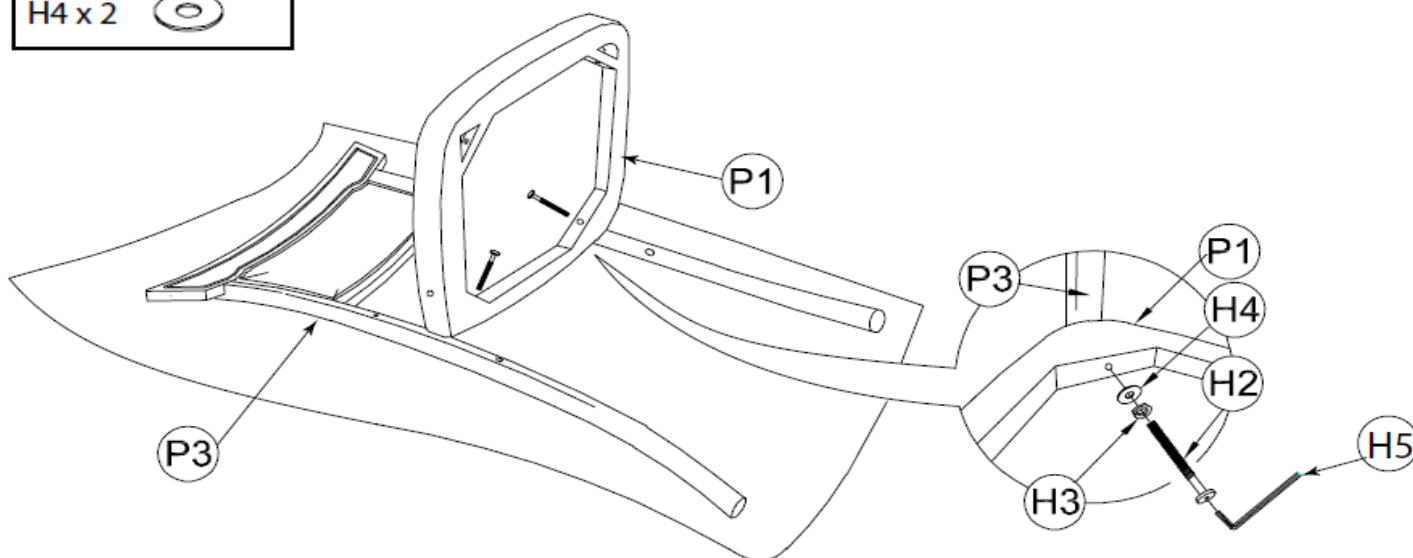
Assemble the Seat (P1) into the Back Leg Frame (P3) by Bolts (H2) with Spring Washer (H3) & Flat Washer (H4) and aligning the bolts into holes in the seat frame through the nuts in the back legs. Tighten the bolt using Allen Key (H5).



STEP 2

| | |
|-----------|---|
| H1 x 2 |  |
| M6 x 35mm | |
| H3 x 2 |  |
| H4 x 2 |  |


Assemble the Front Legs (P6) into the Seat Frame (P1) by aligning Bolts (H1) with Spring Washer (H3) & Flat Washer (H4). Use Allen Key (H5) to tighten the bolt, but DO NOT fully Tighten it yet.

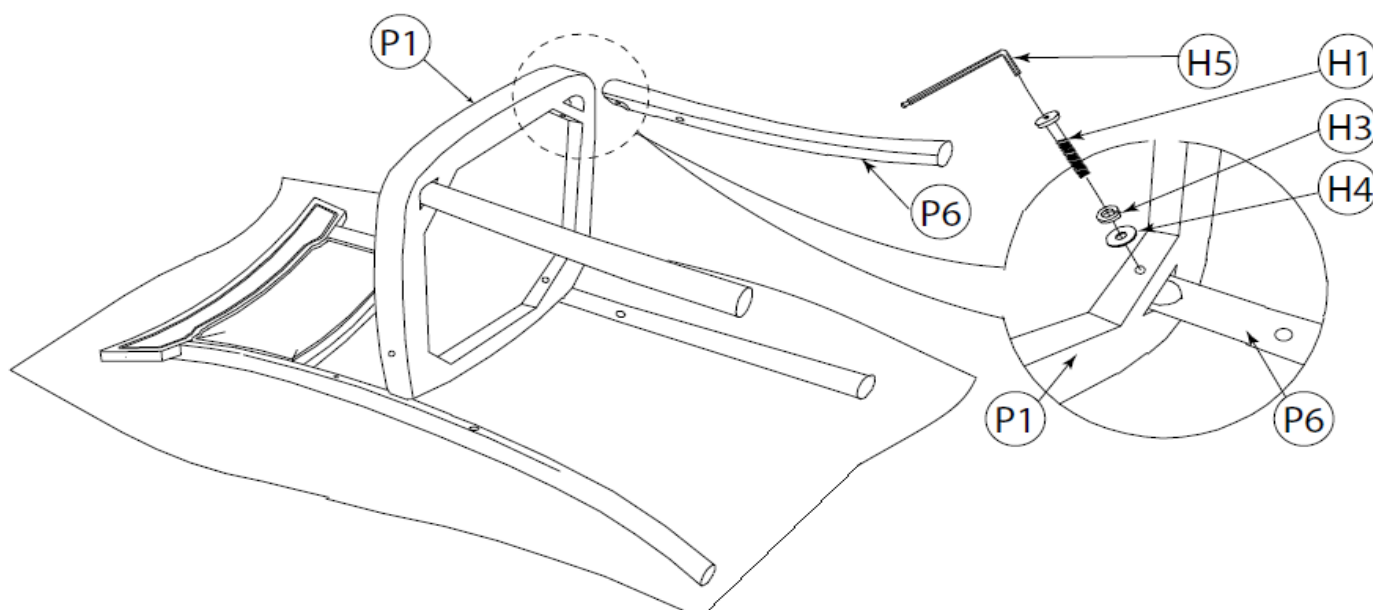

STEP 3

H1 x 4
M6 x 35mm

Assemble the Ring Stretcher (P2) into the Front Legs (P6) and both Back Legs by using Bolts (H1). Tighten the bolt using Allen Key (H5).

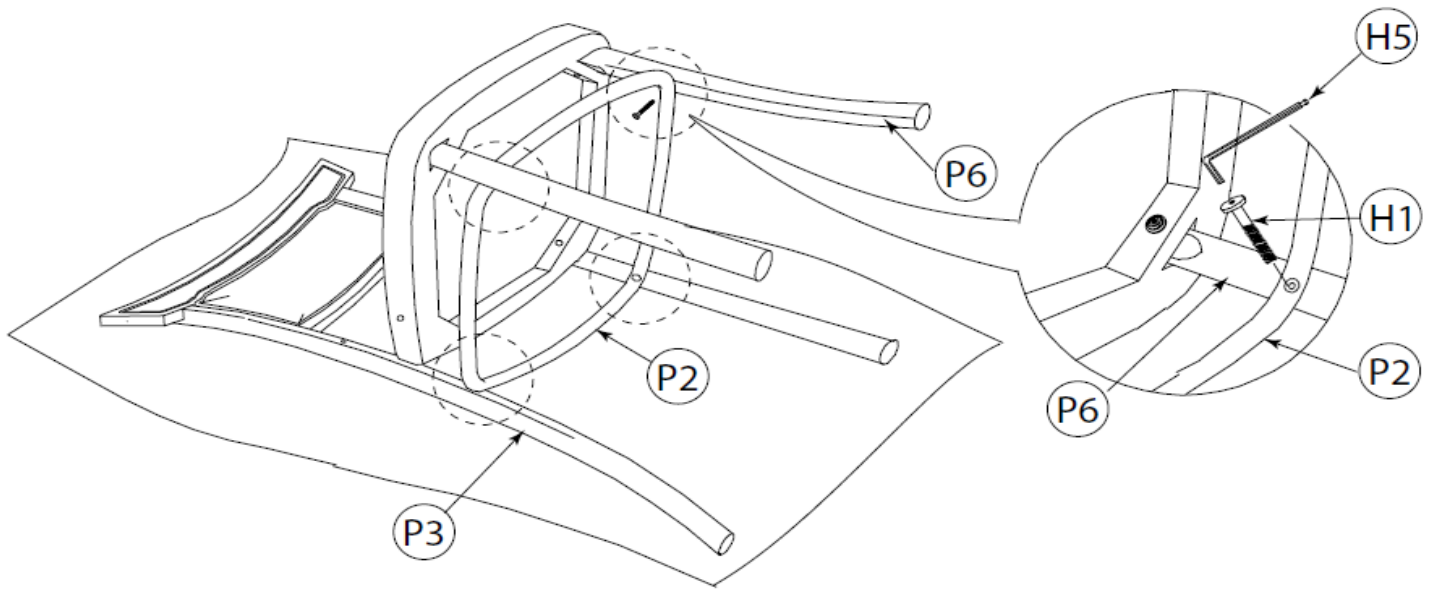


STEP 4

H1 x 2
M6 x 35mm

Install Stump (P4-R) to each Right side by aligning Bolts (H1) into the hole in the Stumps to the nuts in the Back Leg (P3) & the Right side of the Seat frame (P1).

Full Tighten all the bolts in the chair.

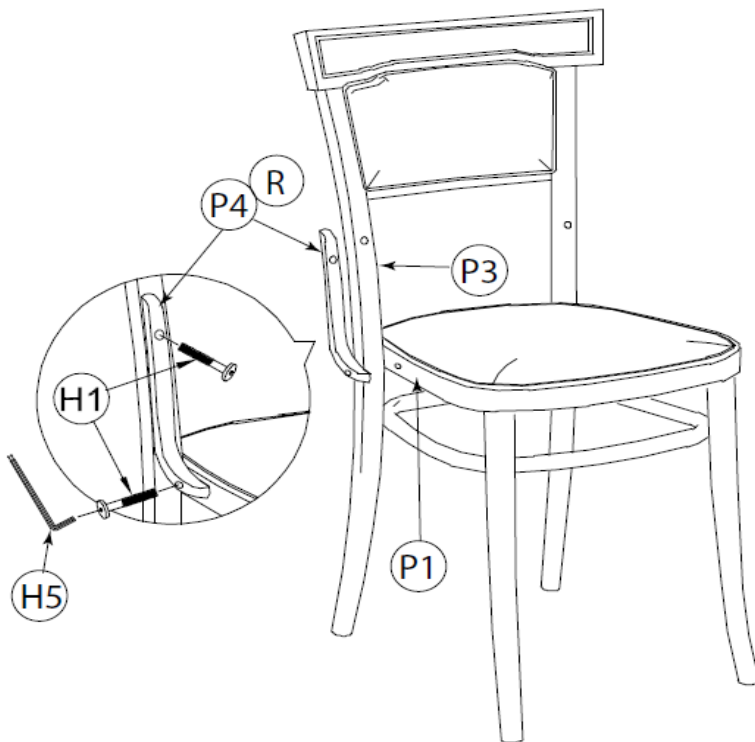


STEP 5


H1 x 2
M6 x 35mm

Install Stump (P4-L) to each Left side by aligning Bolts (H1) into the hole in the Stumps to the nuts in the Back Leg (P3) & the Left side of the Seat frame (P1).


Full Tighten all the bolts in the chair.

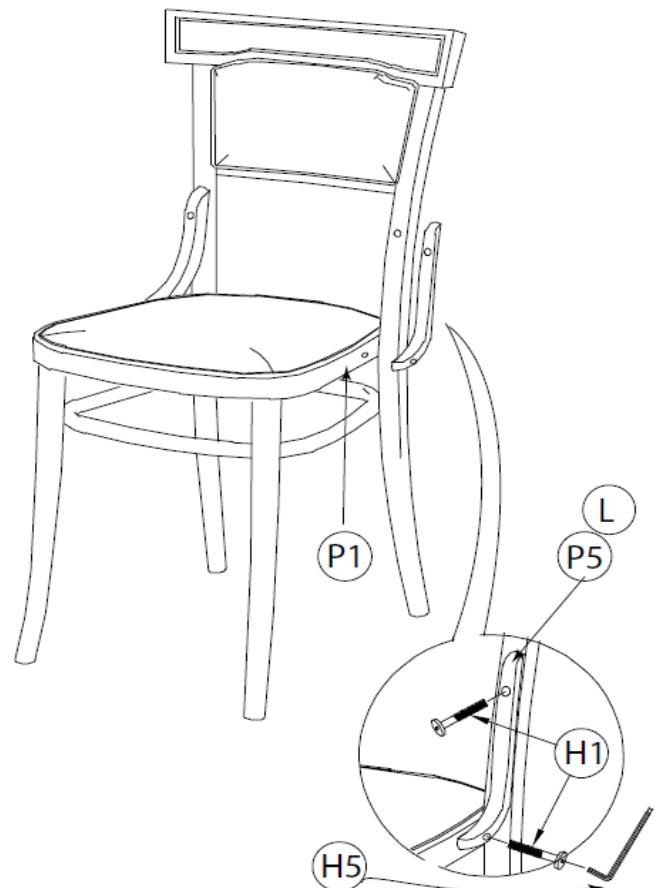


STEP 6


H6 x 4 

Cover the screw holes with Wood Button (H6)

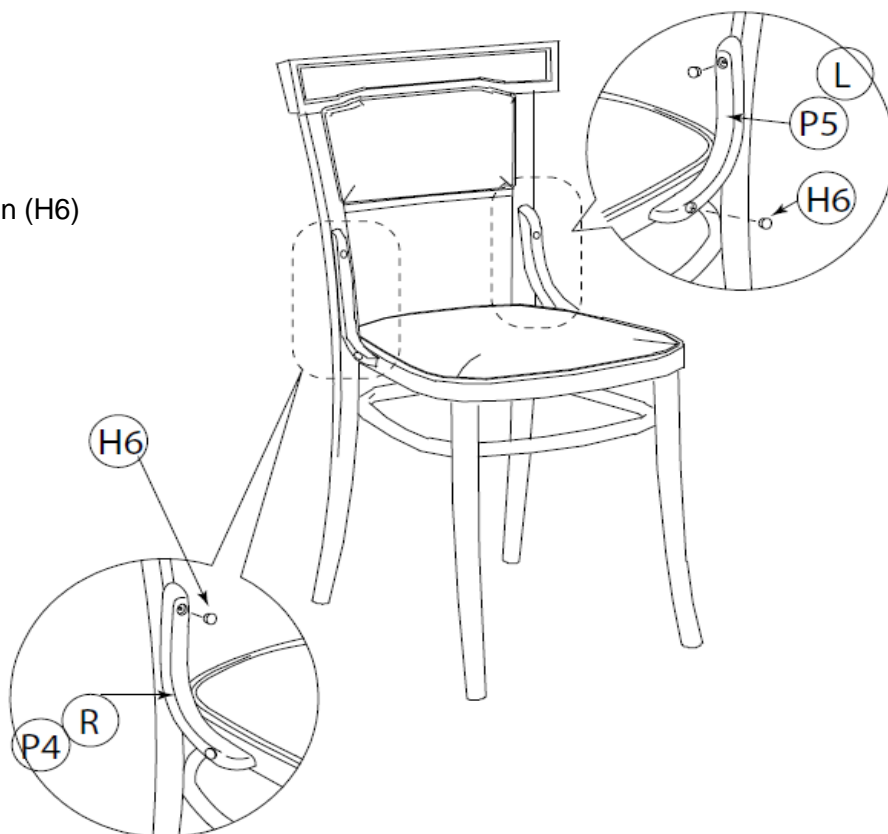


STEP 7


H7 x 1 


H8 x 2 
M3.5 x 16mm

To add strengthening the Chair legs to the seat frame, mount the Metal angle (H7) by aligning screw (H8) and tighten it using a household screwdriver.

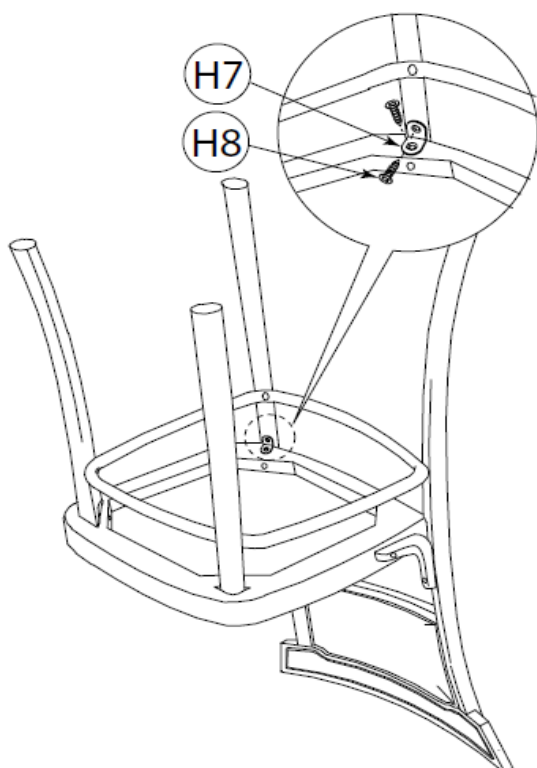

STEP 8

H7 x 1 

H8 x 2 
M3.5 x 16mm

Mount the Metal angle (H7) onto the other side of leg by aligning screw (H8) and tighten it using a household screwdriver.

