


## ORIGINAL CEDAR COMPOSTER ADD-ON KIT | ASSEMBLY INSTRUCTIONS

Questions? Email [info@greenesfence.com](mailto:info@greenesfence.com) or call 800-622-5510 Monday - Friday 8am-5pm EST

### PACKAGE CONTENTS

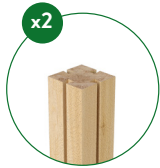

31in. x 2.5in. x 2.5in.  
Corner Posts



4ft. Boards



Spacers



*Note: Add-On Kits are not intended for use as free-standing compost bins. They are specifically designed to be attached to completed Greenes Composters only.*

**1.**

#### BUILD A WALL

Hold a Board on the ground so it's standing on edge with the notched ends to the left and right. Slide a Corner Post down over one notched end of the Board. Next, slide another Corner Post over the other notched end. This forms a wall.



**2.**

#### CONNECT THE WALL TO ONE SIDE OF THE EXISTING COMPOSTER BIN

Extend two Boards parallel to each other from the Corner Posts on one side of the existing Composter, and slide the wall from Step One over the other ends to complete the base of a three-sided frame.



**3.**

#### BUILD THE ADD-ON COMPOSTER WALLS

Slide one Spacer into the top of each Corner Post, and push them down so they are directly on top of the Boards on all three walls. Then slide one Board down on top of the Spacers. If needed, tap snugly into place with a rubber mallet. Repeat with alternating Spacers and Boards to complete all three Add-On Composter walls.



#### INSTALLATION SUPPORT

[youtube.com/greenesfence](https://youtube.com/greenesfence)

#### NEED HELP?

Contact customer service  
instead of returning item to store.  
800-622-5510 M-F 8-5  
[info@greenesfence.com](mailto:info@greenesfence.com)



MADE  
IN  
USA