



ASSEMBLY INSTRUCTION

Hall Tree


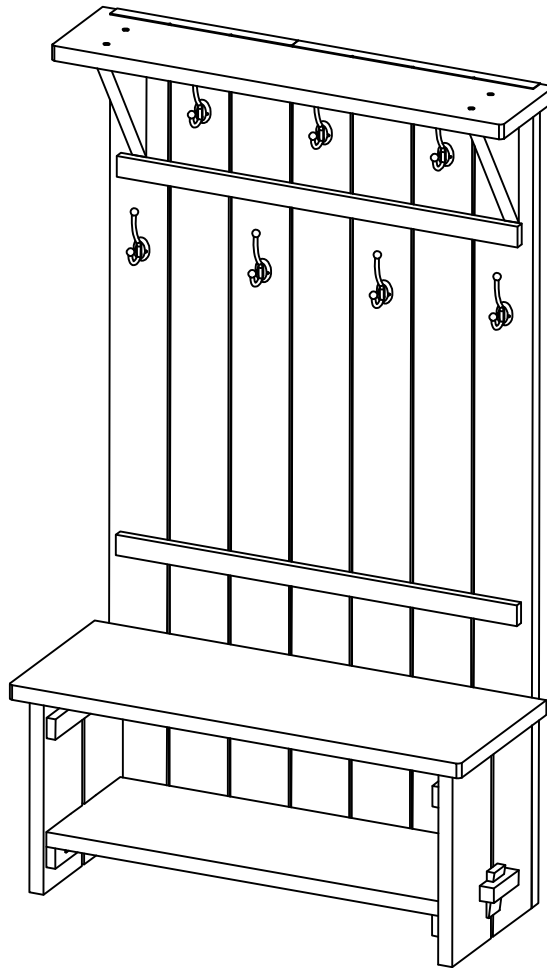


REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

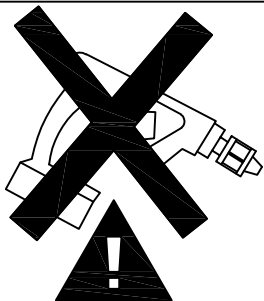

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

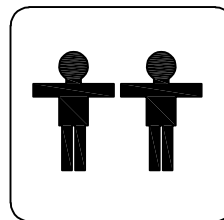


Tools Required

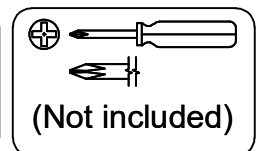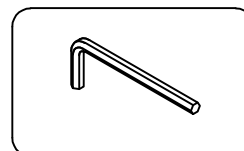

www.boltonfurniture.com

Part list - Hall Tree

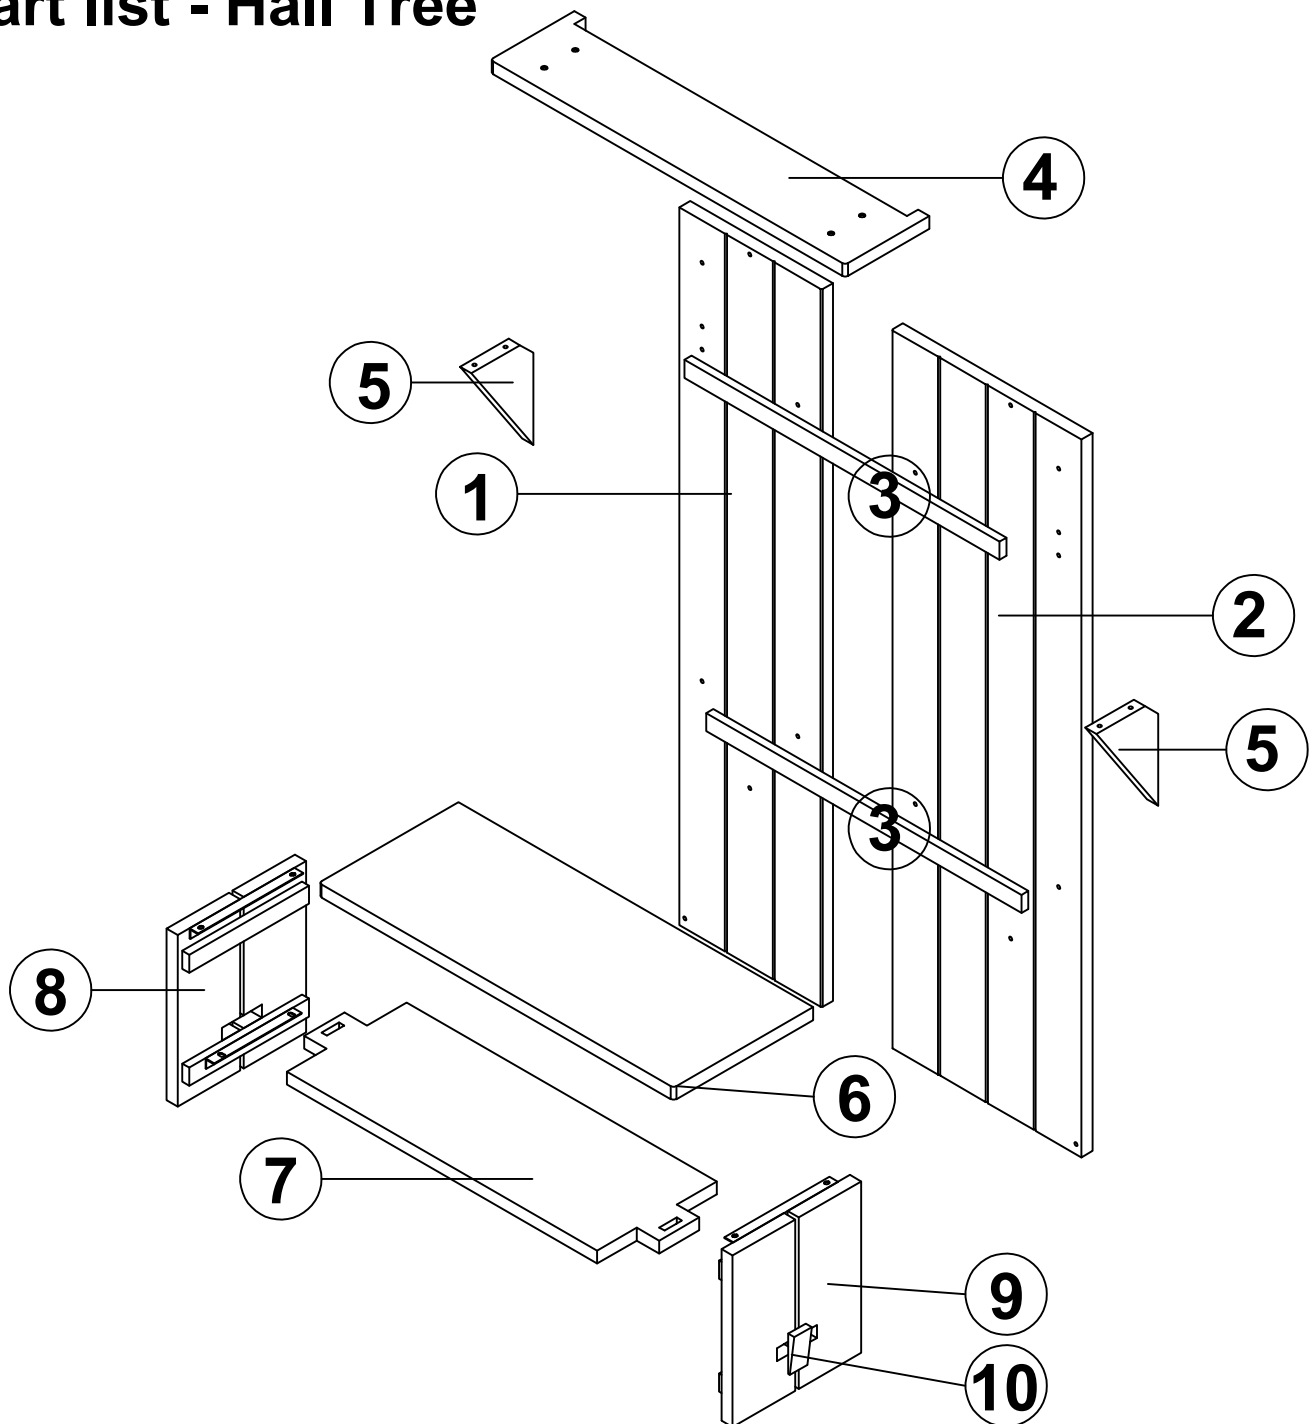

Identifying the hardware-Identify the hardware using the illustrations below

A  **08**
M6x20MM BOLT


B  **24**
M6x40MM BOLT

C  **32**

D  **28**
Ø4*20mm


E  **07**

F  **02**
ANTI-TIP


G  **01**

www.boltonfurniture.com

Step 01

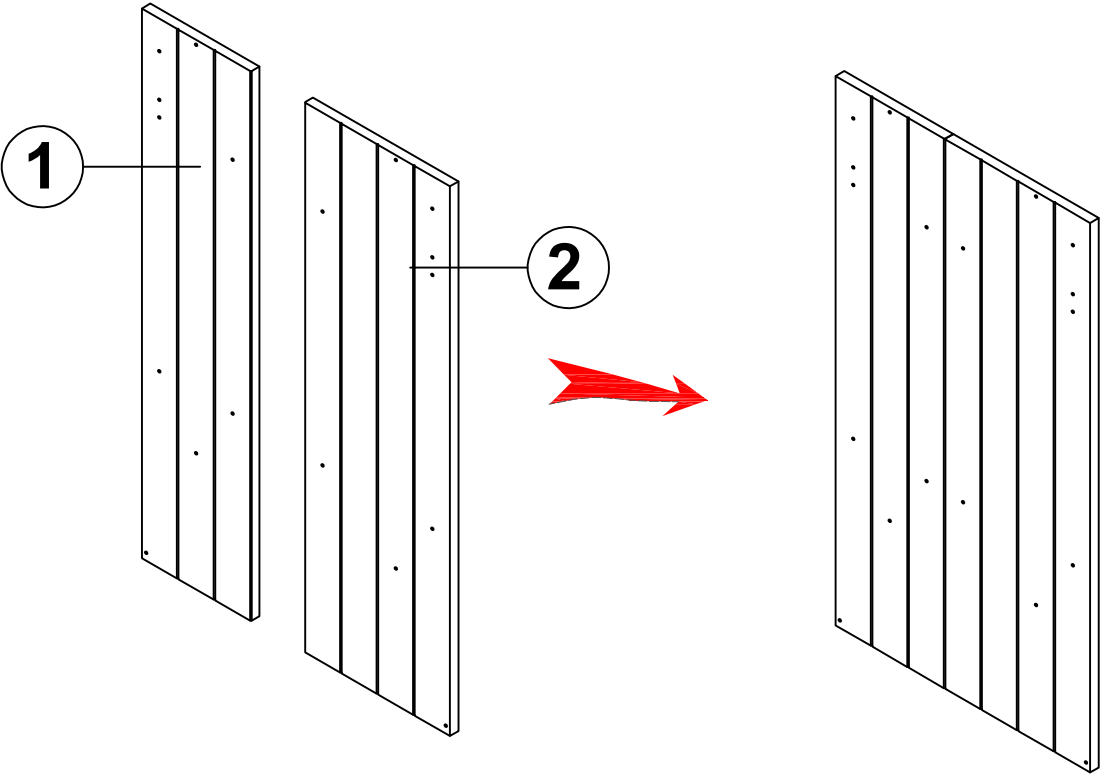


Step 02

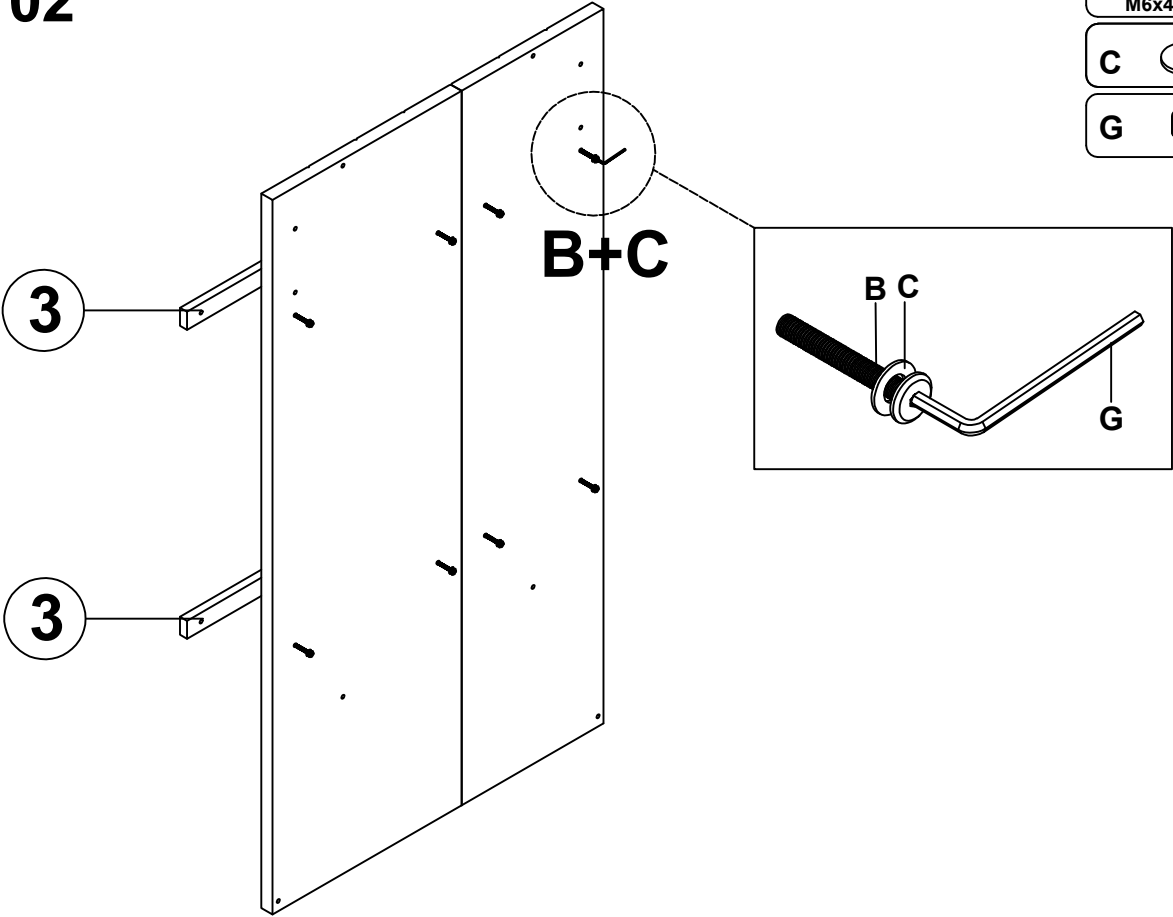


B		08
M6x40MM BOLT		
C		08
G		01


Step 03

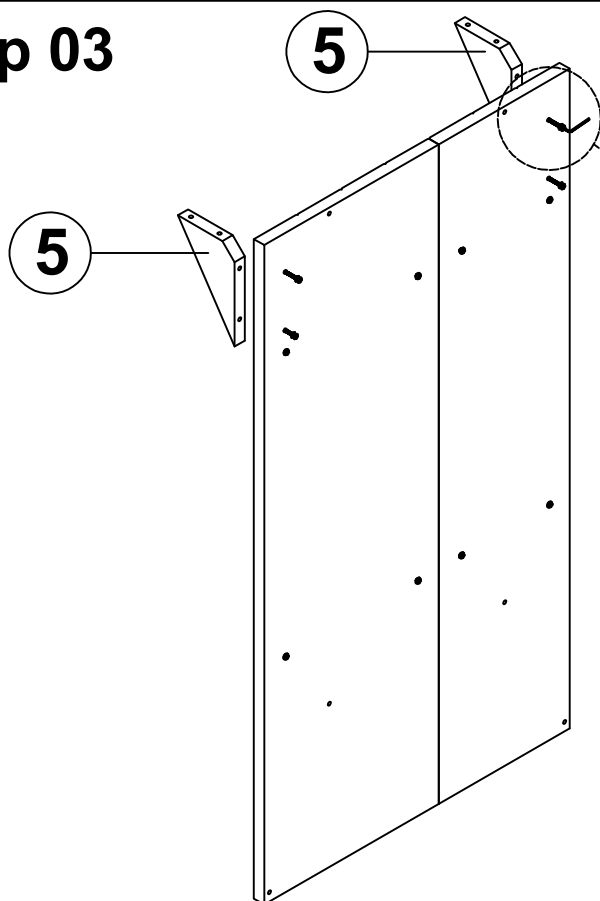


B		04
M6x40MM BOLT		
C		04
G		01

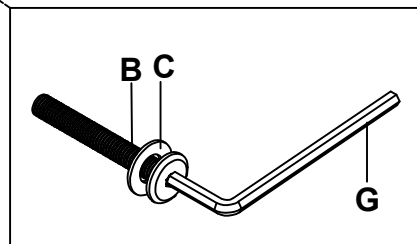

Step 04

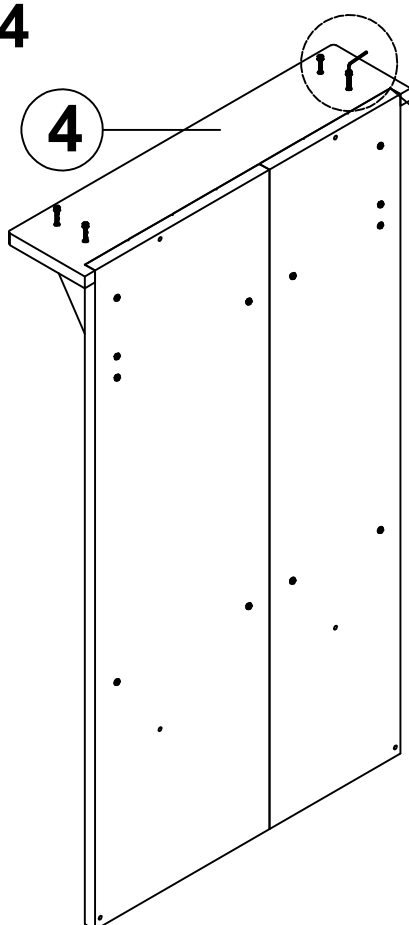


B		04
M6x40MM BOLT		
C		04
G		01

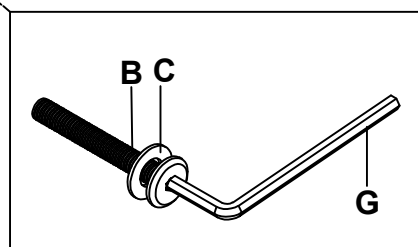


Step 05

A		02
M6x20MM BOLT		
C		02
G		01

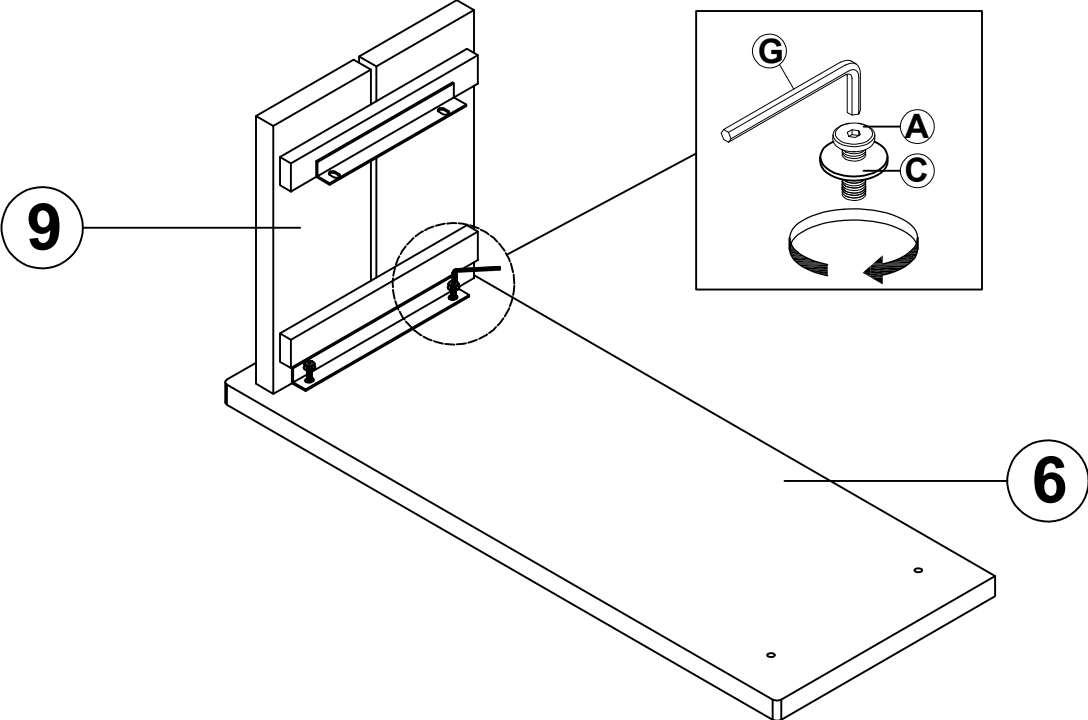


Step 06


A		02
M6x20MM BOLT		
C		02
G		01

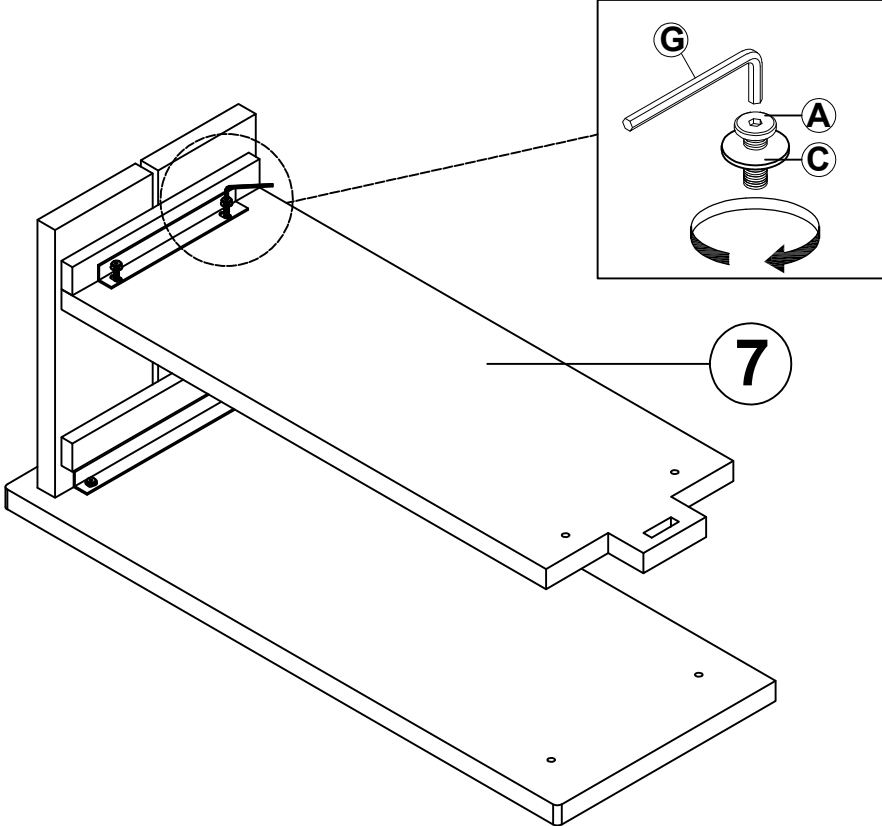

Step 07

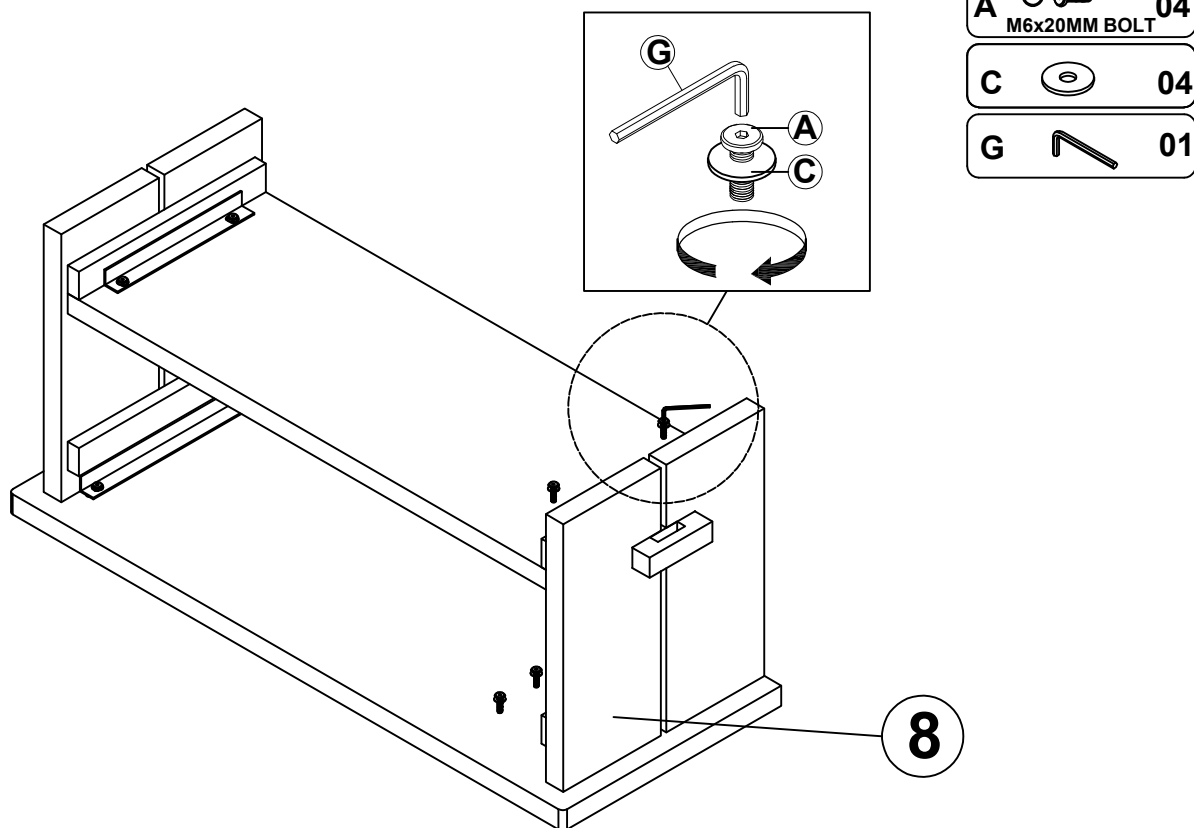


Step 08

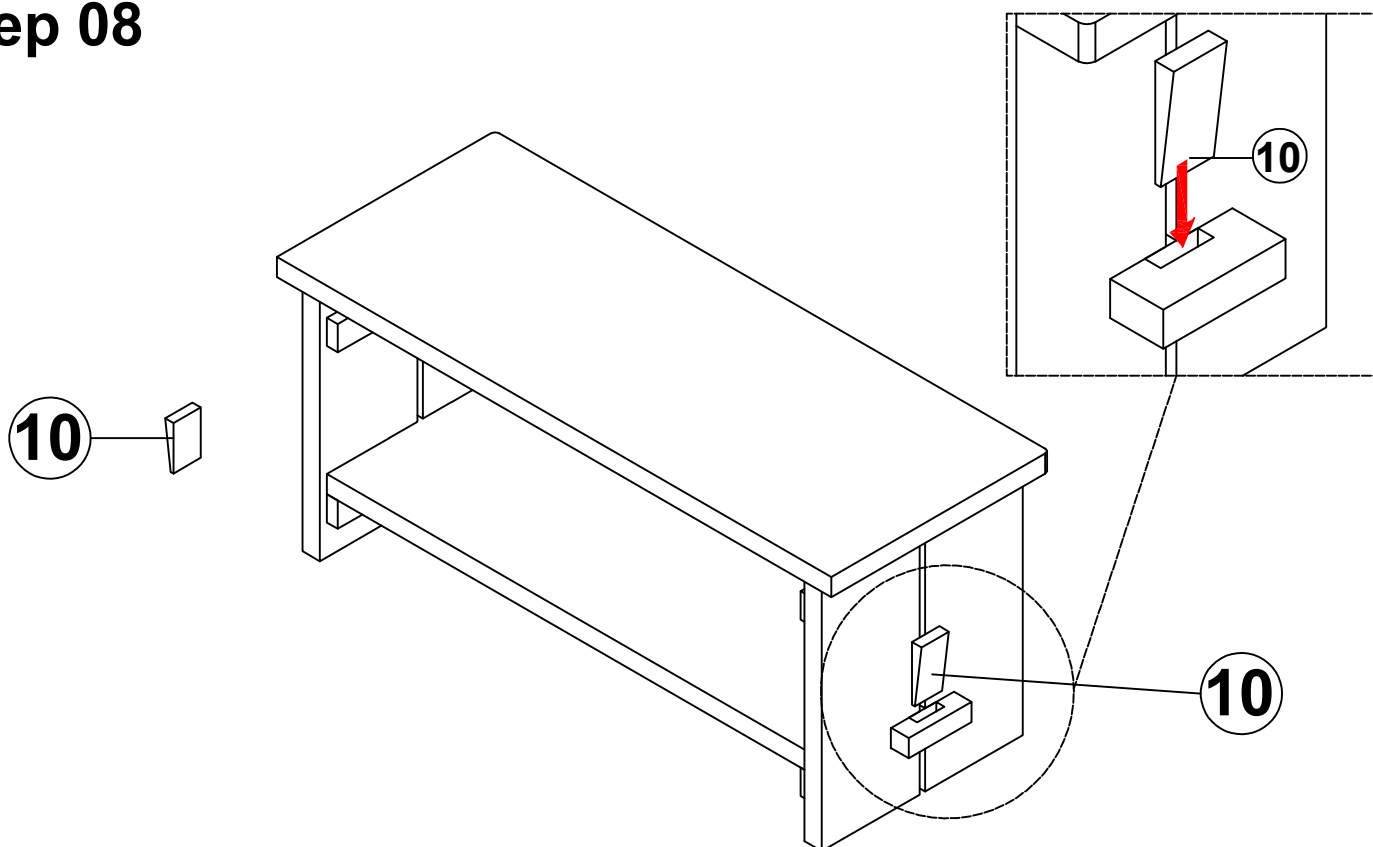


Step 09

B		04
M6x40MM BOLT		
C		04
G		01



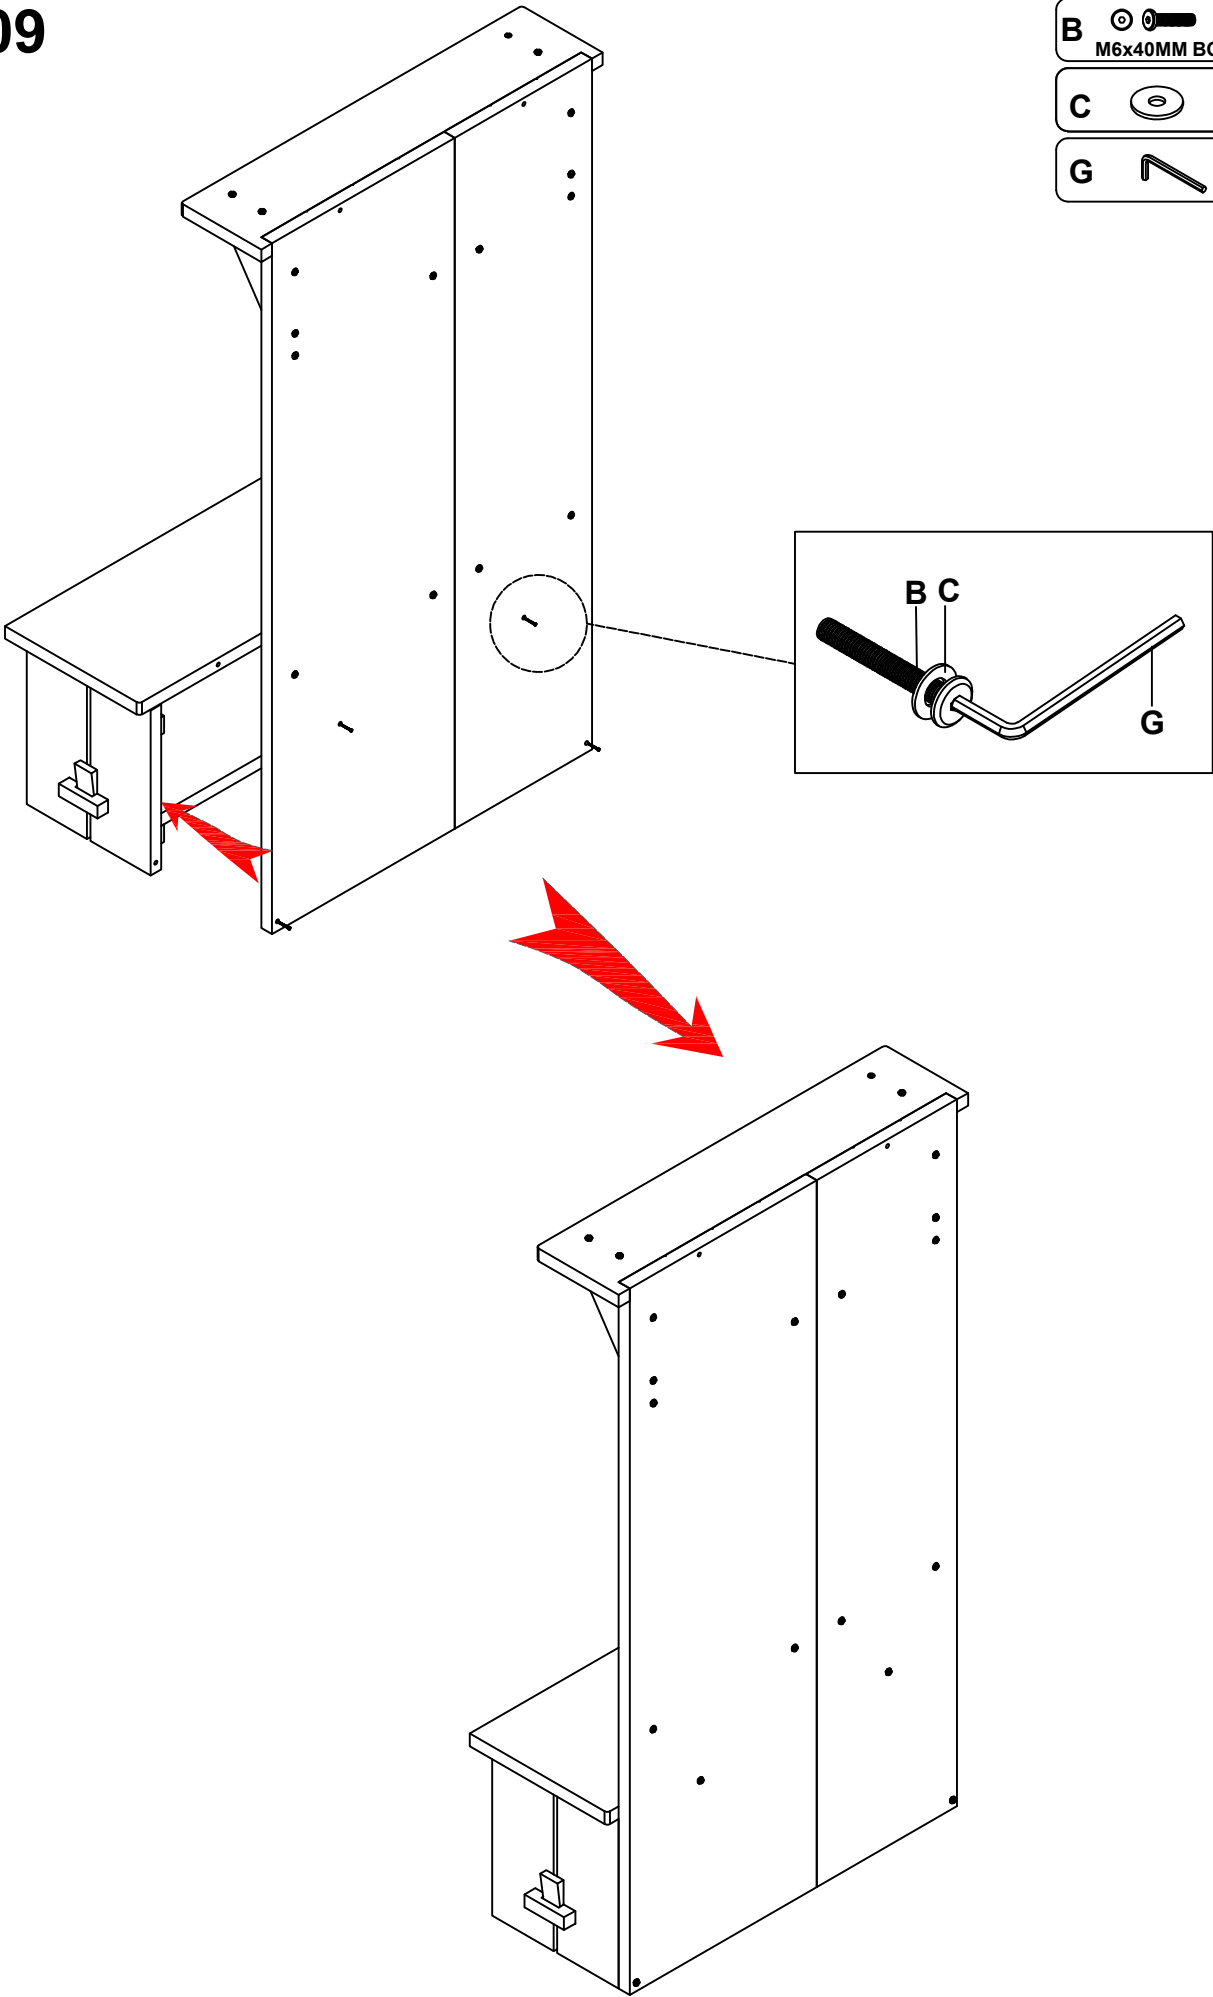


Step10




D		28
Ø4*20mm		
E		07
		
(Not included)		
		01

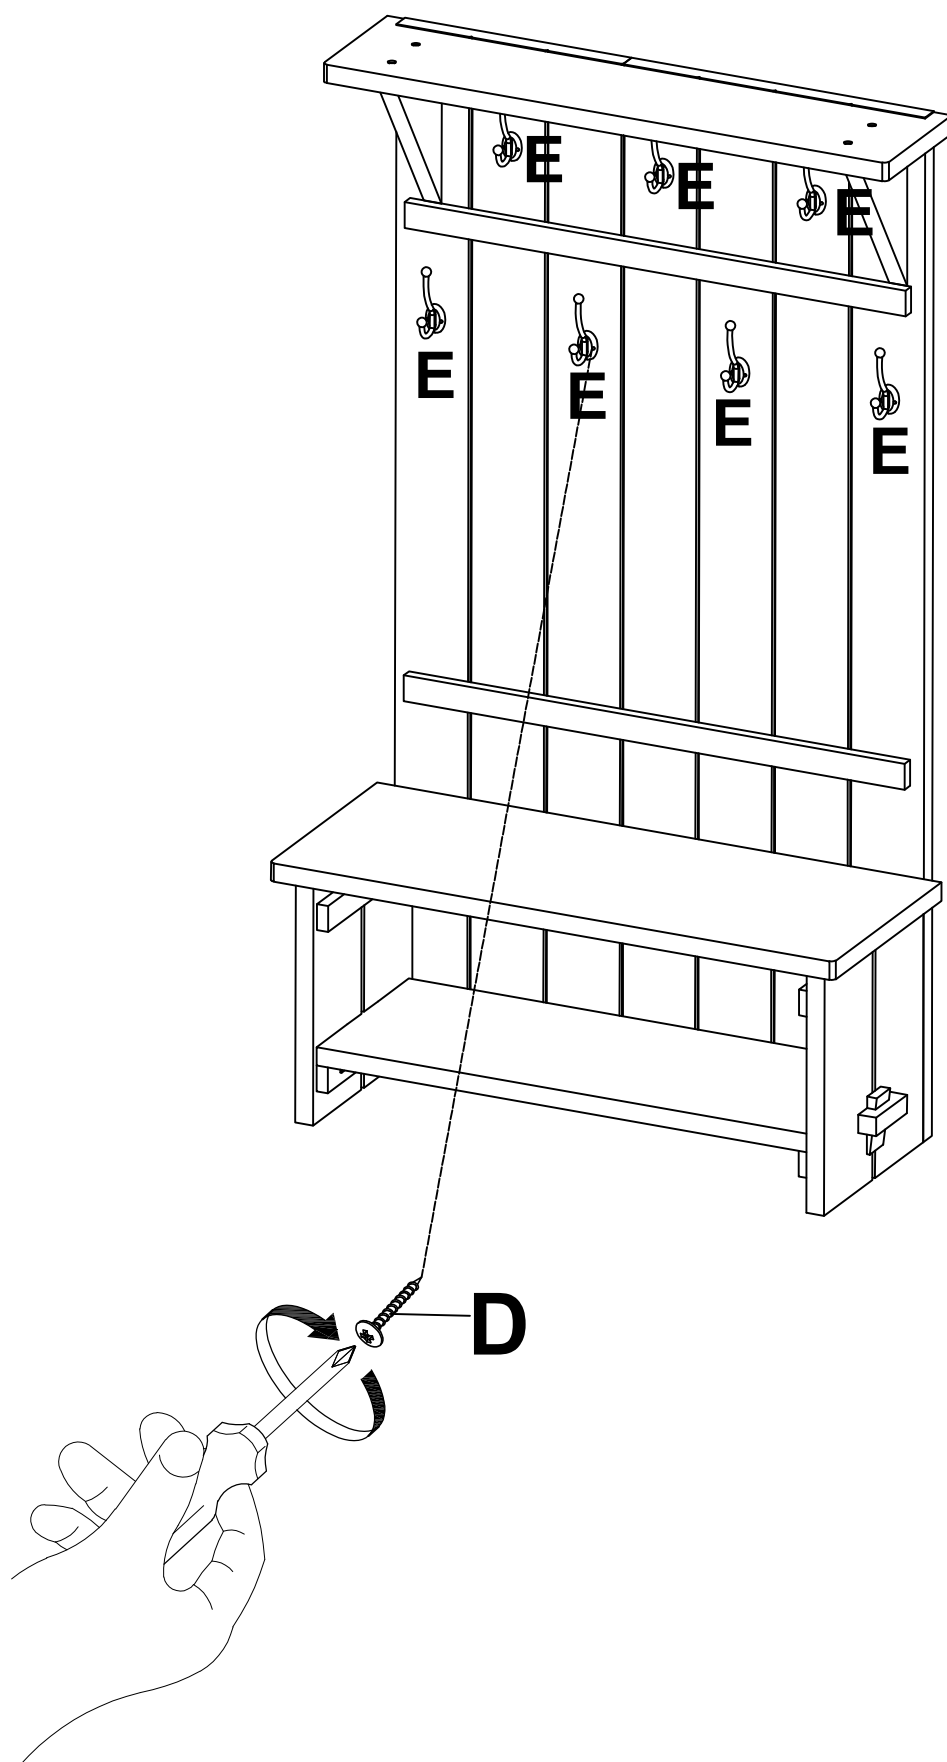

"F" Anti-Tip

A	 4x14 Screw	04	C	 Plastic wall bracket	04
B	 4x35 Screw	04	D	 Nylon strap 1 40mm	02

Secure to Stud behind Wallboard.

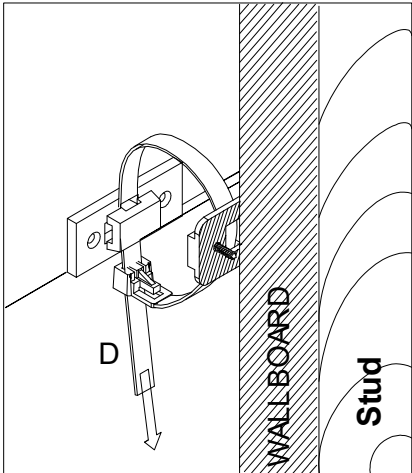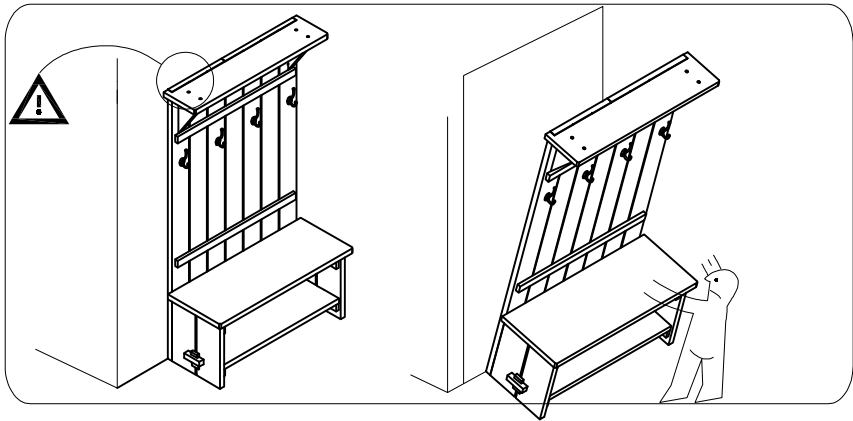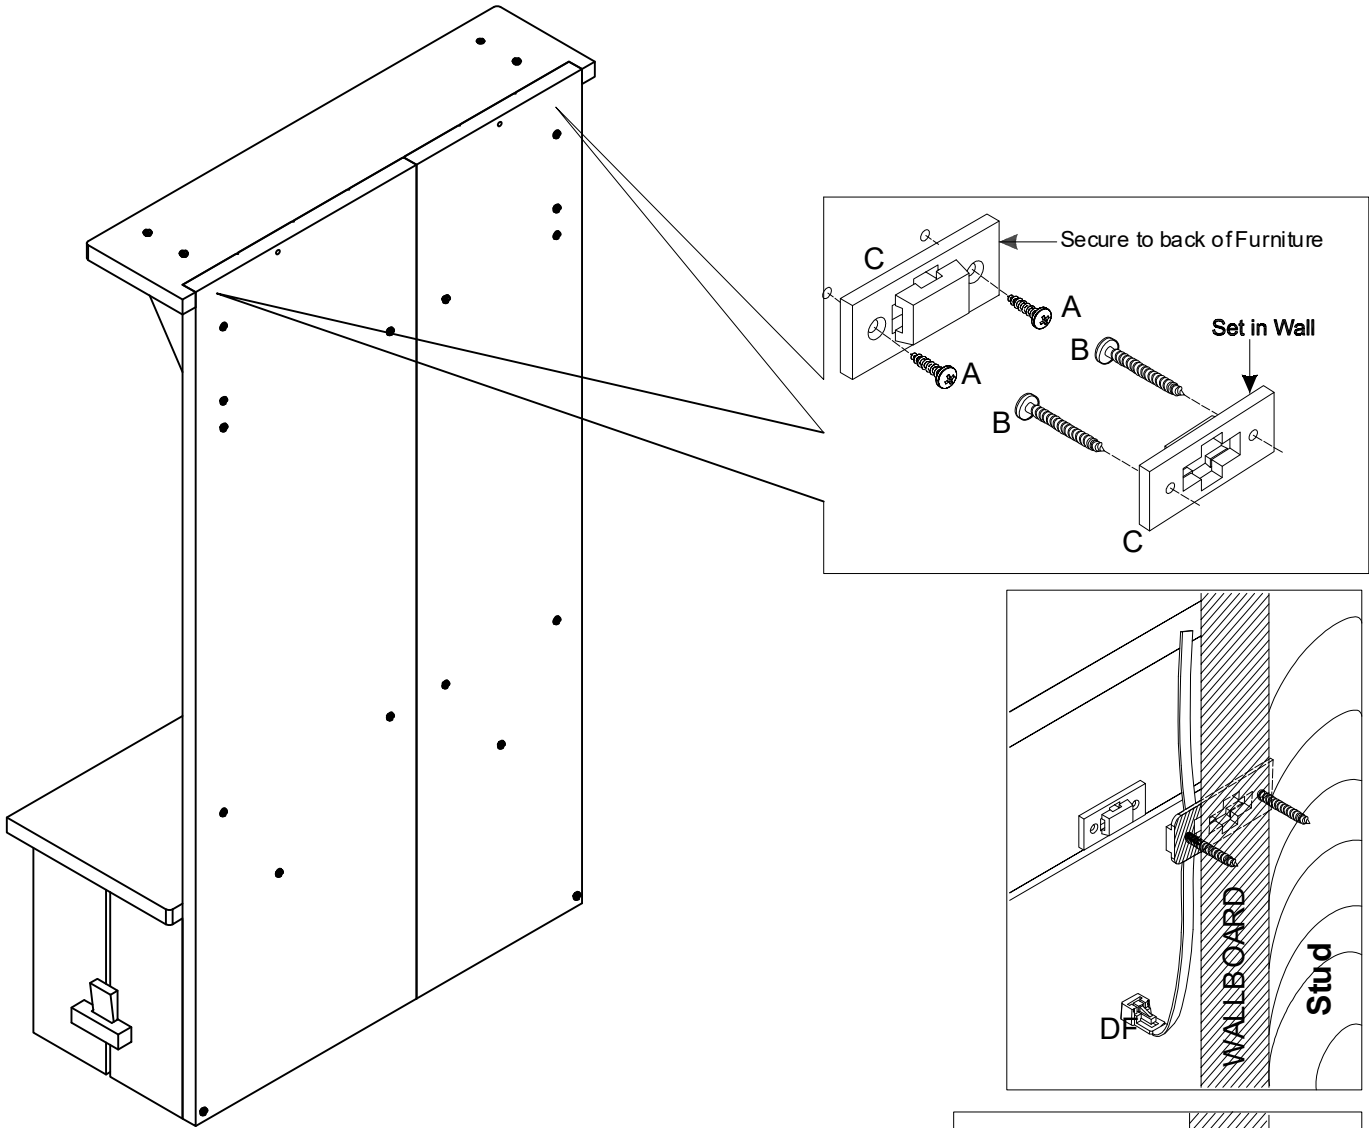

Secure to Stud behind Wallboard!