
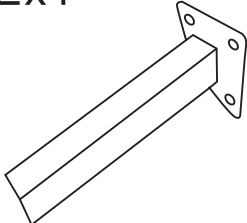
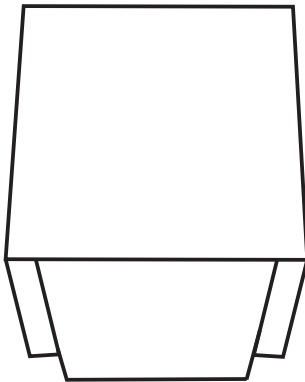
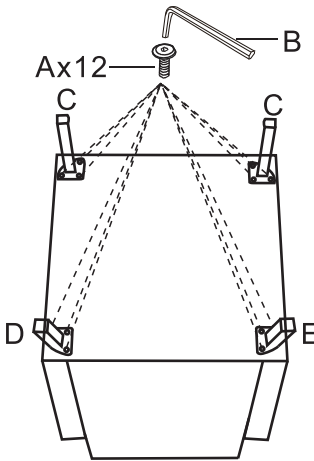
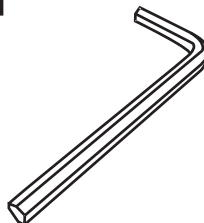
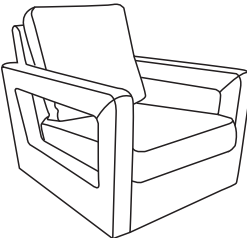
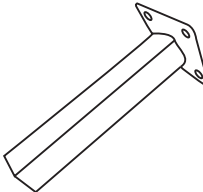

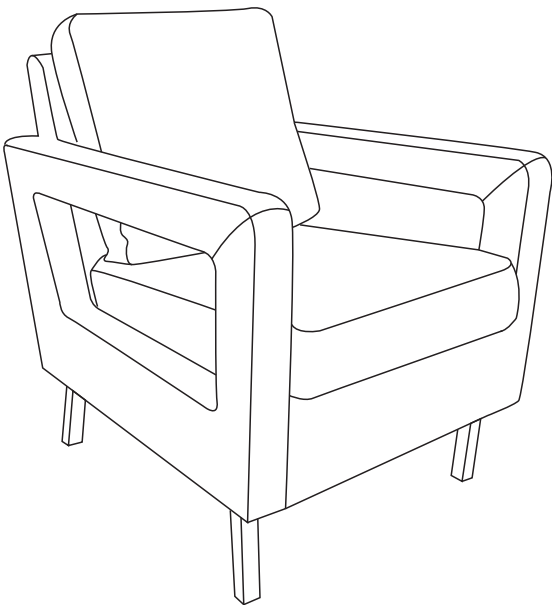


# Assembling Instruction

<p>Ax12</p>  <p>M6x18MM</p>	<p>Ex1</p> 	<p>①</p> 	<p>② Do not fully tighten the bolts until all the bolt align with the hole. Pls be sure you align the hole first.</p> 
<p>Bx1</p> 	<p>Fx1</p> 		
<p>Cx2</p> 	<p>Gx2</p> <p>EXTRA PARTS</p> 	<p>③</p> 	
<p>Dx1</p> 