




Mod. **SAN MARINO**

BED

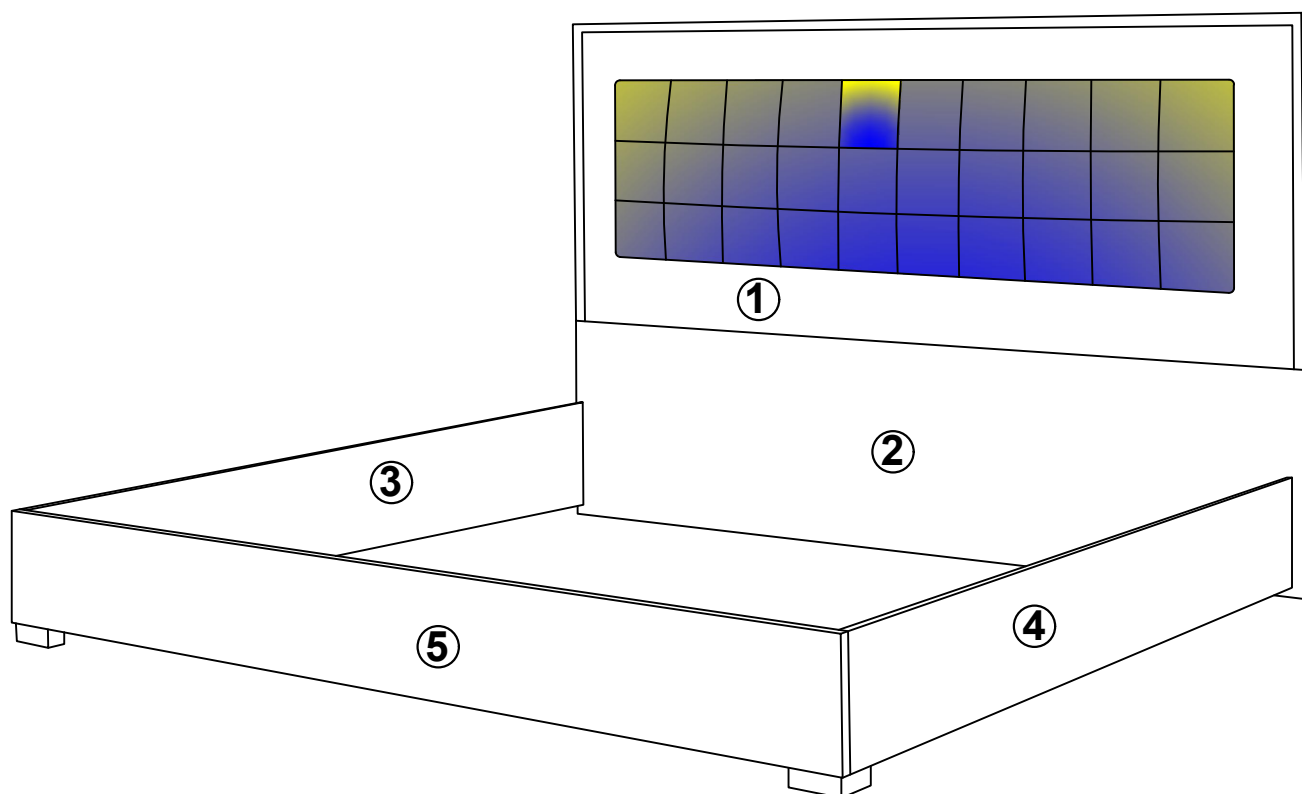

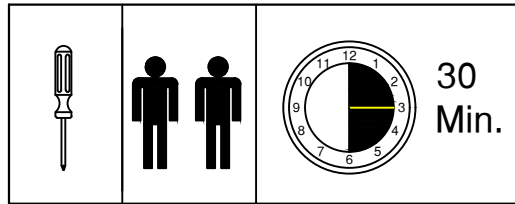


B



1FEVAPI10113

2x

C

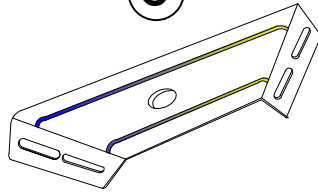

1FEVAPI10102

4x

D




6MAx15

1FEVTTB10615

20x

E




6MAx30

1FEVTTB10630

12x


H

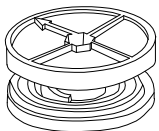

1FEGIMO10042

8x


I

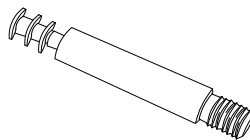

1FEGIPEF0042

8x


N

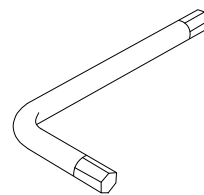

1FEVASE10510

1x

O

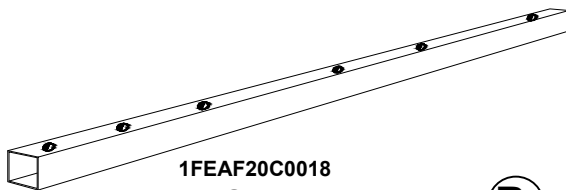

1FEAF20C0018


2x

P




8x

Q

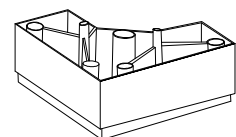


2x

R

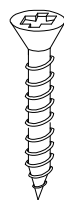



~~Ø~~4,5x60

8x

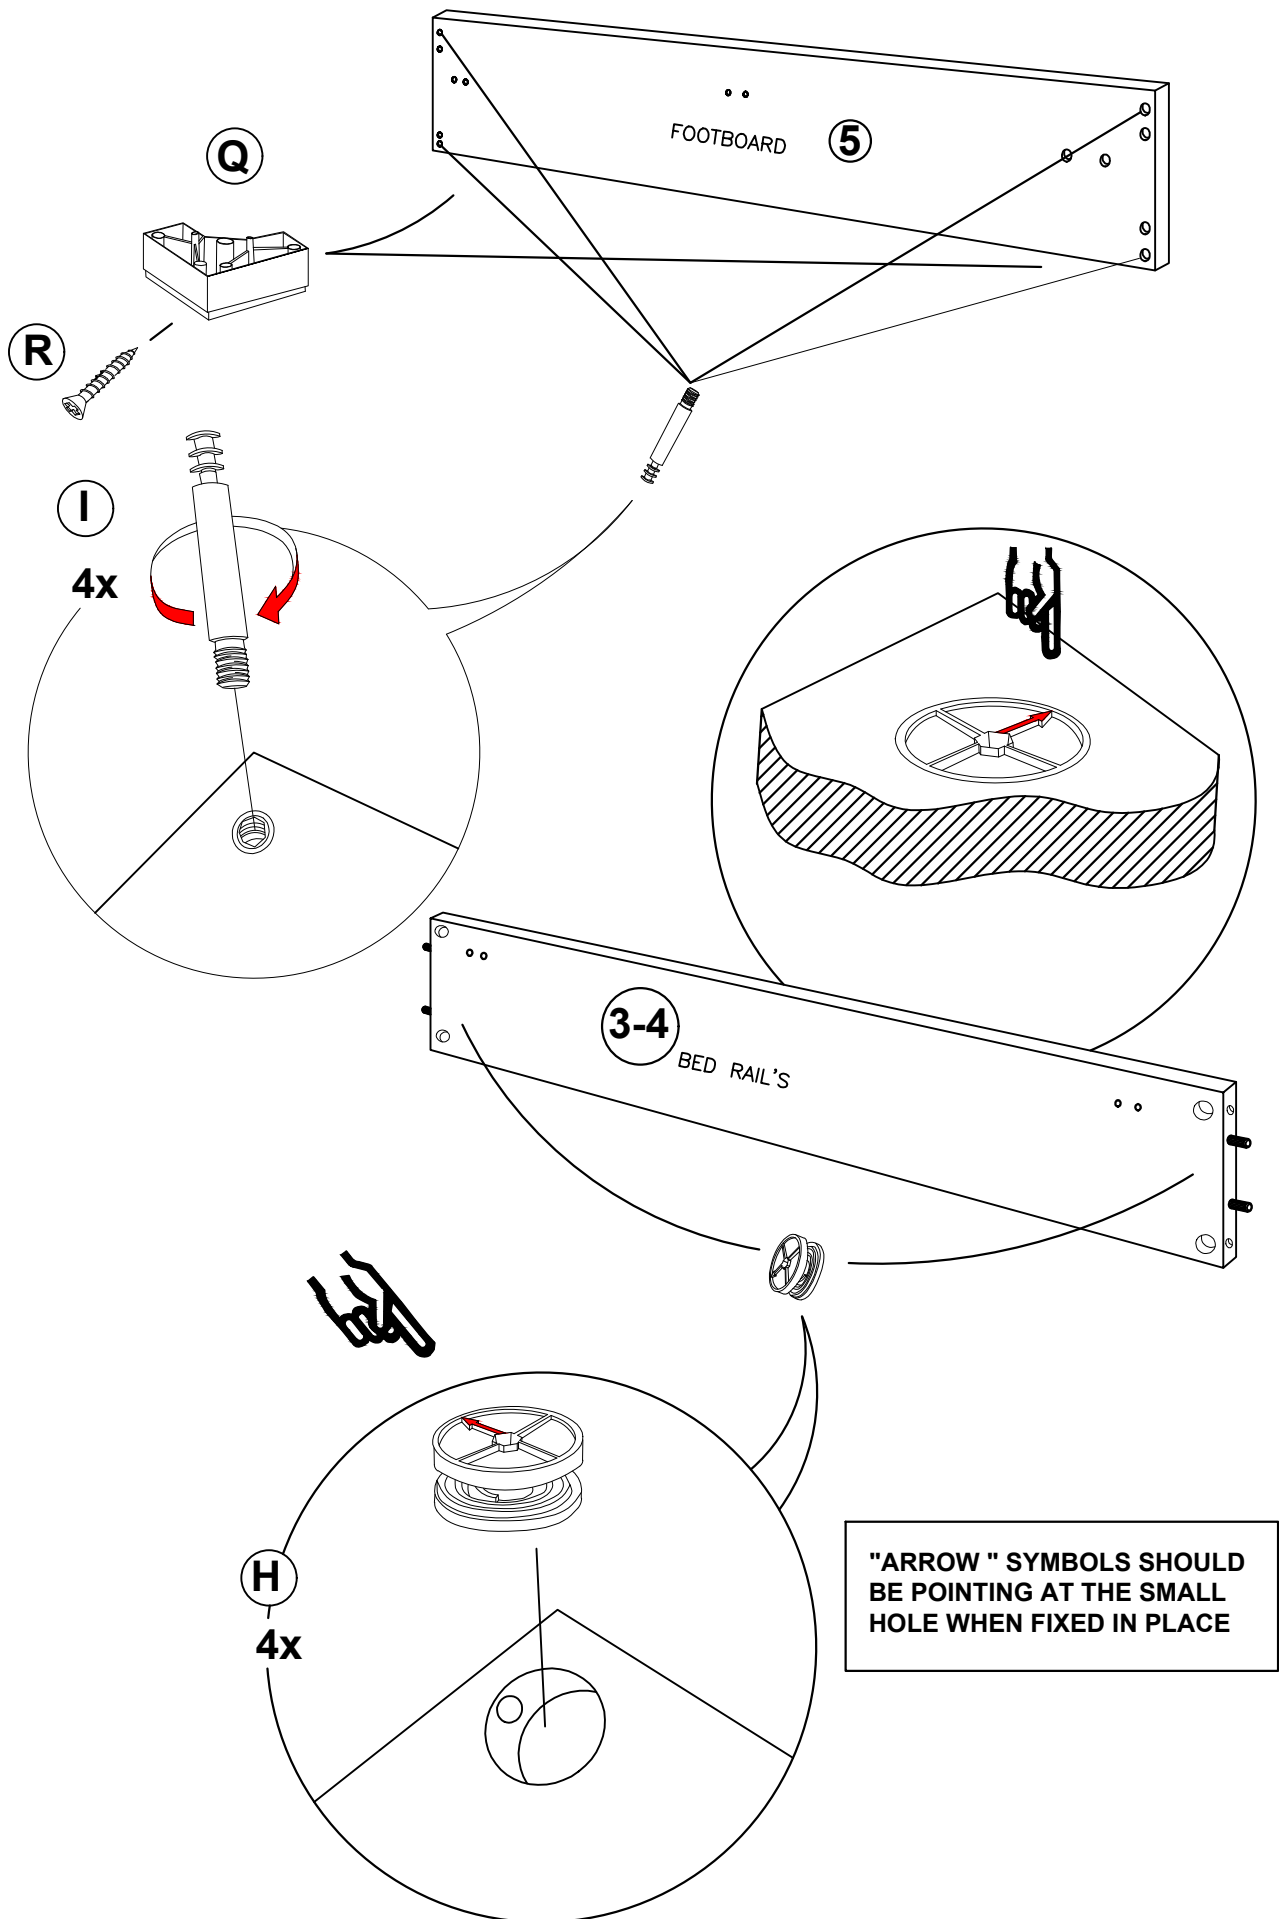



"IT'S VERY IMPORTANT TO TIGHTEN EACH PIECE INCREMENTALLY, ALTERNATING BETWEEN TOP AND BOTTOM IN ORDER TO TIGHTEN FULLY AND EVENLY."

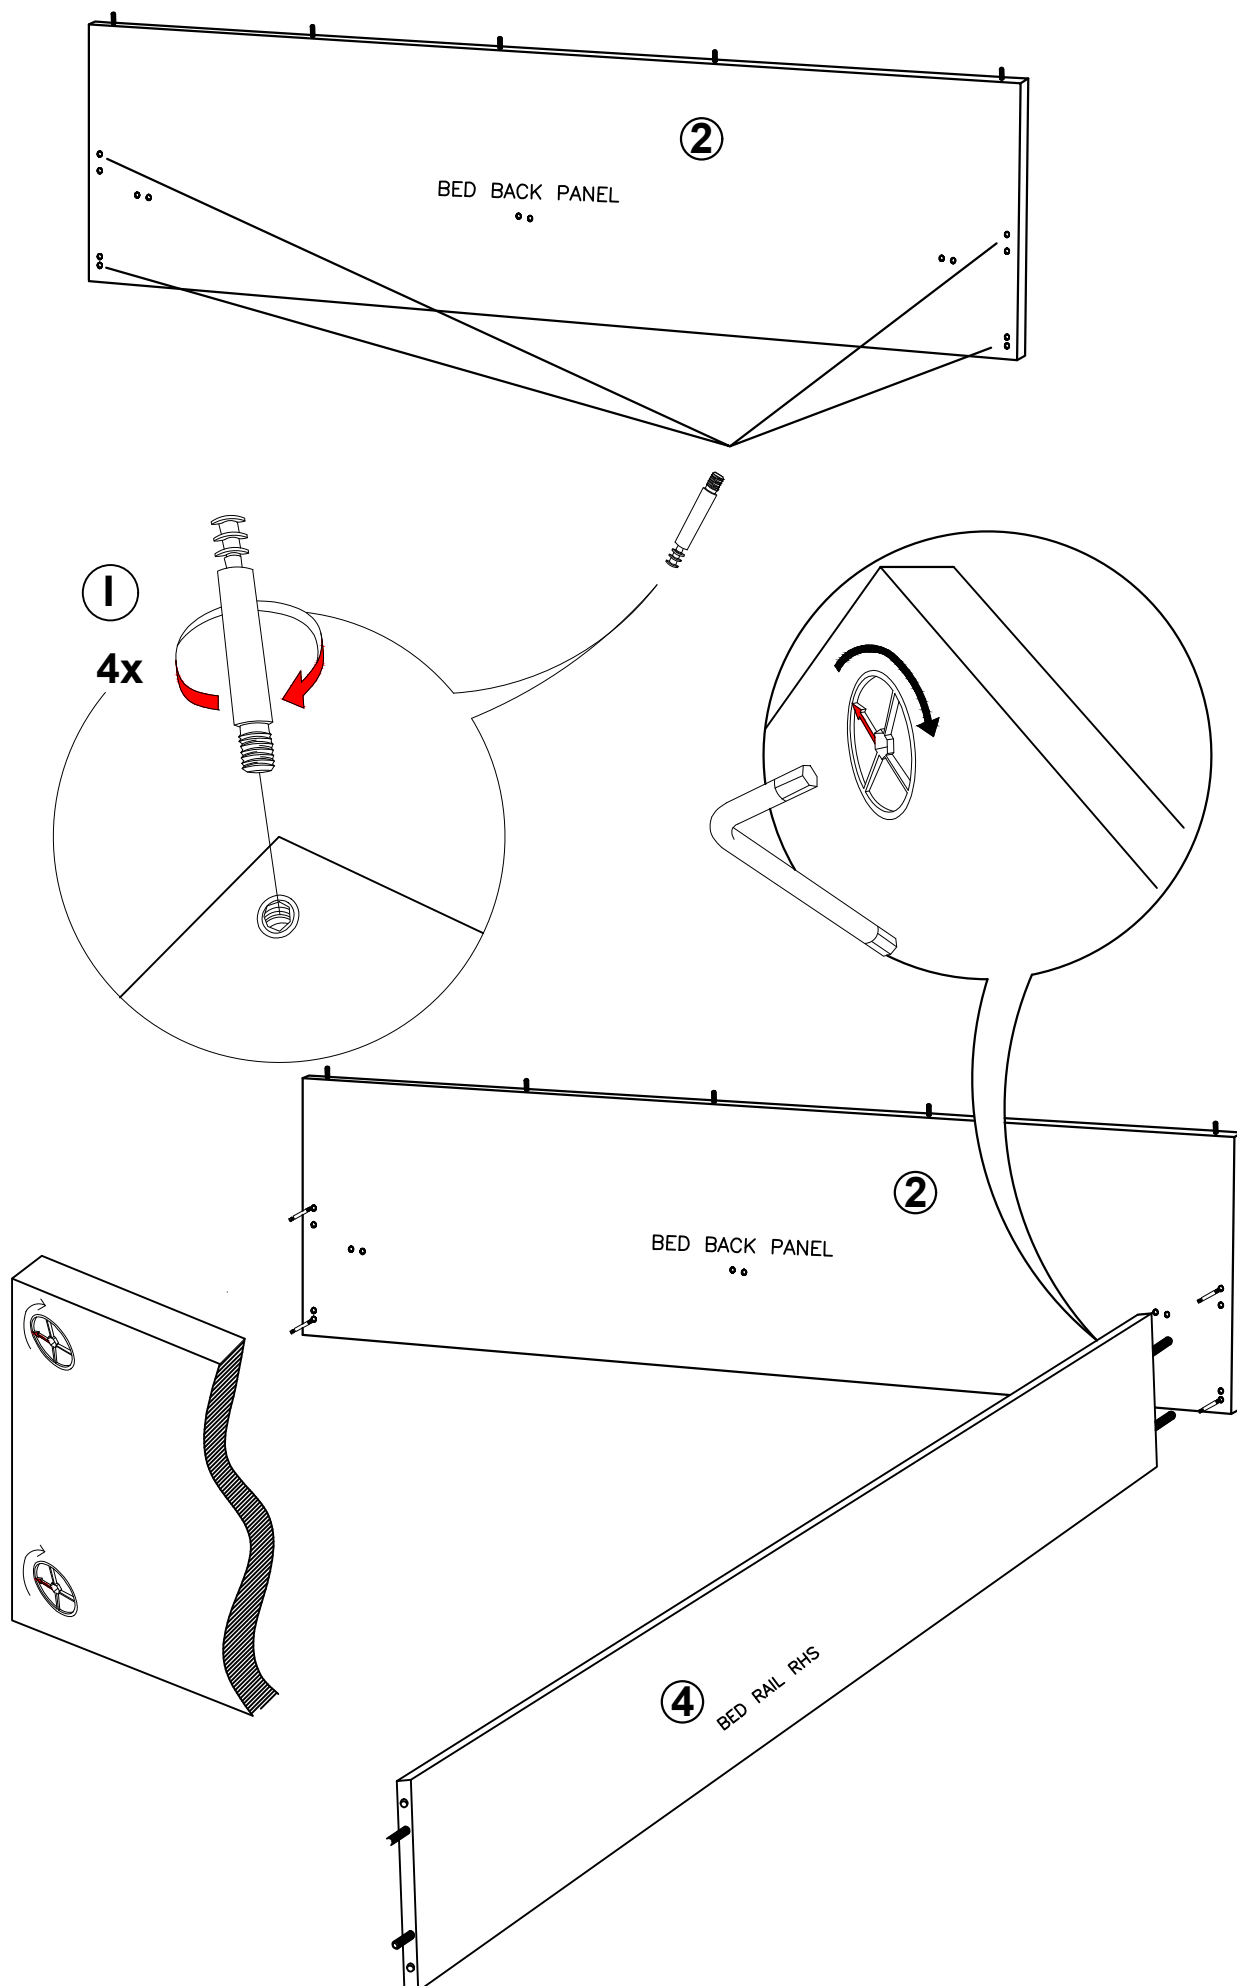


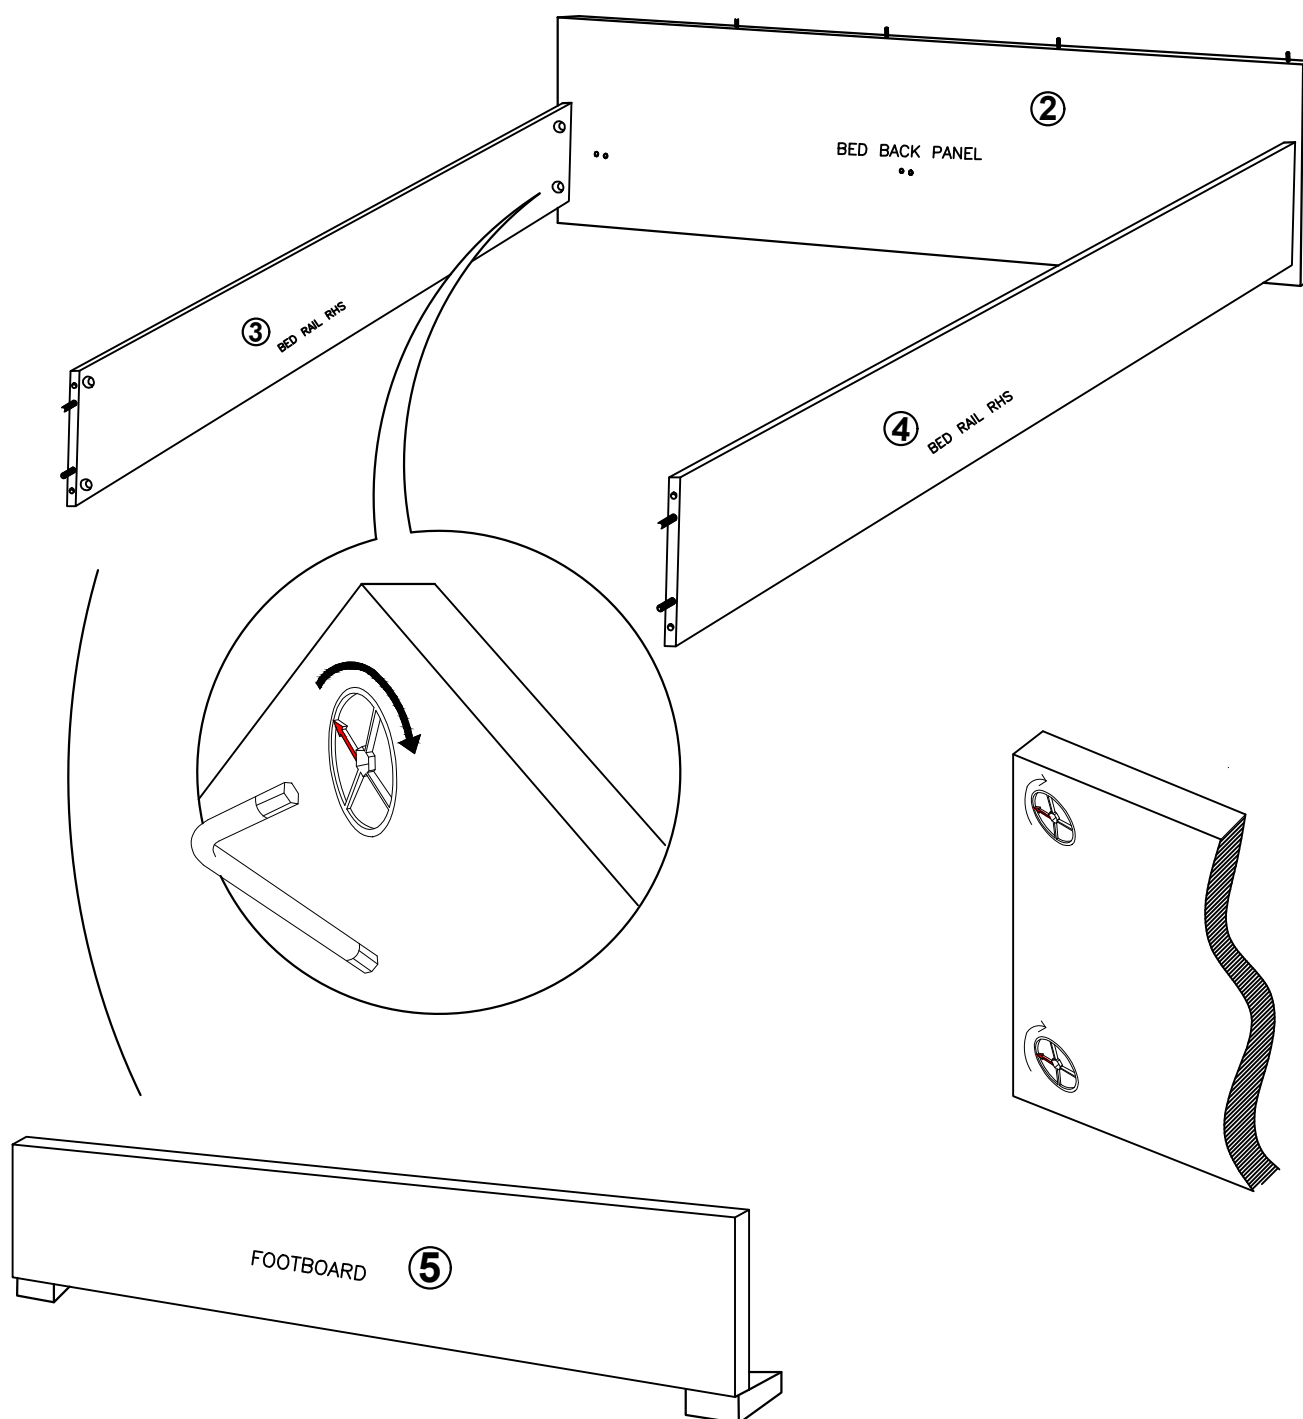


"IT'S VERY IMPORTANT TO TIGHTEN EACH PIECE INCREMENTALLY, ALTERNATING BETWEEN TOP AND BOTTOM IN ORDER TO TIGHTEN FULLY AND EVENLY."

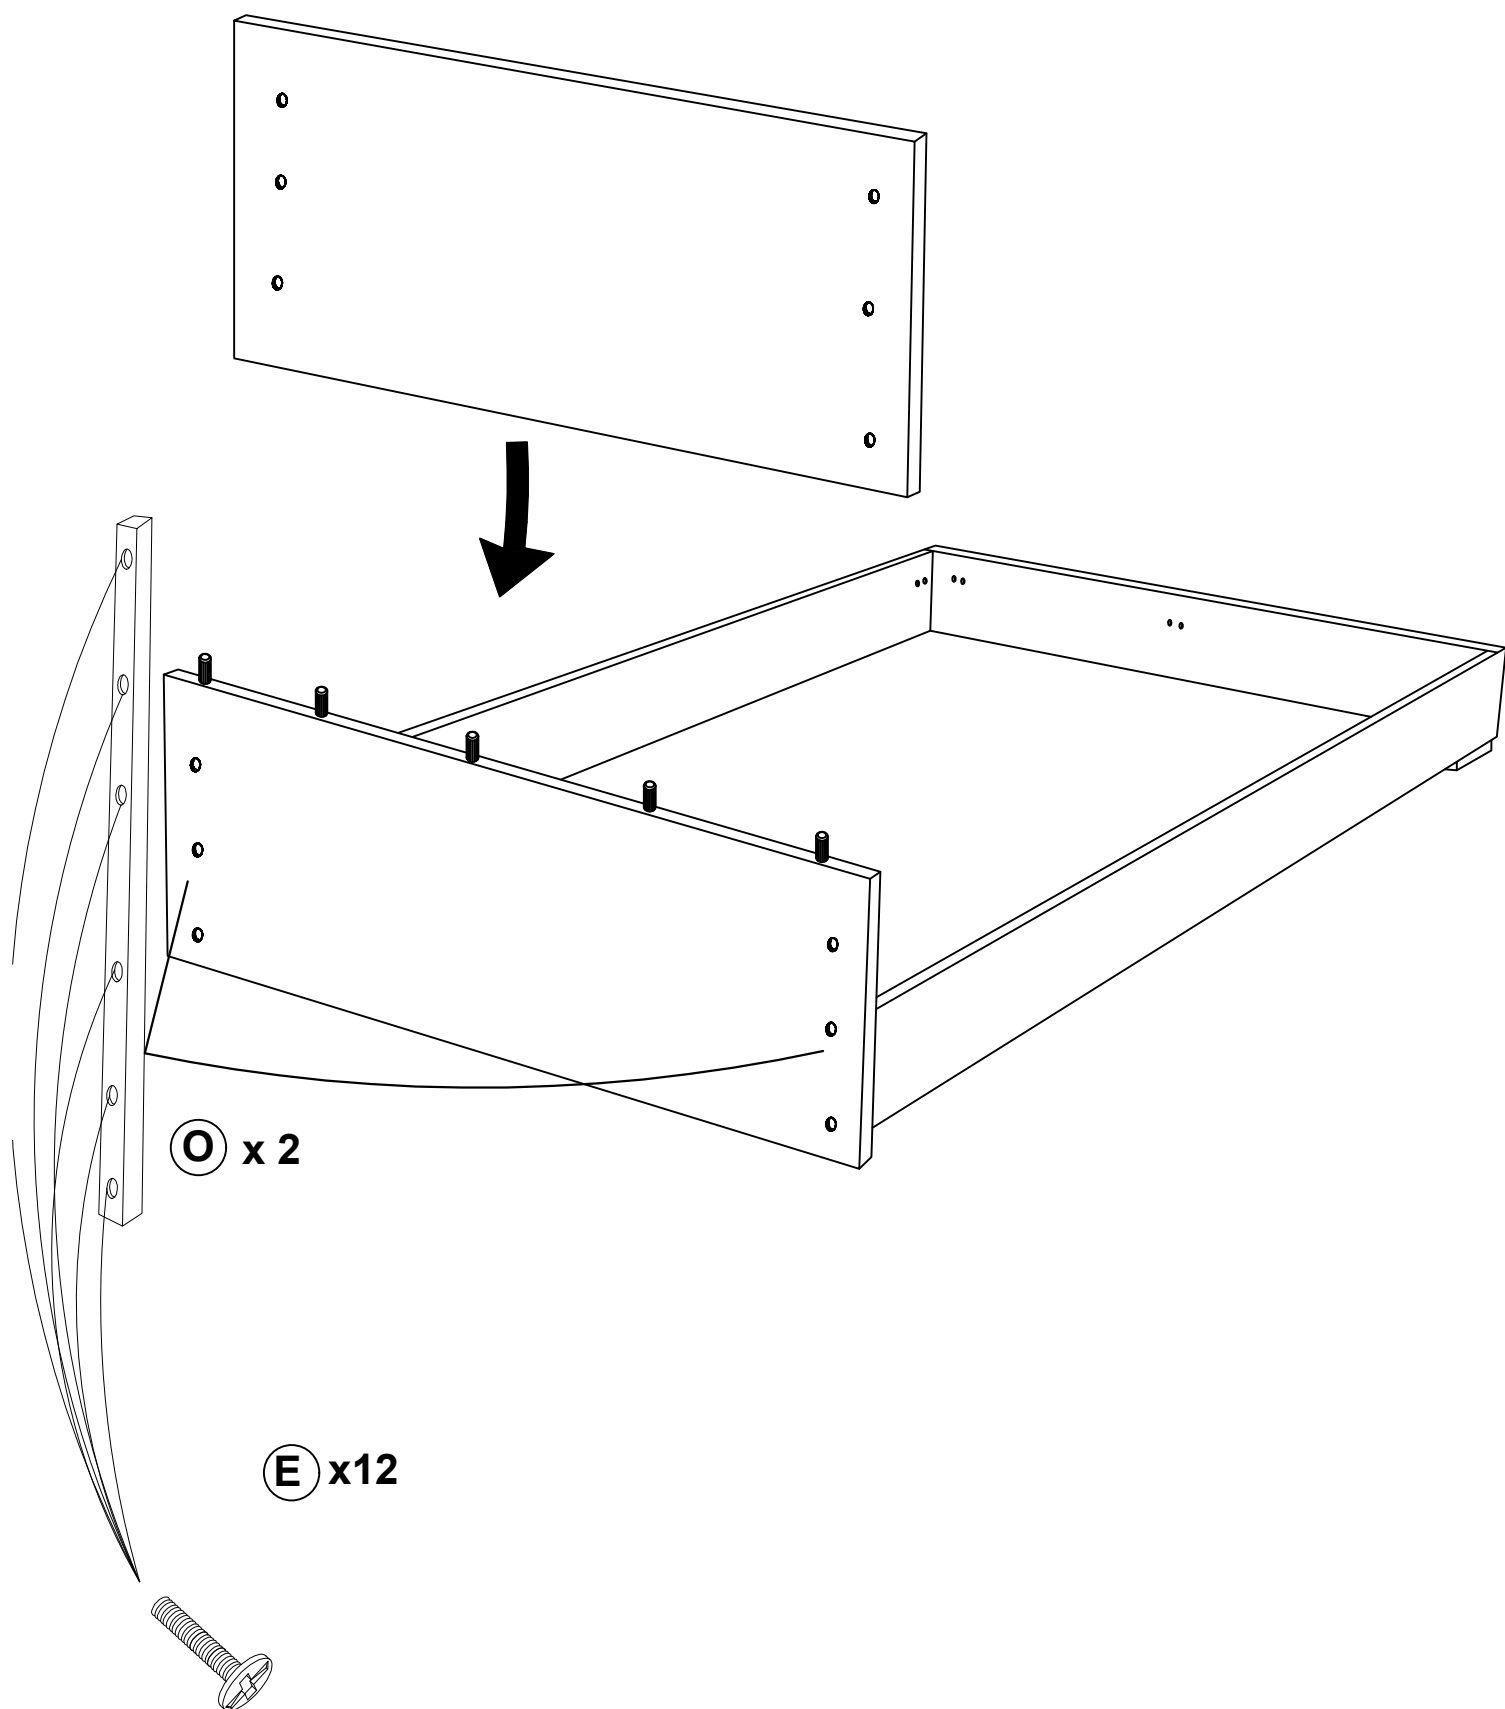


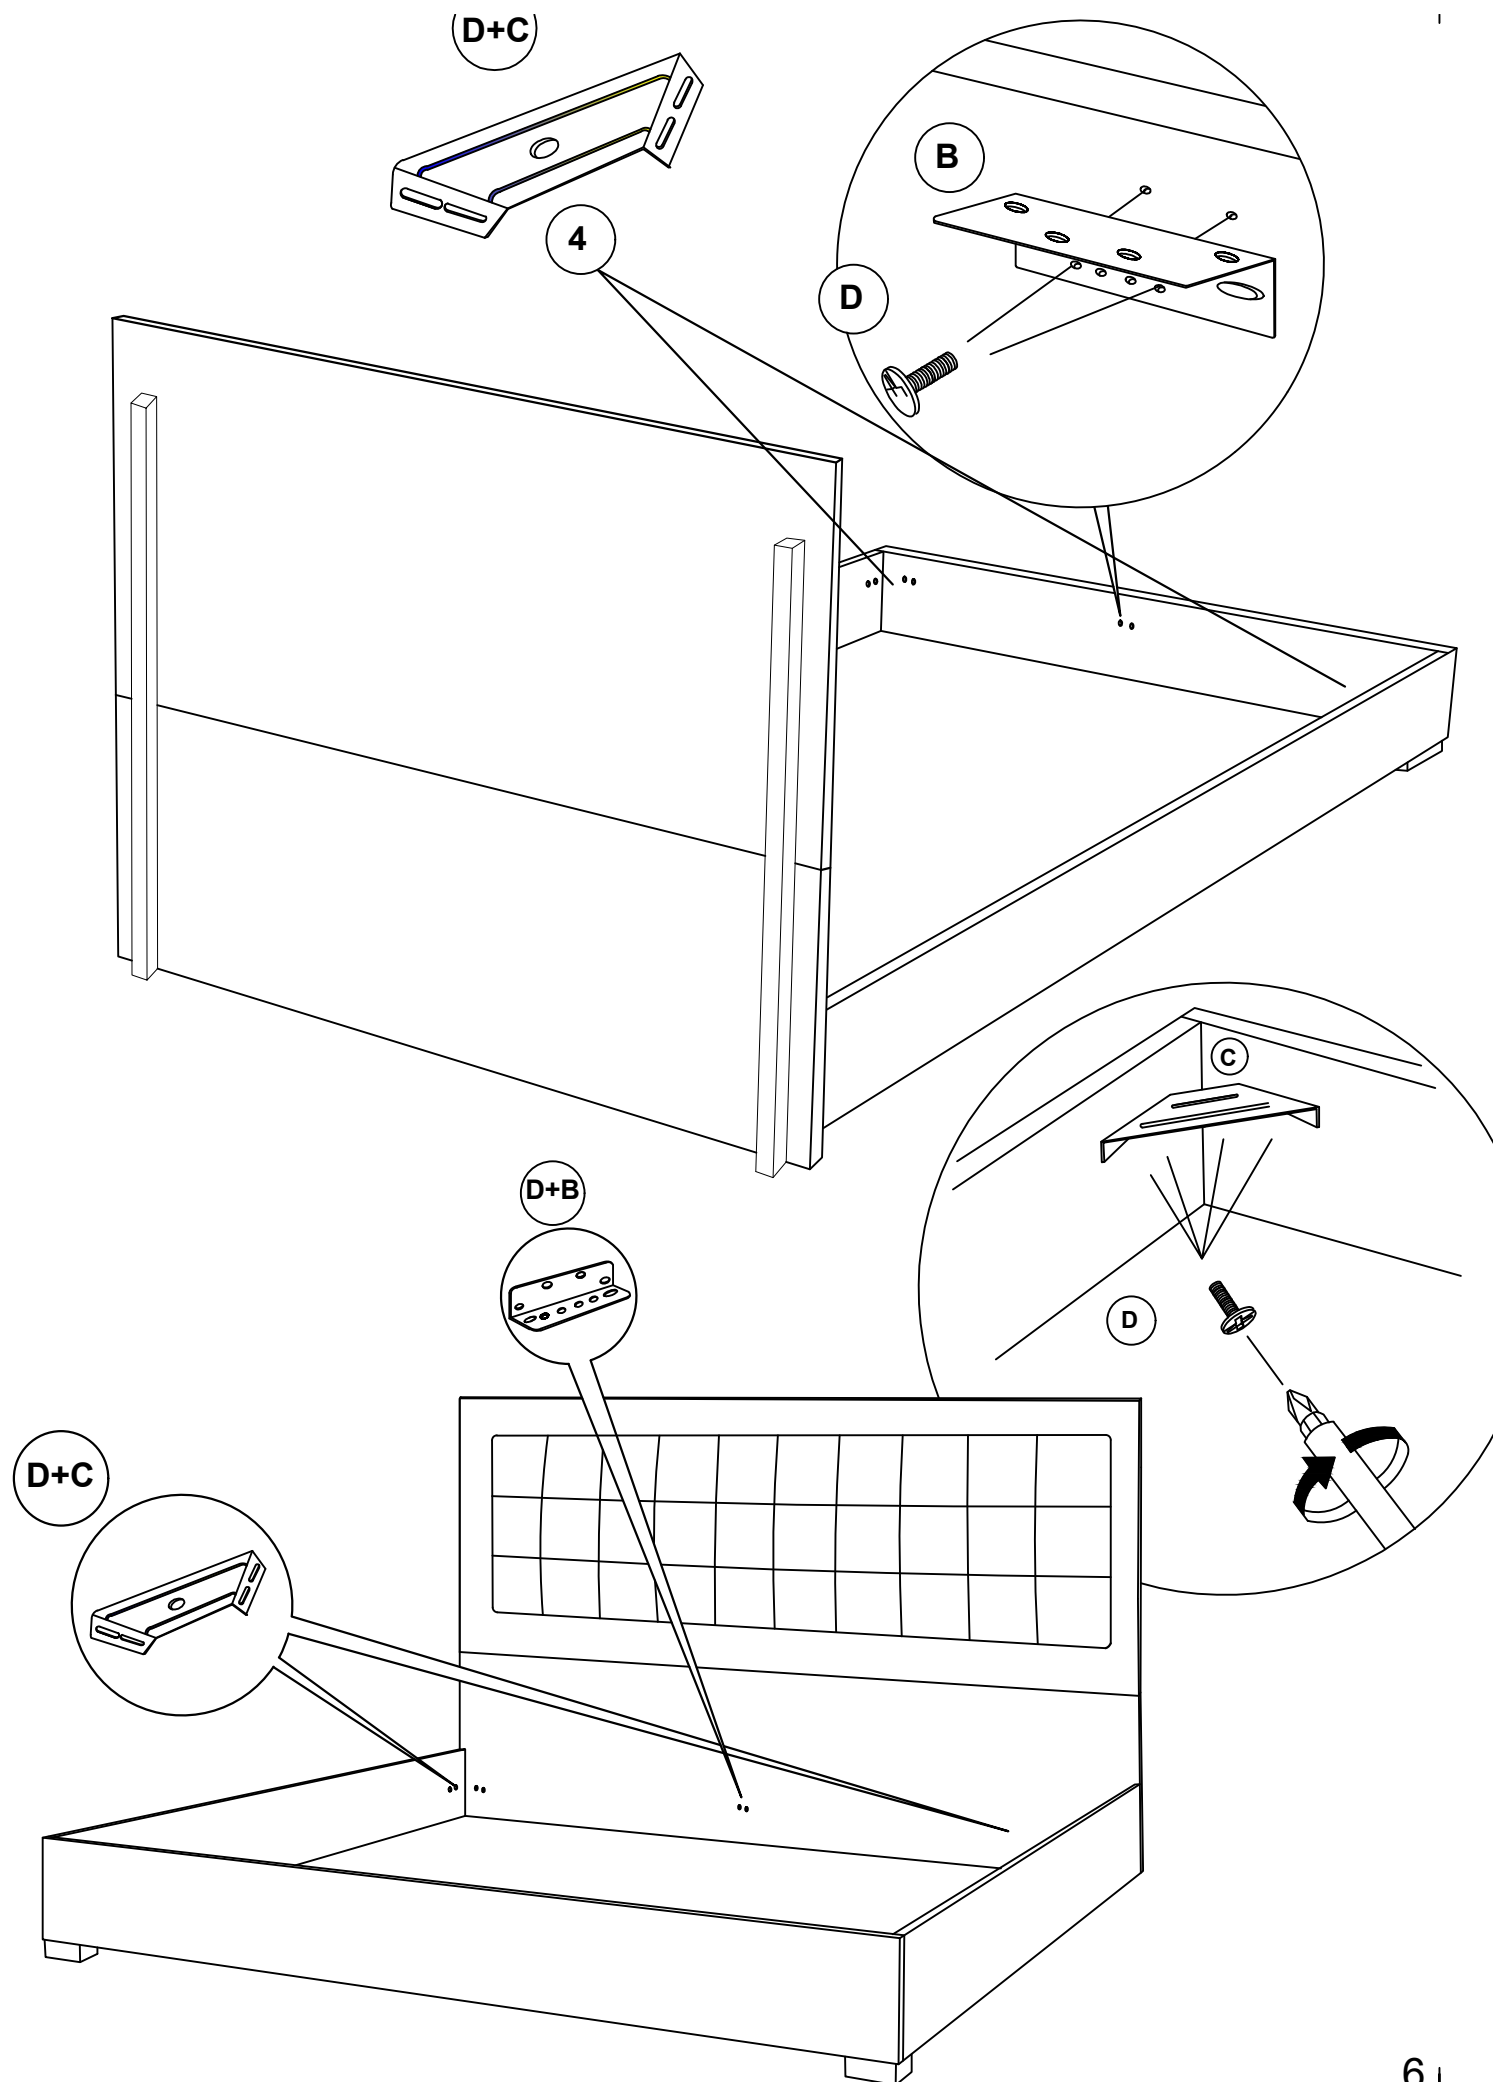



front bed back panel

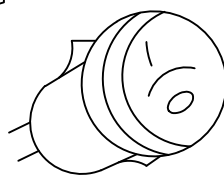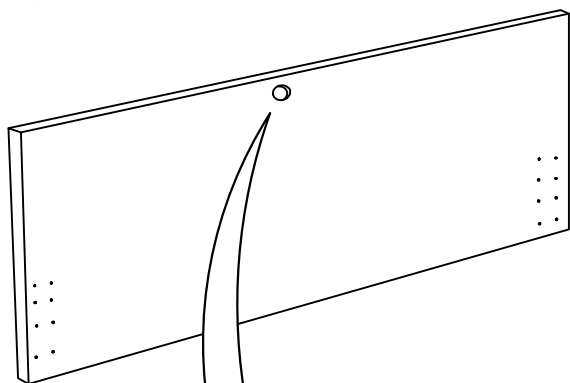

switch

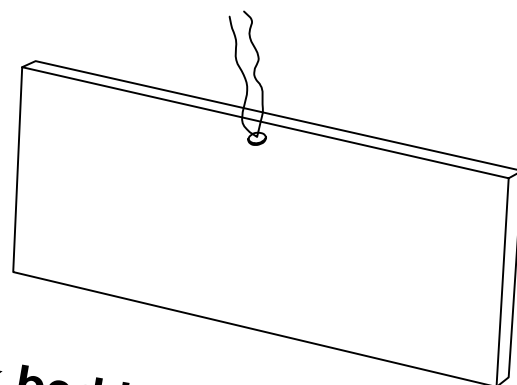

back bed back panel

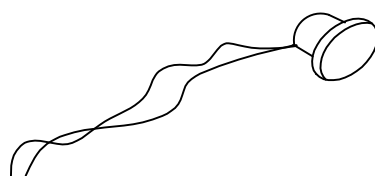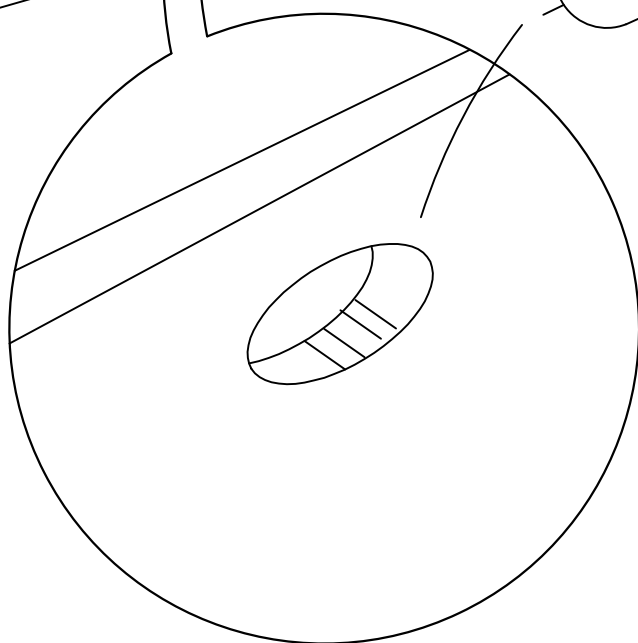

switch

connections



trasformer

