

# MADISONPARK® ASSEMBLY INSTRUCTIONS

## Description: Diedra Counter Stool








### Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.














### Pre-assembly:


- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

### Parts List

Item	Description		QTY
P1	Chair Back	 (P1)	1
P2	Seat (with pre-assembled dowels)	 (P2)	1
P3	Left Stretcher	 (P3)	1
P4	Right Stretcher	 (P4)	1
P5	Front Stretcher	 (P5)	1
P6	Left Assembled Arm and Leg	 (P6)	1
P7	Right Assembled Arm and Leg	 (P7)	1

### Hardware List

Item	Description		QTY
H1	Large Long Bolts Ø5/16**3-1/4"		4
H2	Large Medium Bolts Ø5/16**2-1/2"		4
H3	Large Short Bolts Ø5/16**1-3/4"		1
H4	Large Lock Washers 5/16"		9
H5	Large Flat Washers 5/16**22mm		9
H6	Large Allen Wrench 5/16"		1
H7	Screws #8*1-3/4"		6
H8	Small Bolts Ø1/4**1-3/4"		2
H9	Small Lock Washers 1/4"		2
H10	Small Flat Washers 1/4" *12mm		2
H11	Small Allen Wrench 1/4"		1
H12	Wooden Plugs		2
H13	Screw Driver (not provided)		1

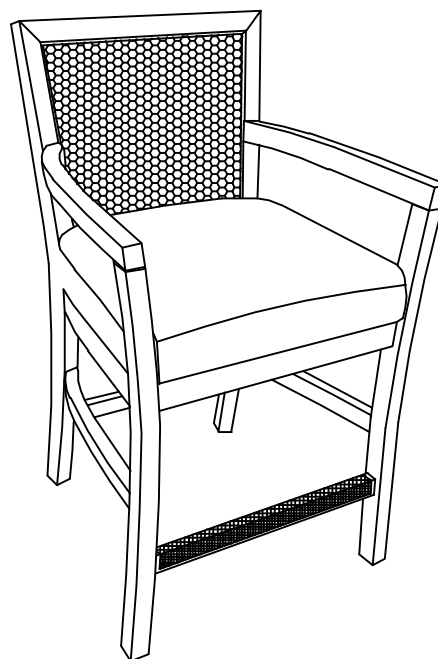

It will take approximately 20 minutes for two adults to assemble.

### DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

### Assembly Procedures:


Step 1, Assemble the counter stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the seat (P2) to the chair back (P1) as shown below. Loosely tighten with Allen wrench (H6).

(H3)x1 Large Short Bolts  $\varnothing 5/16 \times 1-3/4$ " 

(H4)x1 Large Lock Washers 5/16" 

(H5)x1 Large Flat Washers 5/16"  $\times 22\text{mm}$  

(H6)x1 Large Allen Wrench 5/16" 

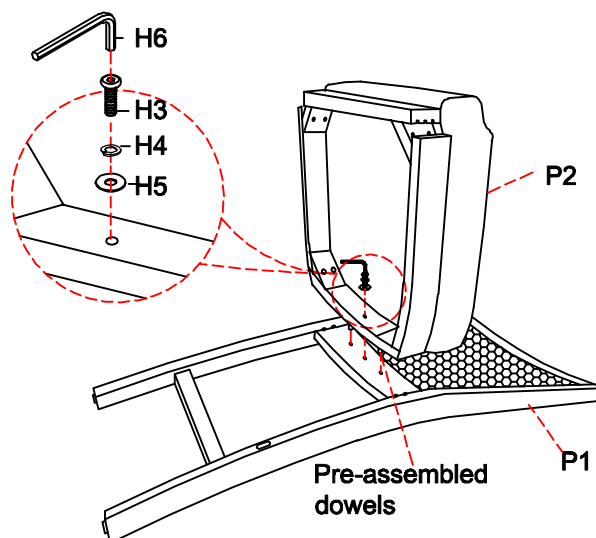


Step 2. Attach the rear corners of the seat (P2) to the chair back (P1) as shown below. Loosely tighten with Allen wrench (H6).

(H1)x4 Large Long Bolts  $\varnothing 5/16 \times 3-1/4$ " 

(H4)x4 Large Lock Washers 5/16" 

(H5)x4 Large Flat Washers 5/16"  $\times 22\text{mm}$  

(H6)x1 Large Allen Wrench 5/16" 

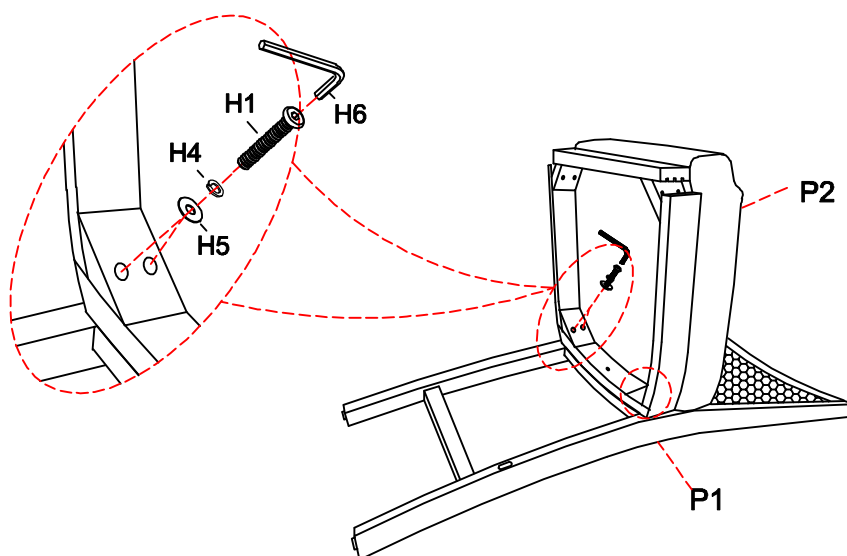


**Step 3.** Insert the left stretcher (P3) to the chair back (P1), then loosely attach the left assembled arm and leg (P6) to the rear corners of seat (P2) and left stretcher (P3) as shown below. Do not tighten the bolts at this time.

(H2)x2 Large Medium Bolts Ø5/16"×2-1/2" 

(H4)x2 Large Lock Washers 5/16" 

(H5)x2 Large Flat Washers 5/16"×22mm 

(H6)x1 Large Allen Wrench 5/16" 

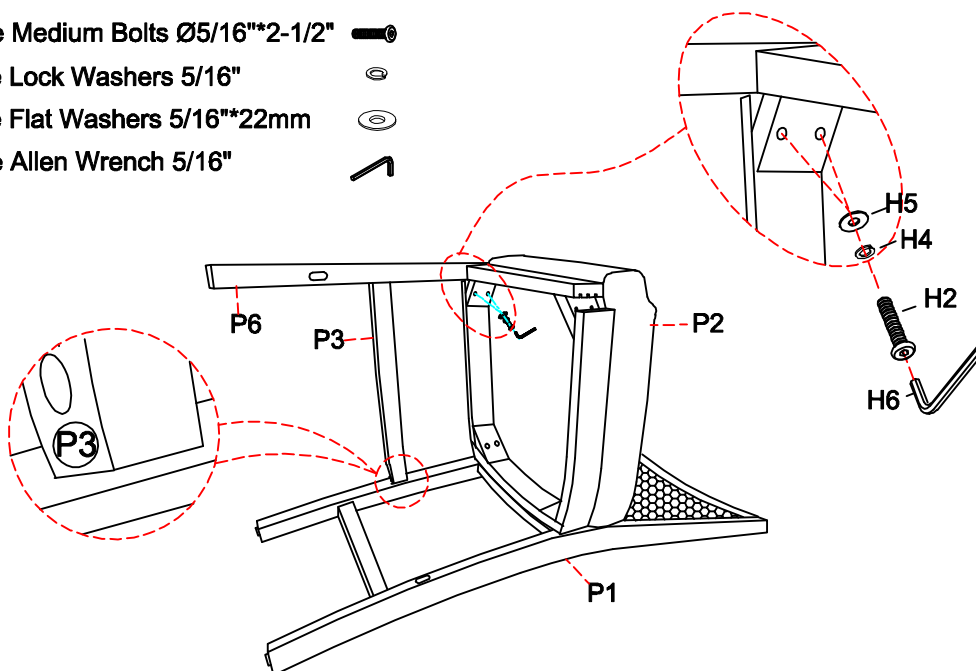

#### Step 4.

- 1) Repeat step 3 to assemble the right stretcher (P4) and right assembled arm and leg (P7) as shown below. Do not tighten the bolts at this time.
- 2) Insert the front stretcher (P5) to the left assembled arm and leg (P6) and right assembled arm and leg (P7). Securely tighten all bolts.
- 3) Tighten all screws (H7) through the stretchers (P3, P4, P5) to the front legs and chair back legs.


(H2)x2 Large Medium Bolts Ø5/16"×2-1/2" 

(H4)x2 Large Lock Washers 5/16" 

(H5)x2 Large Flat Washers 5/16"×22mm 

(H6)x1 Large Allen Wrench 5/16" 

(H7)x6 Screws #8×1-3/4" 

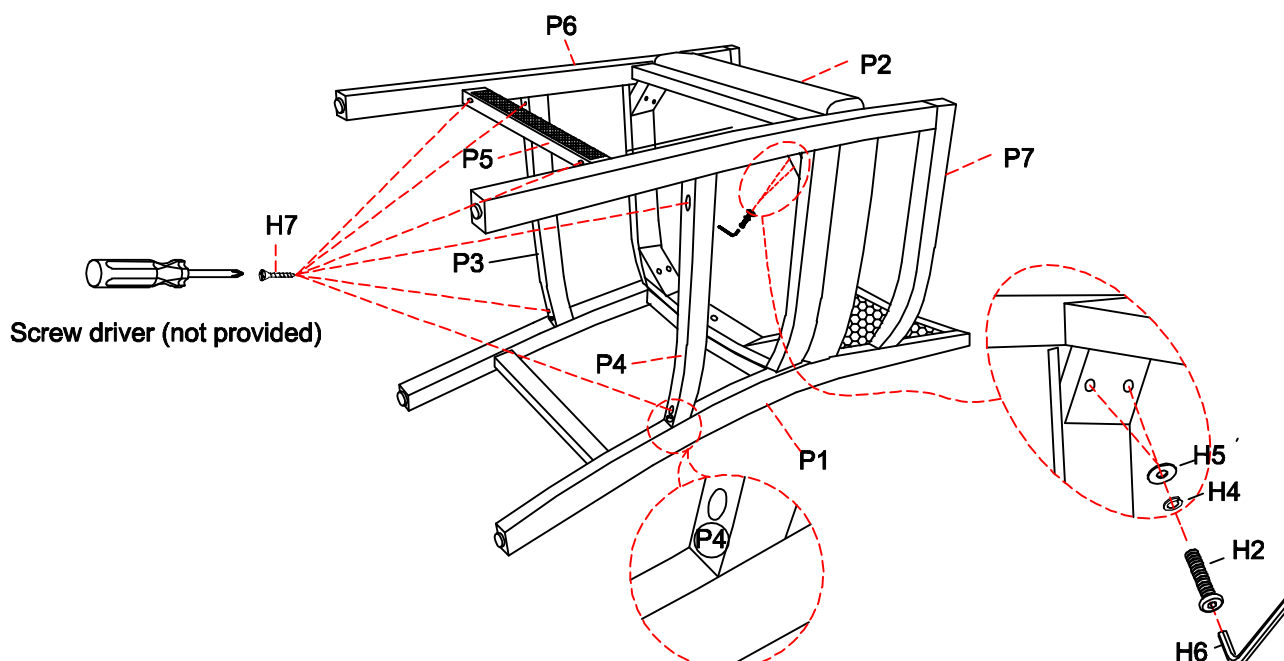

**Step 5.**

1) Attach the left assembled arm and leg (P6) and right assembled arm and leg (P7) to the chair back (P1) as shown below. Securely tighten all bolts with Allen wrench(H11).

2) Insert wood plugs (H12) to cover each exposed bolt hole. **Note:** if needed, use a rubber mallet (not included) to tap the wooden plug into the holes. Use a soft cloth between the wooden plug and the rubber mallet to prevent damage to the wood finish.


(H8)x2 Small Bolts Ø1/4"\*1-3/4"

(H9)x2 Small Lock Washers 1/4"

(H10)x2 Small Flat Washers 1/4" \*12mm


(H11)x1 Small Allen Wrench 1/4"

(H12)x2 Wooden Plugs

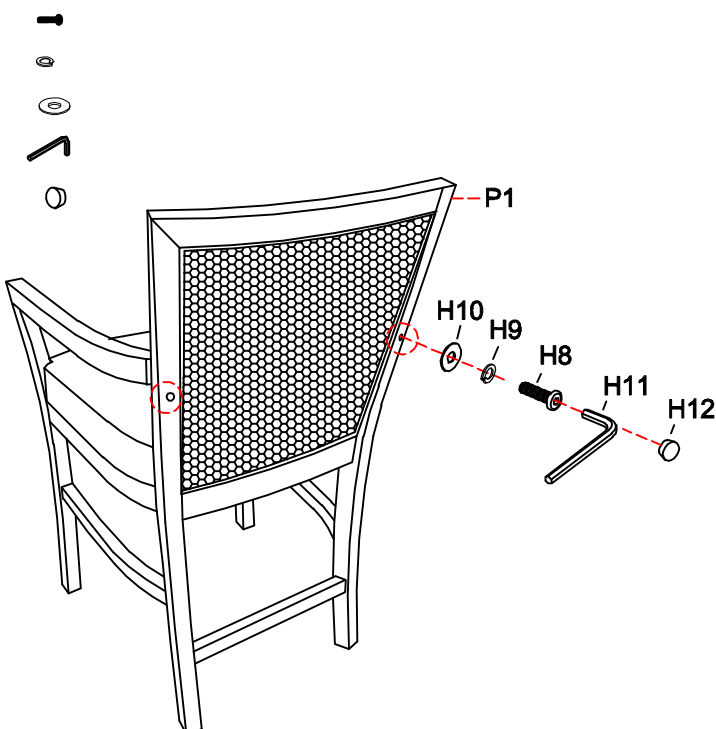

**Step 6.** Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

**Leveler adjustment:** Levelers are pre-installed on the front legs. Adjust as needed to make sure the stool is level.

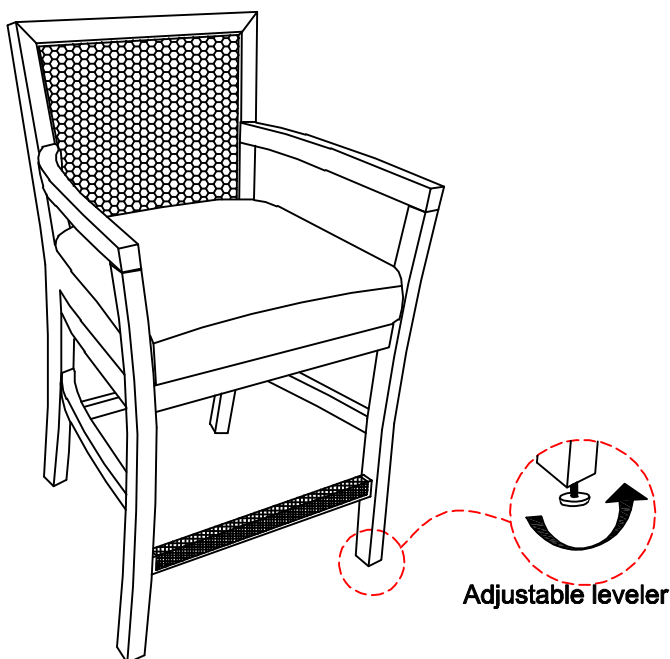

**ADDITIONAL NOTE ABOUT SAFETY:**

**BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.**

**THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.**

**Thank you for your purchase**