




## 20" VANITY

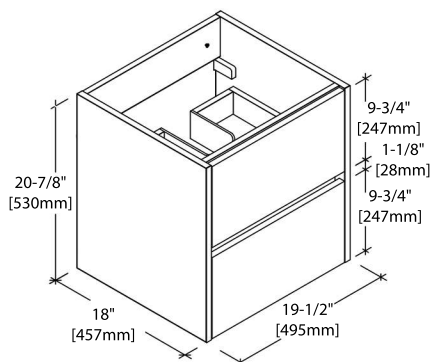

V8016 20

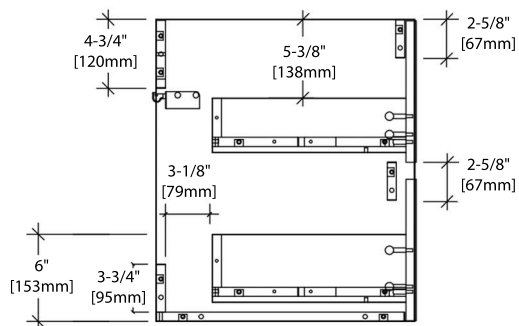


SIDE VIEW

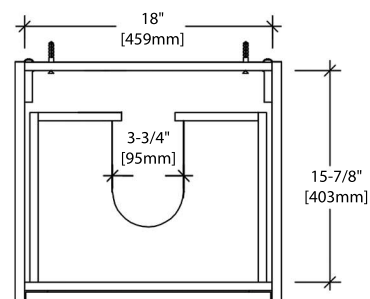


TOP VIEW


## 24" VANITY

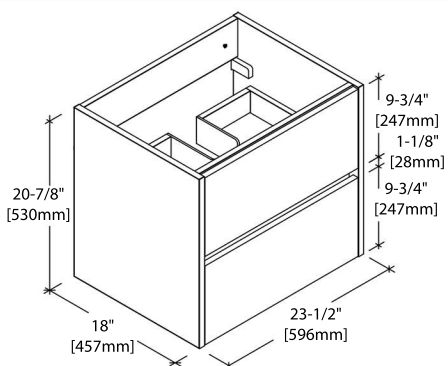

V8016 24

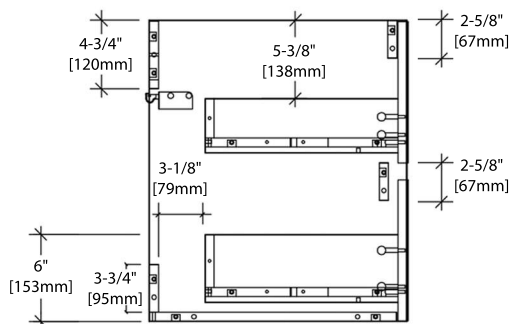


SIDE VIEW

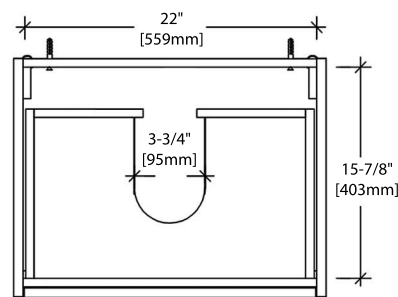


TOP VIEW


## 30" VANITY

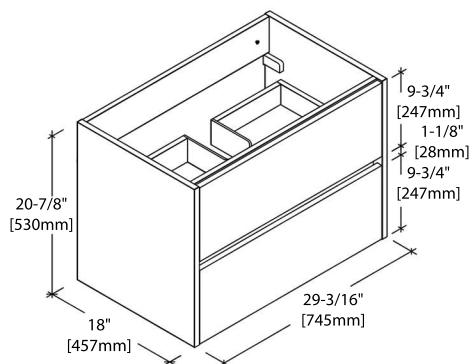

V8016 30

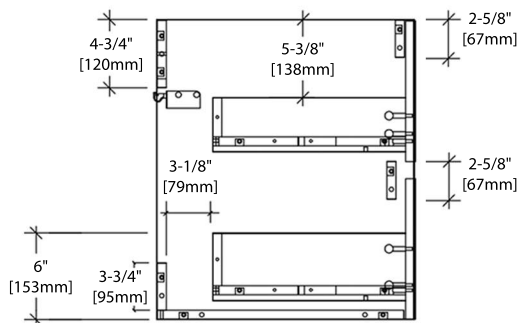


SIDE VIEW

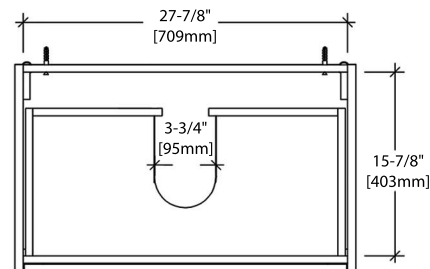


TOP VIEW


## 36" VANITY

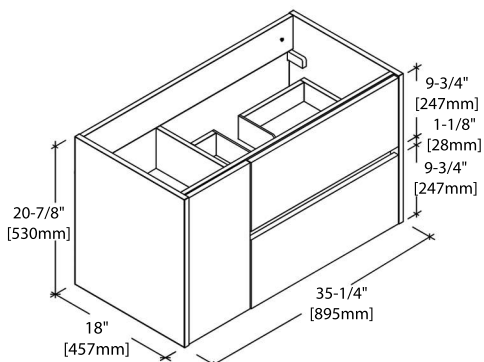

V8016 36

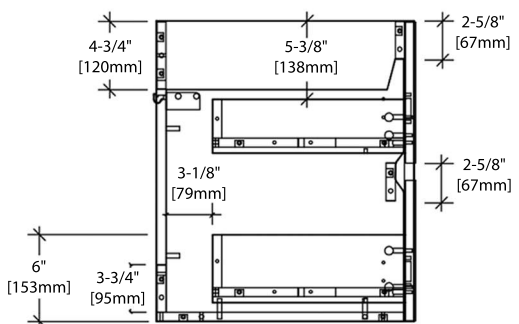


SIDE VIEW

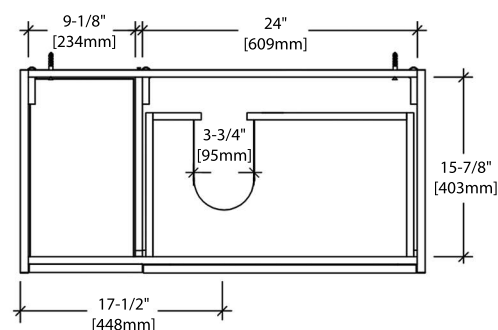


TOP VIEW

## 20" TOP-MOUNT BASIN

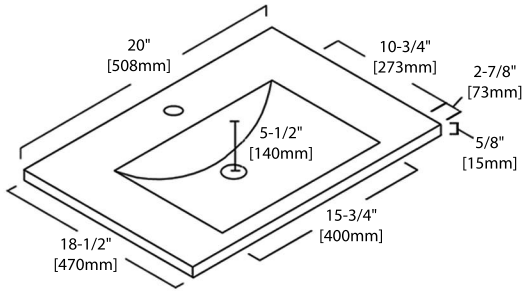


C04 2018 (SINGLE HOLE)

## 24" TOP-MOUNT BASIN

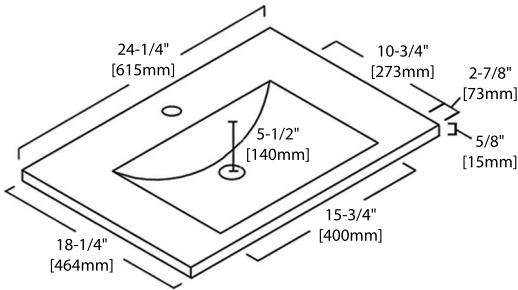


C04 2418 (SINGLE HOLE)

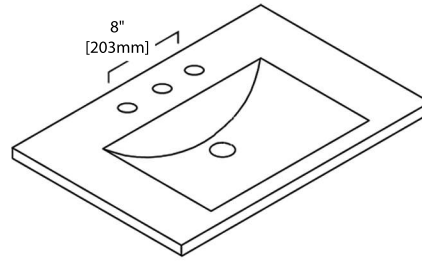


C04 2418 TH (8" WIDESPREAD)

## 30" TOP-MOUNT BASIN

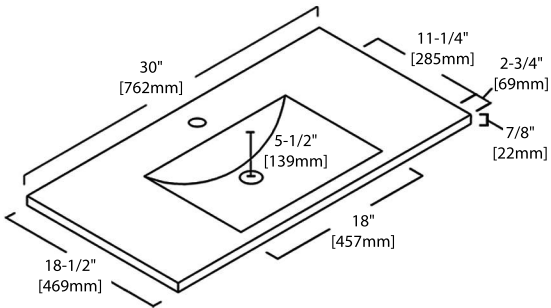


C04 3018 (SINGLE HOLE)

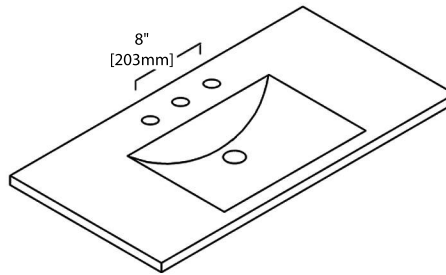


C04 3018 TH (8" WIDESPREAD)

## 36" TOP-MOUNT BASIN

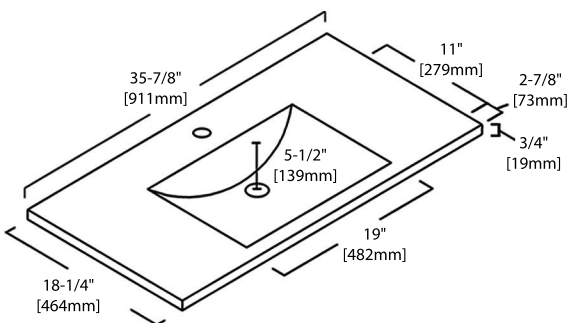


C04 3618 (SINGLE HOLE)

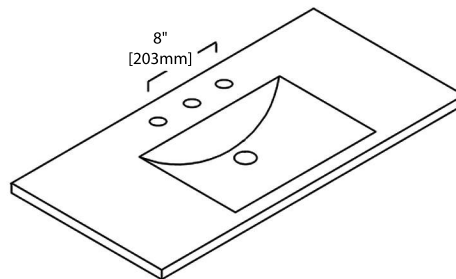


C04 3618 TH (8" WIDESPREAD)


### 48" SINGLE VANITY

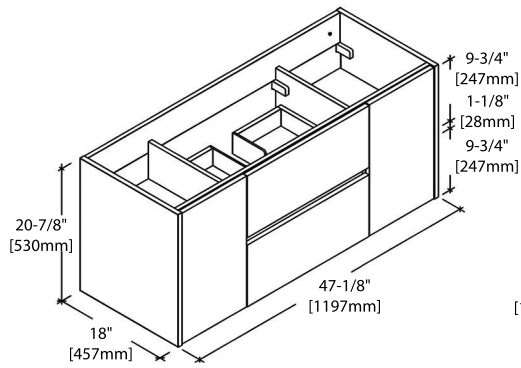

V8016 48 S

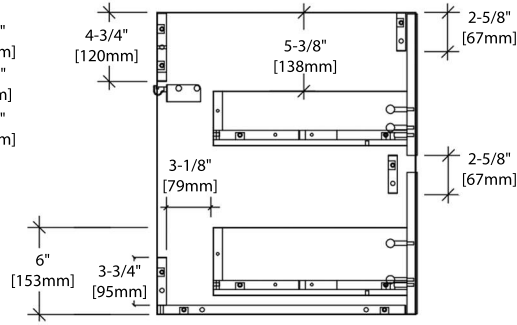


SIDE VIEW

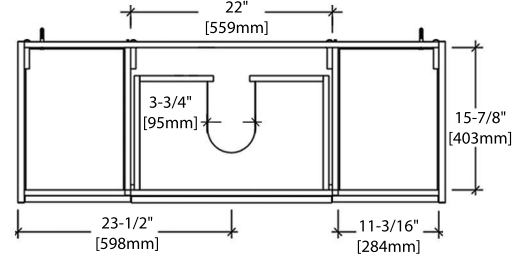


TOP VIEW


### 48" DOUBLE VANITY

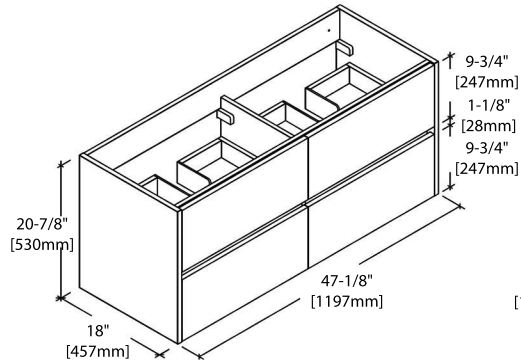

V8016 48 D

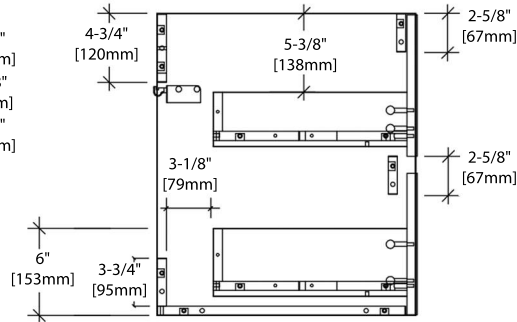


SIDE VIEW

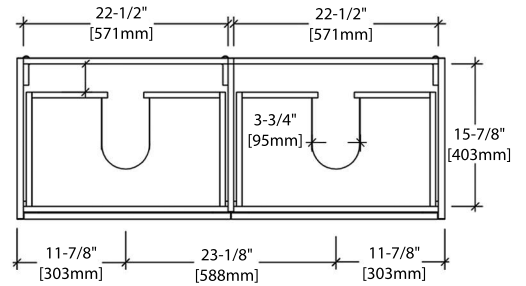


TOP VIEW

### 48" SINGLE TOP-MOUNT BASIN

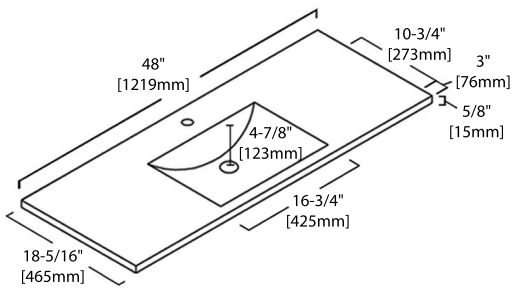


C04 4818 S (SINGLE HOLE)

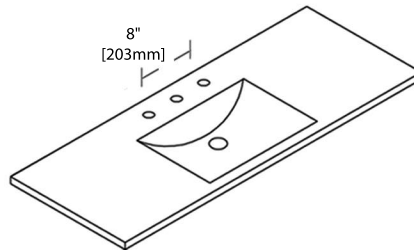


C04 4818 STH (8" WIDESPREAD)

### 48" DOUBLE TOP-MOUNT BASIN

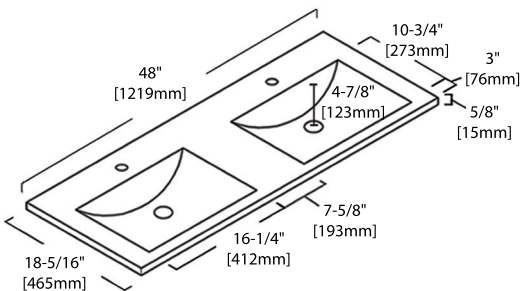


C04 4818 D (SINGLE HOLE)

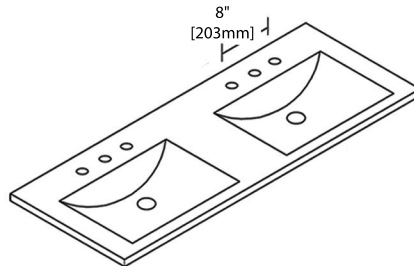


C04 4818 DTH (8" WIDESPREAD)

**20" MIRROR / MEDICINE CABINET**

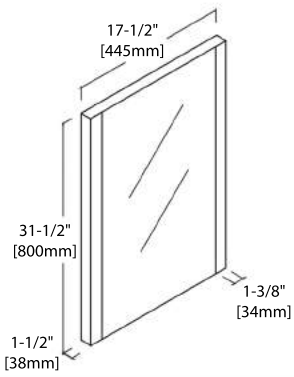


M6014 20

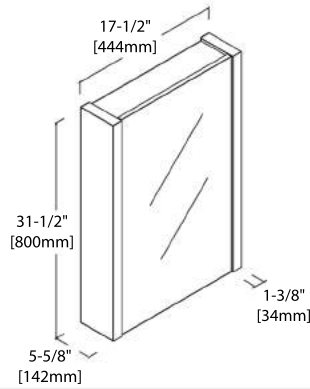


MC7014 20

**24" MIRROR / MEDICINE CABINET**

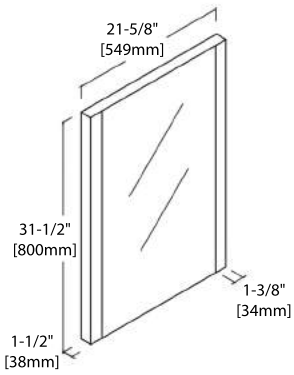


M6014 24

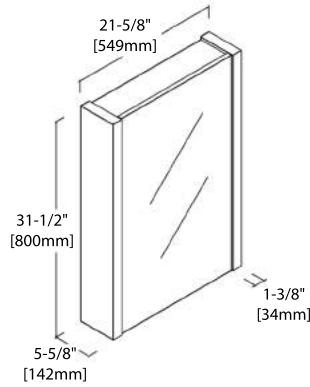


MC7014 24

**30" MIRROR / MEDICINE CABINET**

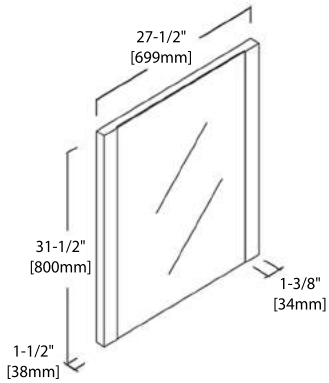


M6014 30

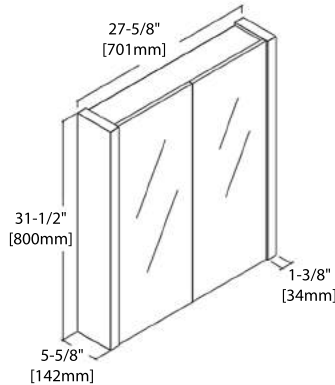


MC7014 30

**36" MIRROR**

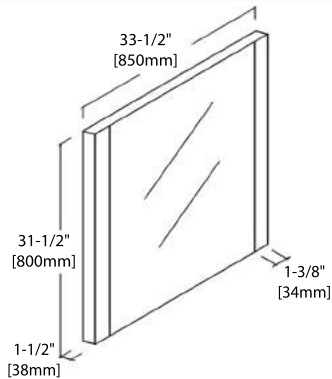


M6014 36

**48" MIRROR**

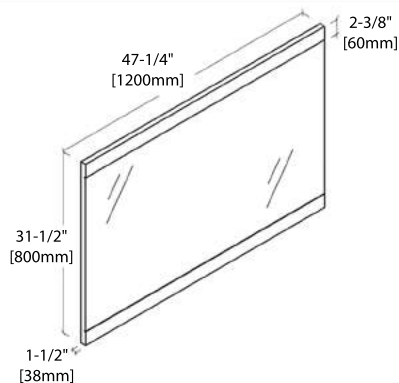

M6014 48

# REQUIRED TOOLS



Tape Measure



Pencil



Electric Drill



Drill Bit (6mm)



Silicone



Screwdriver



Spirit Lever

## PARTS INCLUDED



A



B



C



D

