



# ASSEMBLY INSTRUCTIONS

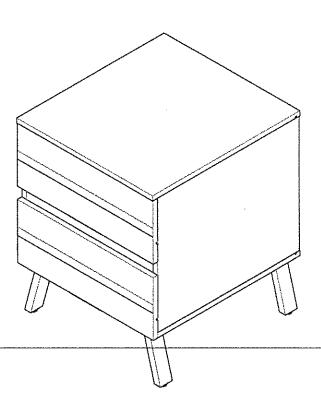



# END TABLE


# 80622 0 0 DIMENSIONS -Width - 18.11" Depth - 19.69" Height - 22.91" PARTS LIST **O** X2 **(3** X1 **A** X1 ① X2 3 X1 X2 **C**• X2 **©** X1 **@** X2 X1

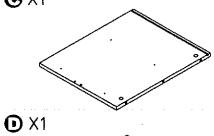








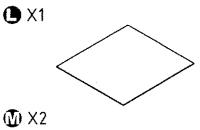



## HARDWARE LIST





























**8** X4











**14** X6


















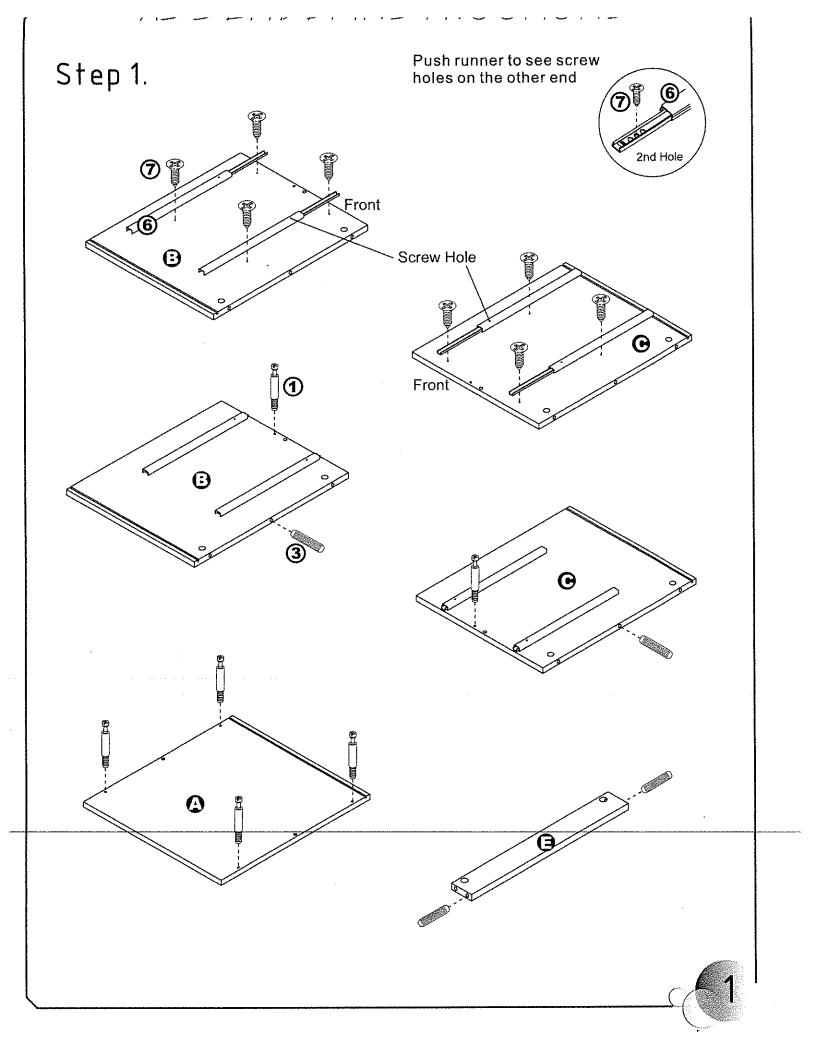

# Step 2. 1 0 **ම** Insert in as arrow direction to specify O 0 X2 X2

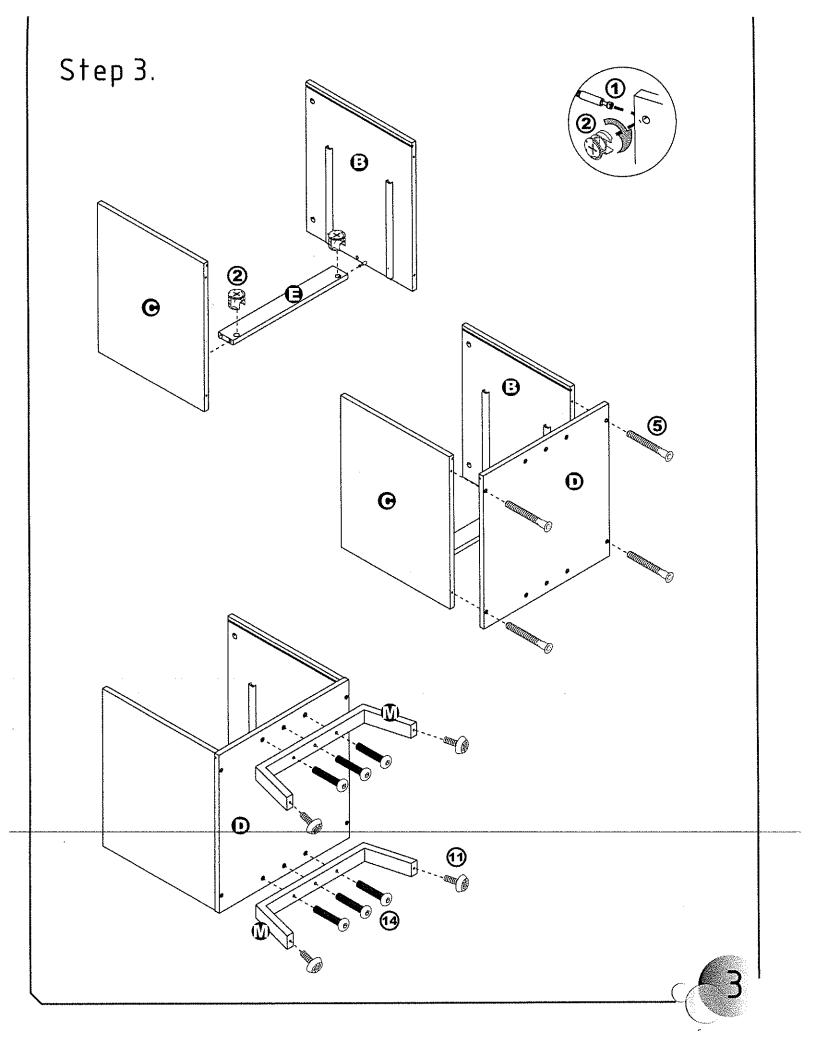

# Step 4.

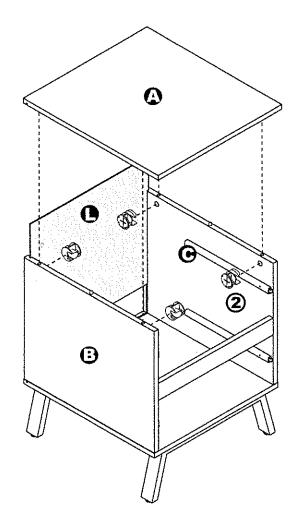




Extend the two outer slides of the runners so that they could align with the sides of the drawer. Make sure the pre-drilled holes from the drawer align with the screw holes of the outer slides.

Secure two screws from the inside of the drawer using a Phillips screwdriver to tighten them to the outer slides.

# Step 5.

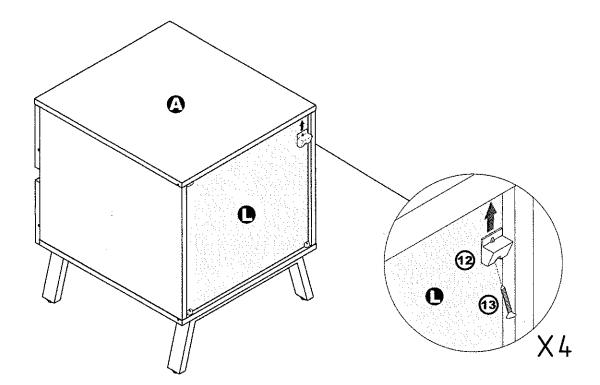

### ASSEMBLY IS COMPLETED

Make sure the product is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.

