


## Instructions for electrician STEPS 2 - 18



**WARNING:** THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.

**WARNING:**

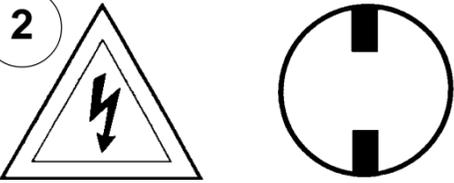


**Electrical Danger Turn Power Off**

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

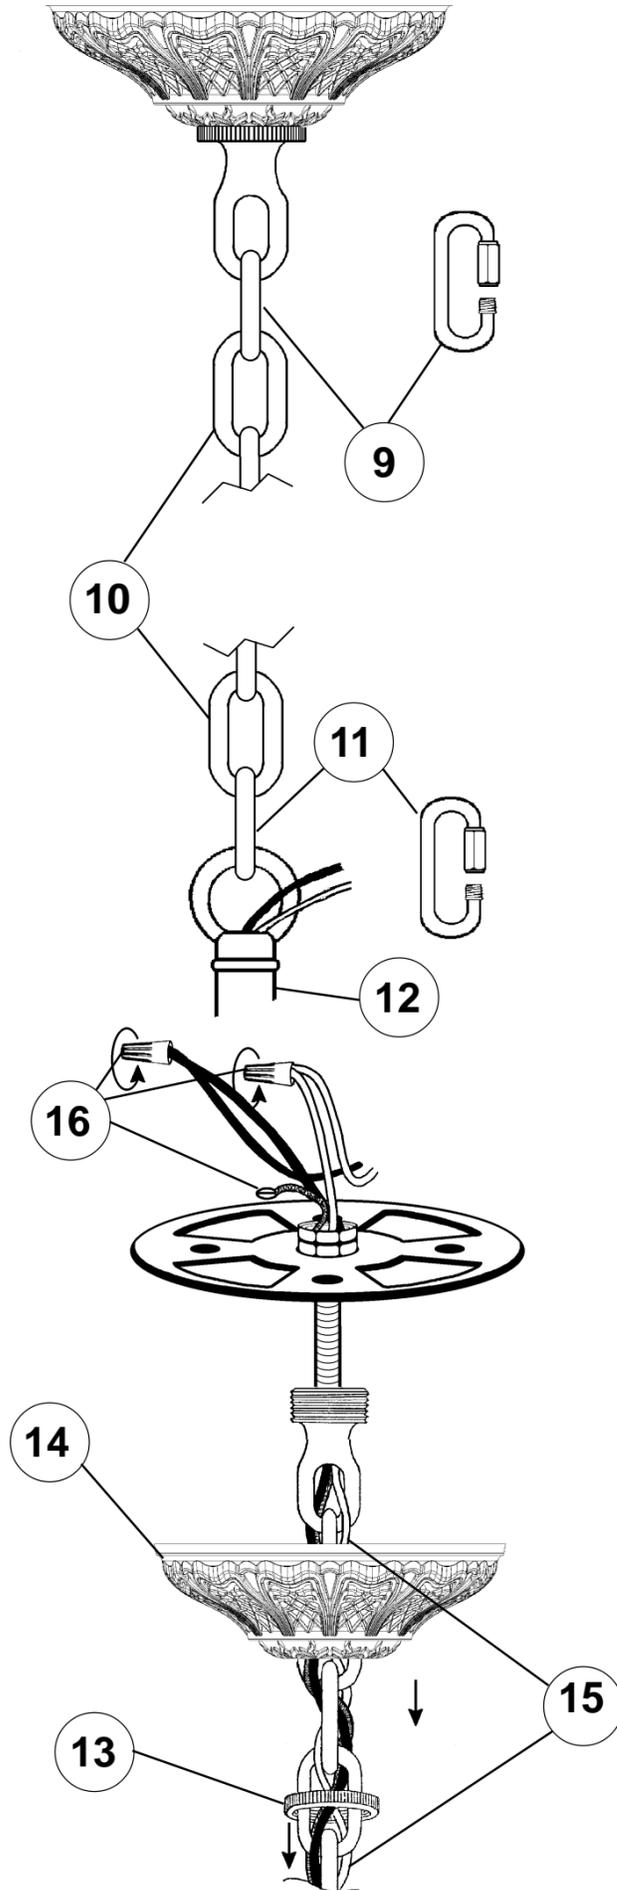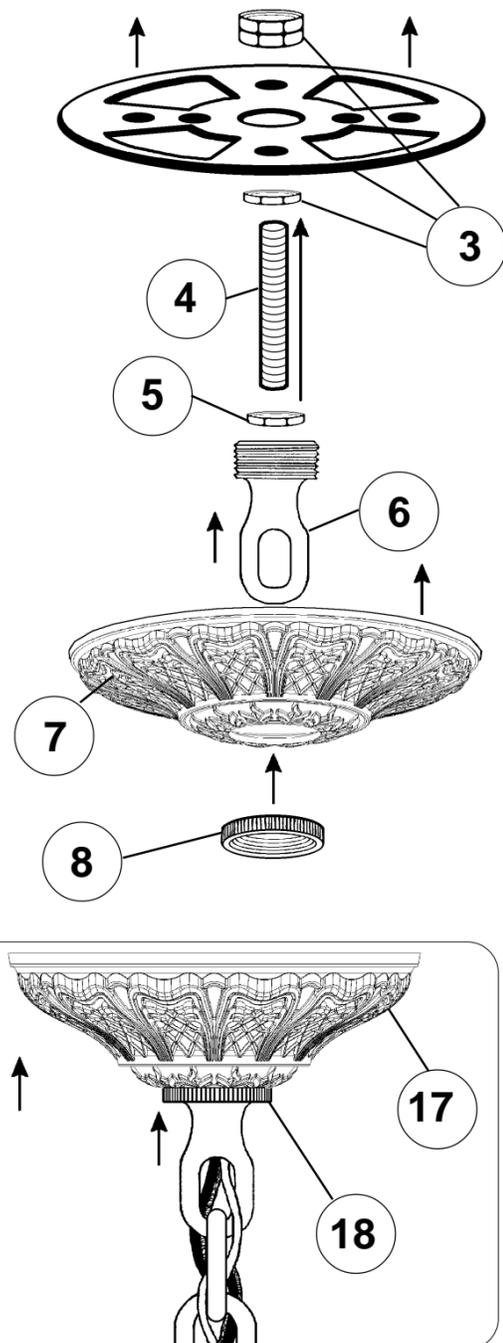

## CHANDELIER 5688- \_\_\_\_\_ TRIM DIAGRAM

(Finish Option) (Trim Option)

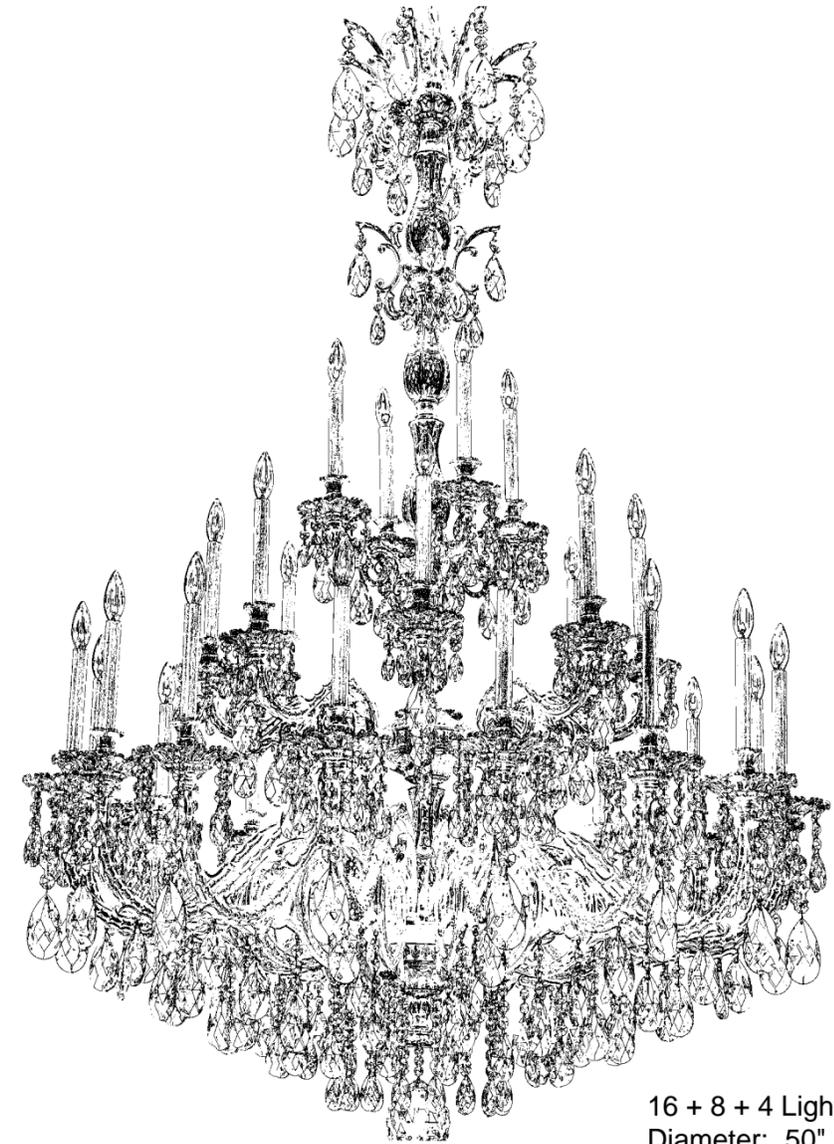

16 + 8 + 4 Lights  
Diameter: 50"  
Body Length: 68"  
Hanging Weight: 133 lbs.

**T**HIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADE MARK OF SCHONBEK WORLDWIDE LIGHTING INC.

# SCHONBEK®

See diagram on back page  
Follow steps in exact order  
Save this trim diagram for future reference

**1** **IMPORTANT**  
Person who opens carton should record the following information for future service.

CODE #	_____	Four-digit number on outside of carton.
PACKER #	_____	See crystal package label.
ORDER #	_____	See crystal package label.

# Instructions for crystal trimming

## STEPS 19 - 43




You will need 28 - C10  
25 Watts Recommended  
60 Watts Max

20

Install bulbs and be  
sure to test fixture  
BEFORE trimming.


19

Connect arm  
wires to the center column  
using plug-in connectors.  
Screw in three screws  
per arm. See detailed  
illustration.

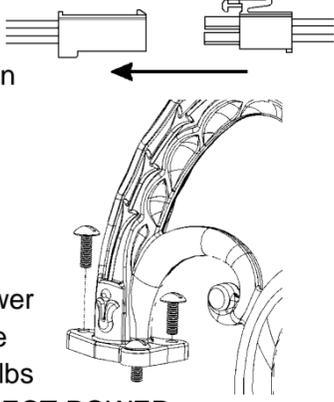

Install bulbs, connect power  
and test the fixture before  
trimming. If any of the bulbs  
do NOT light - DISCONNECT POWER.  
Double check the wire connections.

### DIAGRAM #1

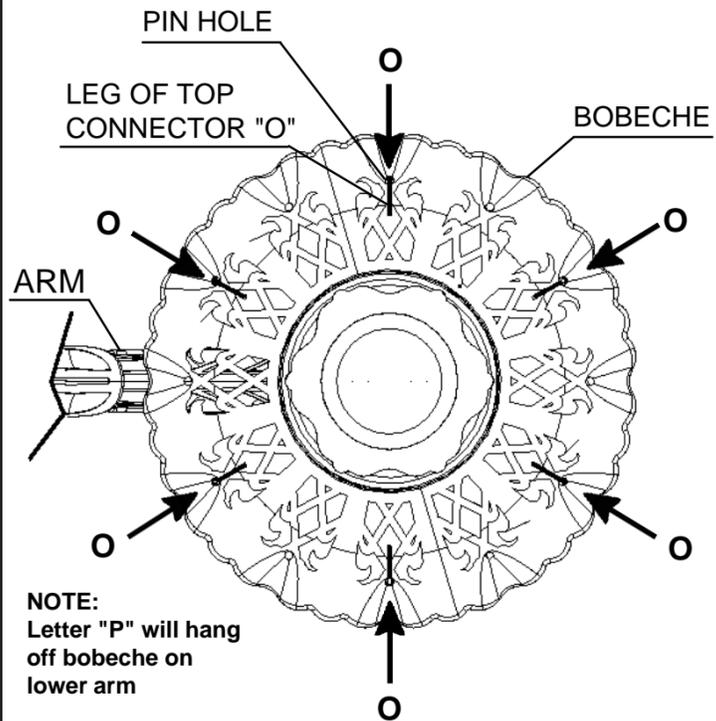

When trimming arm bobeche with letter "O", insert  
leg of top connector into pin hole from under bobeche.  
Hang in every other pin hole starting on either side of  
the arm (refer to Diagram #1)

