

WINDSOR INSTALLATION GUIDE FVN2424


CONTENTS:

Mirror	FMR2424	PAGE 2
Cabinet	FCB2424	PAGE 3
Sink	FCT2024WH-CMB	PAGE 3



FVN2424



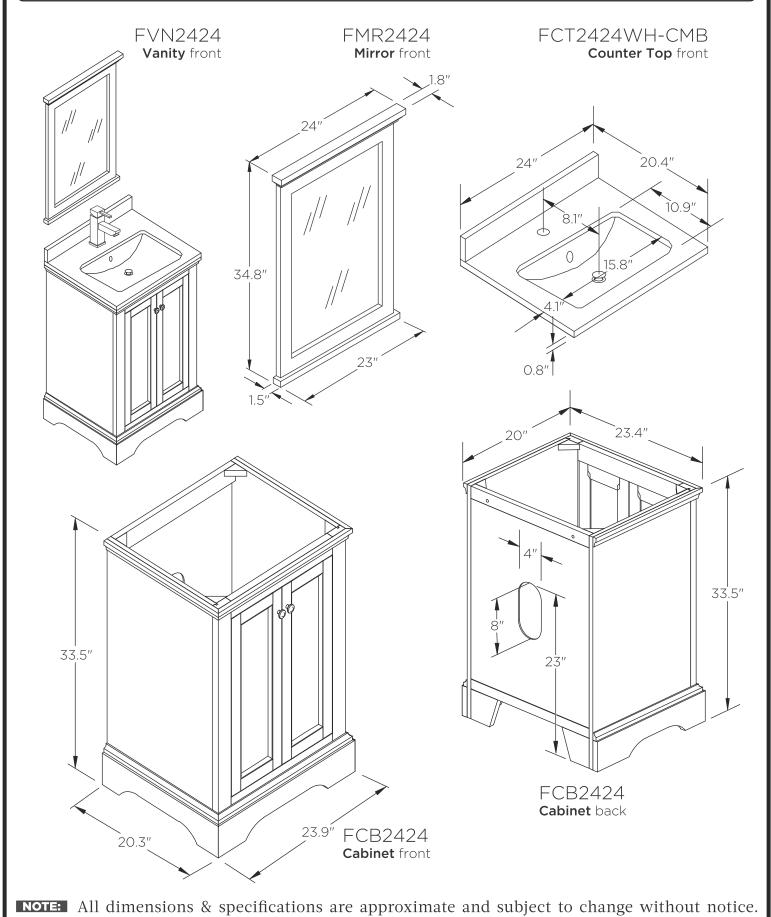

INSTALLATION GUIDE

PAGE 1





TOOLS FOR ASSEMBLY
















MIRROR INSTALLATION


Measure distance between the holes and mark it on the wall using a level.

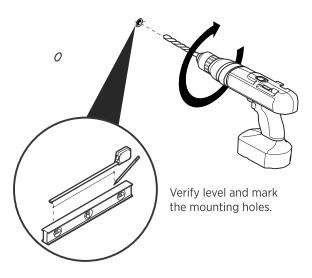


3 Hang mirror on the screws.

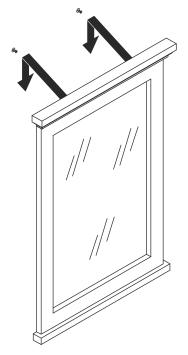

2 Press the anchors into the holes.

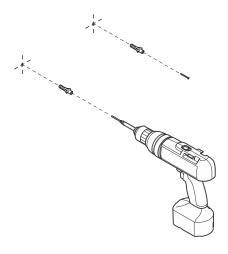

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided <u>do not</u> attach to all wall construction types. Anchors are not required if brackets are installed in stud.

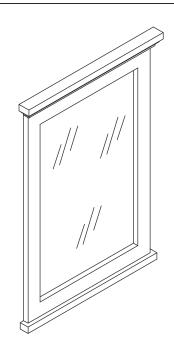

Ö

FVN2424

WINDSOR

INSTALLATION GUIDE


PAGE 2







CABINET INSTALLATION

1 Drill holes in the wall and insert the anchors.

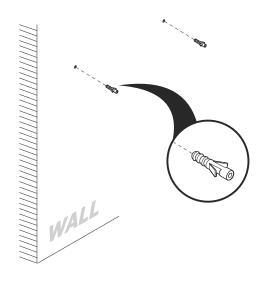


IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided <u>do not</u> attach to all wall construction types. Anchors are not required if brackets are installed in stud.




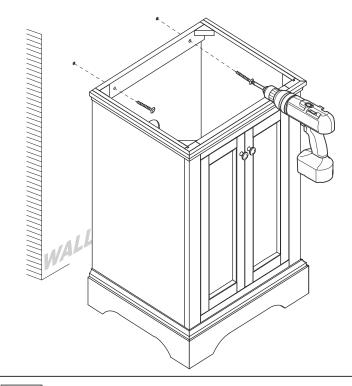

Flip counter top upside down and attach sink to It using provided brackets & screws.

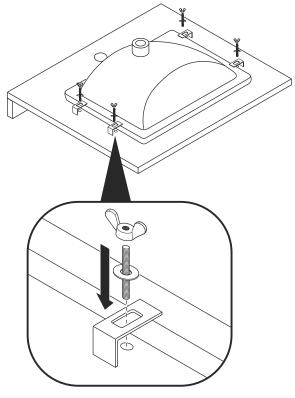

Apply silicone to the top of the cabinet (A) and place counter top with sink (B) already attached to It.

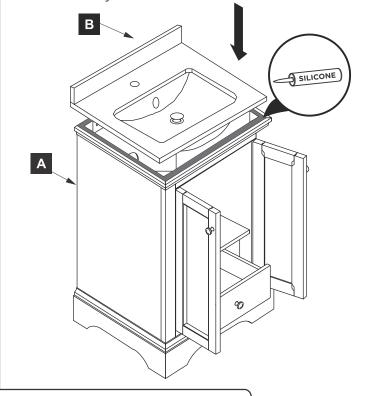

FVN2424

WINDSOR


INSTALLATION GUIDE

PAGE 3





P-TRAP & POP-UP INSTALLATION INSTRUCTIONS

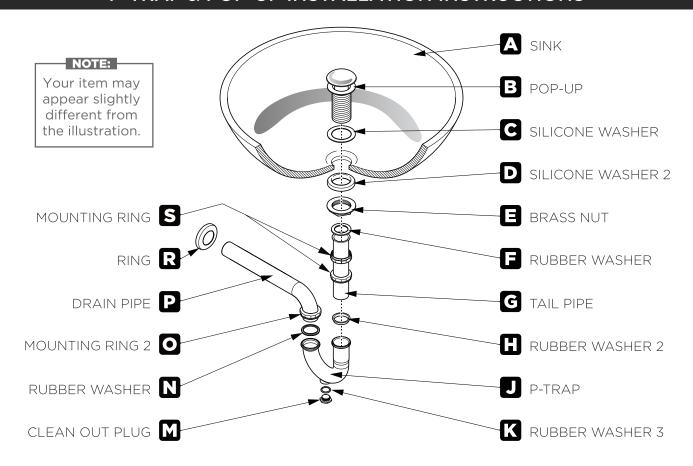

POP-UP INSTALLATION INSTRUCTIONS

