


ASSEMBLY INSTRUCTIONS FOR YOUR  
**BRUNO SCISSOR  
ARM SCONCE**

**IMPORTANT SAFETY INSTRUCTIONS:**

- \*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- \***WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- \*Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- \***DO NOT** subject the fixture to any shock while lit as shattering of bulbs may result.

**ASSEMBLY INSTRUCTIONS:**

1. Remove all parts carefully from the box.
2. Remove mounting plate (B) from backplate (E) by removing backplate screws (D)
3. Hold mounting plate (B) at desired location on wall. Mark location for screw holes with a pencil. Remove mounting plate (B) from wall. Drill small holes at marked locations to accommodate plastic anchors (A).
4. Push plastic anchors (A) into vacant holes.
5. Affix mounting plate (B) to wall by aligning holes in mounting plate (B) with plastic anchors (A). Install screws (C) into plastic anchors to secure mounting plate (B) to wall.
6. Align screw holes in backplate (E) with screw holes on mounting plate (B). Slide backplate (E) over mounting plate (B). Install screws (D) to secure backplate (E) to mounting plate (B).
7. Thread cord cover (F) into threaded opening of backplate (E). Thread cord cover (G) into threaded opening of cord cover (F). Pull cord tight when threading cord covers (F) and (G) together to avoid damaging the cord.
8. Install one Type A-15, 60 watt maximum bulb into socket.
9. Insert three prong plug (H) into wall outlet.

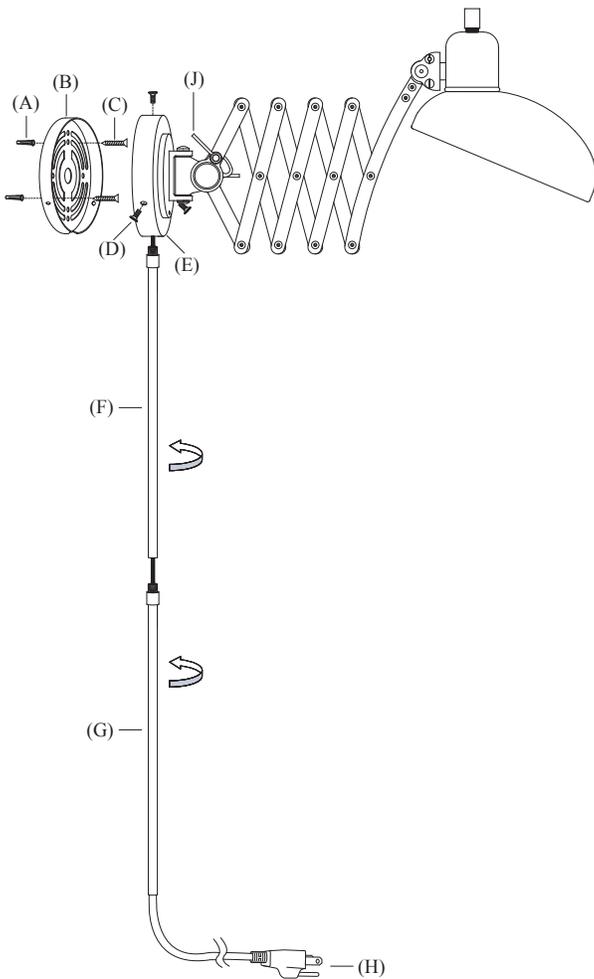

**ADJUSTMENT:**

1. Loosen adjustment key (J).
2. Angle lamp in desired location.
3. Tighten adjustment key (J) to secure position.