
Molino Bathroom widespread Lavatory Sink faucet crystal handles mixer tap Gold clour

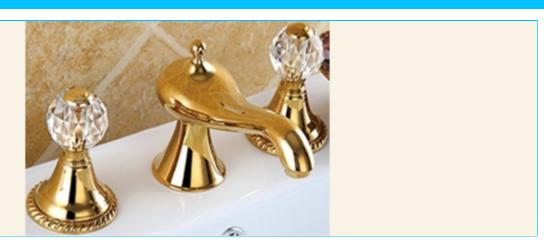

INSTALLATION INSTRUCTIONS

You may need/Usted puede necesitar/ Articles dont vous pouvez avoir besoin:









C.







For easy installation


- · To READ ALL the instructions completely before beginning.
- · To READ ALL warnings, care, and maintenance information.
- · To purchase the correct water supply hook-up.



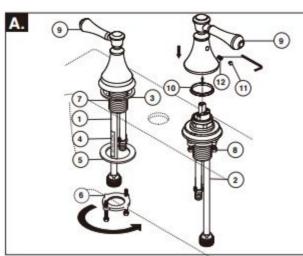

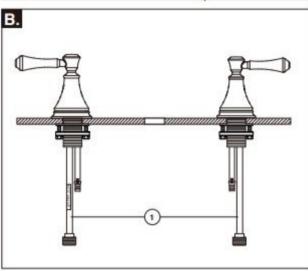


D.

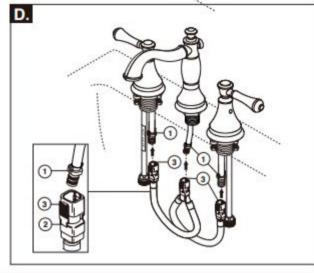



- A. Slide hot (1) and cold (2) end valves with gasket (3) through sink. Note: Hot side endvalve is labeled (4). Secure end valves with washers (5) & threaded brackets (6). Hand tighten brackets (6) onto shank (7). Lock brackets into position by tightening screw (8). Install handles (9) on end valves and secure with set screw (12). Be sure glide ring (10) is properly seated in bottom of handles before installing. Push in button cover (11) to conceal set screw (12). Note proper end valve installation. Longer copper tubes (1) install away from spout.
- Install the spout (1) and gasket (2). Secure with washer and nut (3). Note: If sink is uneven, use silicone under the gasket. Align tabs (1) and tabs (2) on quick connects (3). Push quick
- connects firmly upward and snap onto receiving tube tab (1). Pull down moderately to ensure each connection has been made.






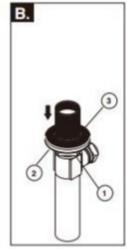





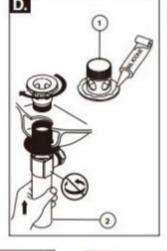

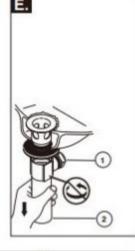




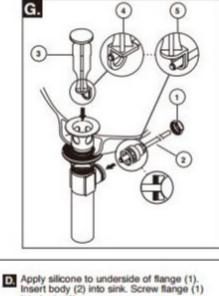


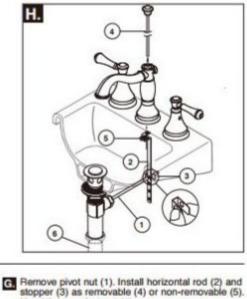

Metal Pop-up A. Remove stopper (1) and flange (2).

- B. Screw nut (1) all the way down. Push washer (2) and gasket (3) down.
- Remove tailpiece (1) from body (2), add plumber tape (3), replace tailpiece.
- Pivot (1) must face faucet. Pull assembly (2) down firmly and hold in place. DO NOT TWIST.
- Tighten nut/washer / gasket (1), clean off excess silicone (2). DO NOT TWIST.
- Hand tighten pivot nut (1). H. Attach horizontal rod (1) to strap (2) using clip (3). Insert lift rod (4) into strap and tighten screw (5). Connect assembly to drain (6).

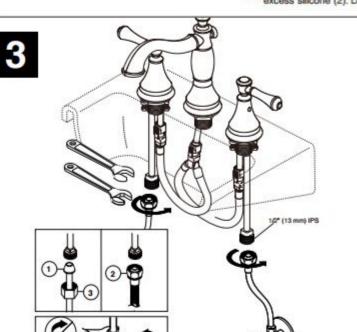


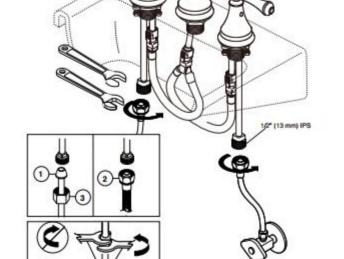

Determine which type of connection you will be making.
(1) Ball nose risers (3/8" O.D. copper tubing) with supplied coupling nuts (3) or (2) 1/2" I.P.S faucet connectors.

CONNECT TO WATER SUPPLIES. (HOOK-UPS NOT PROVIDED).

Important: When making connections be sure to use two wrenches when tightening (B). Do not overtighten.

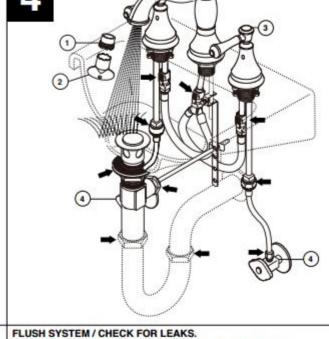

Remove aerator (1) using supplied wrench (2) and turn faucet handles (3) all the way on. Turn on hot and cold water supplies (4) and flush water lines for one minute. Important: This flushes away any debris that could cause damage to internal parts. Check all connections at arrows for leaks. Re-tighten if necessary,

but do not overtighten.