


















# Assembly Instruction

## **WARNING:**


- Read all instructions carefully and completely before assembly and use. Retain for future reference.
- DO NOT use power tools.
- DO NOT overtighten hardware.
- Periodically check all hardware and re-tighten as necessary.
- DO NOT use product if any component becomes damaged.
- For residential (non-commercial) use only.
- DO NOT sit or stand on product. Use only for intended purpose.
- DO NOT exceed 80lbs for the tabletop and 30lbs for the shelf, evenly distributed.

## Parts List


Check all parts before assembly

A. <u>Tabletop</u>	B. <u>Right panel</u>	C. <u>Left panel</u>	D. <u>Backboard</u>	E. <u>Strip</u>
				
X1	X1	X1	X2	X4
F. <u>Bottom panel</u>	G. <u>Legs</u>	H. <u>Left door</u>		I. <u>Right door</u>
				
X1	X4	X1		X1
J. <u>Shelf</u>	H1. <u>Hex bolt</u>	H2. <u>Washer</u>	H3. <u>Hex bolt</u>	
	 M8*30mm X8(+1 extra)	 M16 X8(+1 extra)	 M8*15mm X8 (+1 extra)	
H4. <u>Hinge pin</u>	H5. <u>Alley key</u>	H6. <u>Foot pad</u>		H7. <u>Alley key</u>
	 5mm X8 (+1 extra)	 X4		 4mm X1
X4				


Step 1: Put the Tabletop (A) on a soft surface to protect the finish. Attach the Left & Right panel (B&C) with Hex bolts (H1) and Washers (H2) using Allen key (H5). The Door hinge on the Left & Right panel (B&C) should be aligned on the same side as the Magnet on Tabletop (A). Ensure the groove on Left & Right panel (B&C) is aligned with the groove on Tabletop (A). Leave hardware loose in this step.

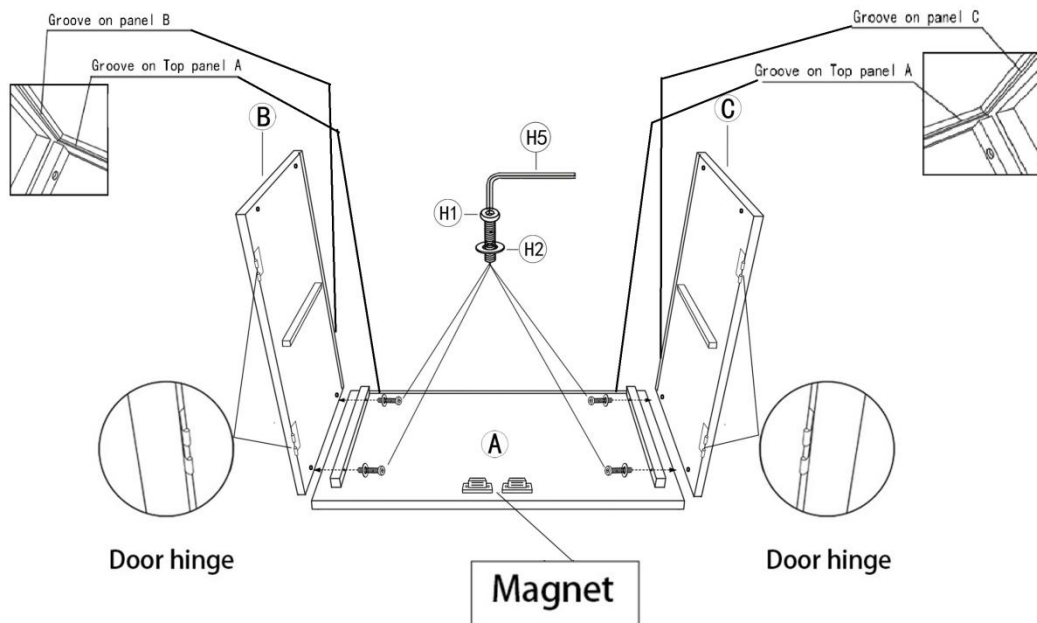


Step 2: Insert the Backboards (D) as shown in left photo below. Then insert Strip (E) between Backboards as shown in right photo below.

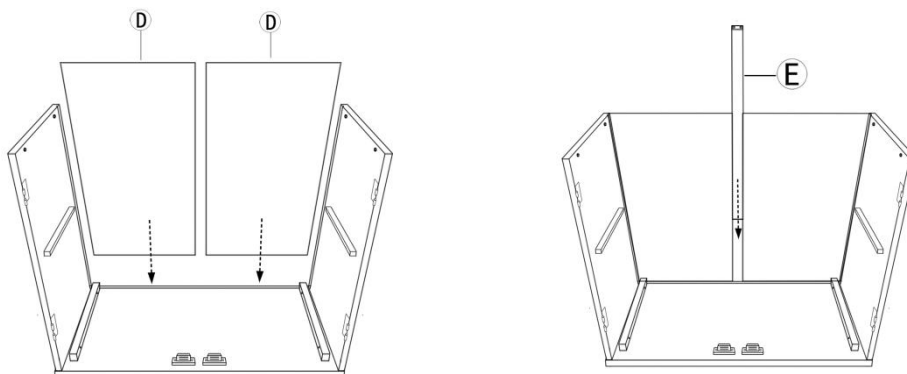


Step 3: Attach the Bottom panel (F) with Hex bolts (H1) and Washers (H2) by Allen key (H5) as shown in photo below. Note doorstop on F faces toward front opening. Do not install F backwards with doorstop on same side as Backboards. Fully tighten all bolts from Steps 1 and 3.

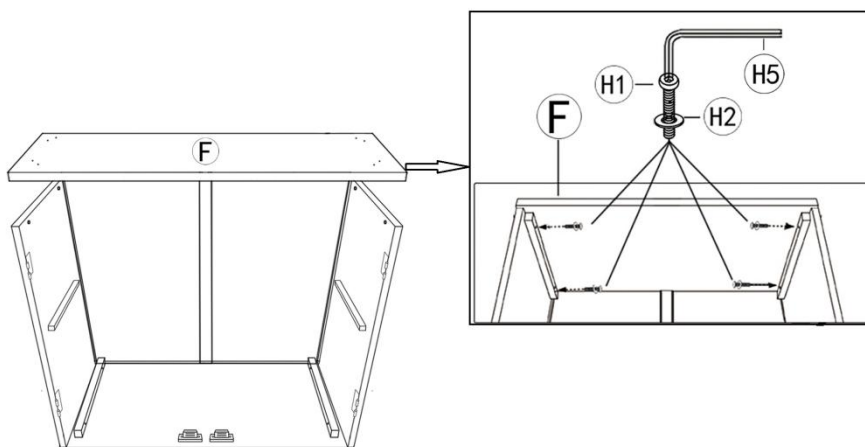


Step 4: Attach the Legs with Hex bolts (H3) by Allen key (H7) as below left photo shows. Attach the Foot pads (H6) to the bottom of all Legs as shown in left photo below.

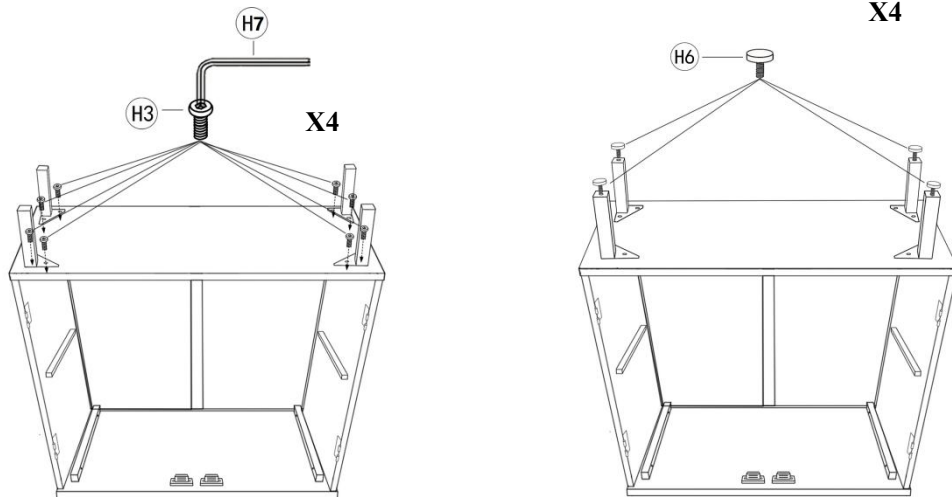

Step 5: Attach the Left & Right doors (H&I) side by side to the body using Hinge pins (H4). Open the doors, place the Shelf (J) inside as shown in right photo below.

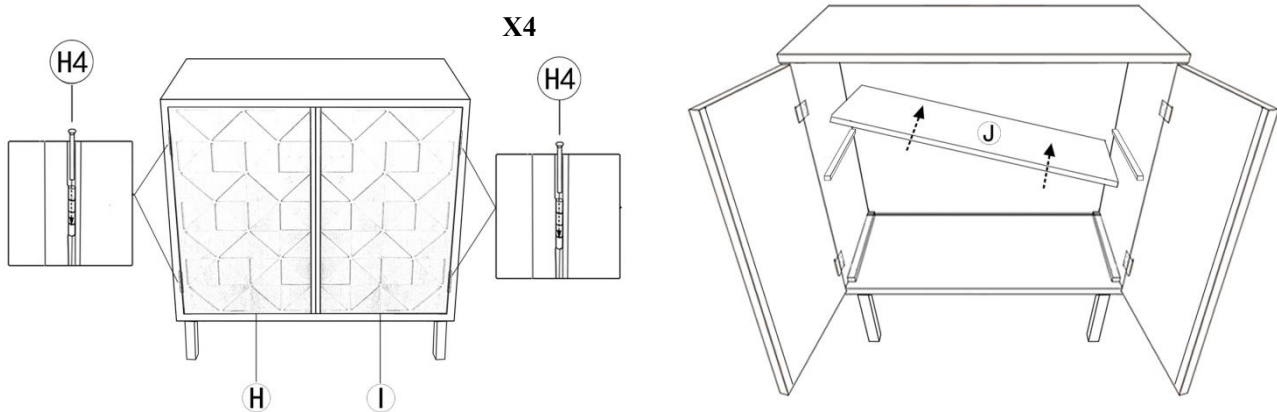

Assembly finished.

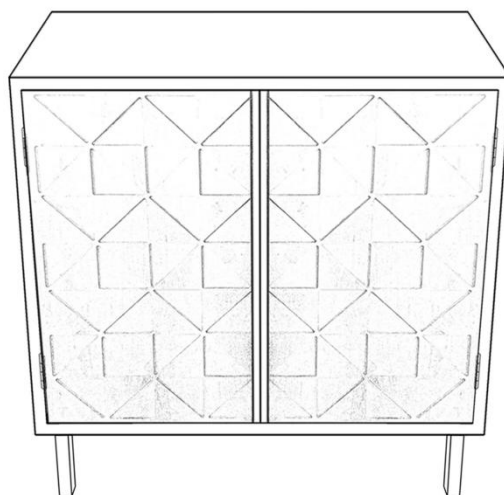

Notice:

If you have any questions about your purchase or any other product for sale, please contact [Service@jimsidea.com](mailto:Service@jimsidea.com) with your order ID, our customer service representatives are available to help.