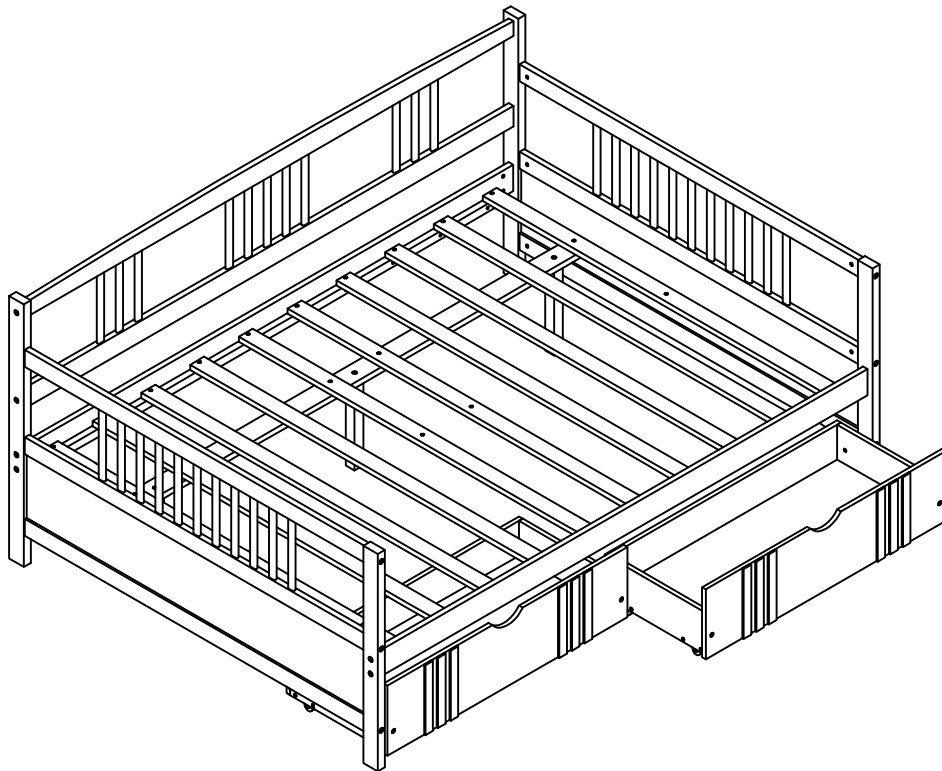


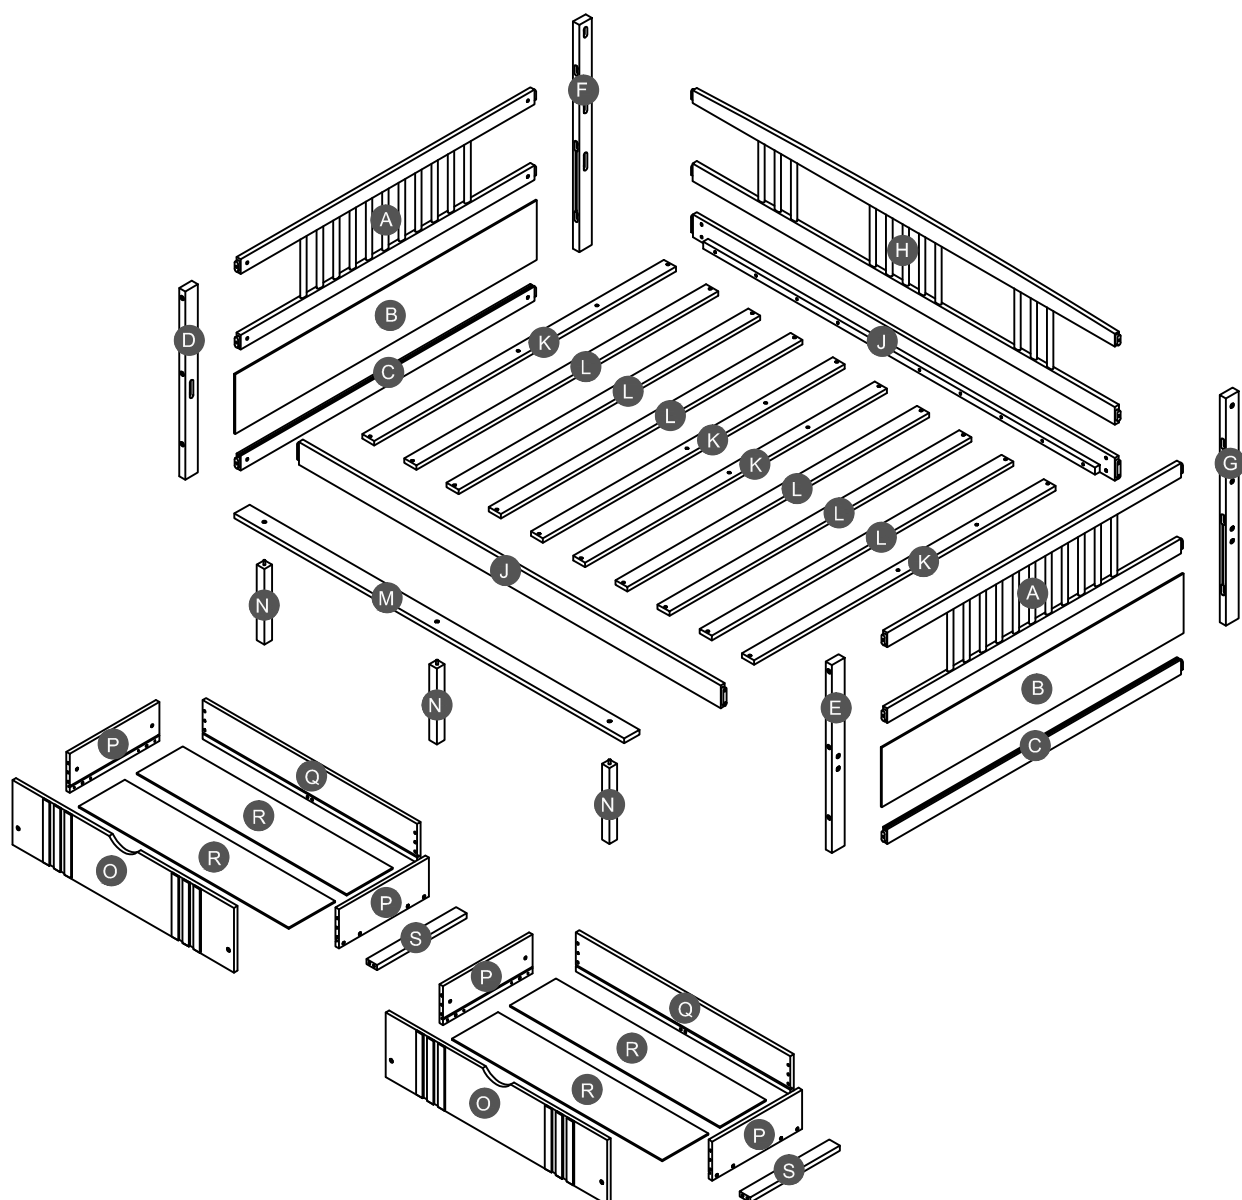
# **ASSEMBLY INSTRUCTIONS**

## **FULL SIZE DAYBED WITH 2 DRAWERS**





















**WF295132**

# Detail View













# Part List


WF295132

<b>A</b>  <p>Frame HB/FB - 2pcs</p>	<b>B</b>  <p>Side panel - 2pcs</p>	<b>C</b>  <p>Horizontal bar - 2pcs</p>
<b>D</b>  <p>Leg (Left Front ) - 1pc</p>	<b>E</b>  <p>Leg (Right Front ) - 1pc</p>	<b>F</b>  <p>Leg (Left Back ) - 1pc</p>
<b>G</b>  <p>Leg (Right Back ) - 1pc</p>	<b>H</b>  <p>Long guard rail - 1pc</p>	<b>J</b>  <p>Side rail - 2pcs</p>
<b>K</b>  <p>Slats - 4pcs</p>	<b>L</b>  <p>Slats - 6pcs</p>	<b>M</b>  <p>Lower support slat - 1pc</p>
<b>N</b>  <p>Leg support -3pcs</p>	<b>O</b>  <p>Front drawer panel - 2pcs</p>	<b>P</b>  <p>Left / right drawer panel - 4pcs</p>
<b>Q</b>  <p>Back drawer panel - 2pcs</p>	<b>R</b>  <p>Drawer bottom - 4pcs</p>	<b>S</b>  <p>Support drawer - 2pcs</p>

# Hardware List

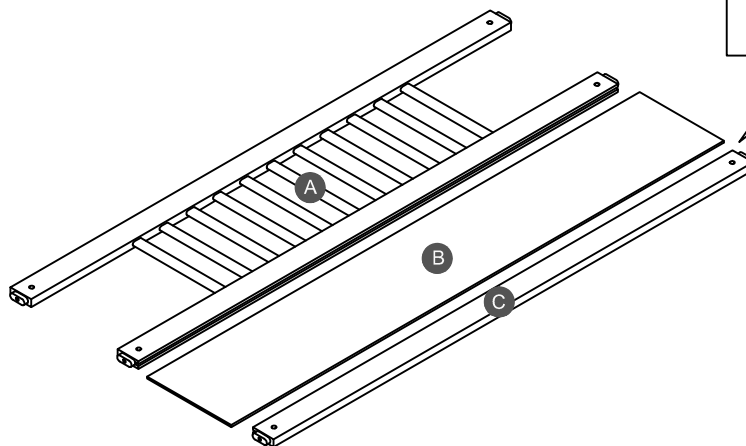
<b>1</b>  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	<b>2</b>  (Ø15)1/4"*80mm Hex-Head bolts (12pcs)	<b>3</b>  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)
<b>4</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts(32pcs)	<b>5</b>  (1/4")4.5*58mm Allen key (1pc)	<b>6</b>  Ø4*30mm Wood screws (46pcs)
<b>7</b>  100*54*20 mm Wheels (8pcs)	<b>8</b>  70*35*19 mm Drawer stopper (3pcs)	<b>9</b>  Ø8*30mm Wood dowel (24pcs)
<b>10</b>  Ø10*20mm Wood dowel (8pcs)		

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

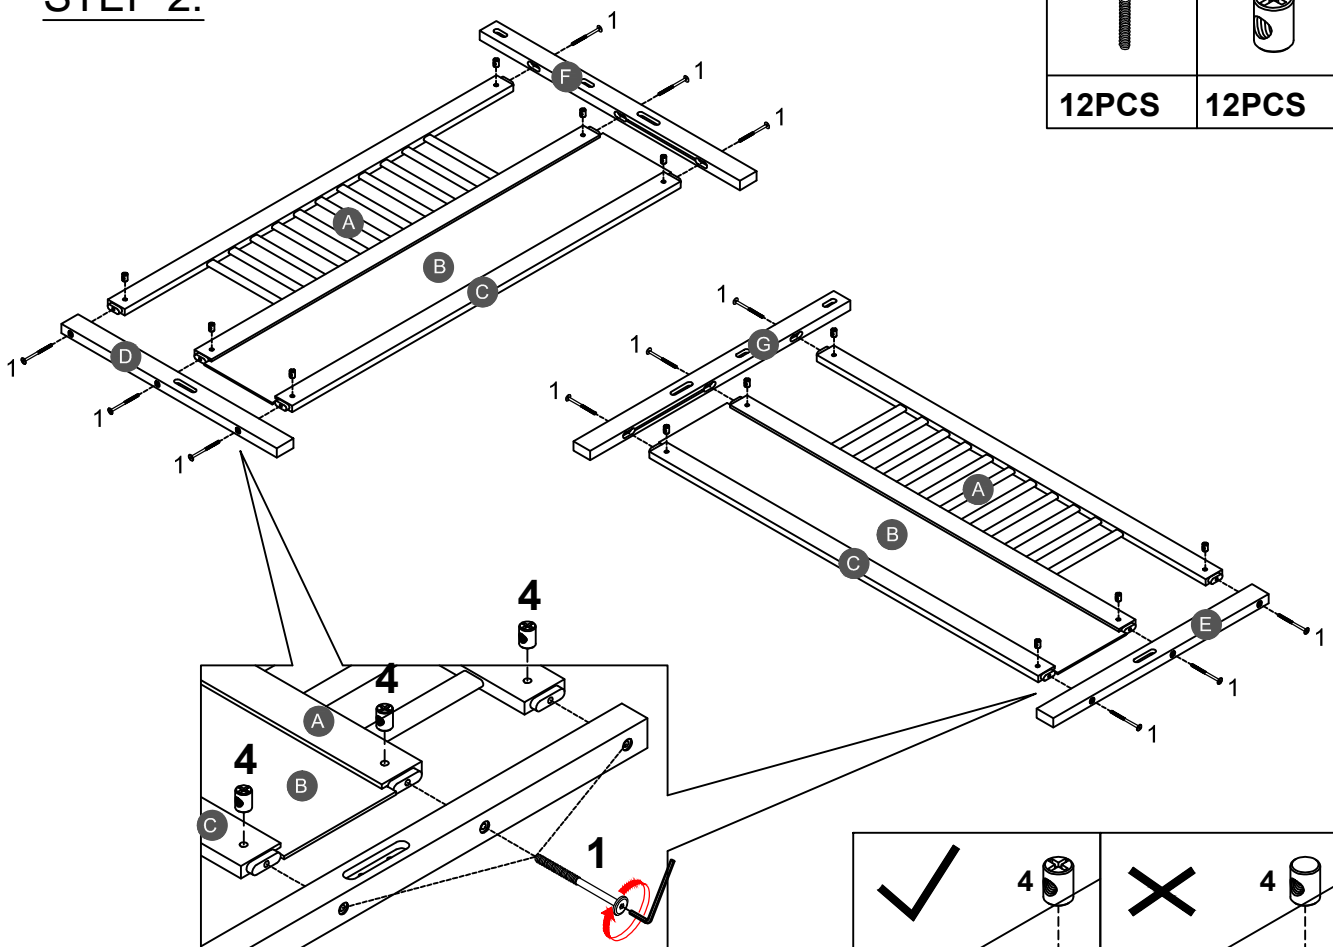
## STEP 1:



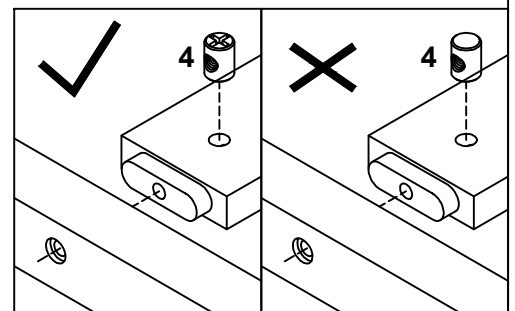
2pcs

## STEP 2:



1	4
	
12PCS	12PCS

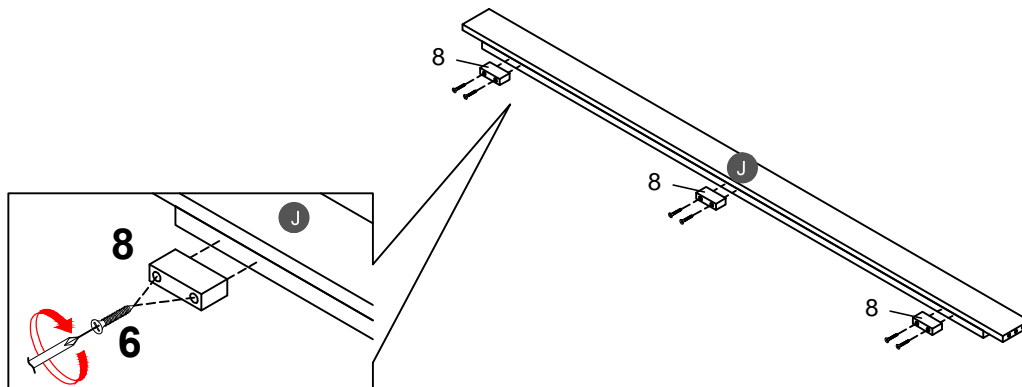


Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened





### STEP 3:

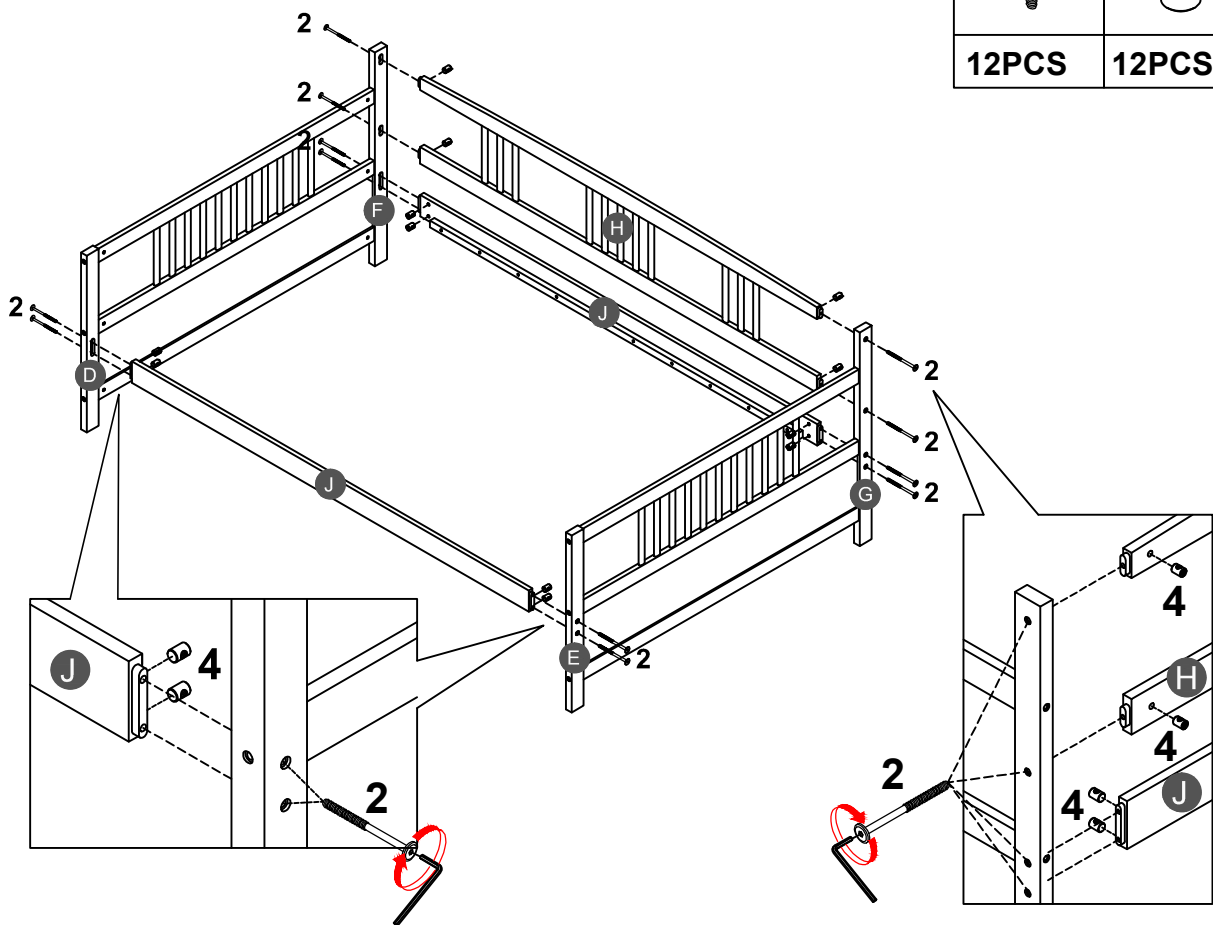
6		8	
6PCS		3PCS	



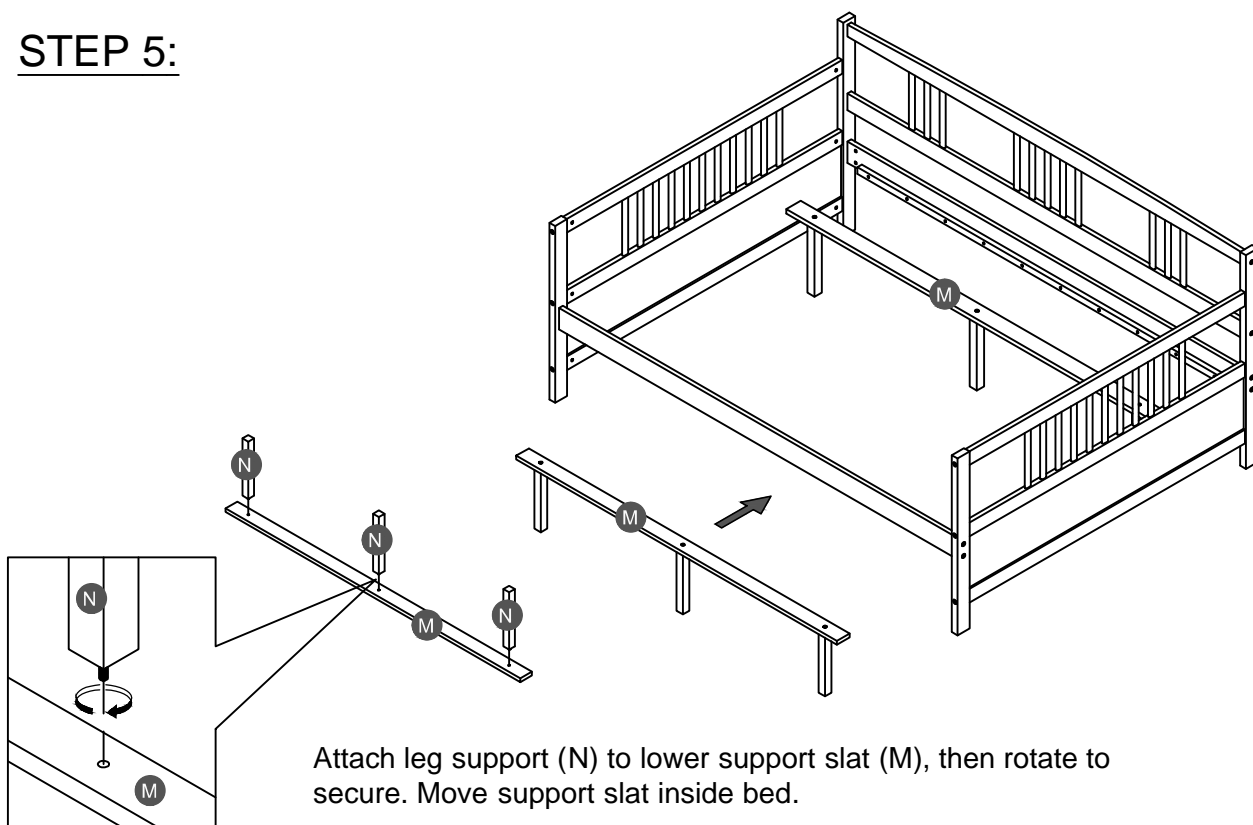
Drawer stopper (8) with lower side rail front (J) by using screw (6).

### STEP 4:

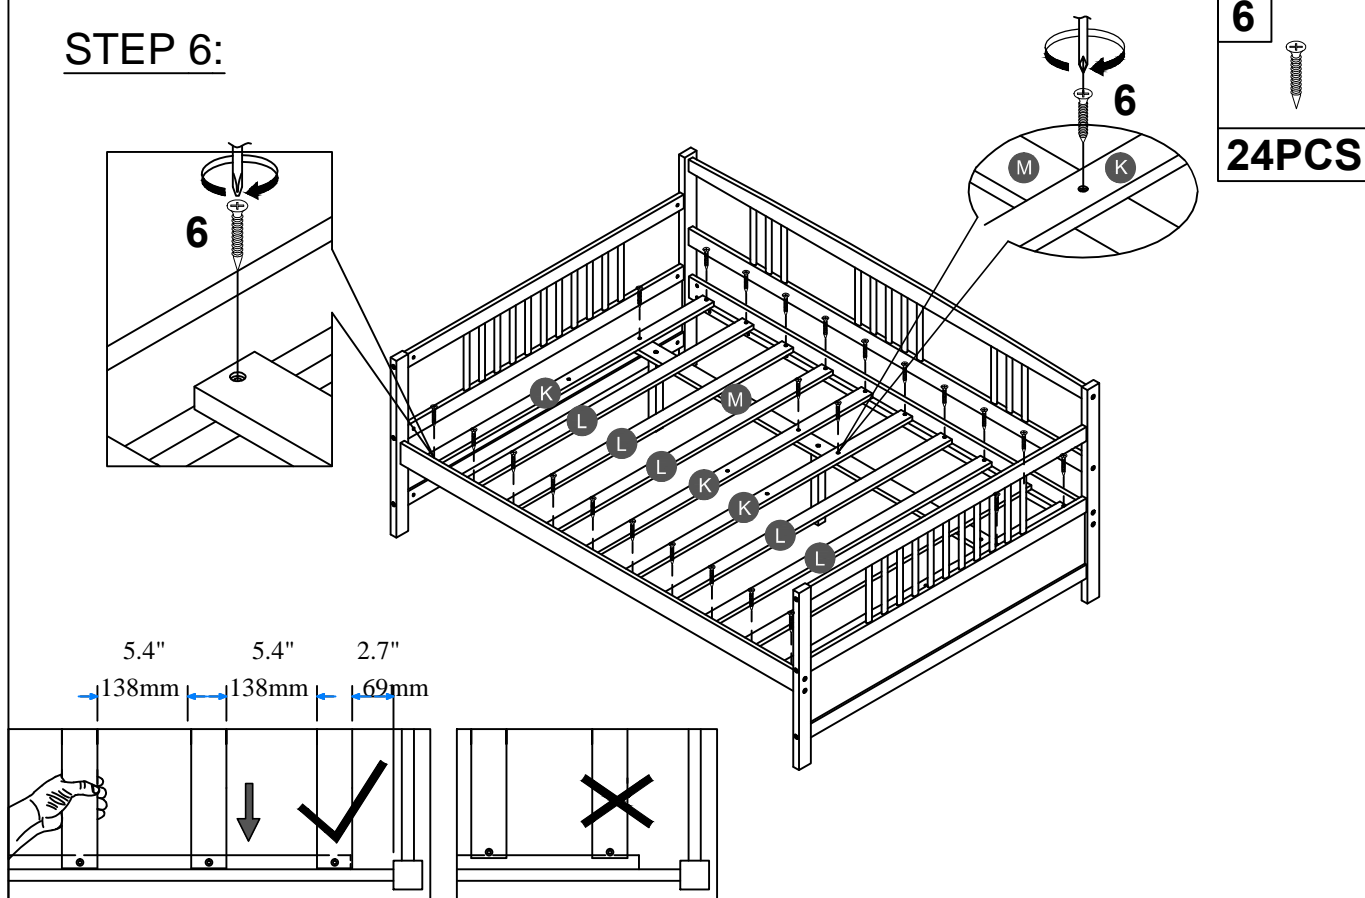
2		4	
12PCS		12PCS	



## STEP 5:

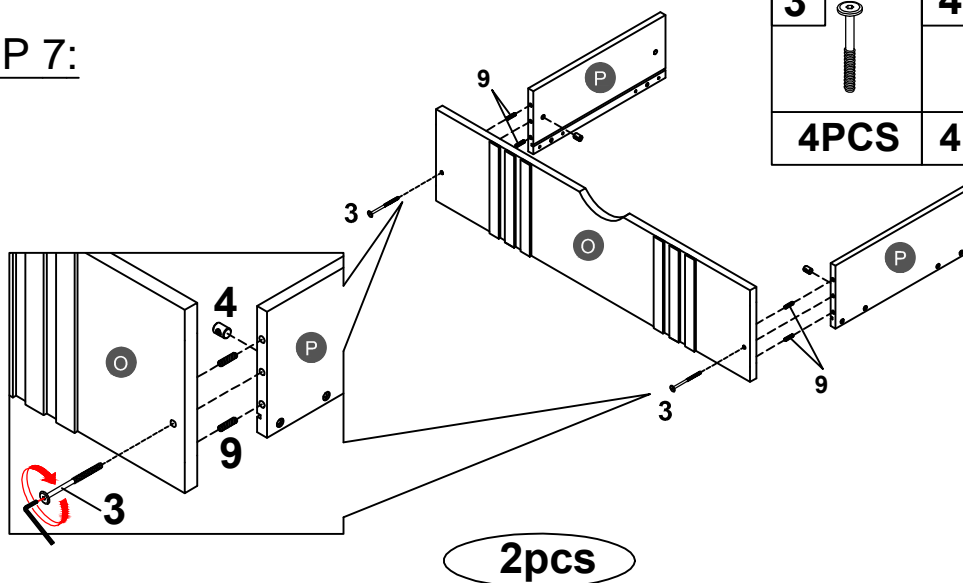


## STEP 6:



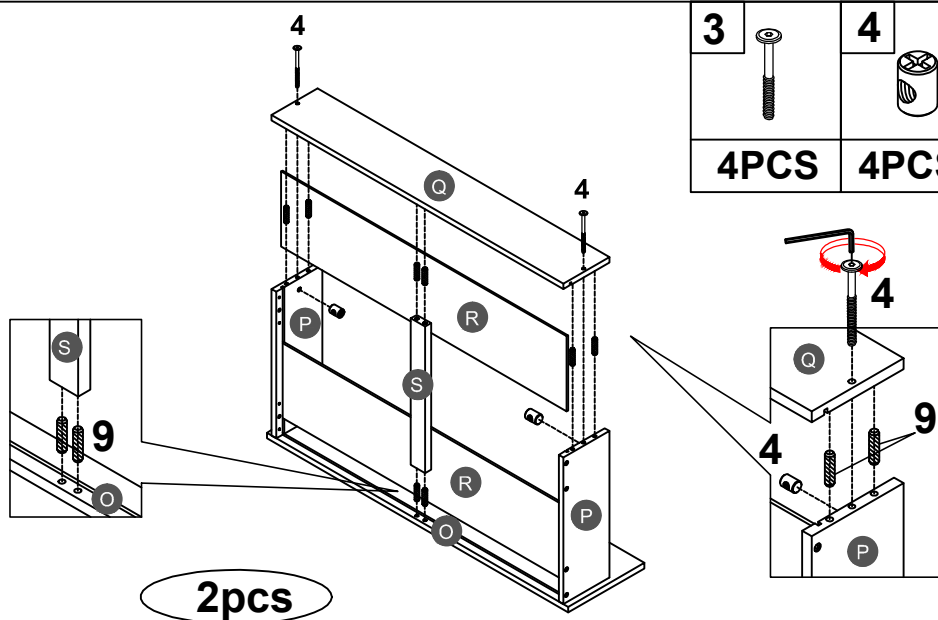
Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

## STEP 7:



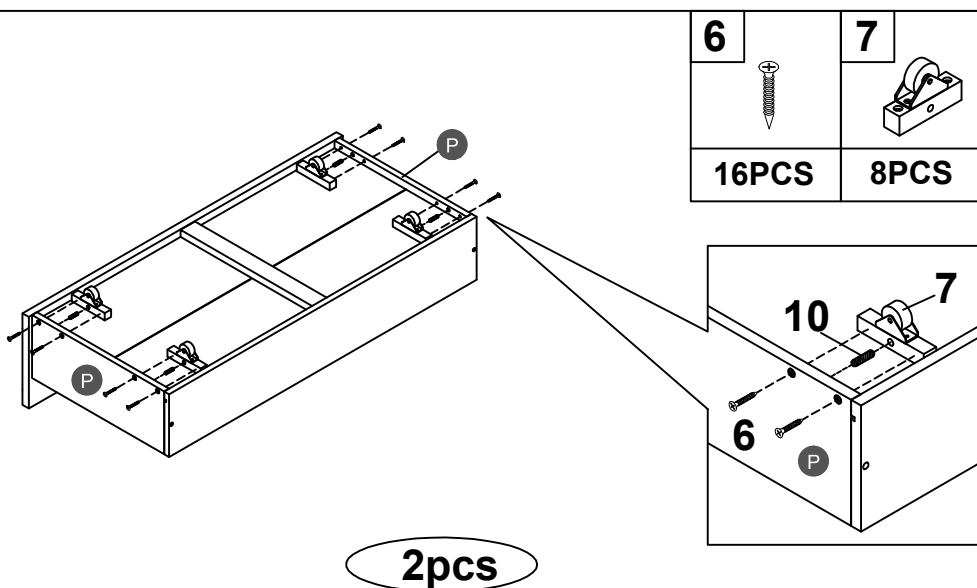
3	4	9
4PCS	4PCS	8PCS

## STEP 8:



3	4	9
4PCS	4PCS	16PCS

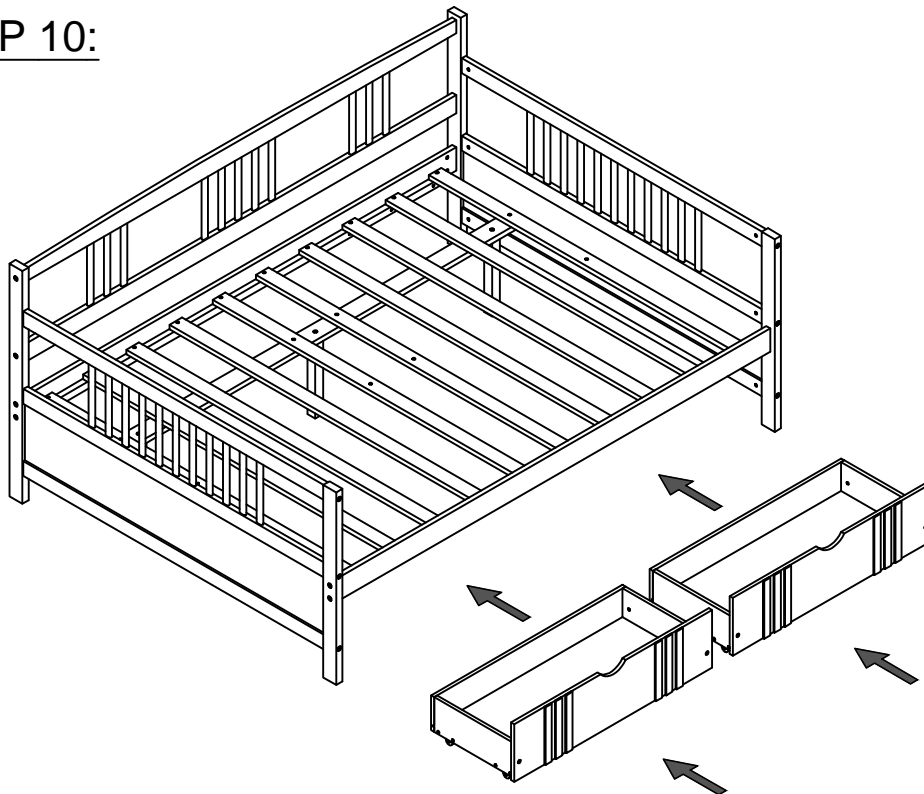
## STEP 9:



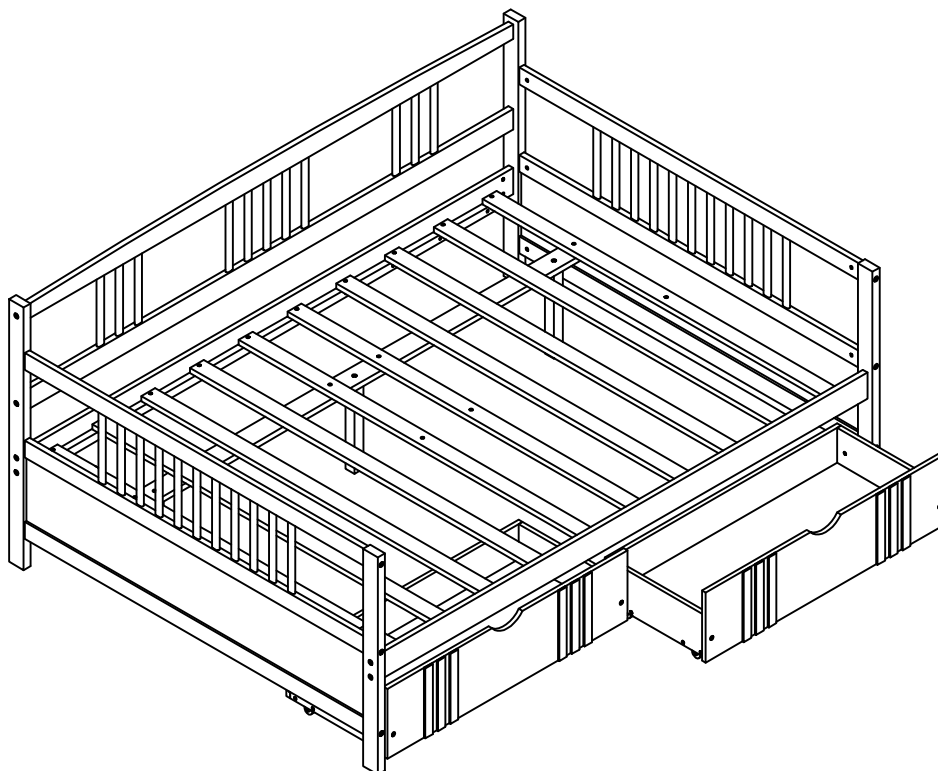
6	7	10
16PCS	8PCS	8PCS



**STEP 10:**



Push drawers under the bottom of daybed.



**Make sure to tighten all the screws of the bed.**