


CHIC TEAK

Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

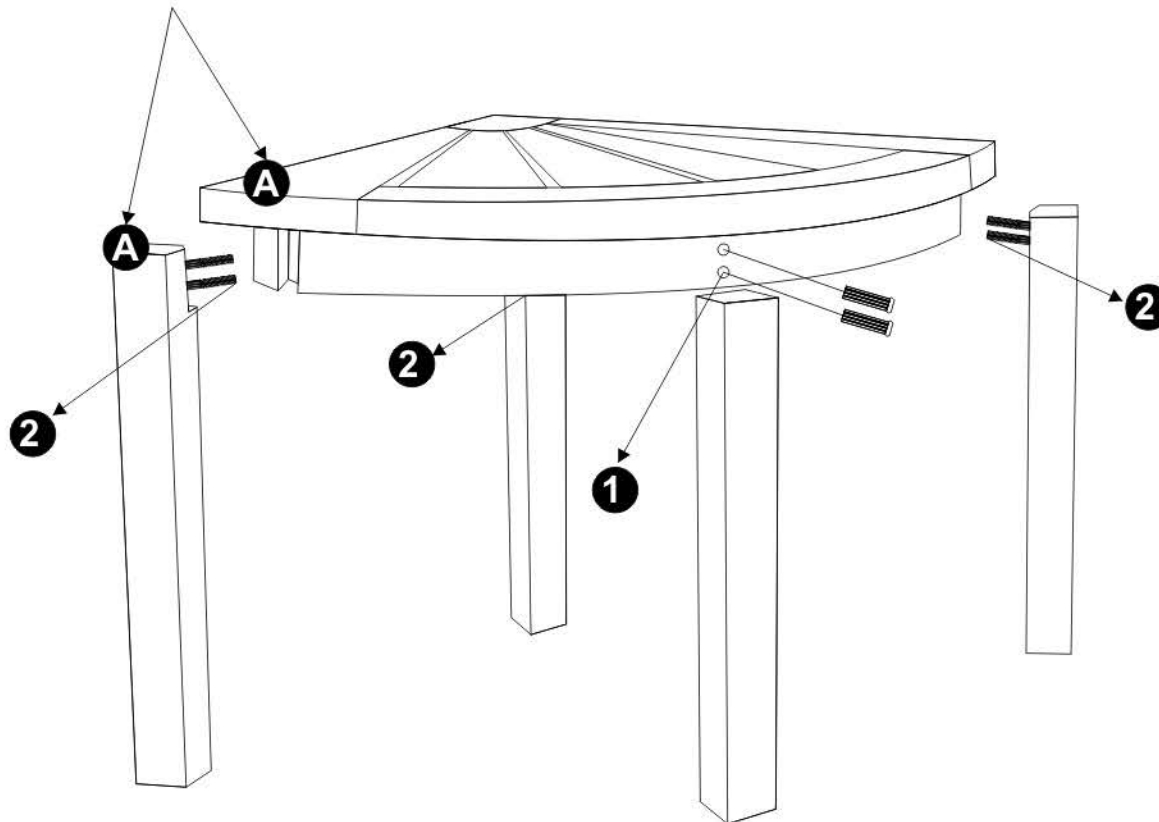

*Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly*

Code

HJ207

Hardware



1. C. BOLT 28mm (2 pcs)
2. BOLT (6 pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

5 Section