


CHIC TEAK

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEGNING

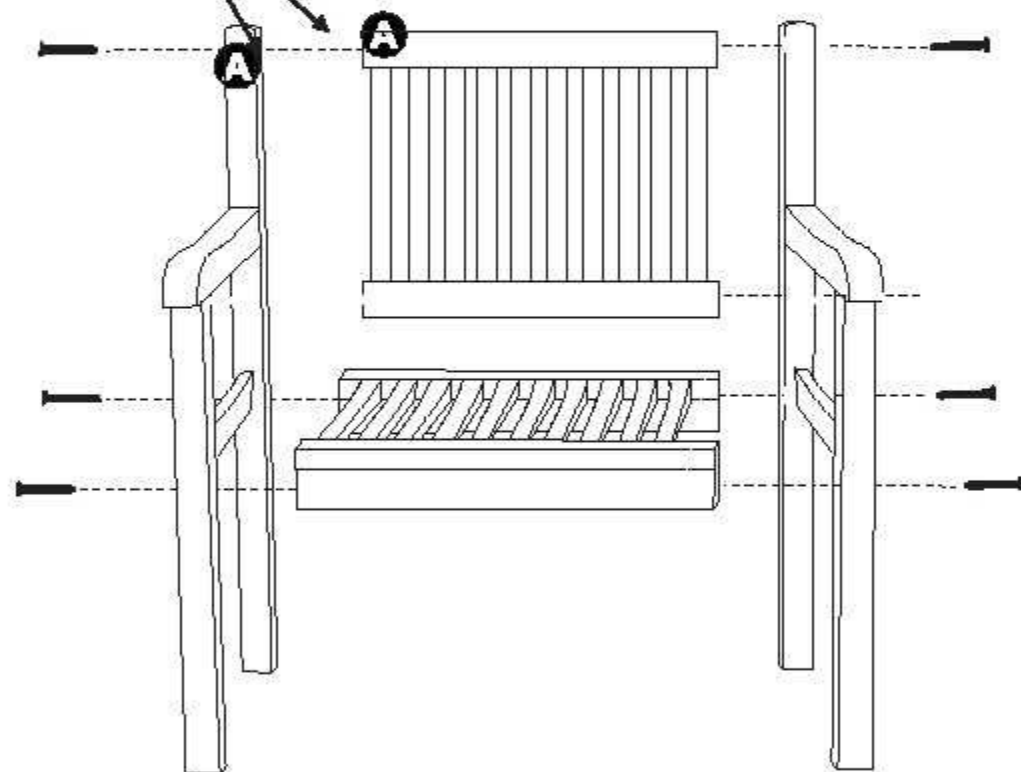

**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**

Code

AM166AC

Hardware



F. Bolt (6 Pcs)

Tool



Socket Wrench 4mm Ht

Total Section

4 Section