


# ASSEMBLY INSTRUCTIONS

1. Carefully layout all parts in a line on a smooth surface.
2. Screw the threaded pipe onto the top of lamp holder base.
3. Put the shade to the threaded pipe and secure with finial (DO NOT OVERTIGHTEN).
4. Install bulb(s) (not included).

**CAUTION** - Refer to the wattage caution label located near the lamp holder for the maximum wattage-do not exceed the wattage.

**WARNING** - Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle.

5. Insert plug into wall receptacle.

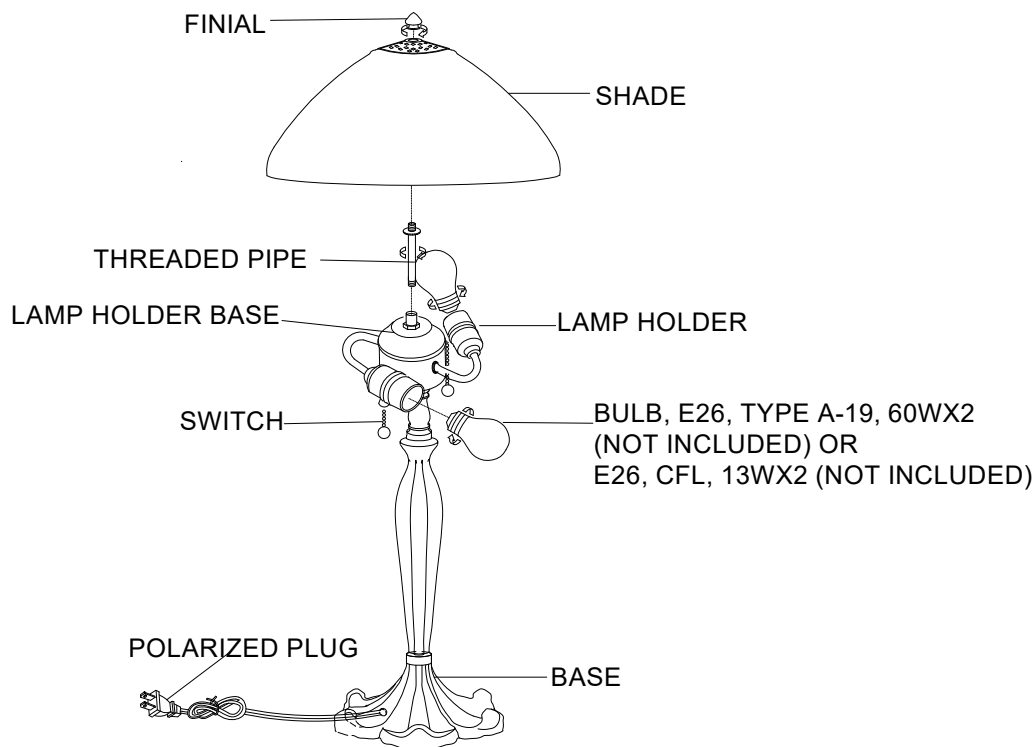

**Note:** 1. The above diagram illustrates the installation of your new luminaire. This is a representative drawing and is not intended to match the style of your luminaire.

2. This stained glass product has been protected with mineral oil as part of the finishing process. Please use a soft dry cloth to remove any excess oil.

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.



MADE IN CHINA