



(pic3)

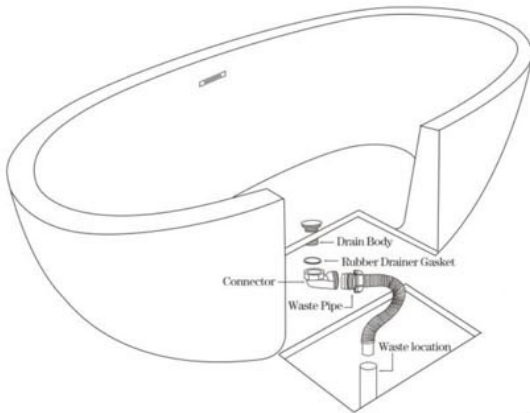

(pic4)

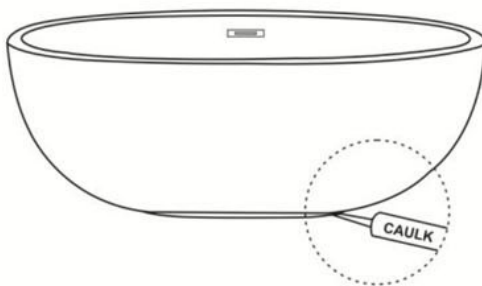

(pic5)

6. Attach the Rubber Drainer Gasket to drain Body first; set the connector to drain Body; connect waste pipe to Connector and make them tightend; do not make any overtightening(pic 3).

7. Insert Waste Pipe to waste location.

8. Apply a deal of adhesive or silicone to the bottom of the supports(pic4).

9. Apply a deal of tile caulk around the edge of the base.

10. Set the Tub into the position correctly by connecting it with the previously installed drain hardware.

11. Fill the Tub with water to overflow for 24 hours at least and then drain the Tub for any water leakage inspection.

12. As the bathtub is in place, wipe off any excess tile caulk and adhesive where the Tub meets the floor. Strip away any excess caulk with a wet cloth.(pic 5)