




**MANHATTAN  
COMFORT**

---

**BC002**

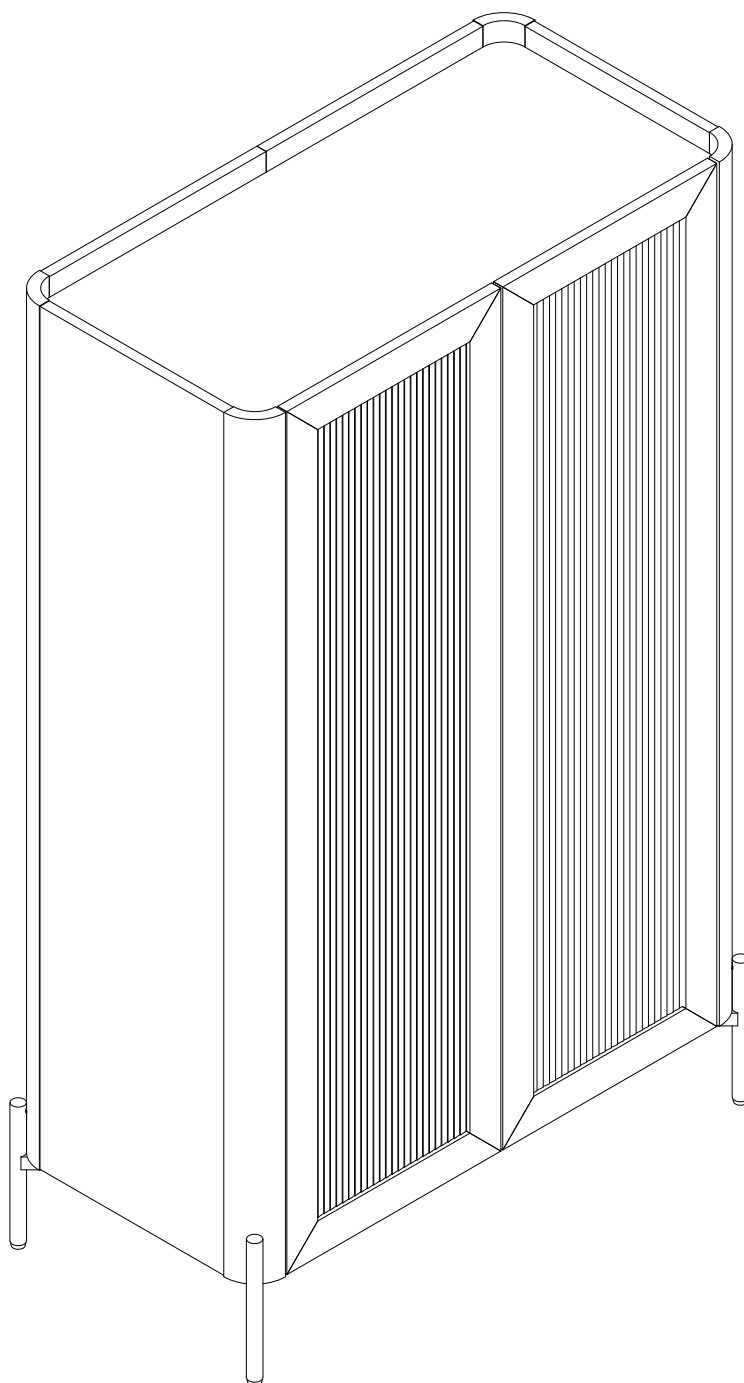

V.08212024







# STOP!


Before beginning the assembly process,  
ensure all boxes and parts have been delivered.

## FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

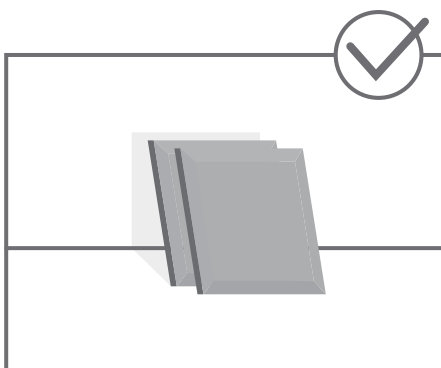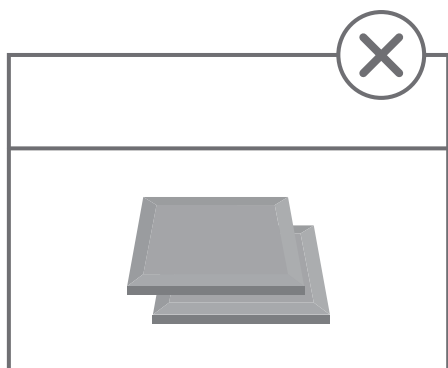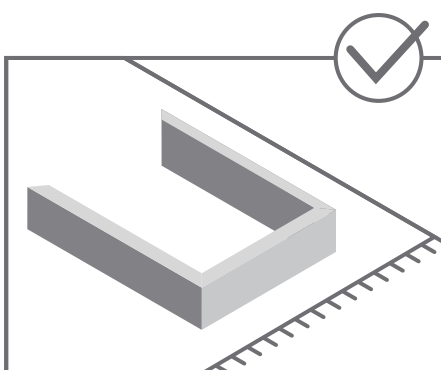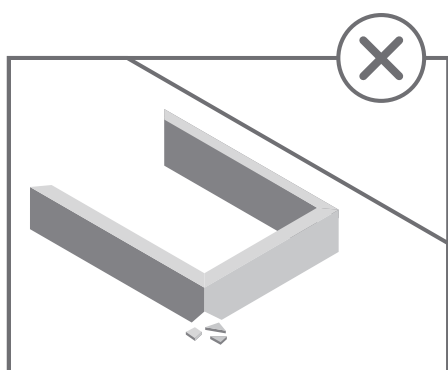

## TOOLS REQUIRED

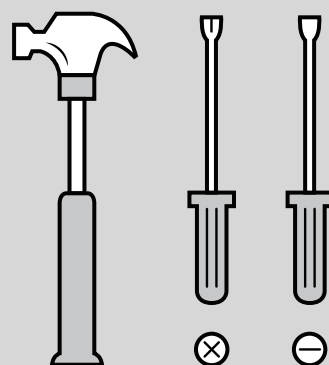

View our assembly video online:  
[WWW.MANHATTANCOMFORT.COM](http://WWW.MANHATTANCOMFORT.COM)



Stuck? Question? We are here to help.  
tel: 908-888-0818  
e-mail: [help@manhattancomfort.com](mailto:help@manhattancomfort.com)


Support Site



## Included in this package:

---

- A. TOP (1)
- B. BOTTOM (1)
- C. LEFT PANEL (1)
- D. RIGHT PANEL (1)
- E. LEFT BACK PANEL (1)
- F. RIGHT BACK PANEL (1)
- G. BACK STRIP (2)
- H. SHELF PANEL (3)
- I. LEFT DOOR (1)
- J. RIGHT DOOR (1)

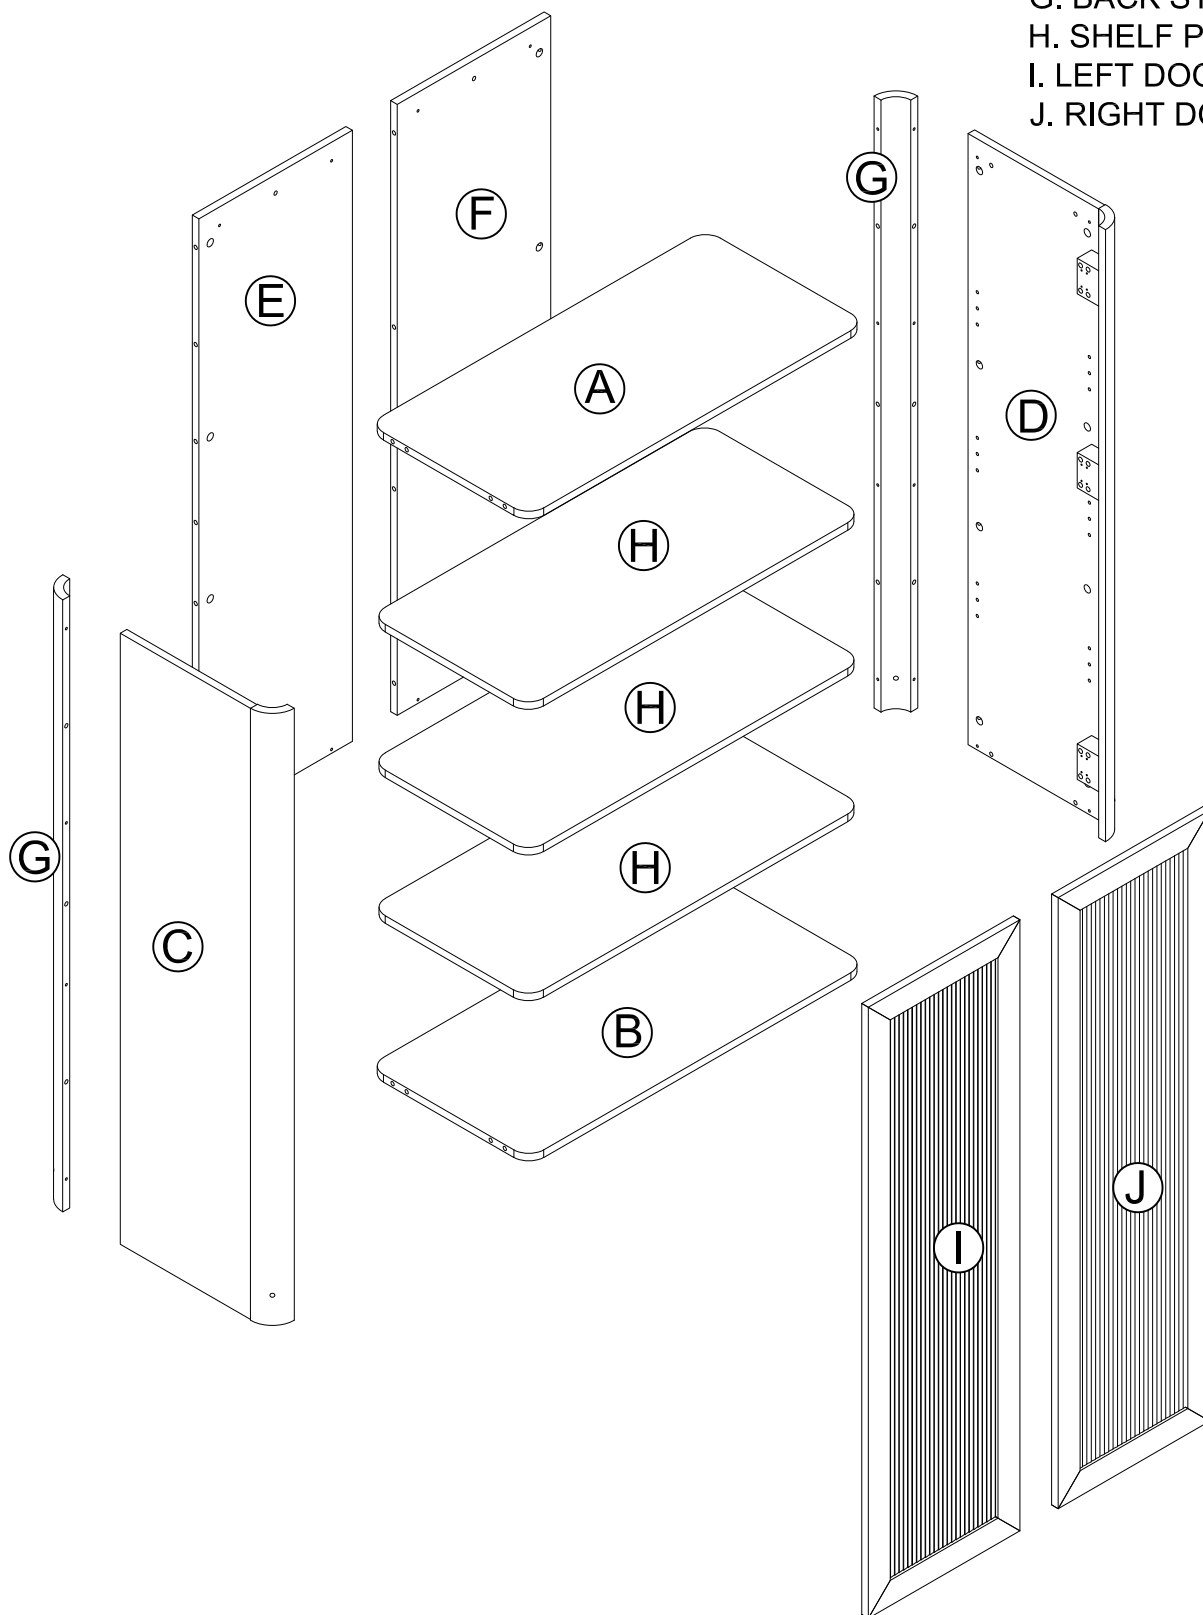


# Hardware Identification


- ① KD BOLT - 32pcs  
L=25mm




- ② KD CAM - 32pcs  
Ø15\*11mm




- ③ COVER CAP - 32pcs




- ④ WOOD DOWEL - 28pcs  
Ø8\*30mm




- ⑤ LOCK - 1pc




- ⑥ SHELF PEGS - 12pcs

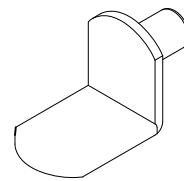

- ⑦ LEGS - 4pcs




- ⑧ HINGE - 6pcs

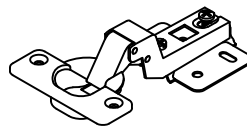


- ⑨ SCREW - 36pcs  
Ø4\*14mm




- ⑩ BOLT - 12pcs  
M6\*28mm




- ⑪ STRAPS - 2pcs

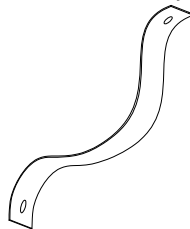

- ⑫ SCREW - 2pcs  
Ø4\*18mm




- ⑬ SCREW - 2pcs  
Ø4\*25mm



- ⑭ PLASTIC - 2pcs




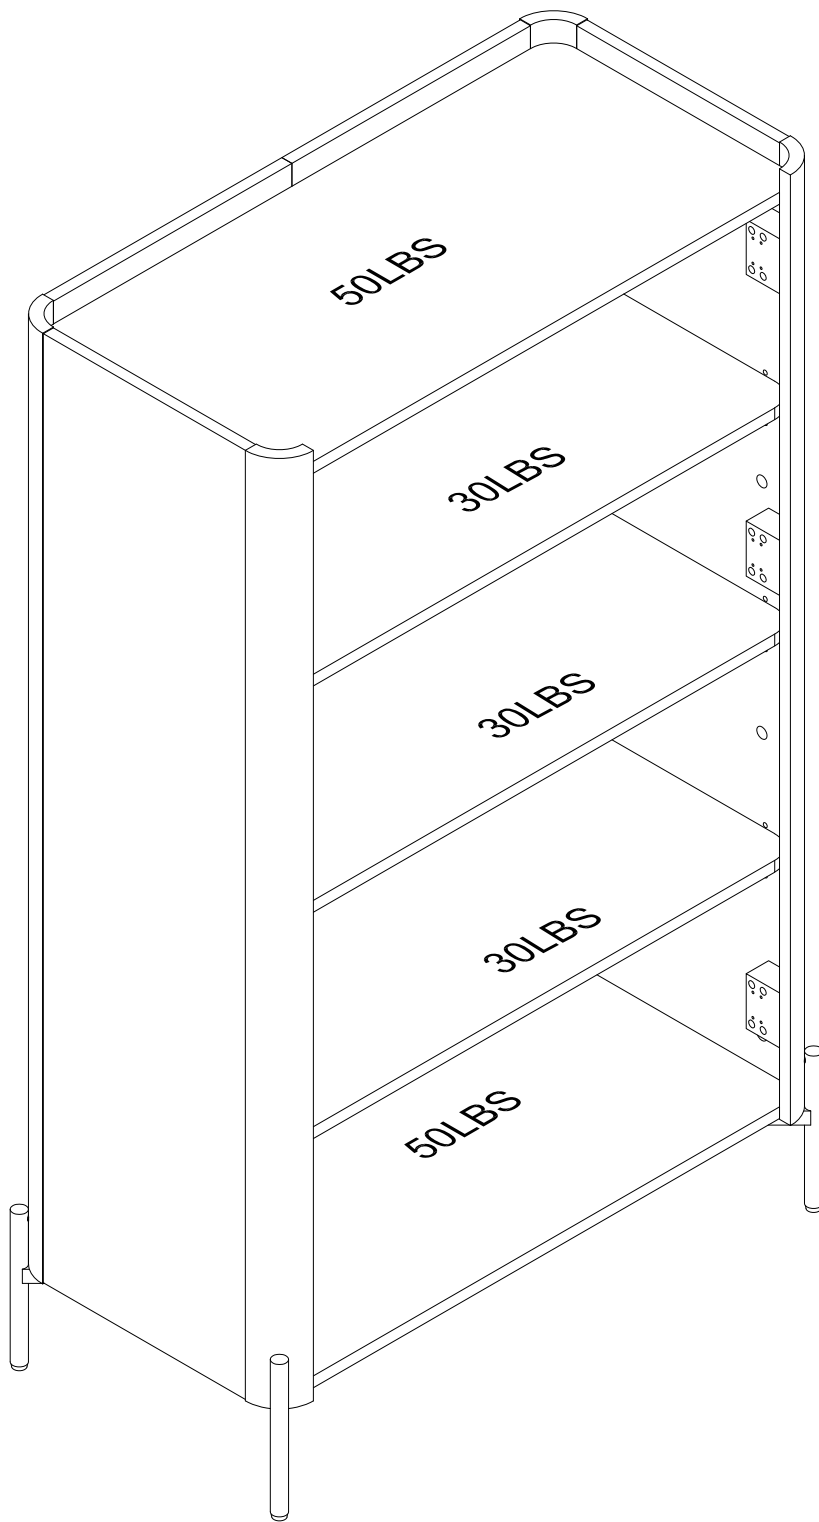


## Step 1:

---

\* Insert Sixteen KD BOLT (1) to the BACK STRIP (G) .


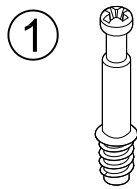


( 16 PCS )

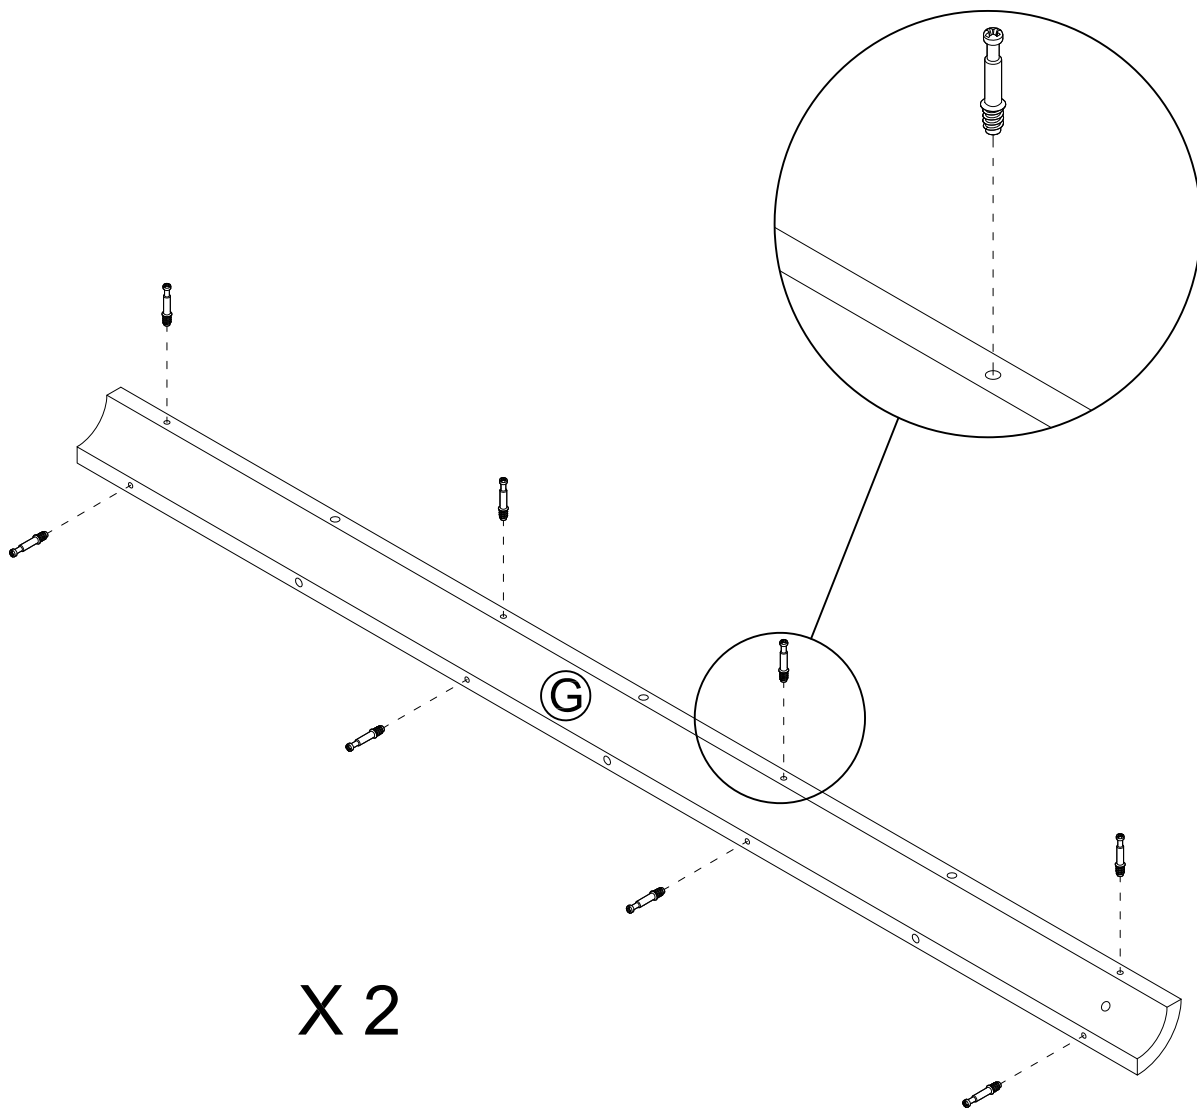


## Step 2:

\* Attach the BACK STRIP (G) to the LEFT PANEL (C) and RIGHT PANEL (D) by the Eight KD CAM (2) , Eight COVER CAP (3) , and Six WOOD DOWEL (4) .

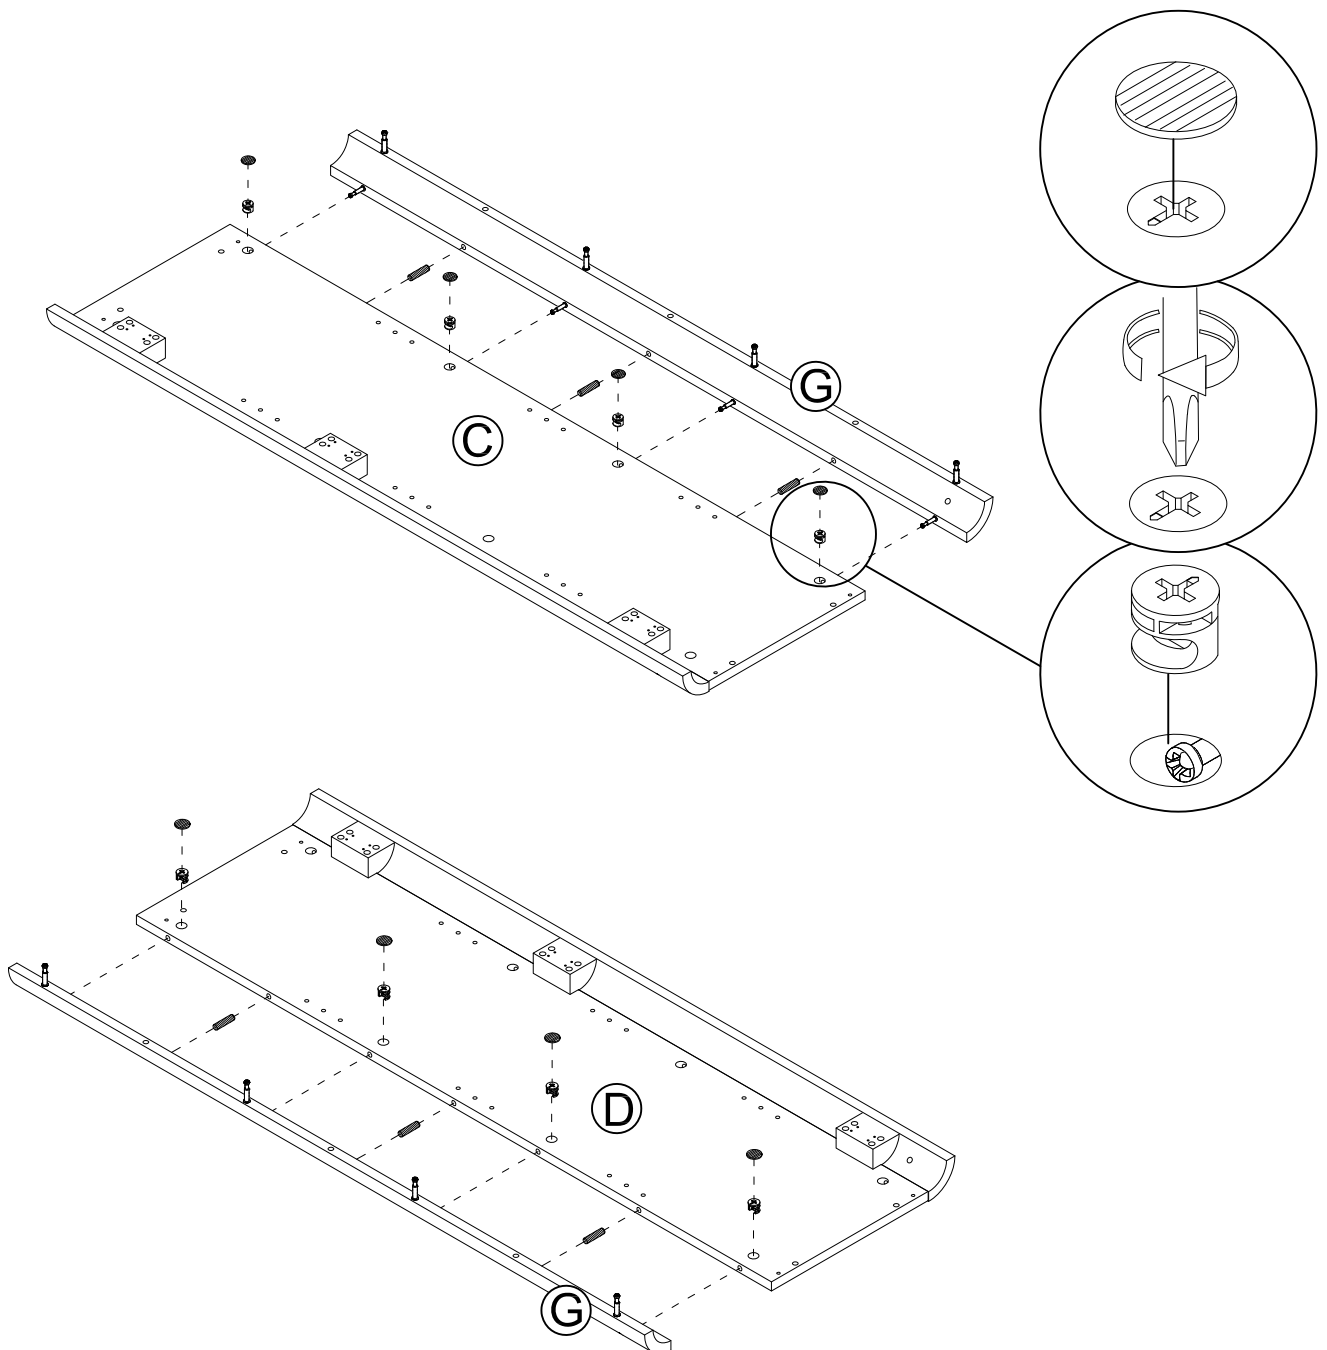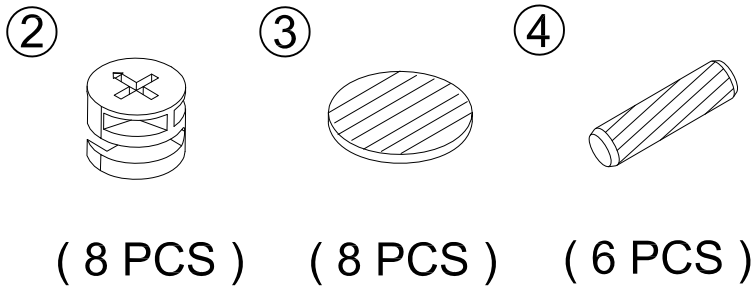


## Step 3:

\* Insert Eight KD BOLT (1) to the LEFT PANEL (C) and RIGHT PANEL (D).

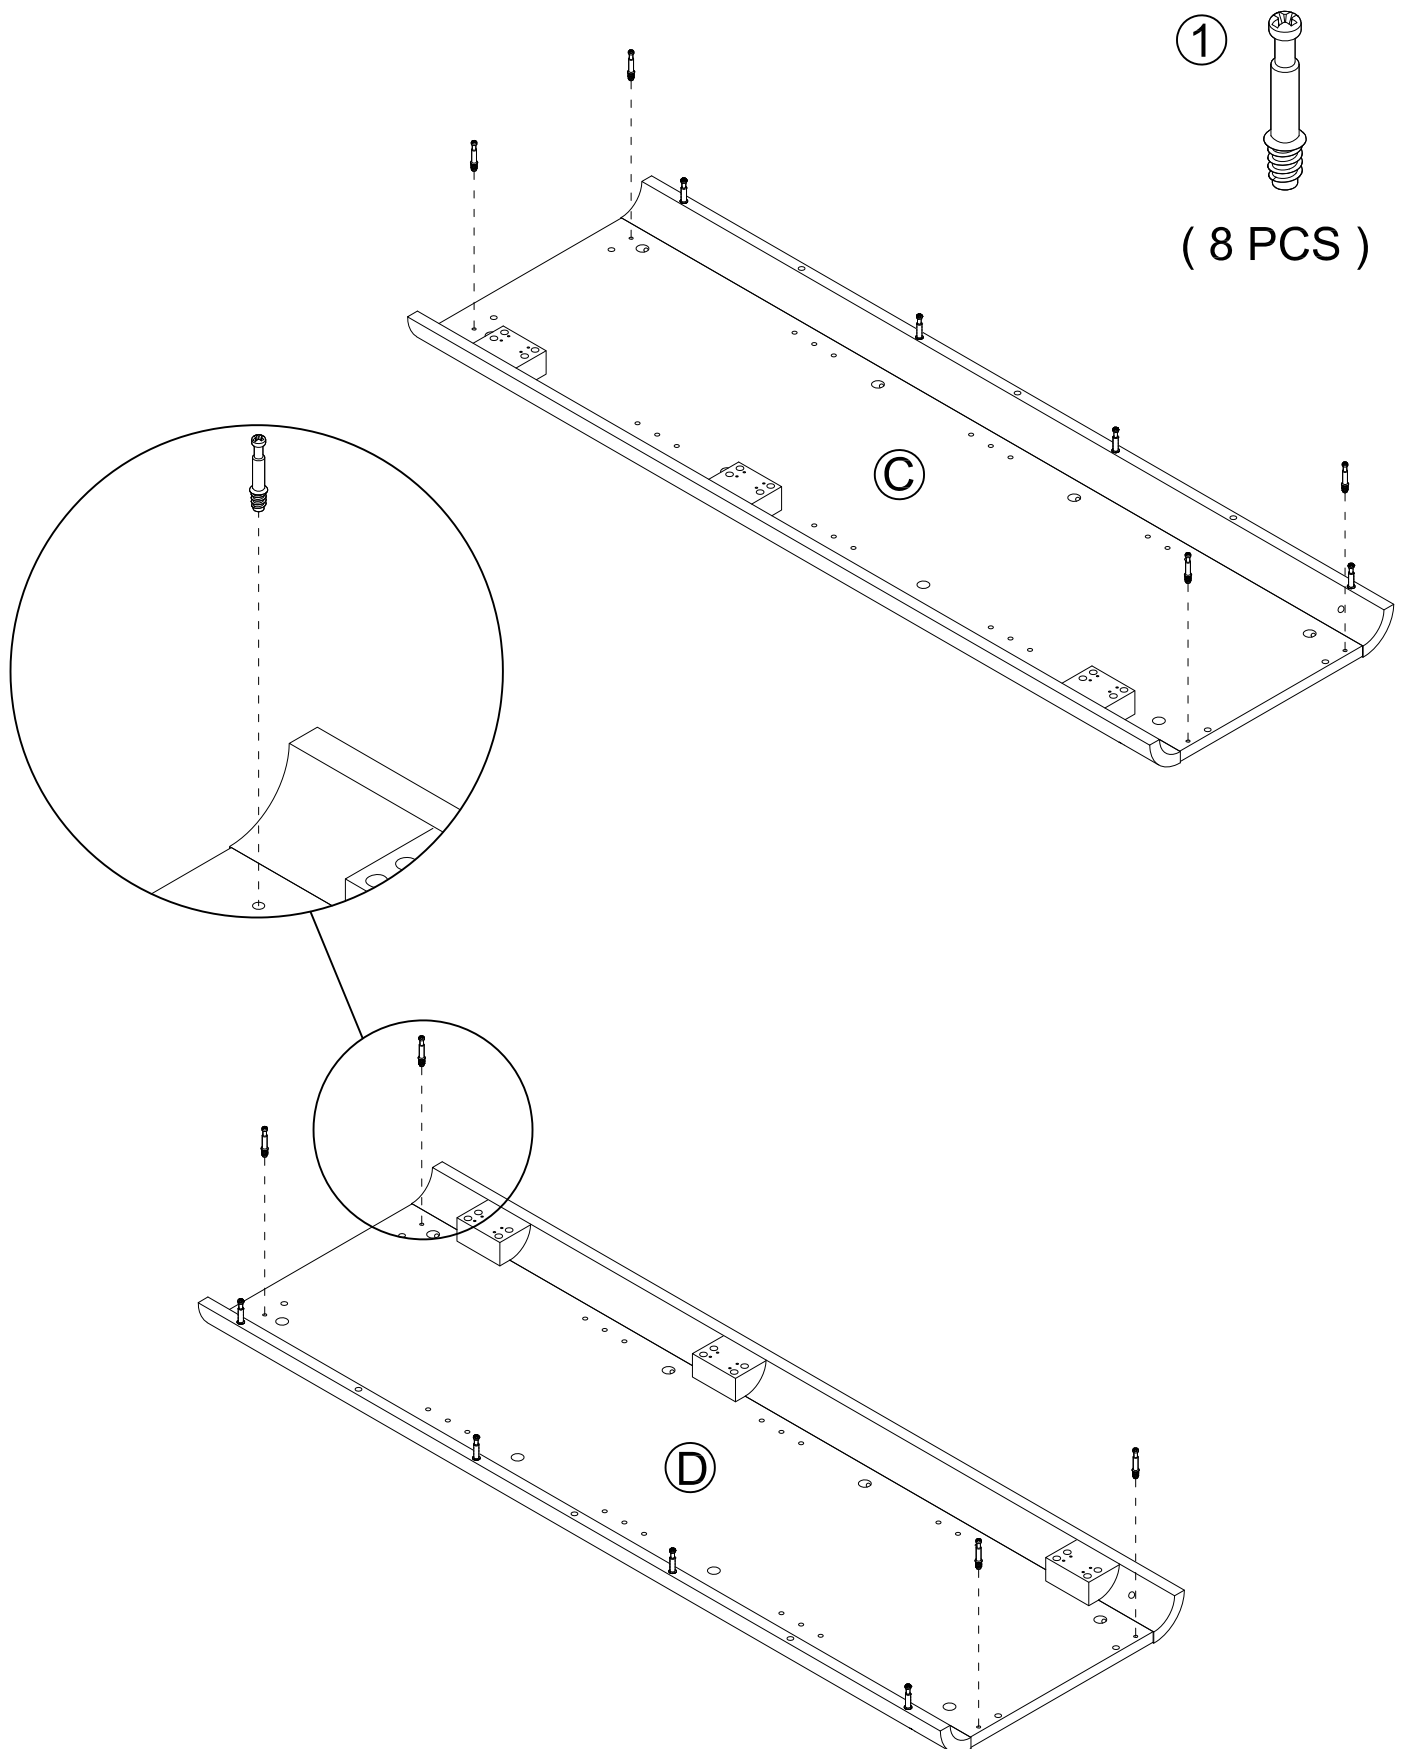

## Step 4:


\* Insert Eight KD BOLT (1) to the LEFT BACK PANE (E) and RIGHT BACK PANEL(F).

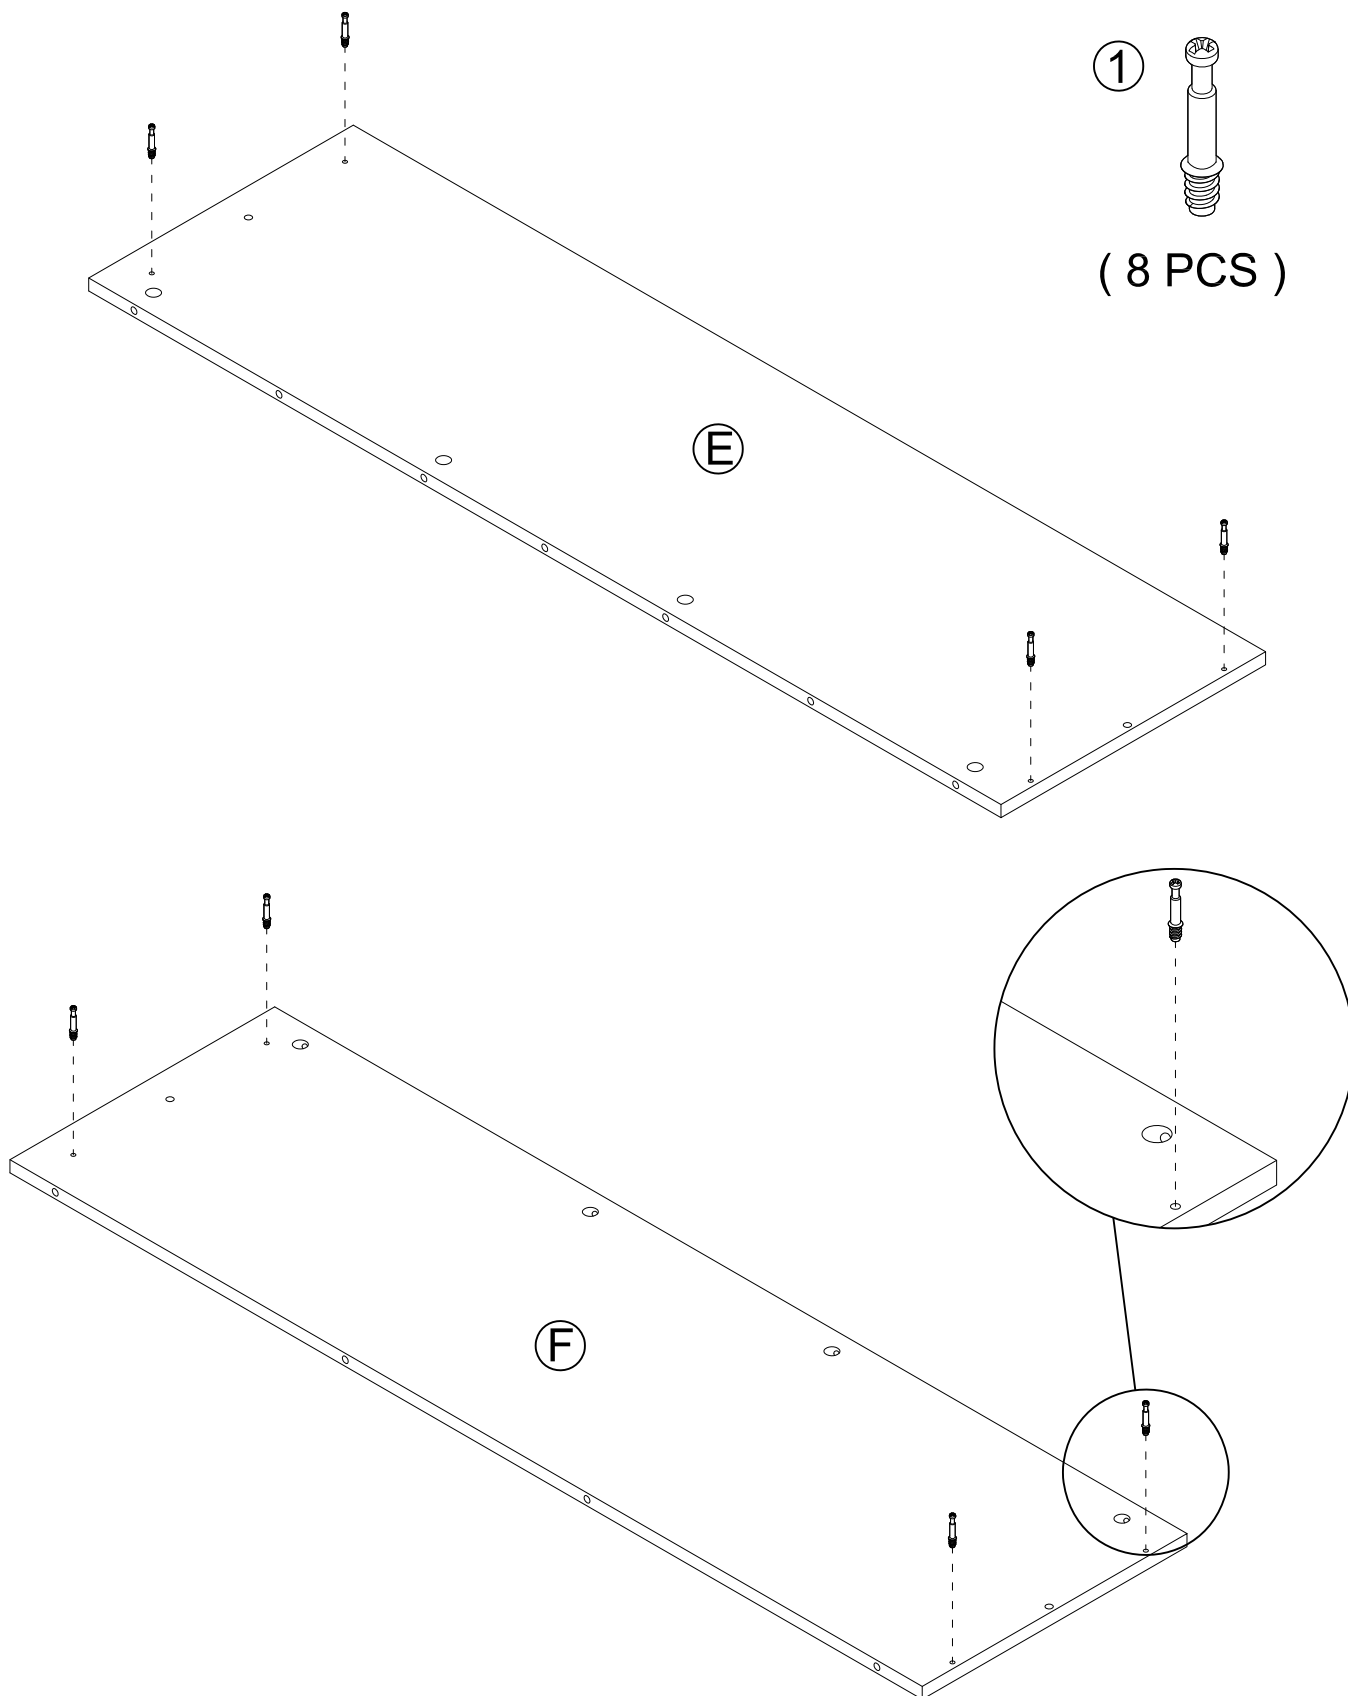


## Step 5:

- \* Attach the LEFT BACK PANE (E) and RIGHT BACK PANEL(F) by the Four WOOD DOWEL (4) .

④




( 4 PCS )

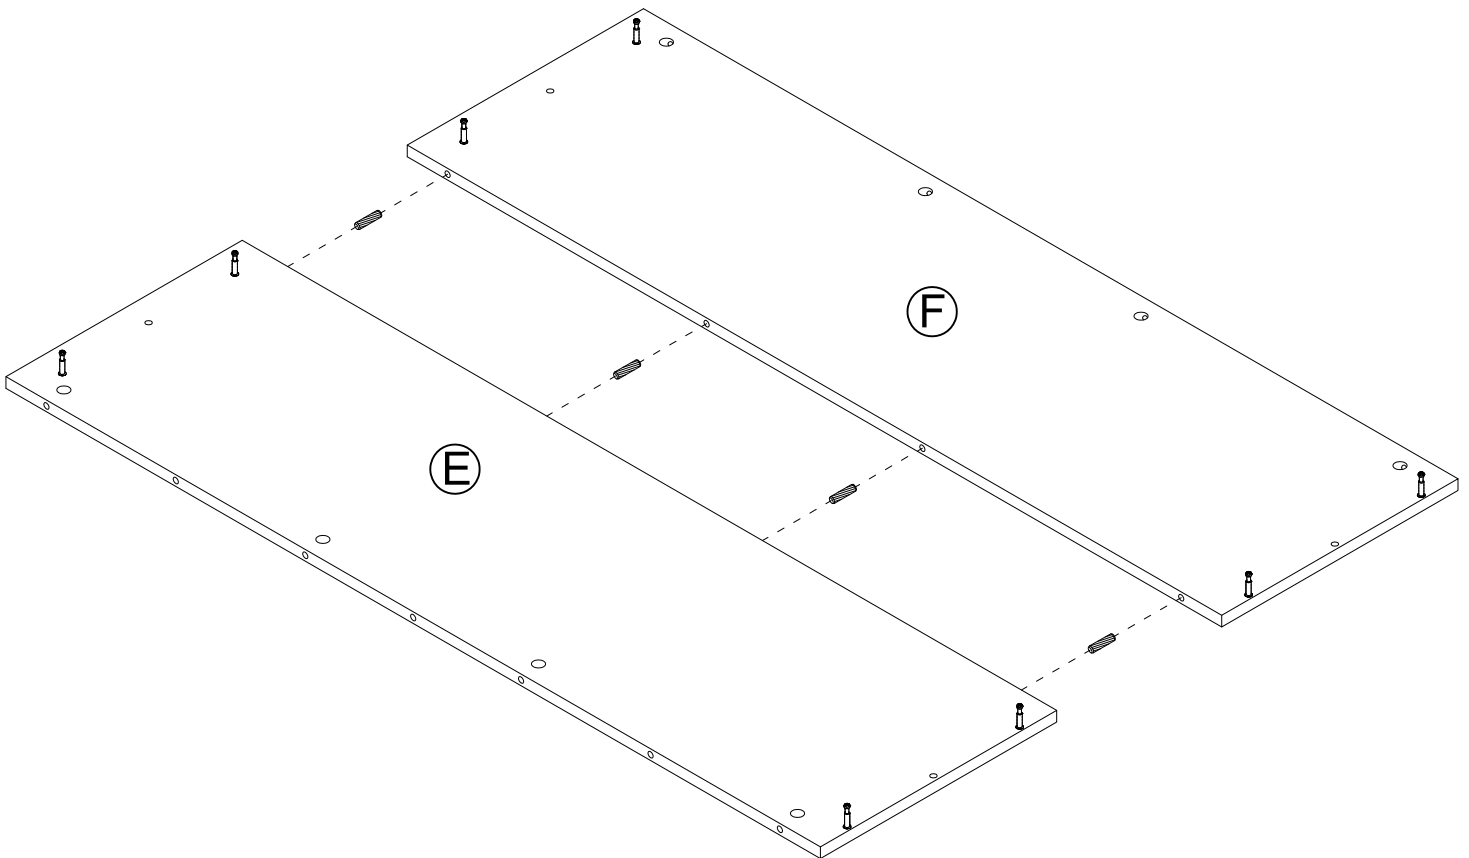

## Step 6:


\* Attach the TOP (A) and BOTTOM (B) to the ASSEMBLY by the Eight KD CAM (2) , Eight COVER CAP (3) ,and Four WOOD DOWEL (4) .

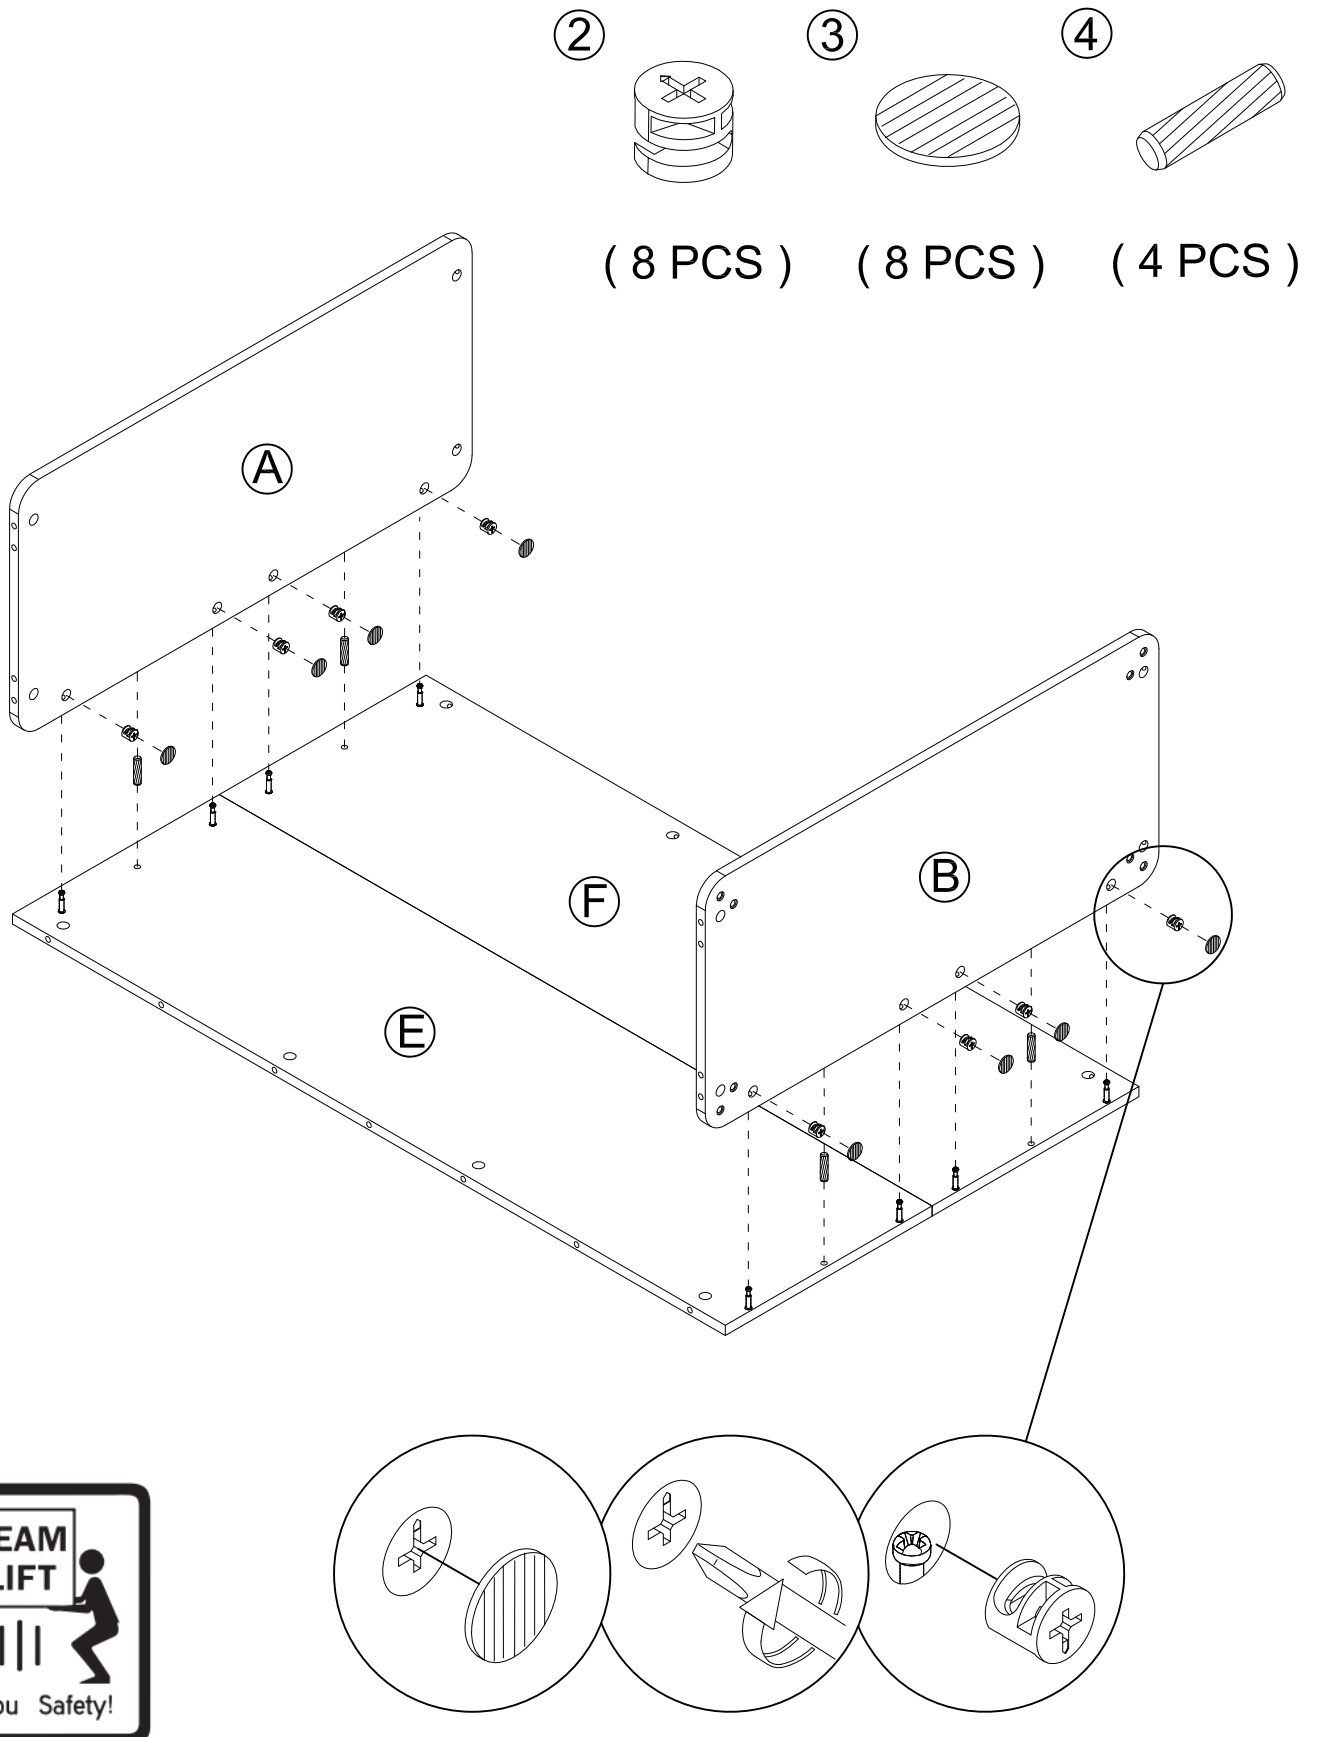


## Step 7:

\* Attach the LEFT PANEL (C) and RIGHT PANEL (D) to the ASSEMBLY by the Sixteen KD CAM (2) , Sixteen COVER CAP (3), Fourteen WOOD DOWEL (4) .


②





③



④





( 16 PCS ) (16 PCS ) ( 14 PCS )

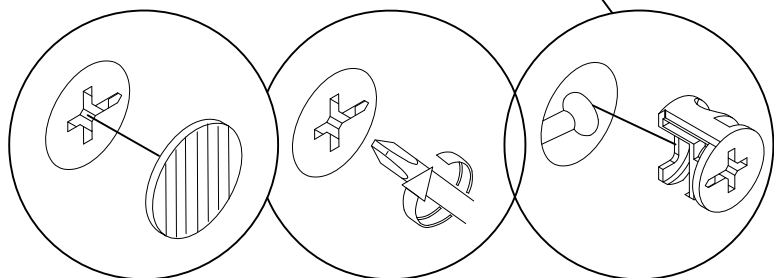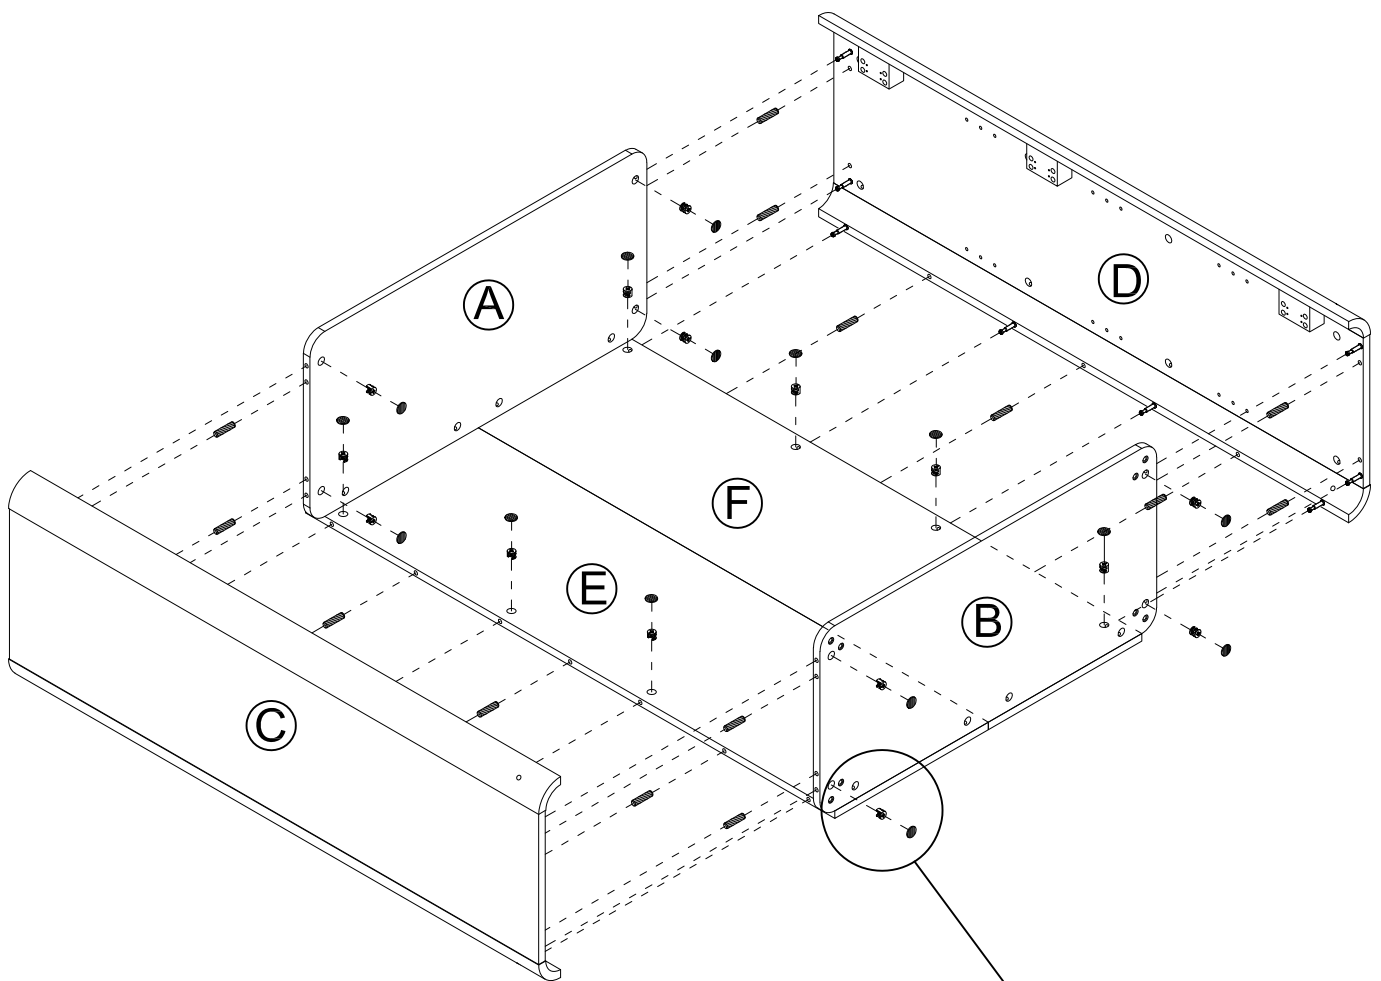

## Step 8:

---


\* Attach the LEGS (7) to the ASSEMBLY by the BOLT (10) .

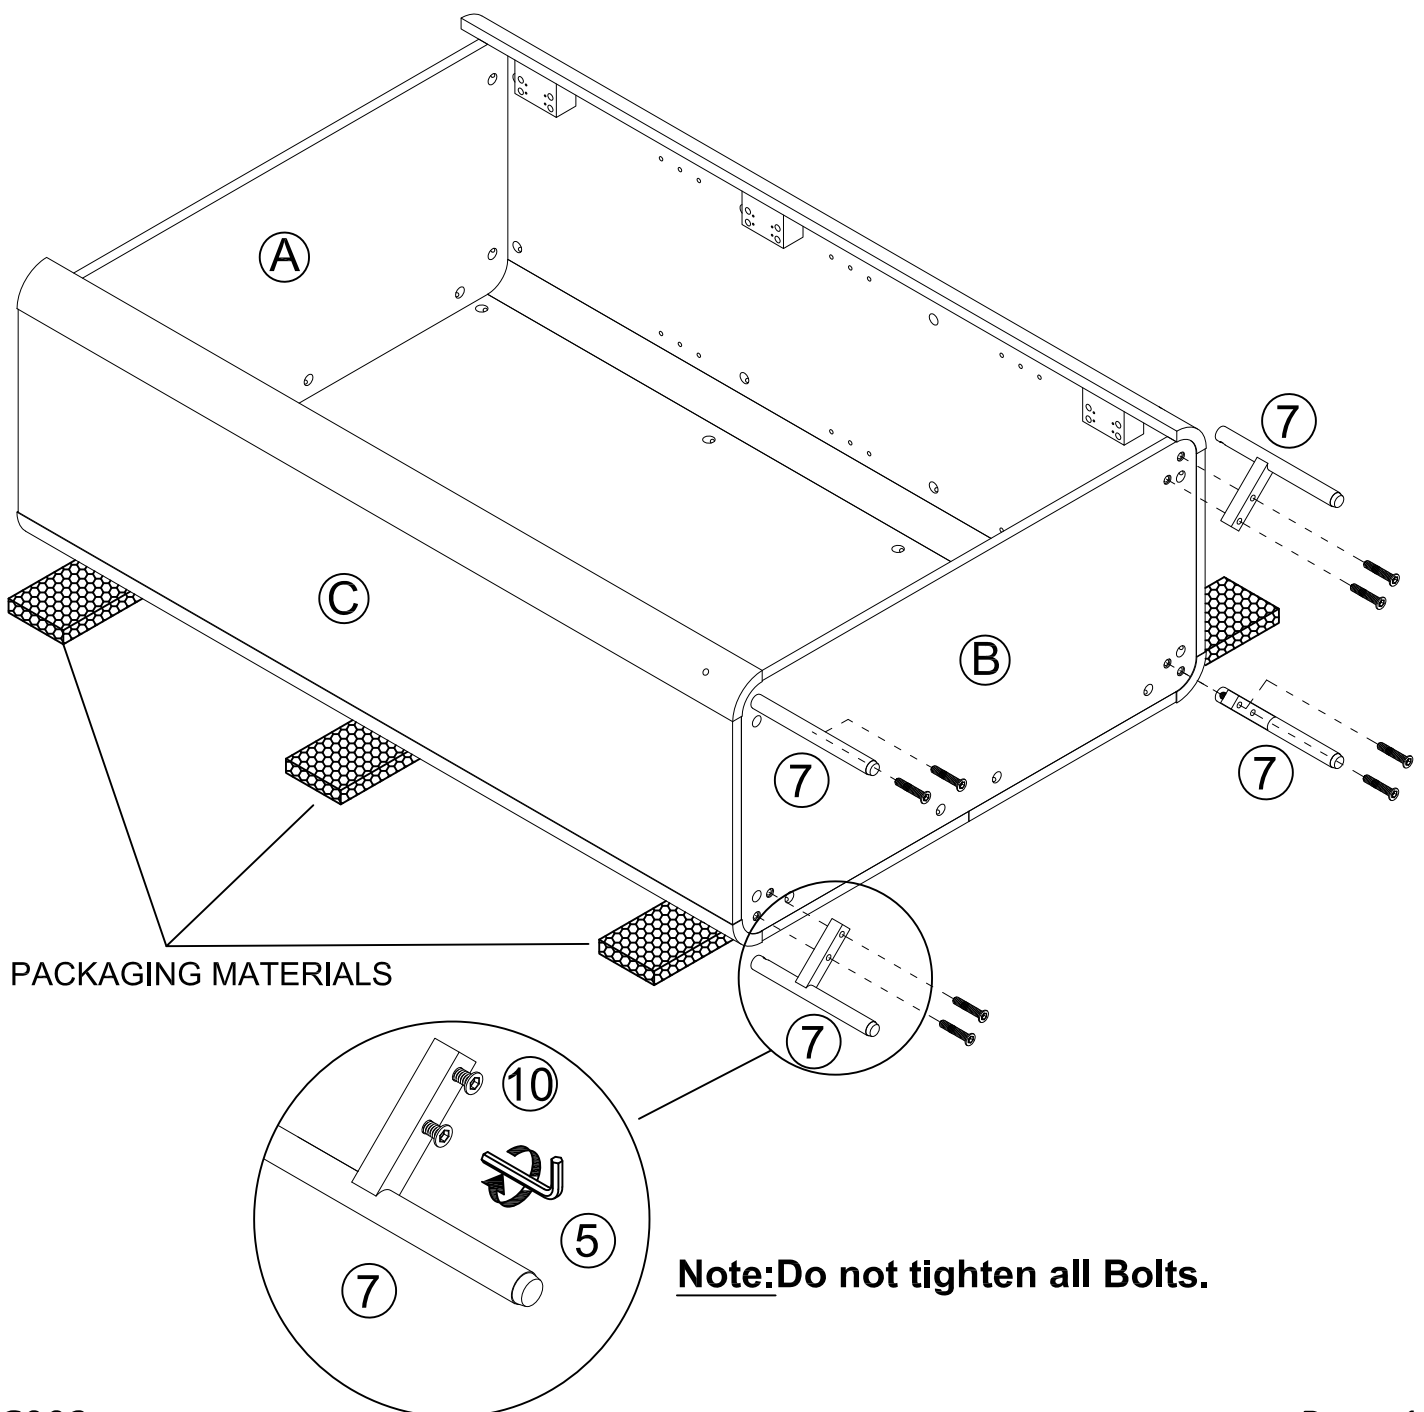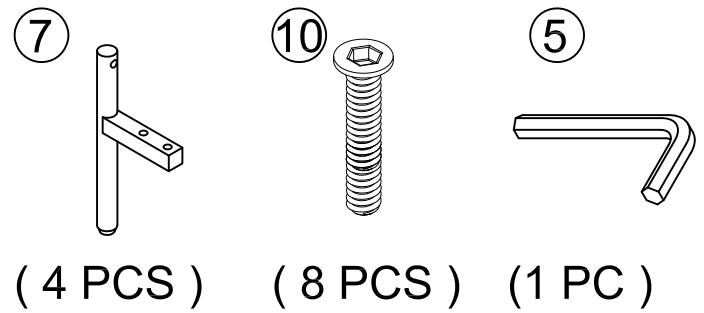

**Note:** Do not tighten all Bolts.

## Step 9:

\* Attach the ASSEMBLY by the Four BOLT (7) .

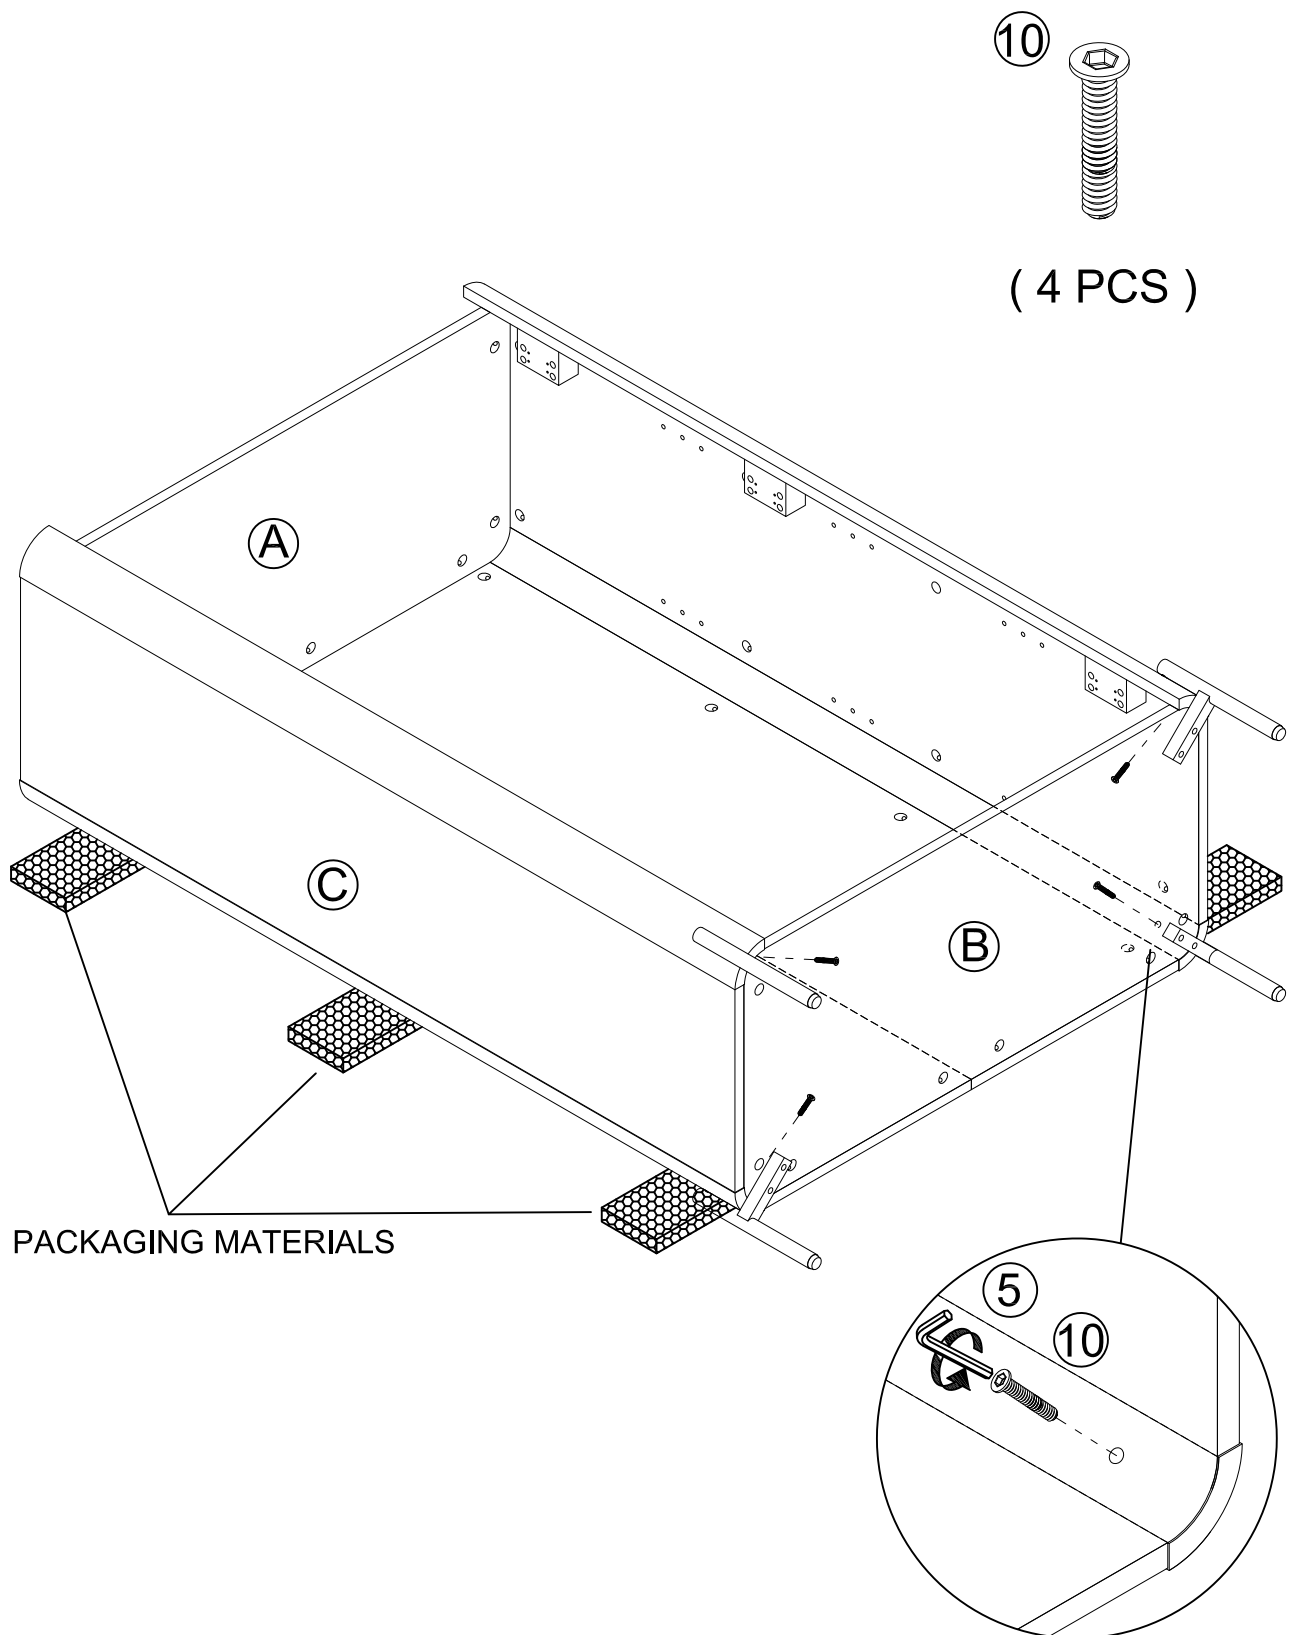


**Note:Do tighten all Bolts.**

## Step 10:

---


\* Use LOCK (5) tighten all Bolts .

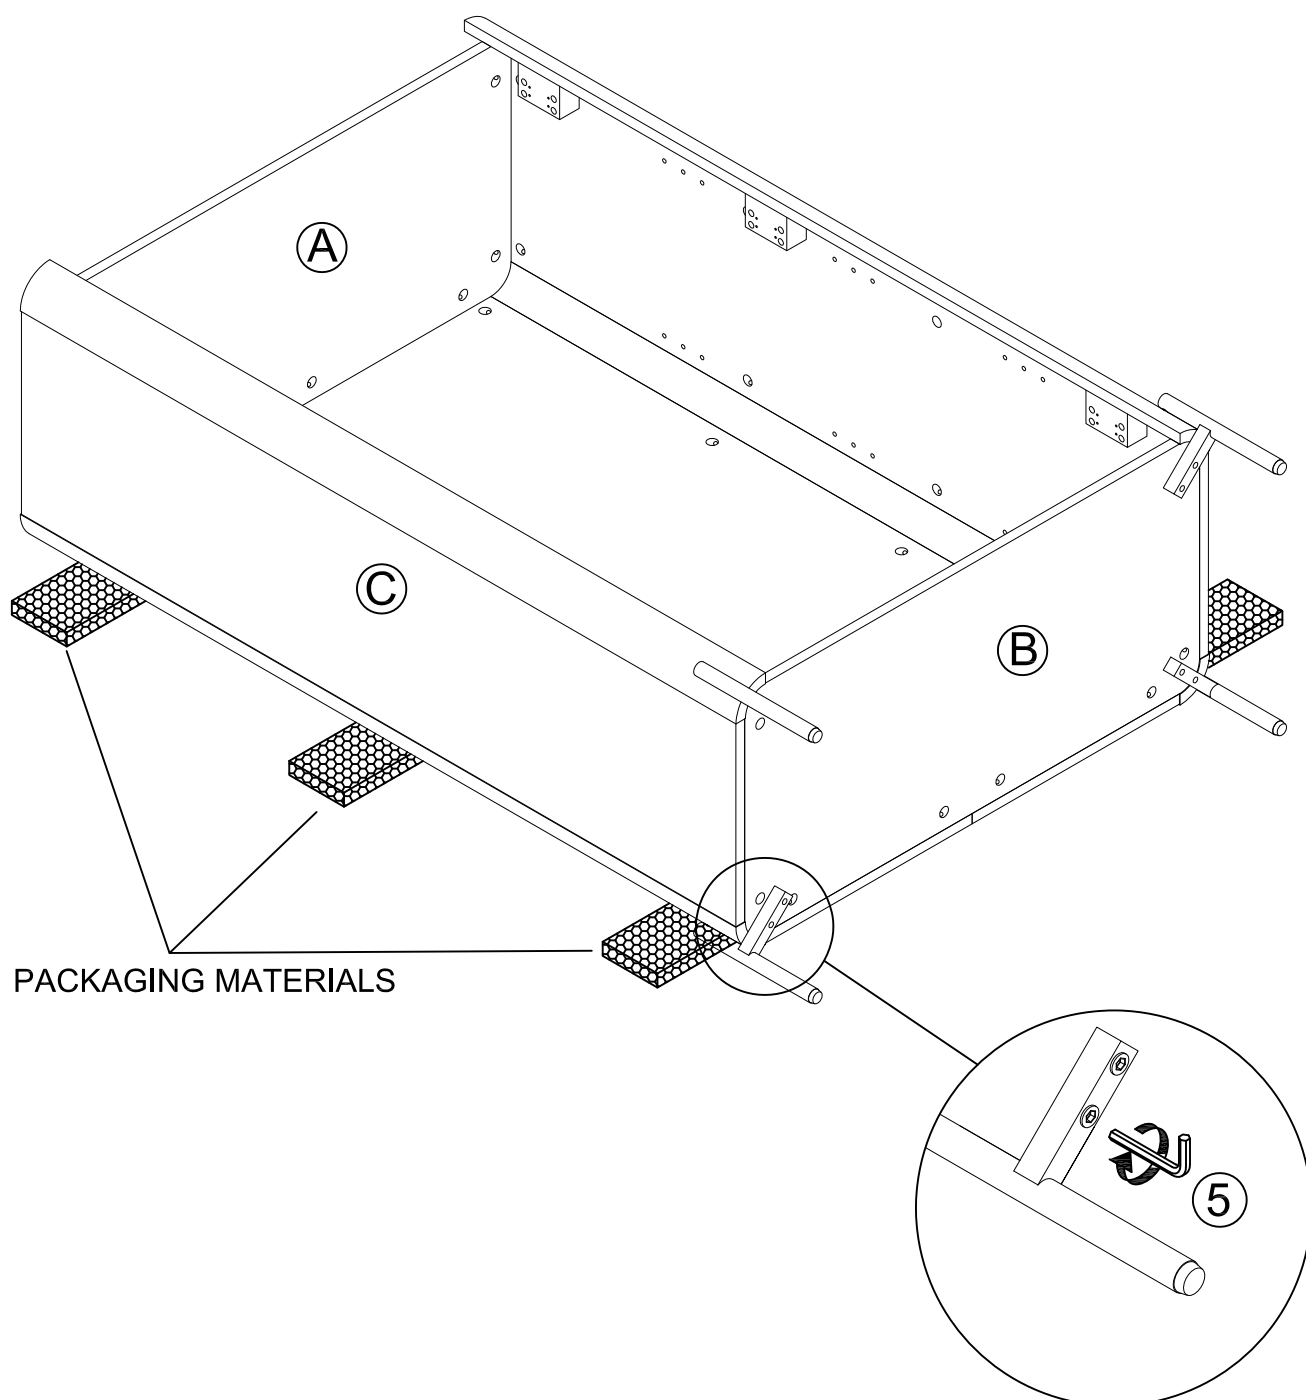


## Step 11:

**\*As shown in the picture: Insert ten SHELF PEGS (6) into the side panel and place the SHELF PANEL (H) diagonally inside**

⑥

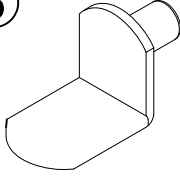


( 10 PCS )

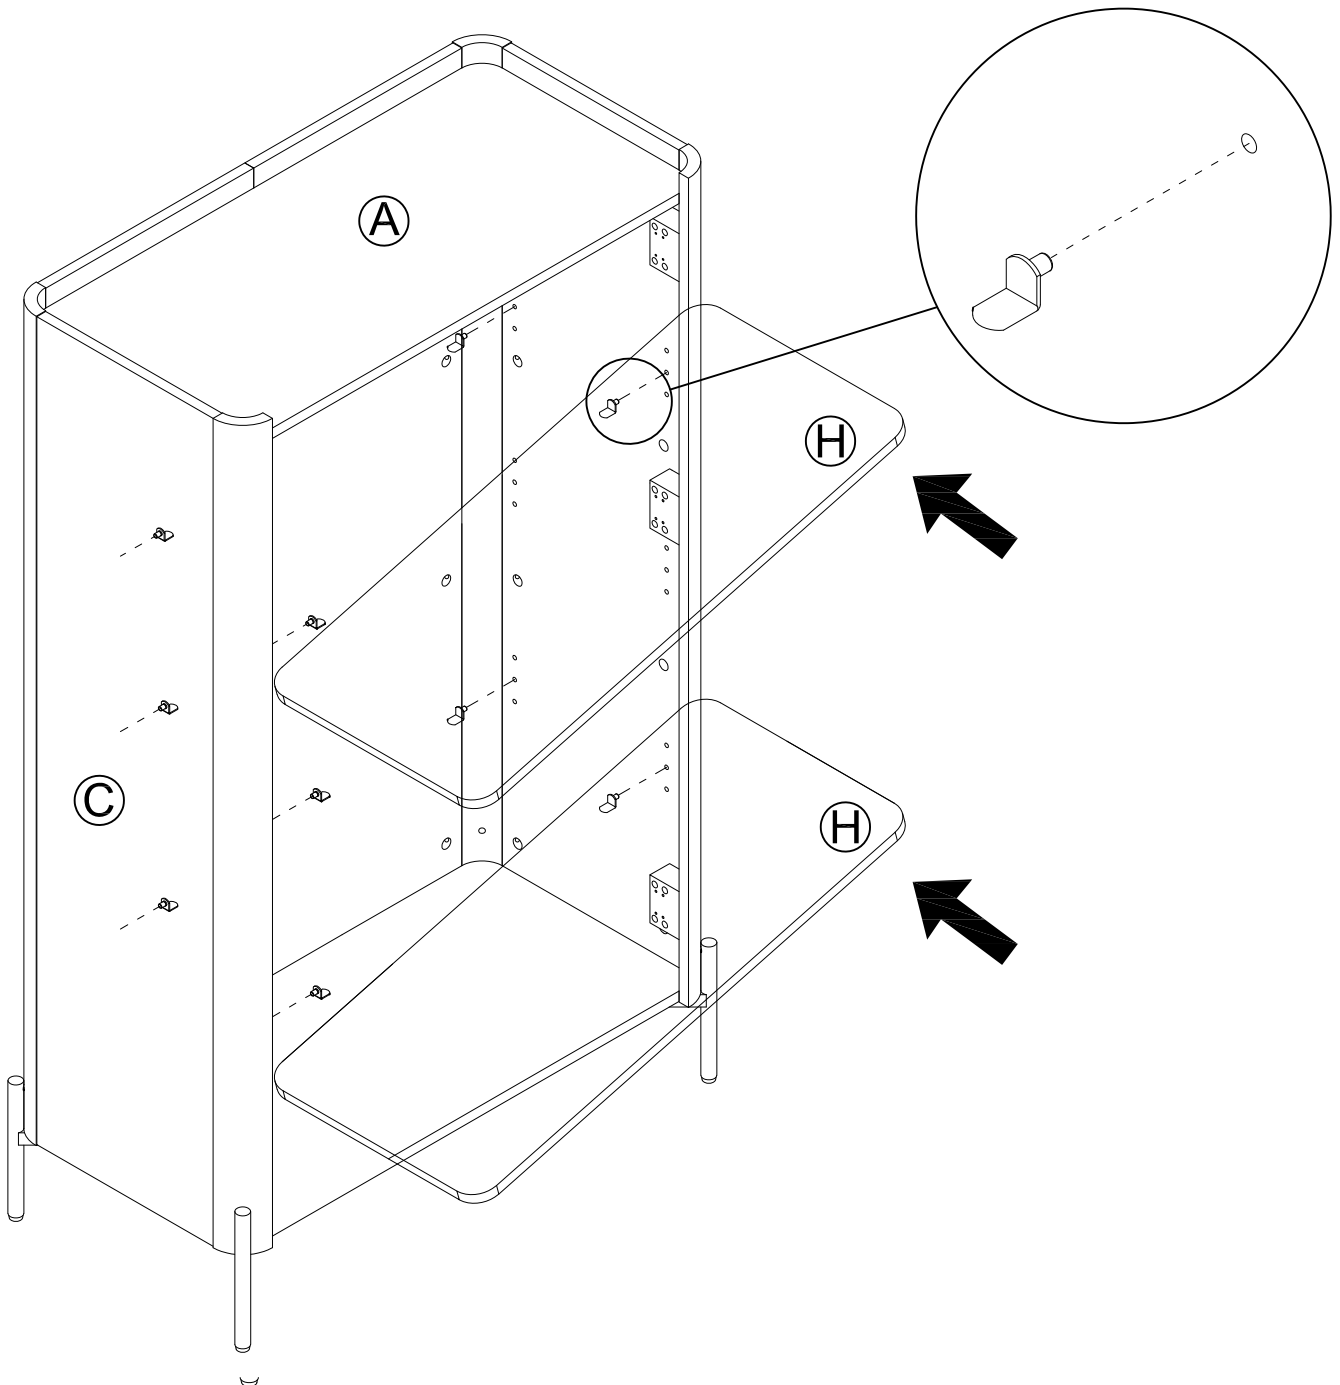


## Step 12:

\* Insert the SHELF PANEL (H) diagonally into it and then insert 2pcs SHELF PEGS (6)

⑥

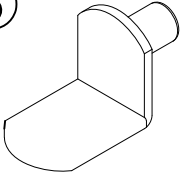


( 2 PCS )

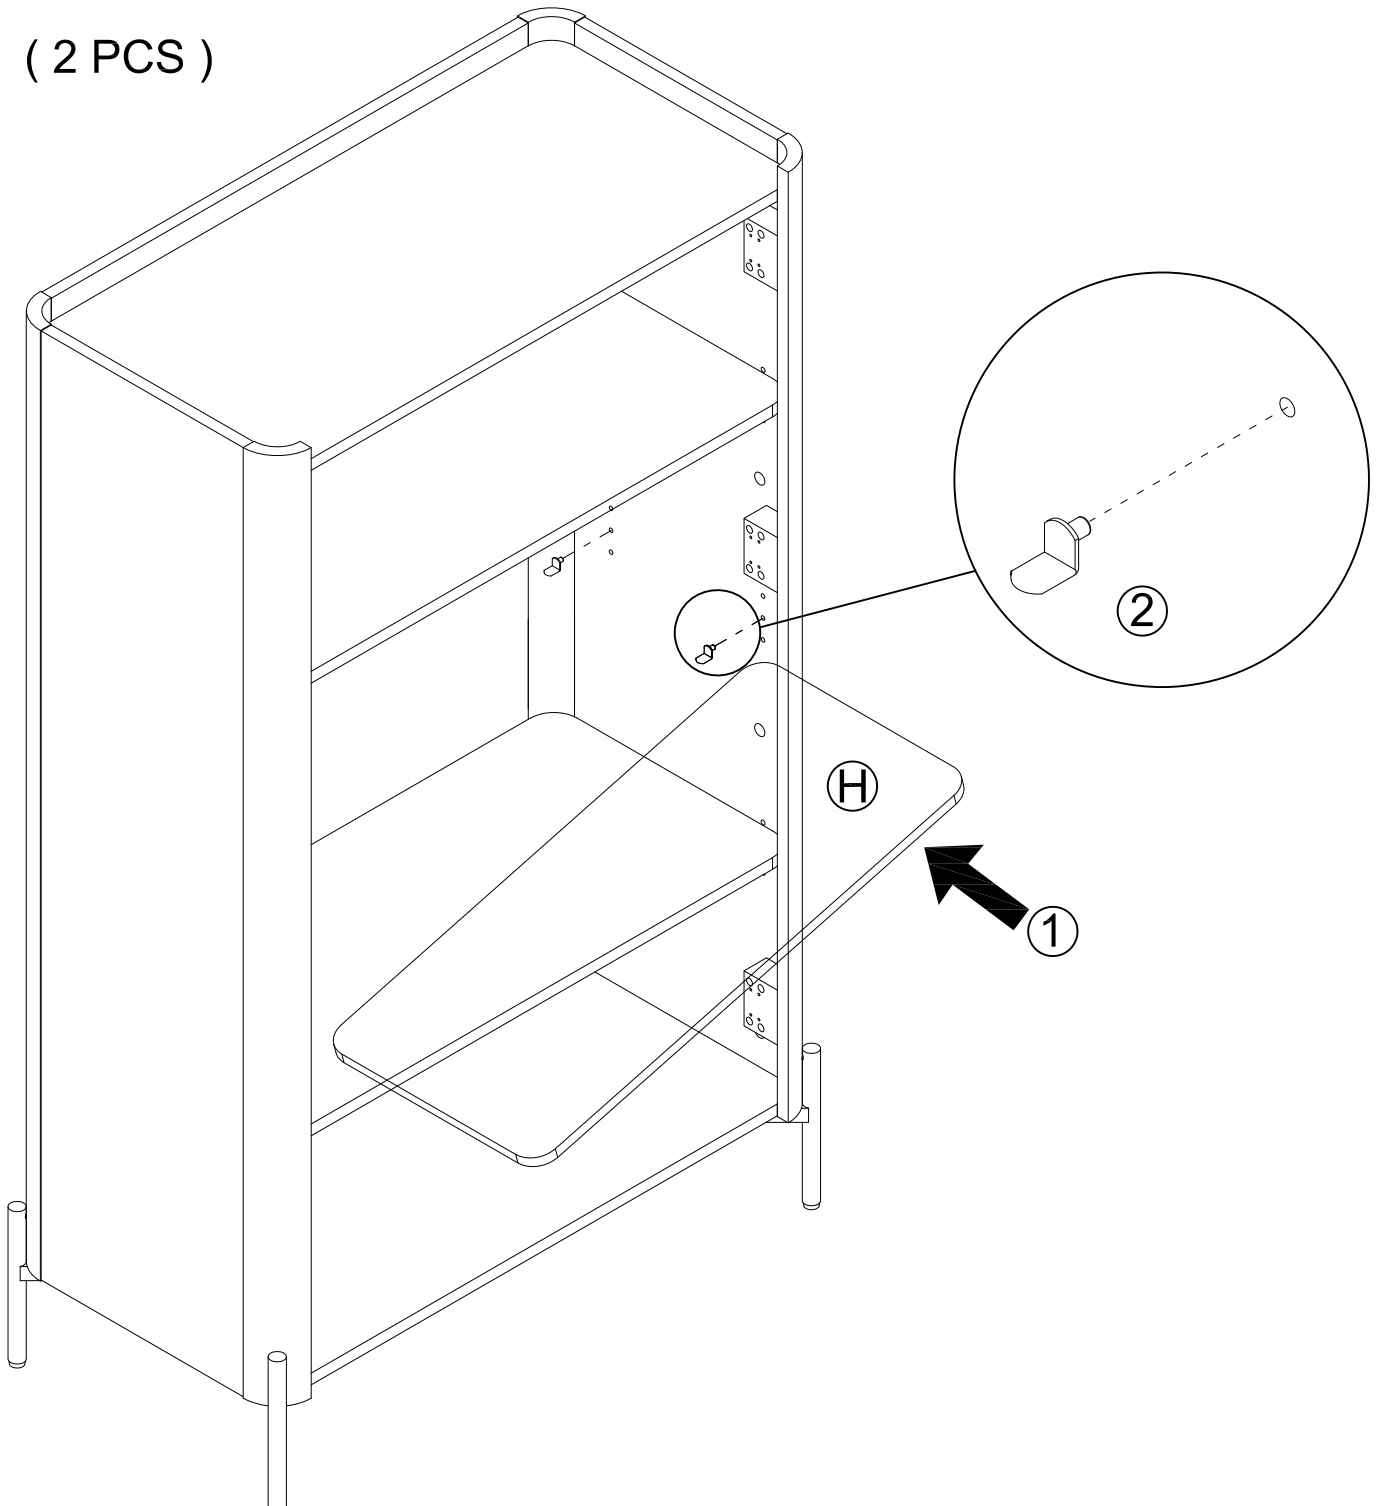

## Step 13:

\* Attach HINGE (8) and SCREW (9) to the LEFT DOOR (I) and RIGHT DOOR (J).

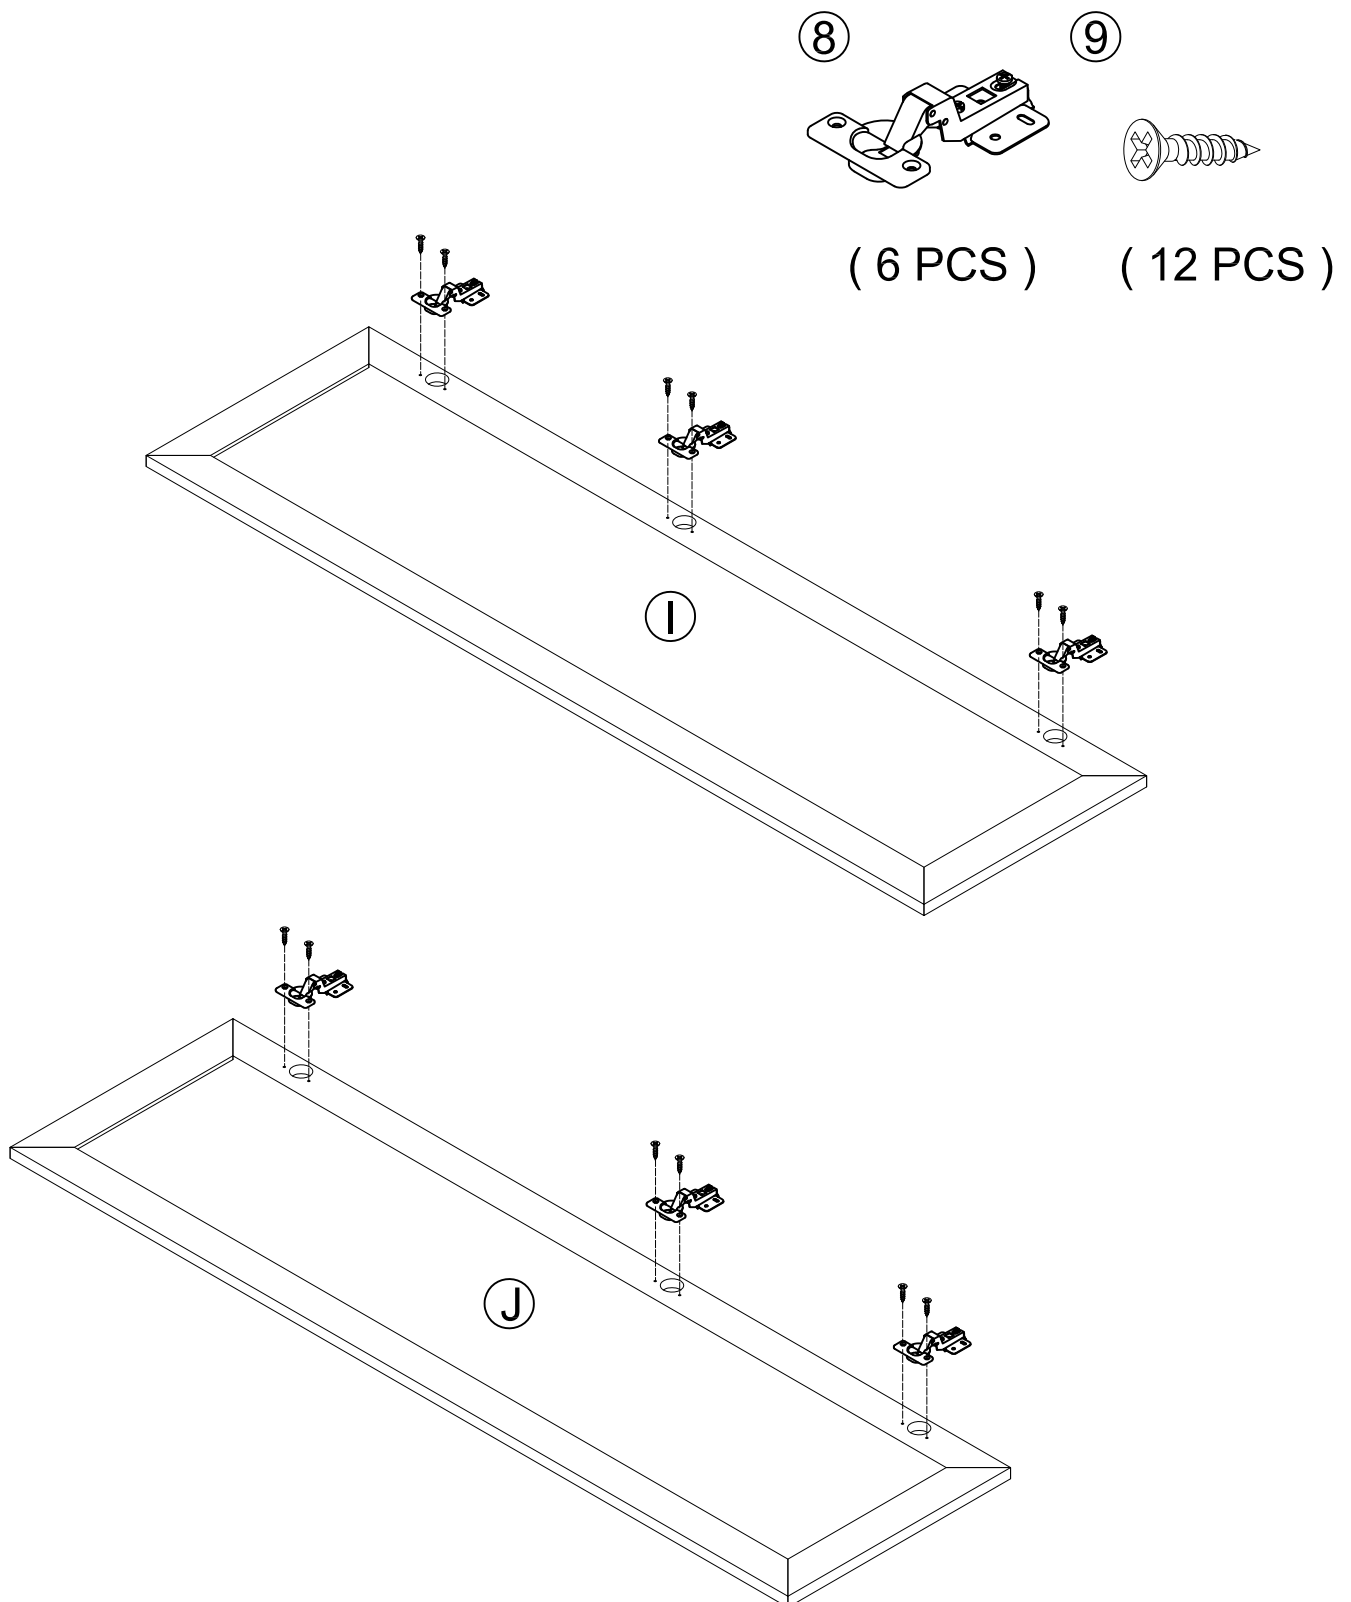


## Step 14:

\* Carefully stand your unit upright.

Fasten the LEFT DOOR (I) and RIGHT DOOR (J) to the LEFT PANEL (C) and RIGHT PANEL (D) .

\* Note : The hinges should be hooked first from the top to the middle and lower hinge combinations in the "PRESS" order . Note that the hinge leaf must be inserted into the slot along the angle.


⑨



( 16 PCS )

Adjusting screw (horizontal)


Mounting screw (depth)

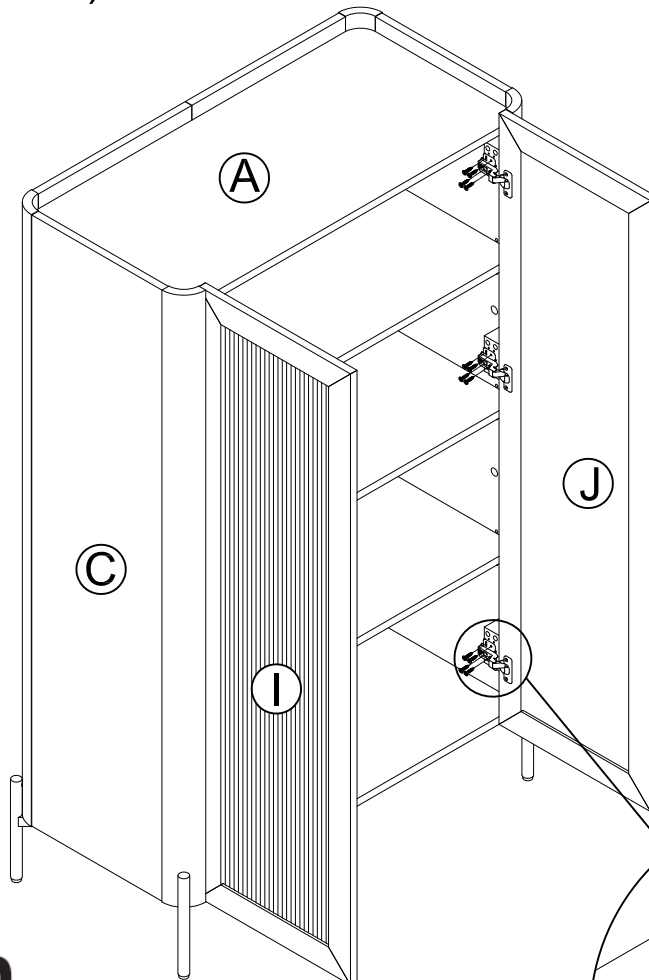

## Step 15:

---

\* Attach anti-tipping straps to the back of the stand.

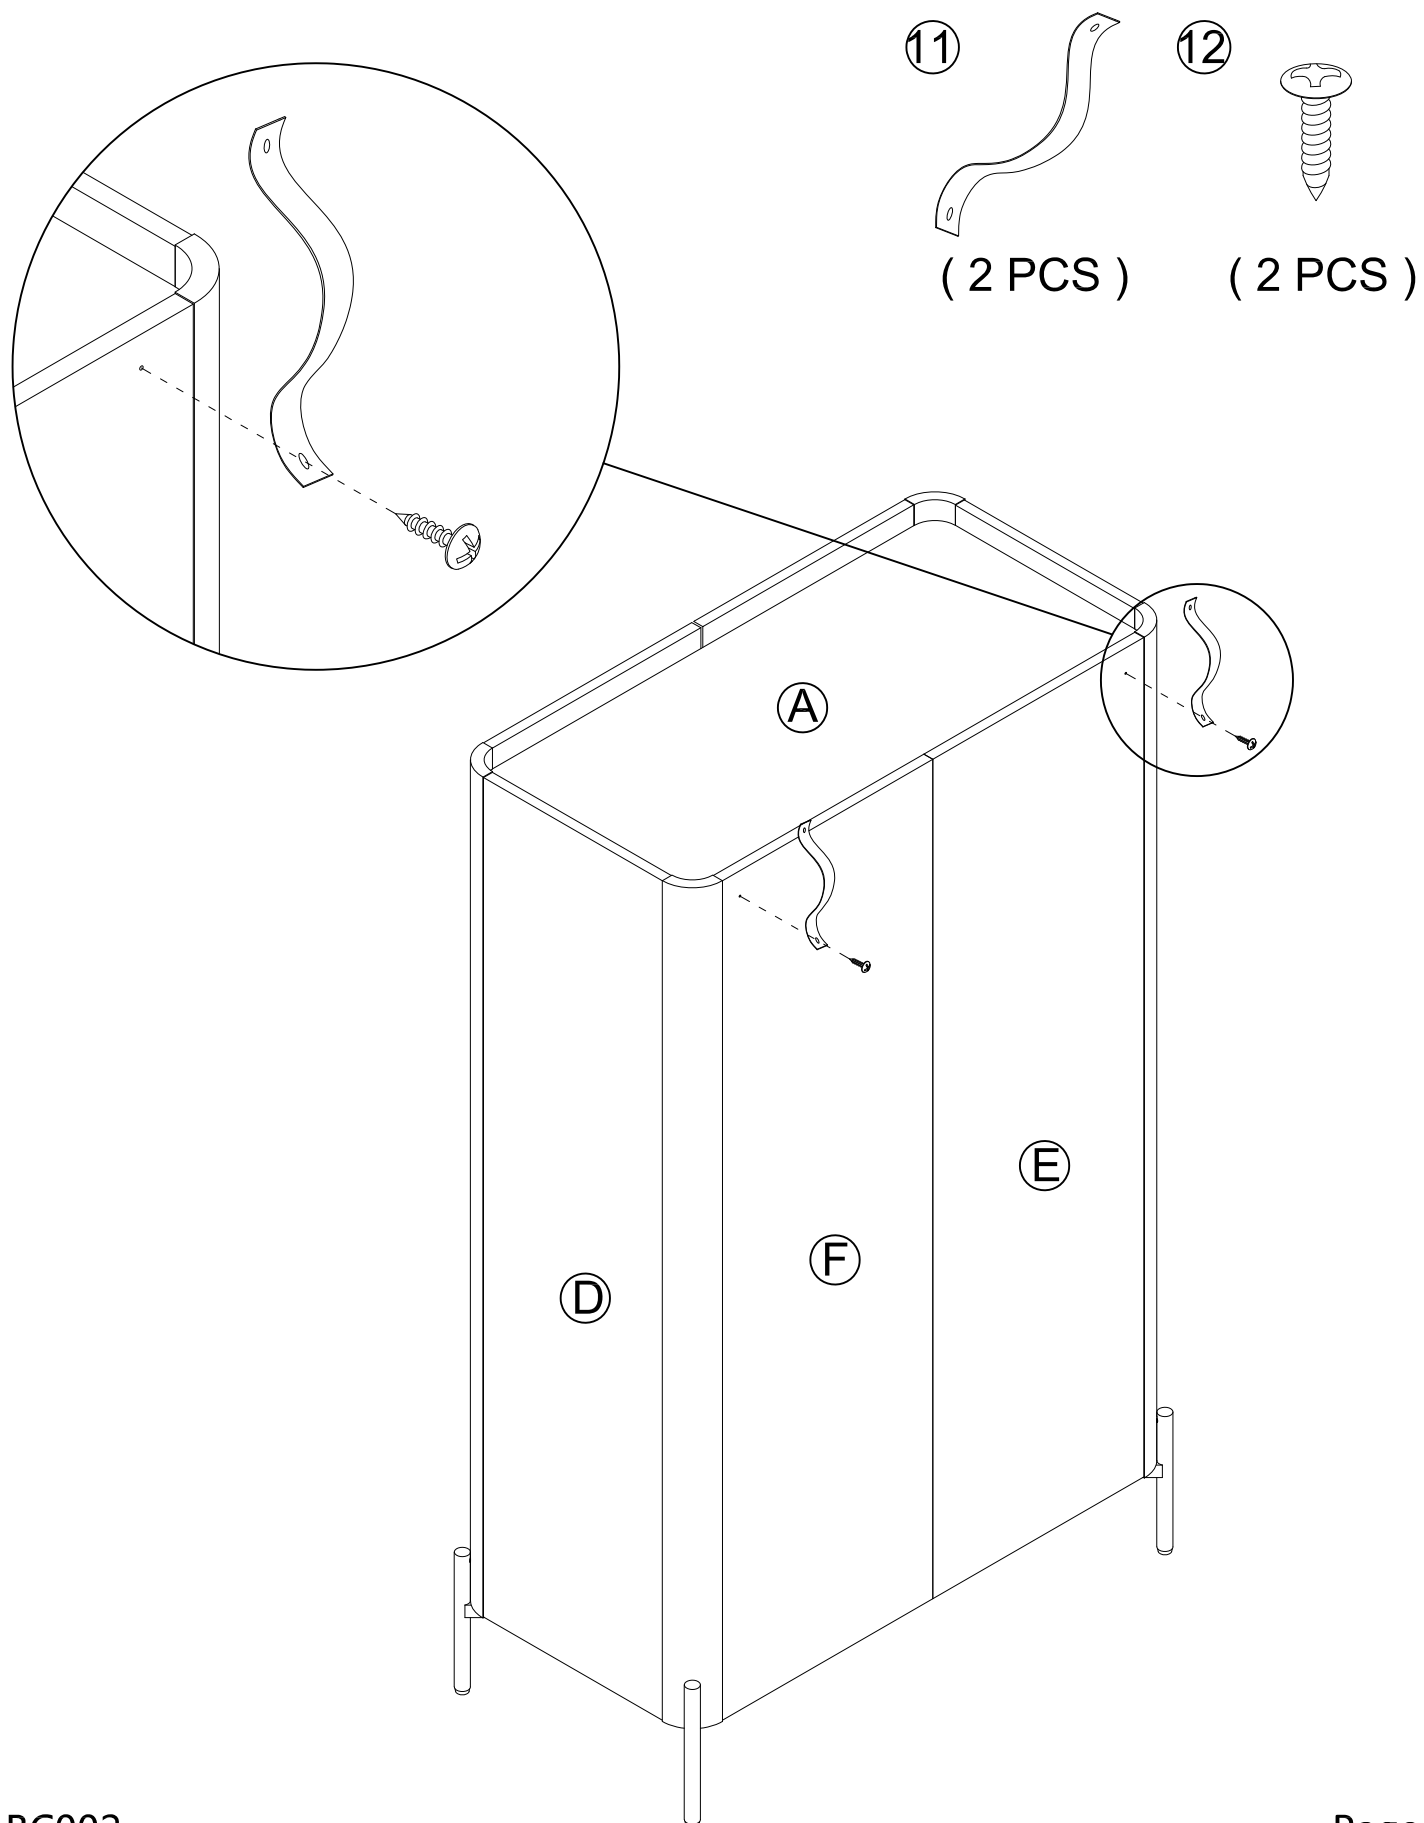

## Step 15:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (15) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

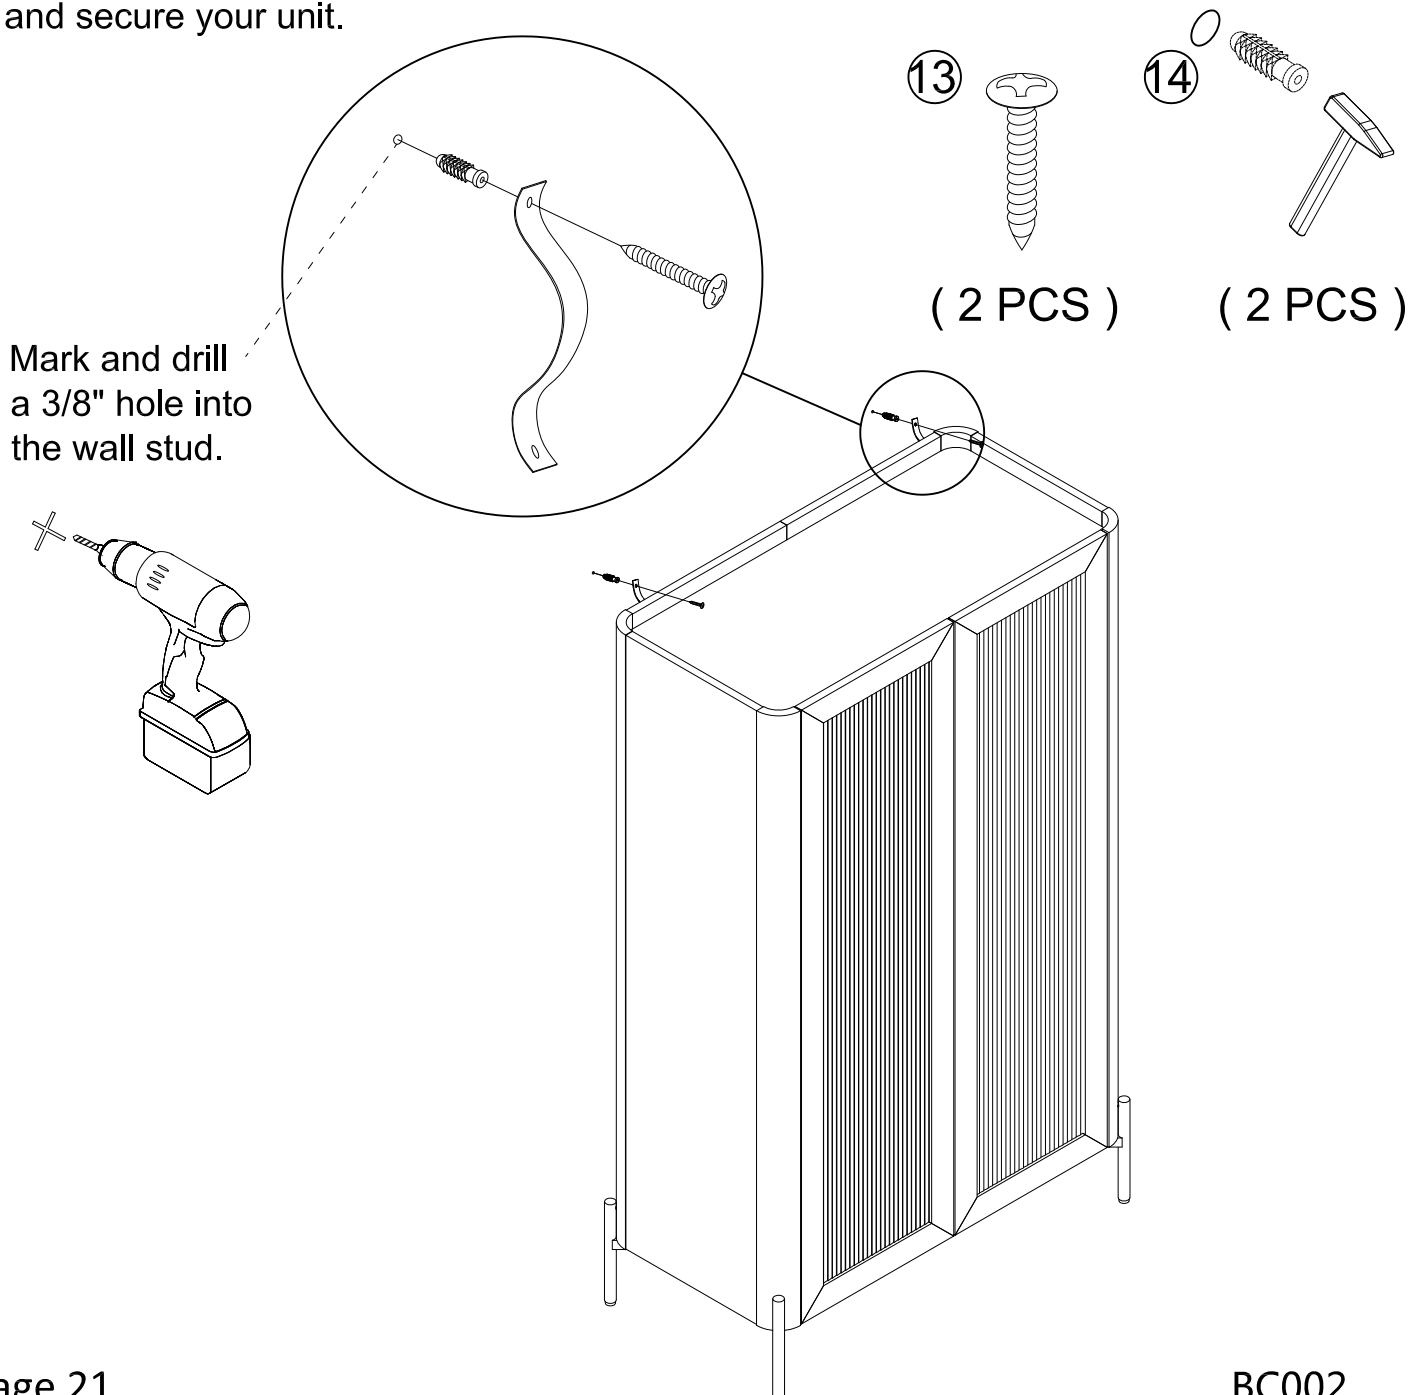



# MANHATTAN COMFORT

---

## WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

## THE WARRANTY DOES NOT COVER:

Defects/damages by improper assembly or disassembly.

-Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810  
908-888-0818