


## ASSEMBLY INSTRUCTION

SKU CODE: (WF295315-WF295316-WF295317)

**This set is included 3 boxes if don't receive full 3 boxes please contact our customer service team**

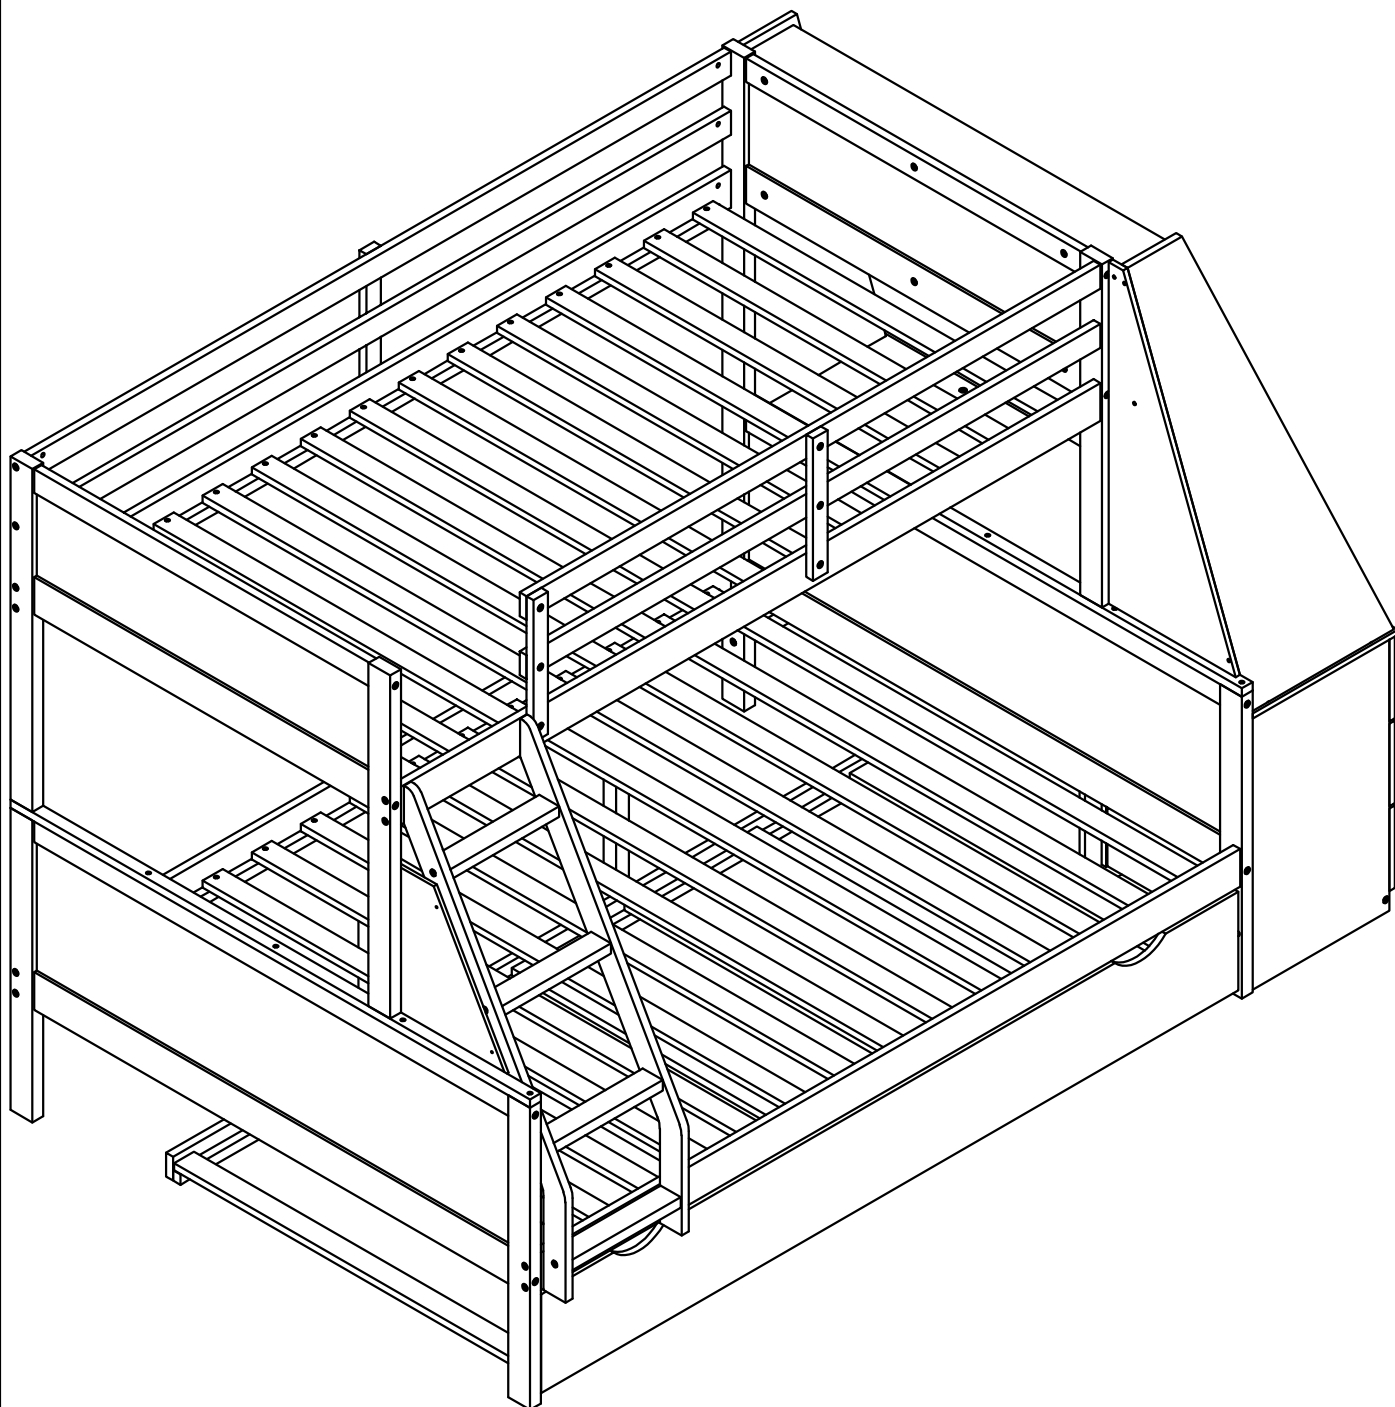

# **! SAFETY WARNINGS !**

1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk, and lower bunk

## **Upper bed**


<b>Bed Type</b>	<b>Length</b>	<b>Width</b>	<b>Thickness</b>
<i>Twin Standard</i>	<i>74" - 75"</i>	<i>38 1/2"</i>	<i>6" max</i>

## **Lower bed**







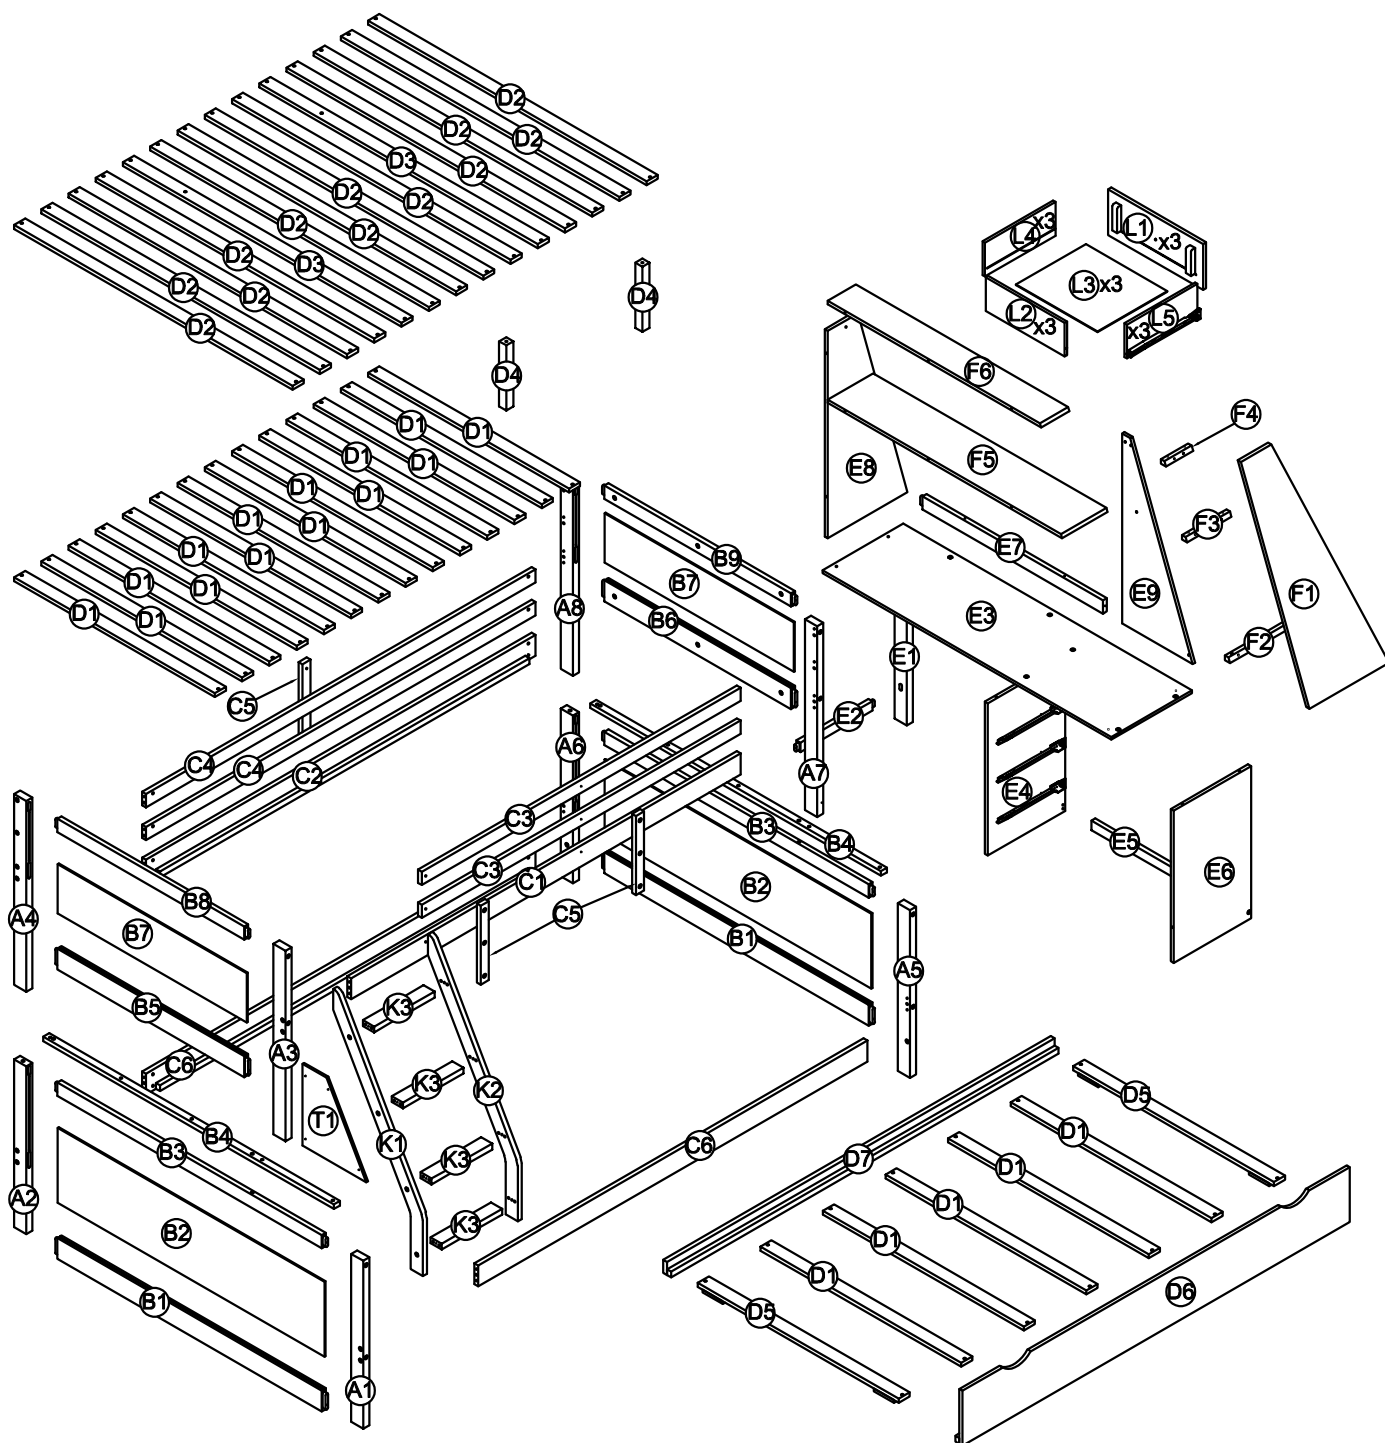


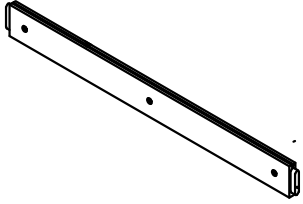
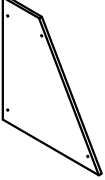






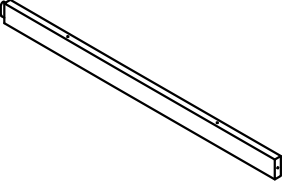
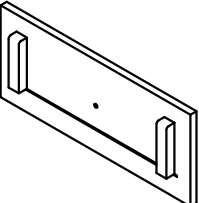
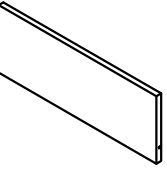
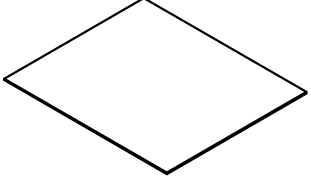
<b>Bed Type</b>	<b>Length</b>	<b>Width</b>	<b>Thickness</b>
<i>Full Standard</i>	<i>74" - 75"</i>	<i>53 1/2"</i>	<i>8" max</i>

2. Replacement parts, including additional guardrails, maybe obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE CITY OF INDUSTRY, CA, 91748) dealers
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunkAlways use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part
11. Use of a night light may provide added safety precaution for a child using the upper bunk..
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited
14. STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes
15. Keep these instruction for future reference
16. Prohibit more than one person on upper bunk
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet
18. Be certain all staples are out of the box before beginning assembly on the shipping carton.




# ASSEMBLY INSTRUCTION









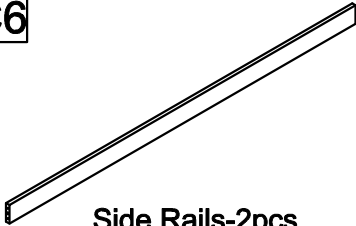
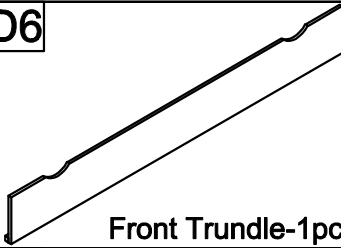
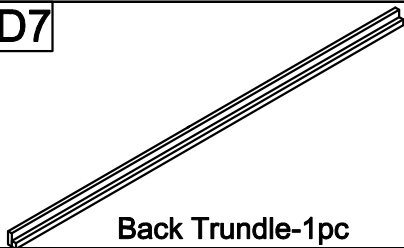
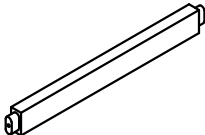
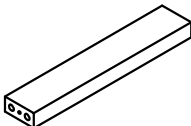
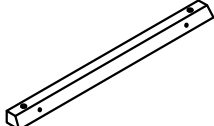
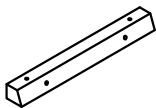
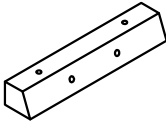
# Part List(Box 1-WF295315)
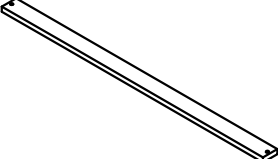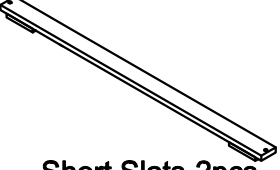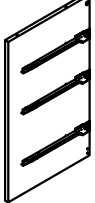
<b>A1</b>  Leg-1pc	<b>A2</b>  Leg-1pc	<b>A3</b>  Leg-1pc
<b>A4</b>  Leg-1pc	<b>A5</b>  Leg-1pc	<b>A6</b>  Leg-1pc
<b>A7</b>  Leg-1pc	<b>A8</b>  Leg-1pc	<b>B5</b>  Wood Bar-1pc
<b>B6</b>  Wood Bar-1pc	<b>T1</b>  Panel-1pc	<b>B8</b>  Wood Bar-1pc
<b>B9</b>  Wood Bar-1pc	<b>D1</b>  Short Slats-19pcs	<b>D5</b>  Short Slats-2pcs
<b>E4</b>  Side Panel-1pc	<b>E6</b>  Side Panel-1pc	<b>E7</b>  Wood Bar-1pc
<b>L1</b>  Drawer-Front Panels-3pcs	<b>L2</b>  Drawer-Back Panels-3pcs	<b>L3</b>  Drawer-Bottom Panels-3pcs







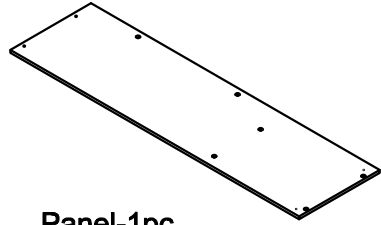
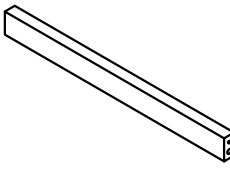
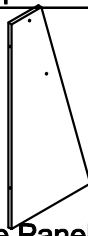

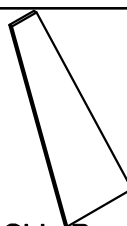
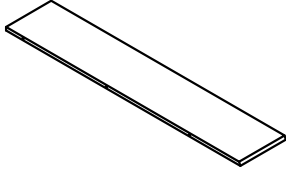
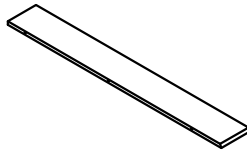


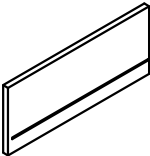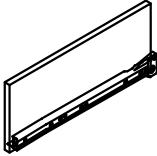
# Part List(Box 1-WF295315)

<div>L4</div> <div></div> <div>Drawer-Side Panels-3pcs</div>	<div>L5</div> <div></div> <div>Drawer-Side Panels-3pcs</div>	<div>E2</div> <div></div> <div>Leg-1pc</div>
---	---	---

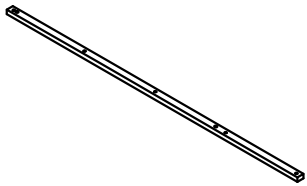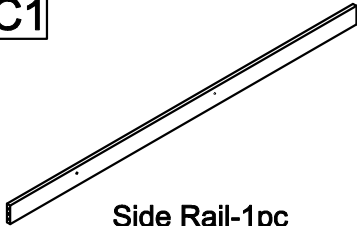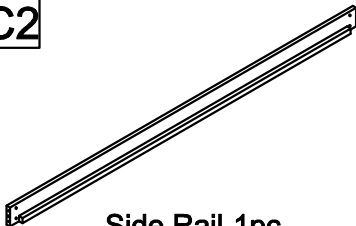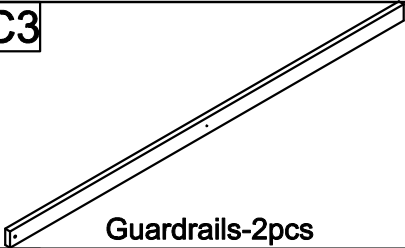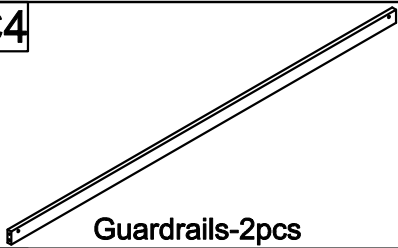





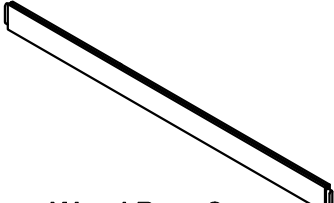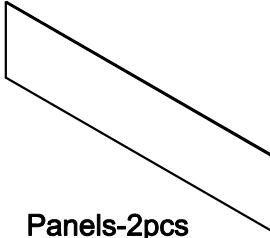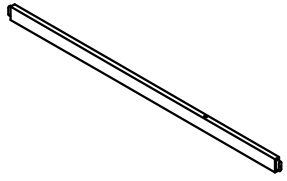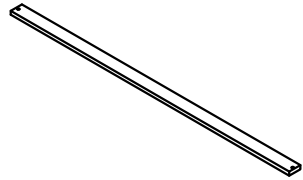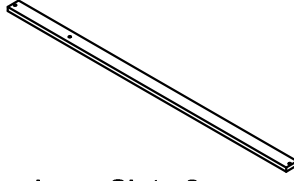

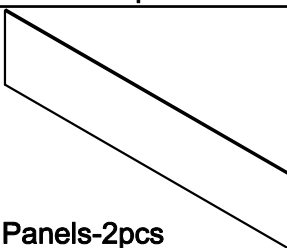



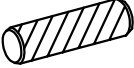

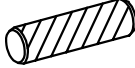
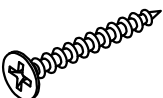

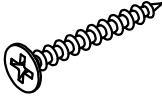
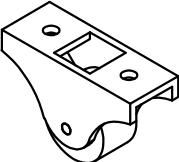

# Part List(Box 2-WF295316)

<b>B4</b>  Wood Bars-2pcs	<b>C1</b>  Side Rail-1pc	<b>C2</b>  Side Rail-1pc
<b>C3</b>  Guardrails-2pcs	<b>C4</b>  Guardrails-2pcs	<b>C5</b>  Rails-3pcs
<b>C6</b>  Side Rails-2pcs	<b>D6</b>  Front Trundle-1pc	<b>D7</b>  Back Trundle-1pc
<b>E1</b>  Wood Bar-1pc	<b>K3</b>  Step Stairs-4pcs	<b>F2</b>  Client-1pc
<b>F3</b>  Client-1pc	<b>F4</b>  Client-1pc	
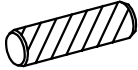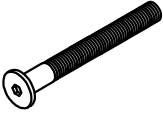
# Part List & Hardware List(Box 3-WF295317)

<div>B1</div> <div></div> <div>Wood Bars-2pcs</div>	<div>B2</div> <div></div> <div>Panels-2pcs</div>	<div>B3</div> <div></div> <div>Wood Bars-2pcs</div>
<div>D2</div> <div></div> <div>Long Slats-12pcs</div>	<div>D3</div> <div></div> <div>Long Slats-2pcs</div>	<div>D4</div> <div></div> <div>Support Slats-2pcs</div>
<div>E3</div> <div></div> <div>Panel-1pc</div>	<div>E5</div> <div></div> <div>Wood Bar-1pc</div>	<div>E8</div> <div></div> <div>Side Panel-1pc</div>
<div>E9</div> <div></div> <div>Side Panel-1pc</div>	<div>F1</div> <div></div> <div>Side Panel-1pc</div>	<div>F5</div> <div></div> <div>Panel-1pc</div>
<div>F6</div> <div></div> <div>Panel-1pc</div>	<div>K1</div> <div></div> <div>Side Stair-1pc</div>	<div>K2</div> <div></div> <div>Side Stair-1pc</div>
<div>B7</div> <div></div> <div>Panels-2pcs</div>		

# Hardware List(Box 3-WF295317)

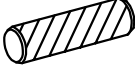1	 Screws 1/4" x80 17pcs	2	 M4 x 30 mm Wood Screws 120pcs	3	 Ø10 x 40 mm Wood dowel 30pcs
4	 Ø1/4" x 80 mm Hex-Head bolts 22pcs	5	 Ø1/4" x 13 mm Horizontal-Hole bolts 22pcs	6	 Allen Key 1pc
7	 Ø1/4" x 30 mm Hex-Head bolts 12pcs	8	 Screws 1/4" x30 8pcs	9	 Ø1/4" x 15 mm Canopy head though -3pcs
10	 Ø1/4" x 25 mm Hex-Head bolts 7pcs	11	 Ø12 x 70 mm Wood dowel 4pcs	12	 Screws 1/4" x50 13pcs
13	 Ø8 x 30 mm Wood dowel 2pcs	14	 Ø1/4" x 40mm Hex-Head bolts 1pc	15	 Ø6 x 30 mm Wood dowel 1pc
16	 M4 x 20 mm Wood Screws 9pcs	17	 Bracket 4 pcs	18	 M4 x 15 mm Wood Screws 32pcs
19	 Wheels 4pcs	20	 Steel Bracket 3pcs		



## Hardware List(Box 3-WF295317)

21



Ø1/6" x 25 mm  
Hex-Head bolts 3pcs

22




Handle Wood  
3pcs

23



Stp trundle  
2pcs



**Assembly Tools Required (Not Included)**

# STEP 1: Following below illustration:

1.1:Using hardware #1 connect A1,A2 legs with B1,B3 Wood bars and B2 Panel

1.2:Using hardware #2 connect Frame(completed 1.1) with B4 Wood bar

1





4pcs

2




5pcs

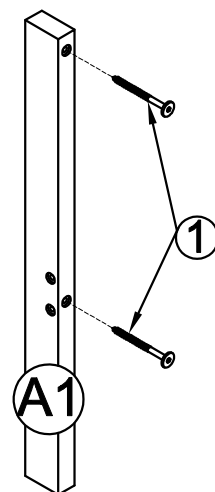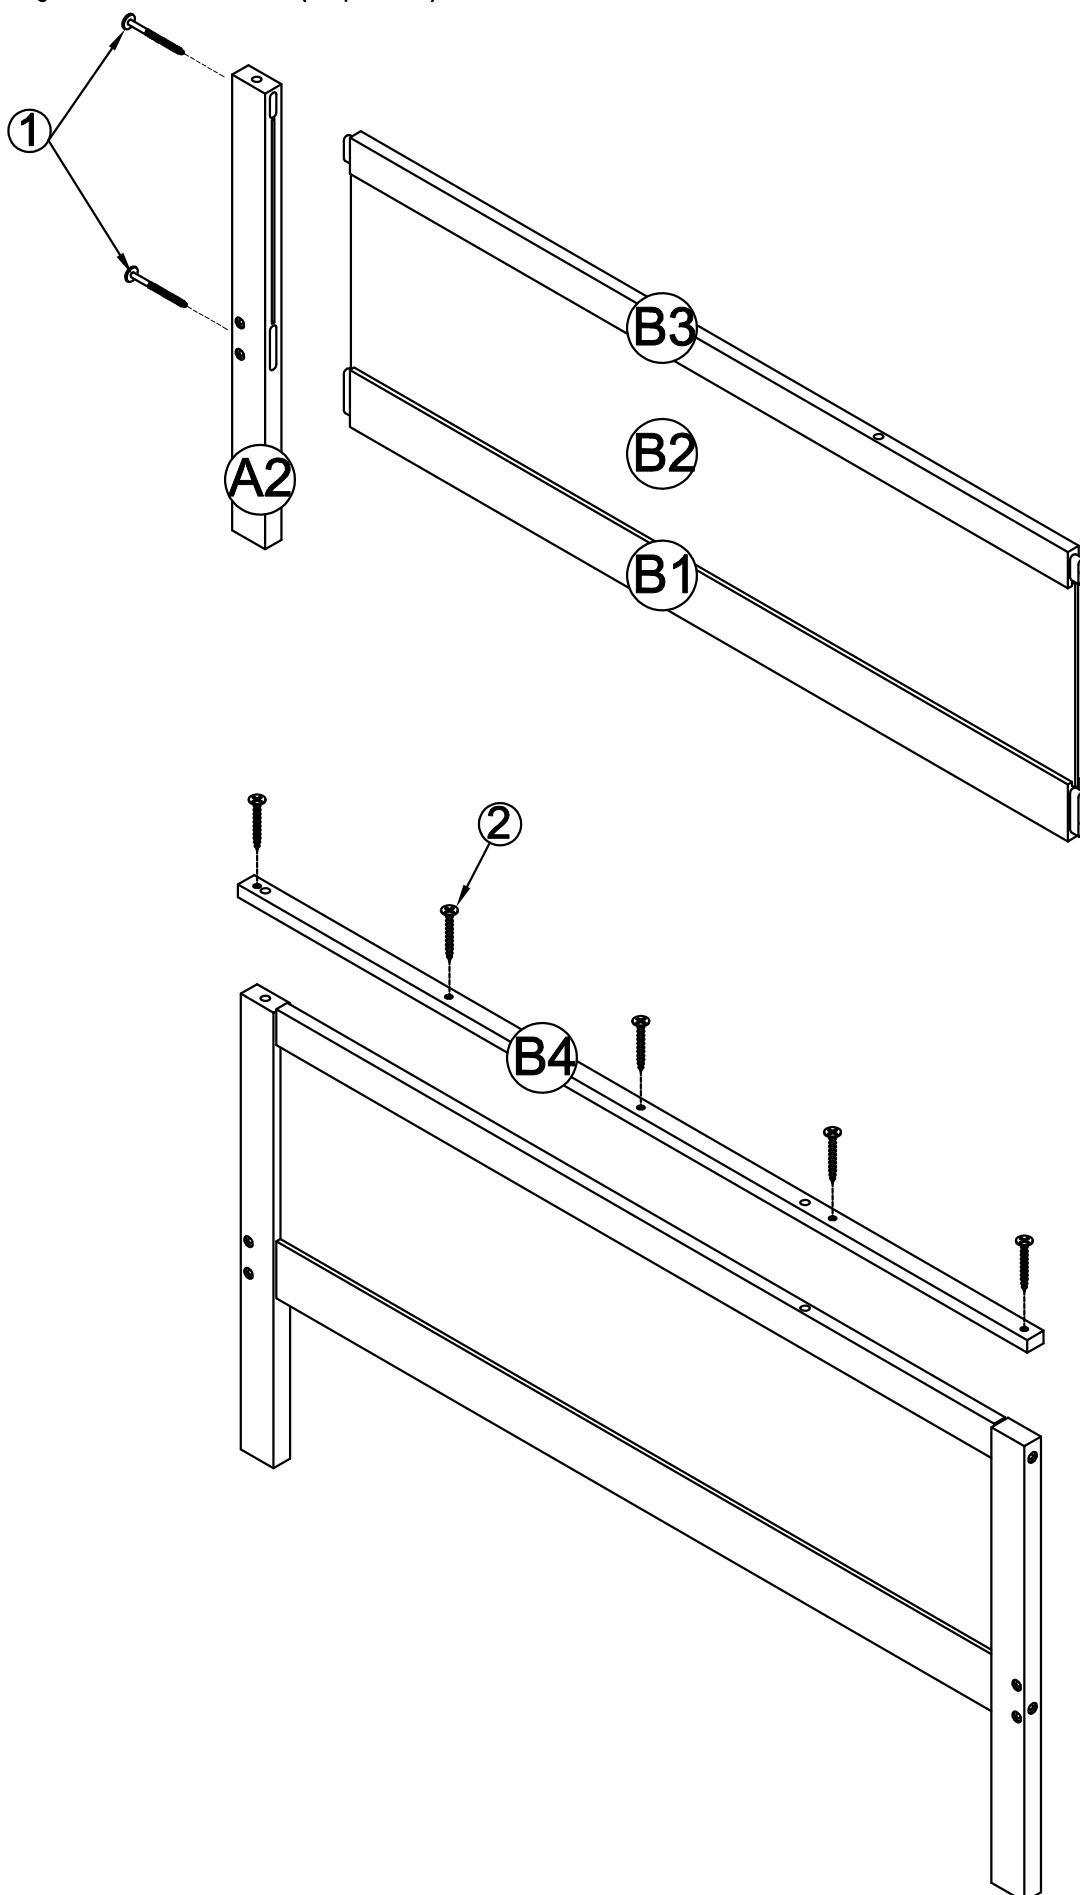


## STEP 2: Following below illustration:

2.1:Using hardware #1 connect A5,A6 legs with B1,B3 Wood bars and B2 Panel

2.2:Using hardware #2 connect Frame(completed 2.1) with B4 Wood bar

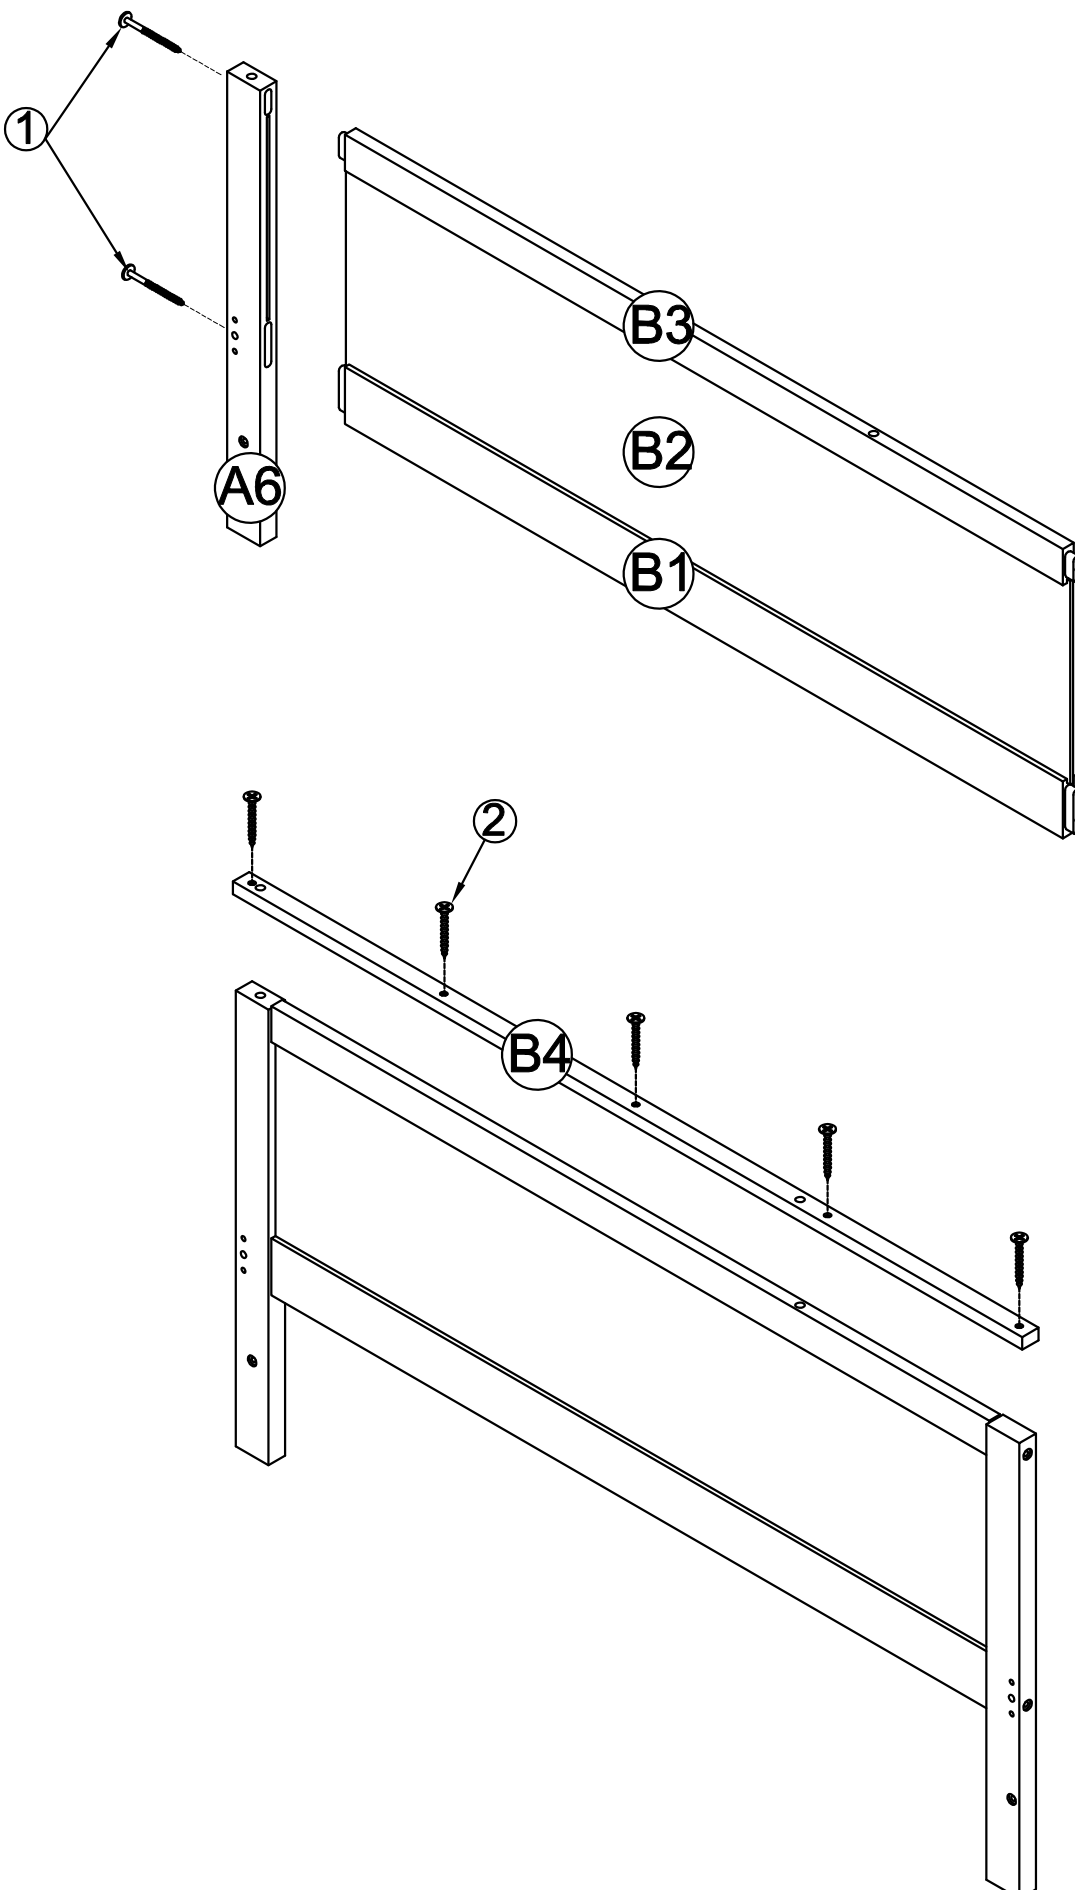




1	
	4pcs
2	
	5pcs

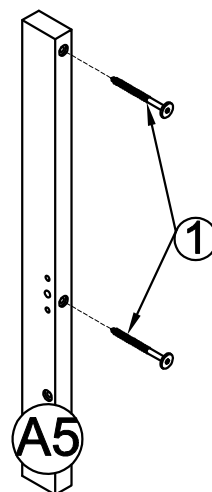


## STEP 3: Following below illustration:

-Using hardware #4, #5 and dowel #3 to Assembly Frames (Completed on step 1,2) with siderail C6(x2).


-Look at detail view for more detail

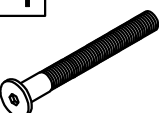4	3
	
8pcs	4pcs
5	
	
8pcs	

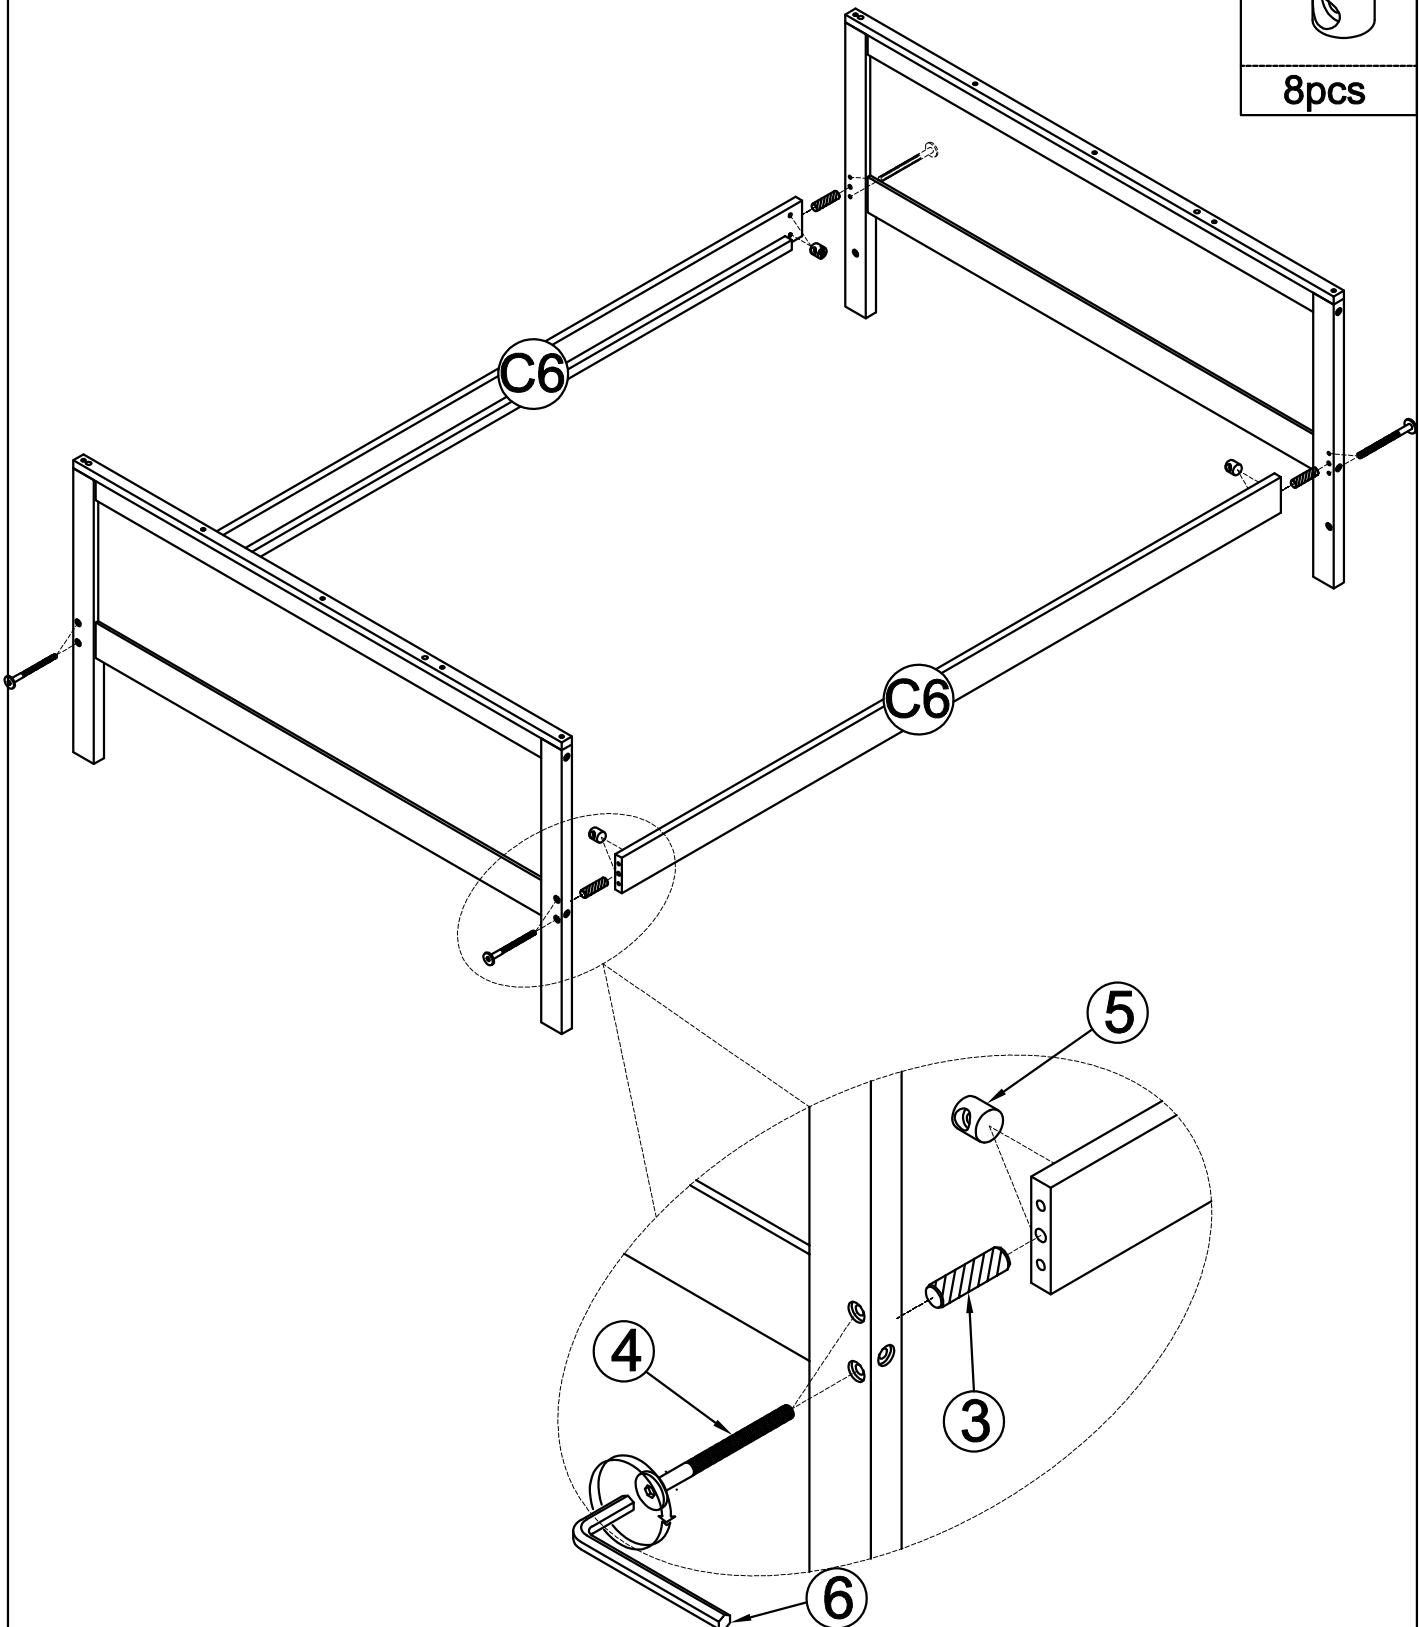

## STEP 4: Following below illustration:

- Using hardward #7 to connect Support Slat D4 with Slat D3.
- Look at detail view for more detail

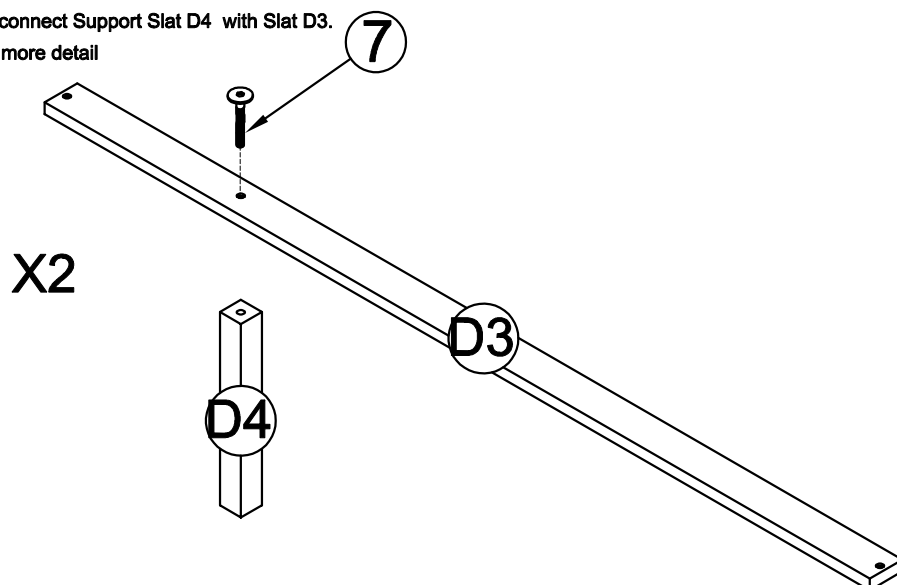


7



2pcs

## STEP 5: Following below illustration:

- Screw 12 slat D2 and 2 Slat D3 with Side Rail C6 by using hardware #2.
- Look at detail view for more detail

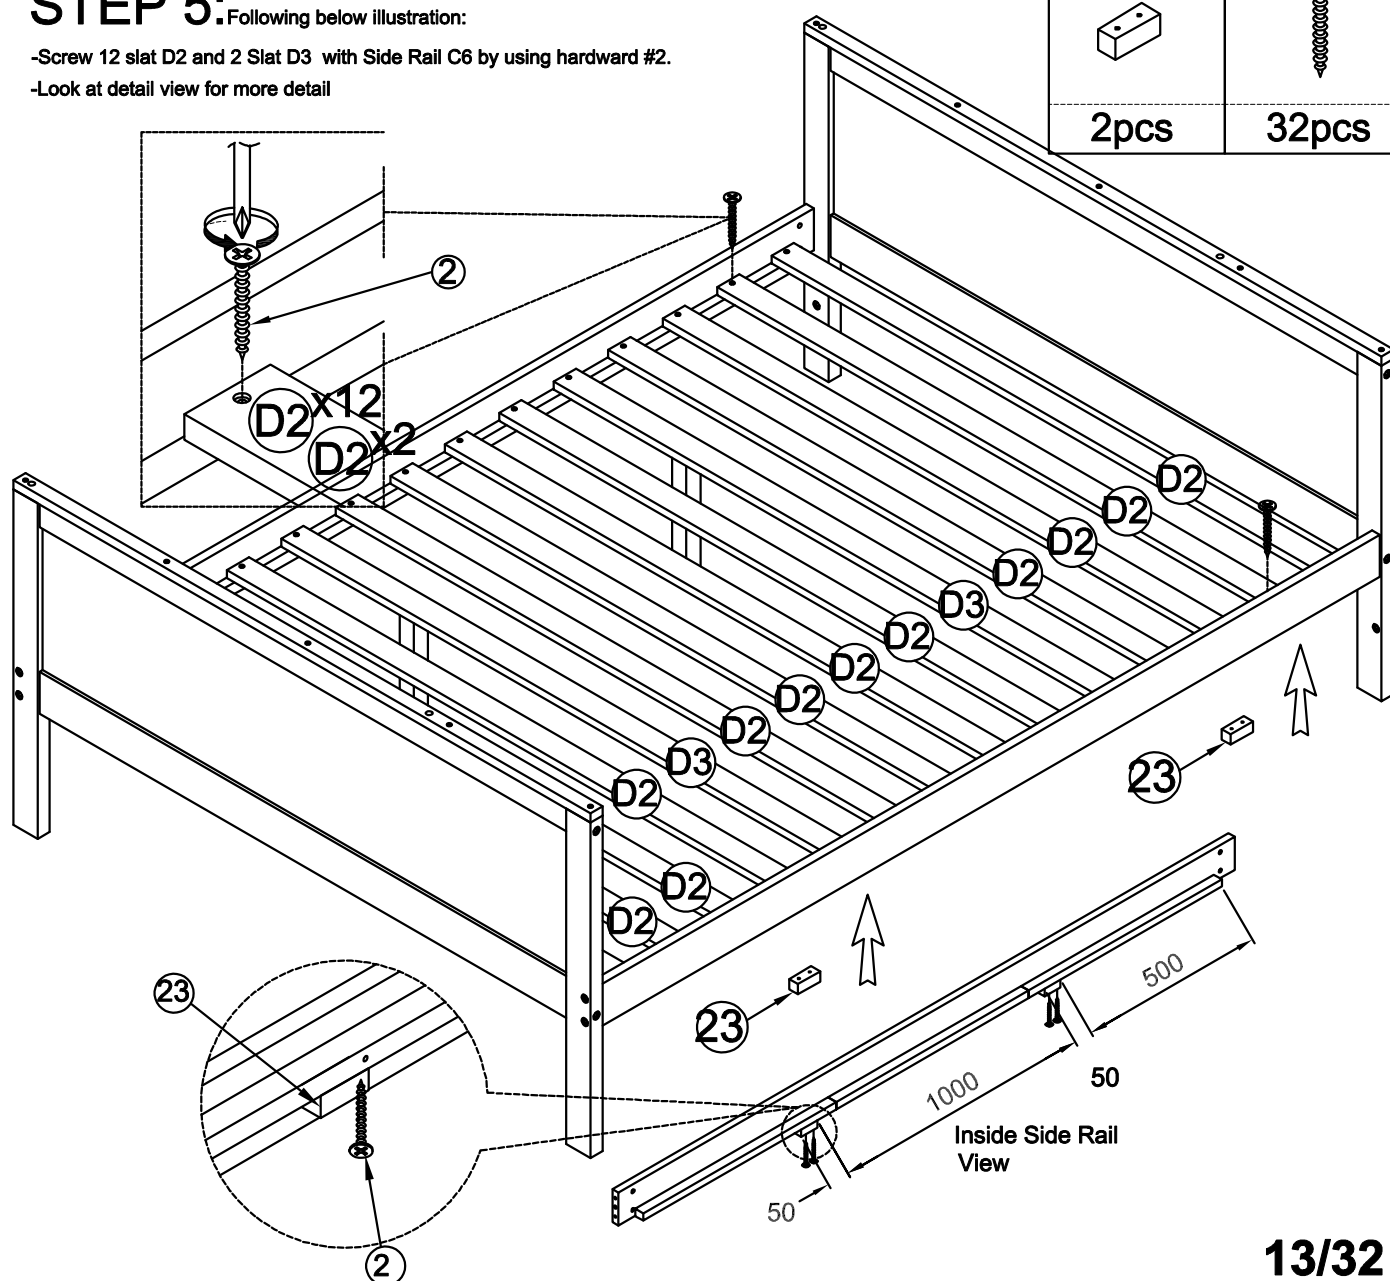


23



2pcs


2



32pcs

## STEP 6: Following below illustration:

-Using hardware #1 connect A3,A4 legs with B5,B8 Wood bars and B7 Panel

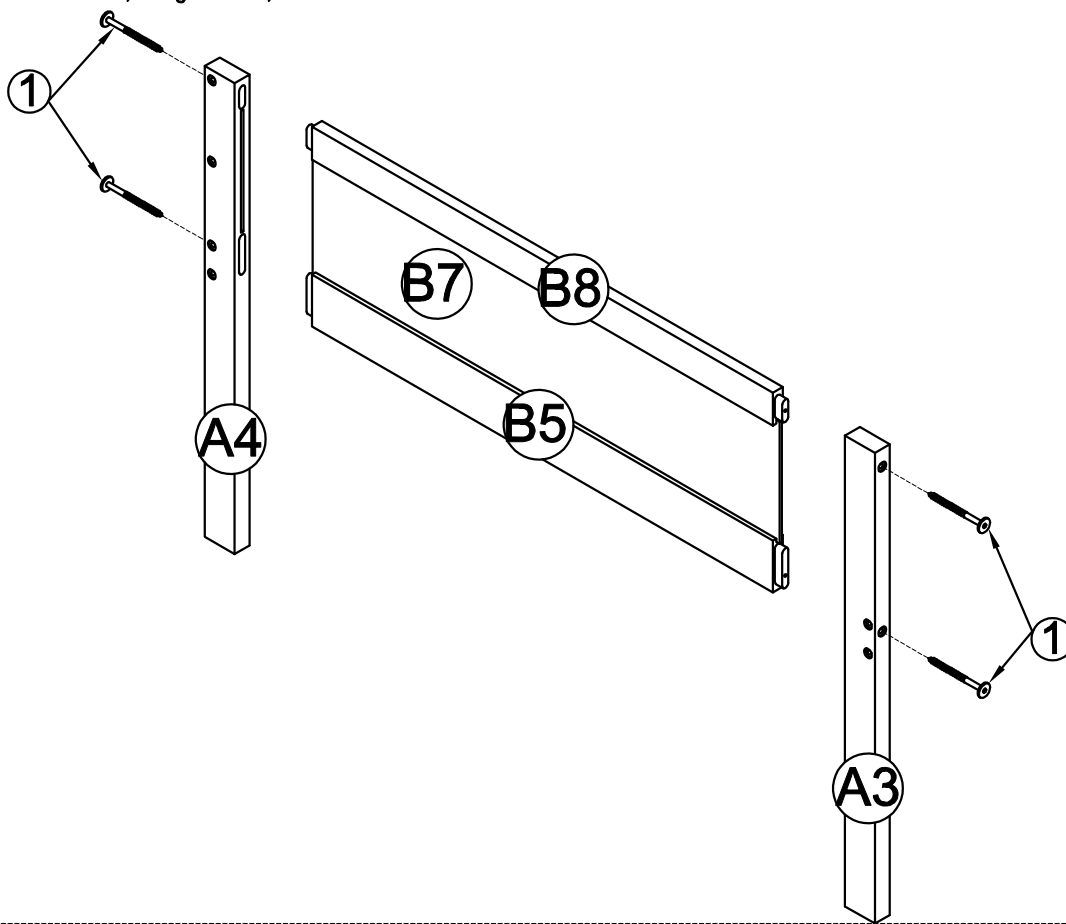


1



4pcs

## STEP 7: Following below illustration:

-Using hardware #1 connect A7,A8 legs with B6,B9 Wood bars and B7 Panel

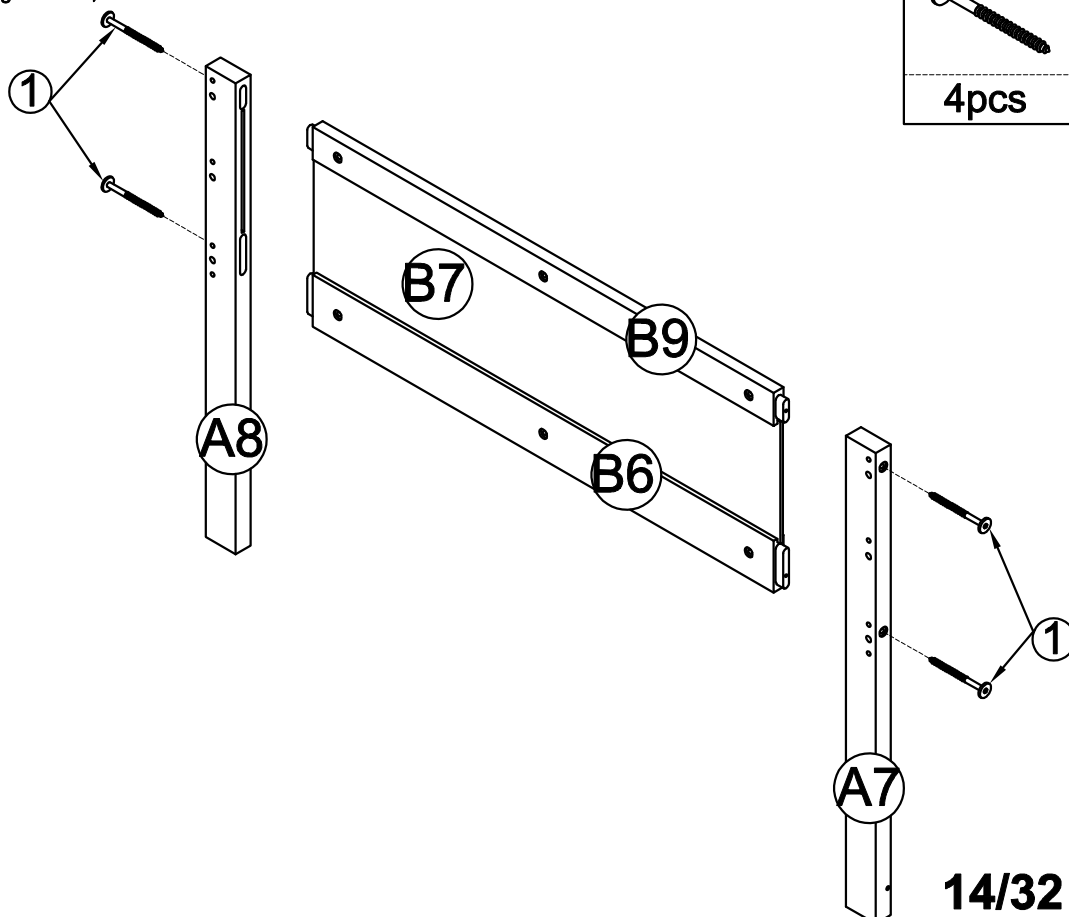

1





4pcs

## STEP 8: Following below illustration:

-Using hardware #8 connect C2 Side Rail and C4(x2) Guardrails with C5 Rail

-Using hardware #8,#9,#10 connect C1 Side Rail and C3(x2) Guardrails with C5(x2) Rails

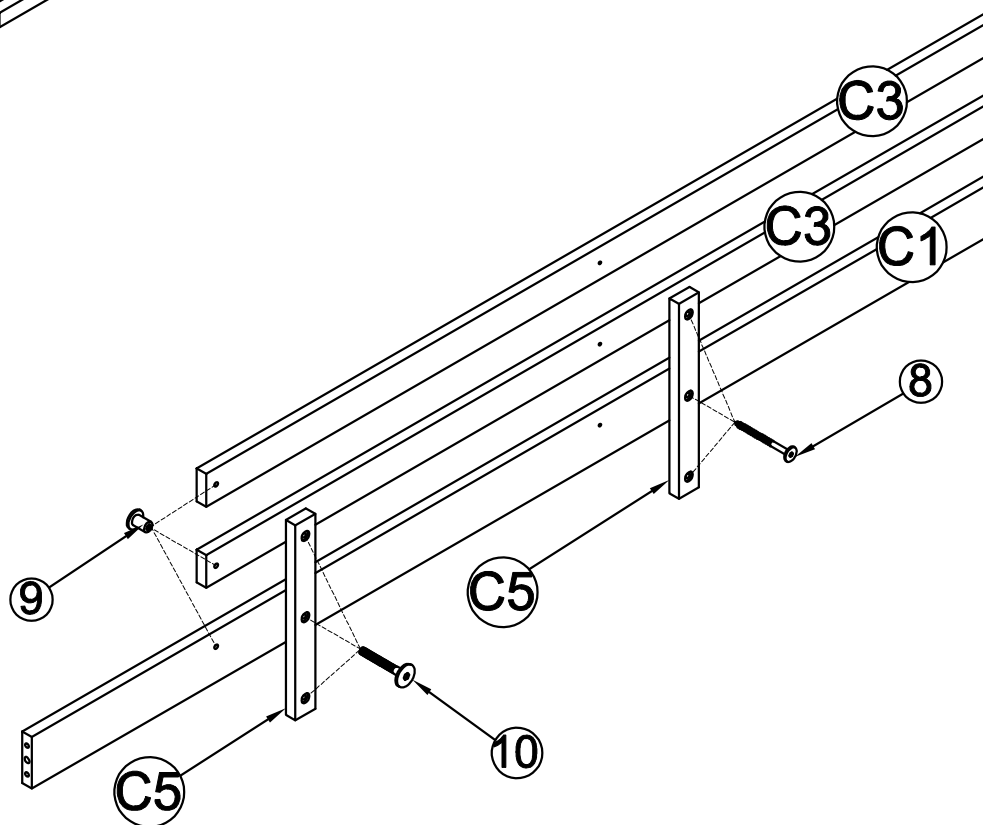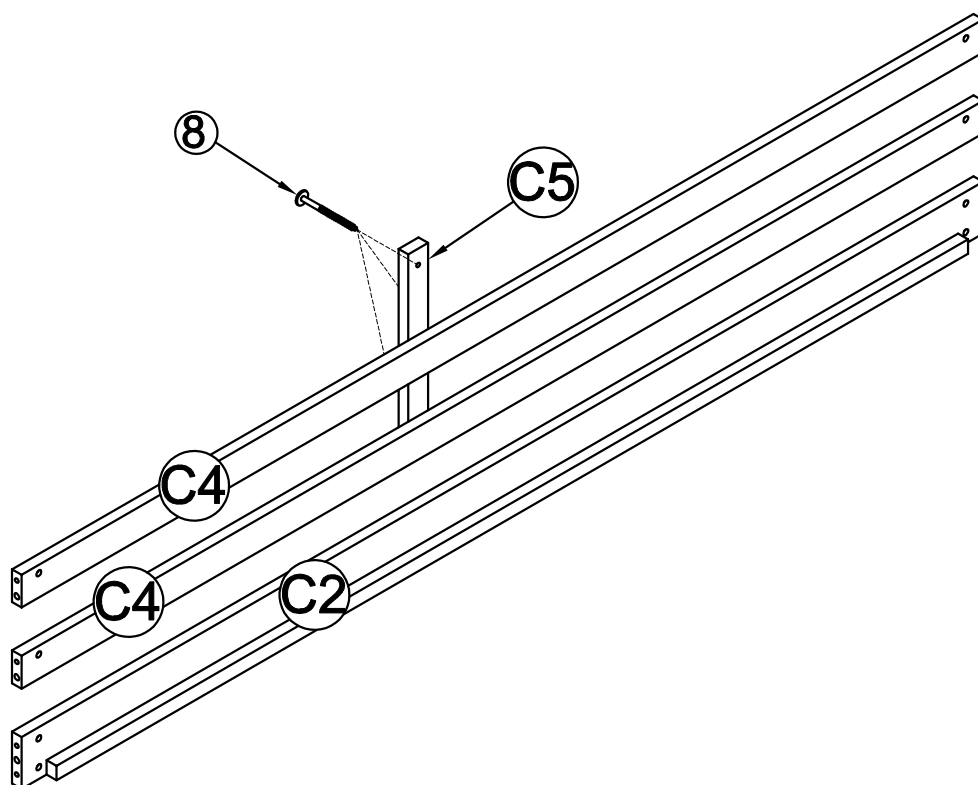

8



6pcs

9



3pcs

10







3pcs

# STEP 9: Following below illustration:

-Using hardward #4, #5 and dowel #3 to Assembly Frames (Completed on step 6,7) with Frames (Completed on step 8)

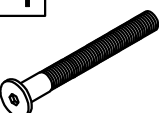-Look at detail view for more detail

4	3
	
14pcs	10pcs
	5
	
	14pcs

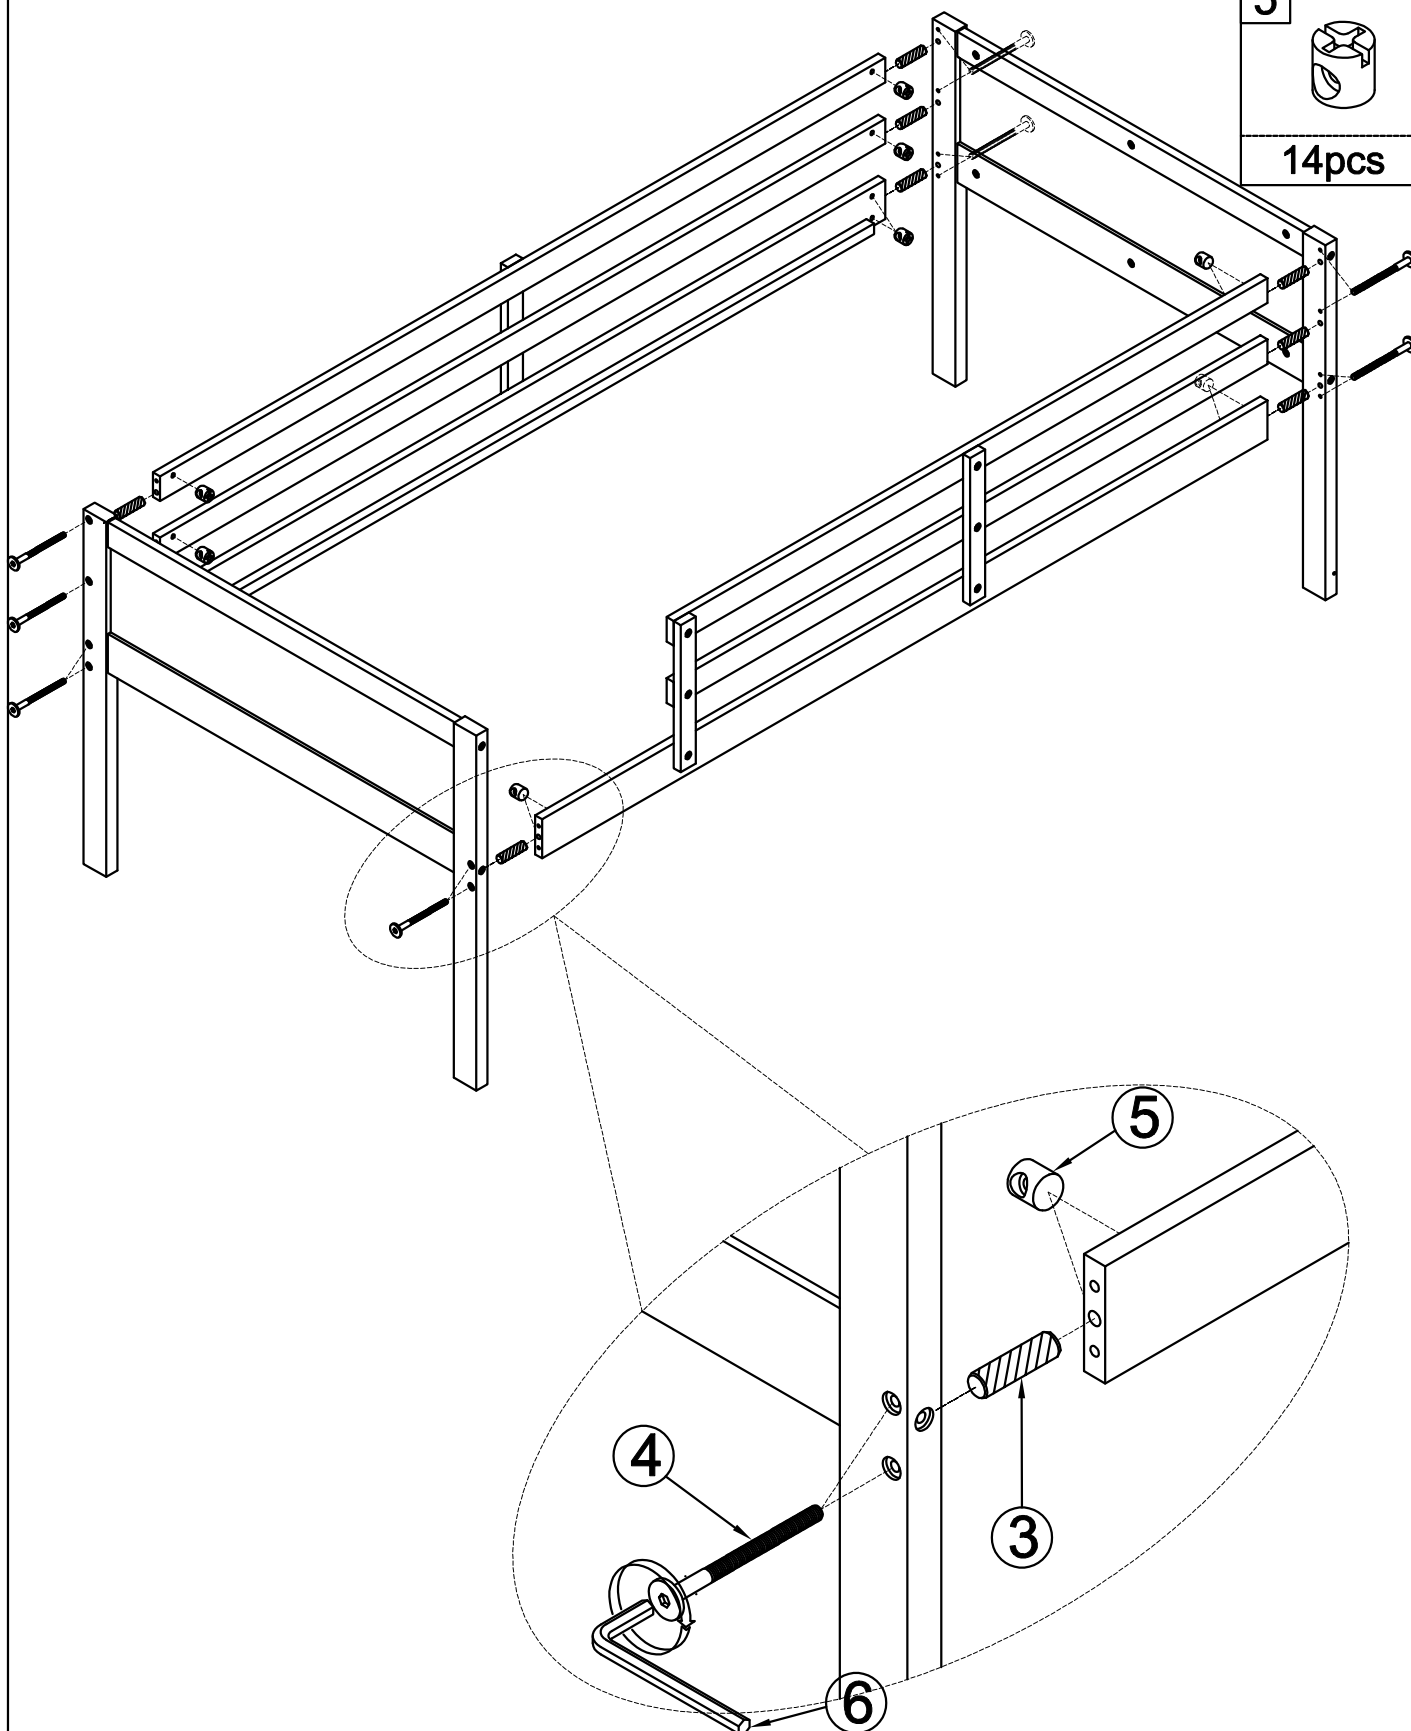






## STEP 10: Following below illustration:

- Screw 14 slat D1 with Side Rail C1,C2 by using hardward #2.
- Look at detail view for more detail

2



28pcs

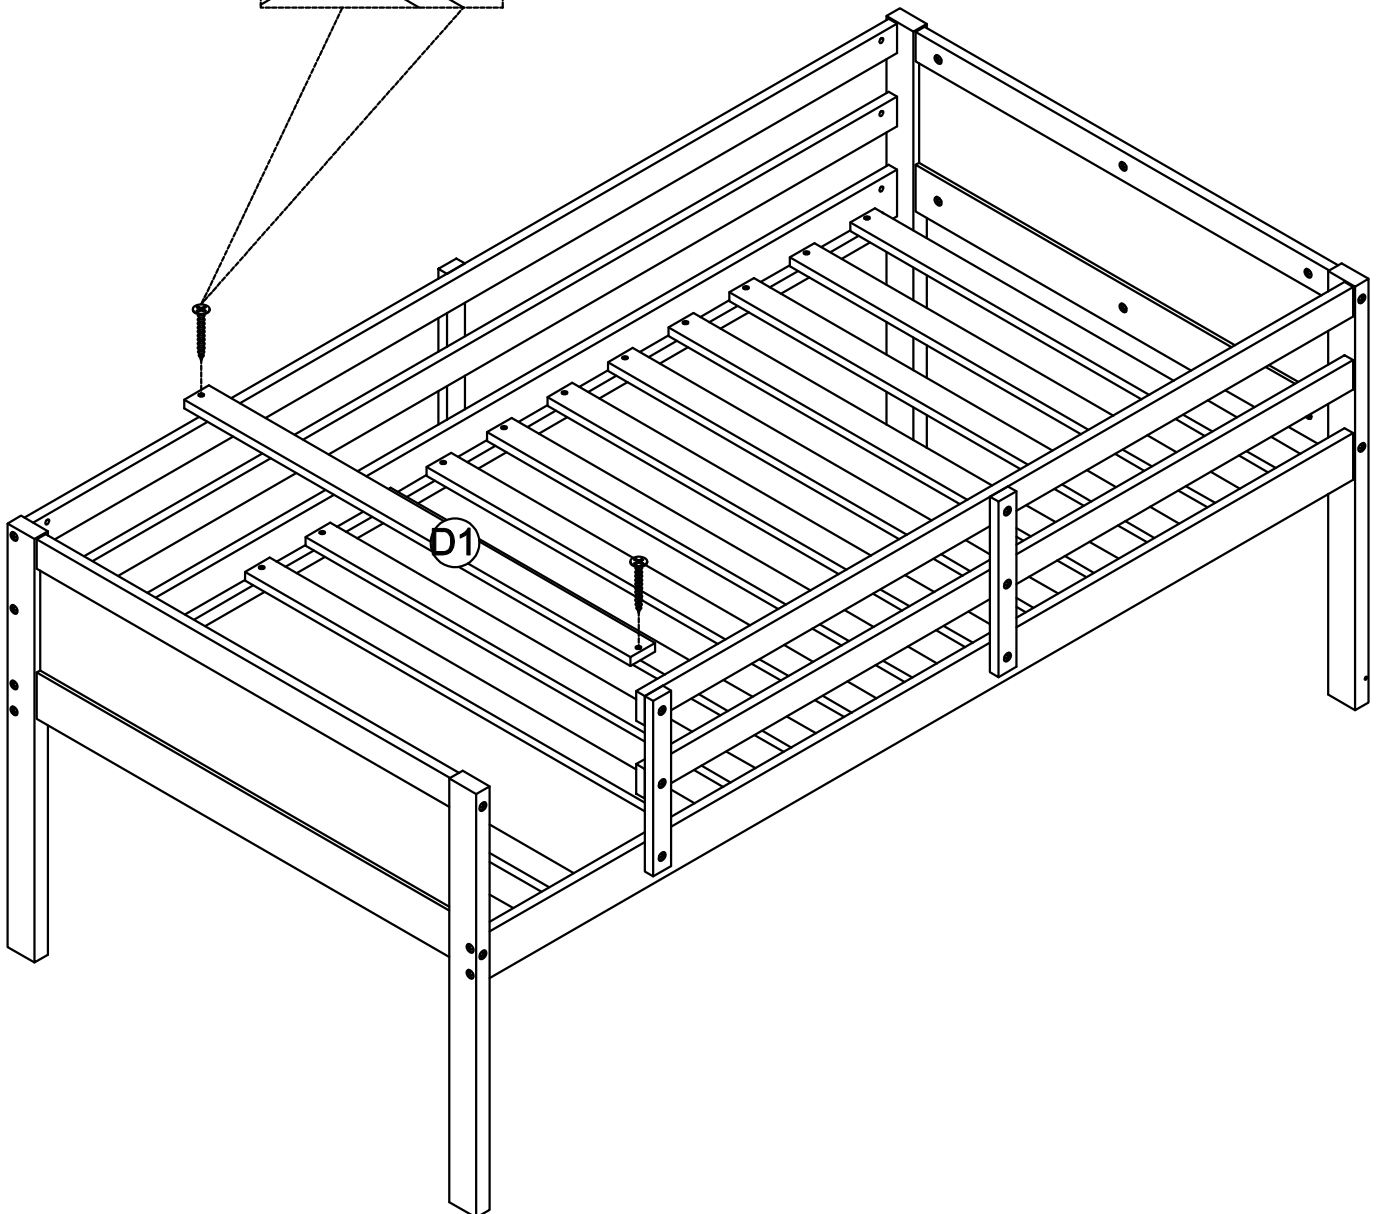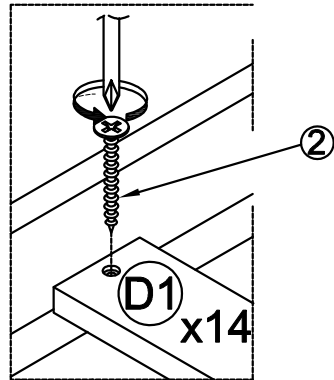


## STEP 11: Following below illustration:

- Using Dowel 11 Fix Frame(completed on step 10) with Frame(completed on step 5).
- Look at detail view for more detail


11




4pcs

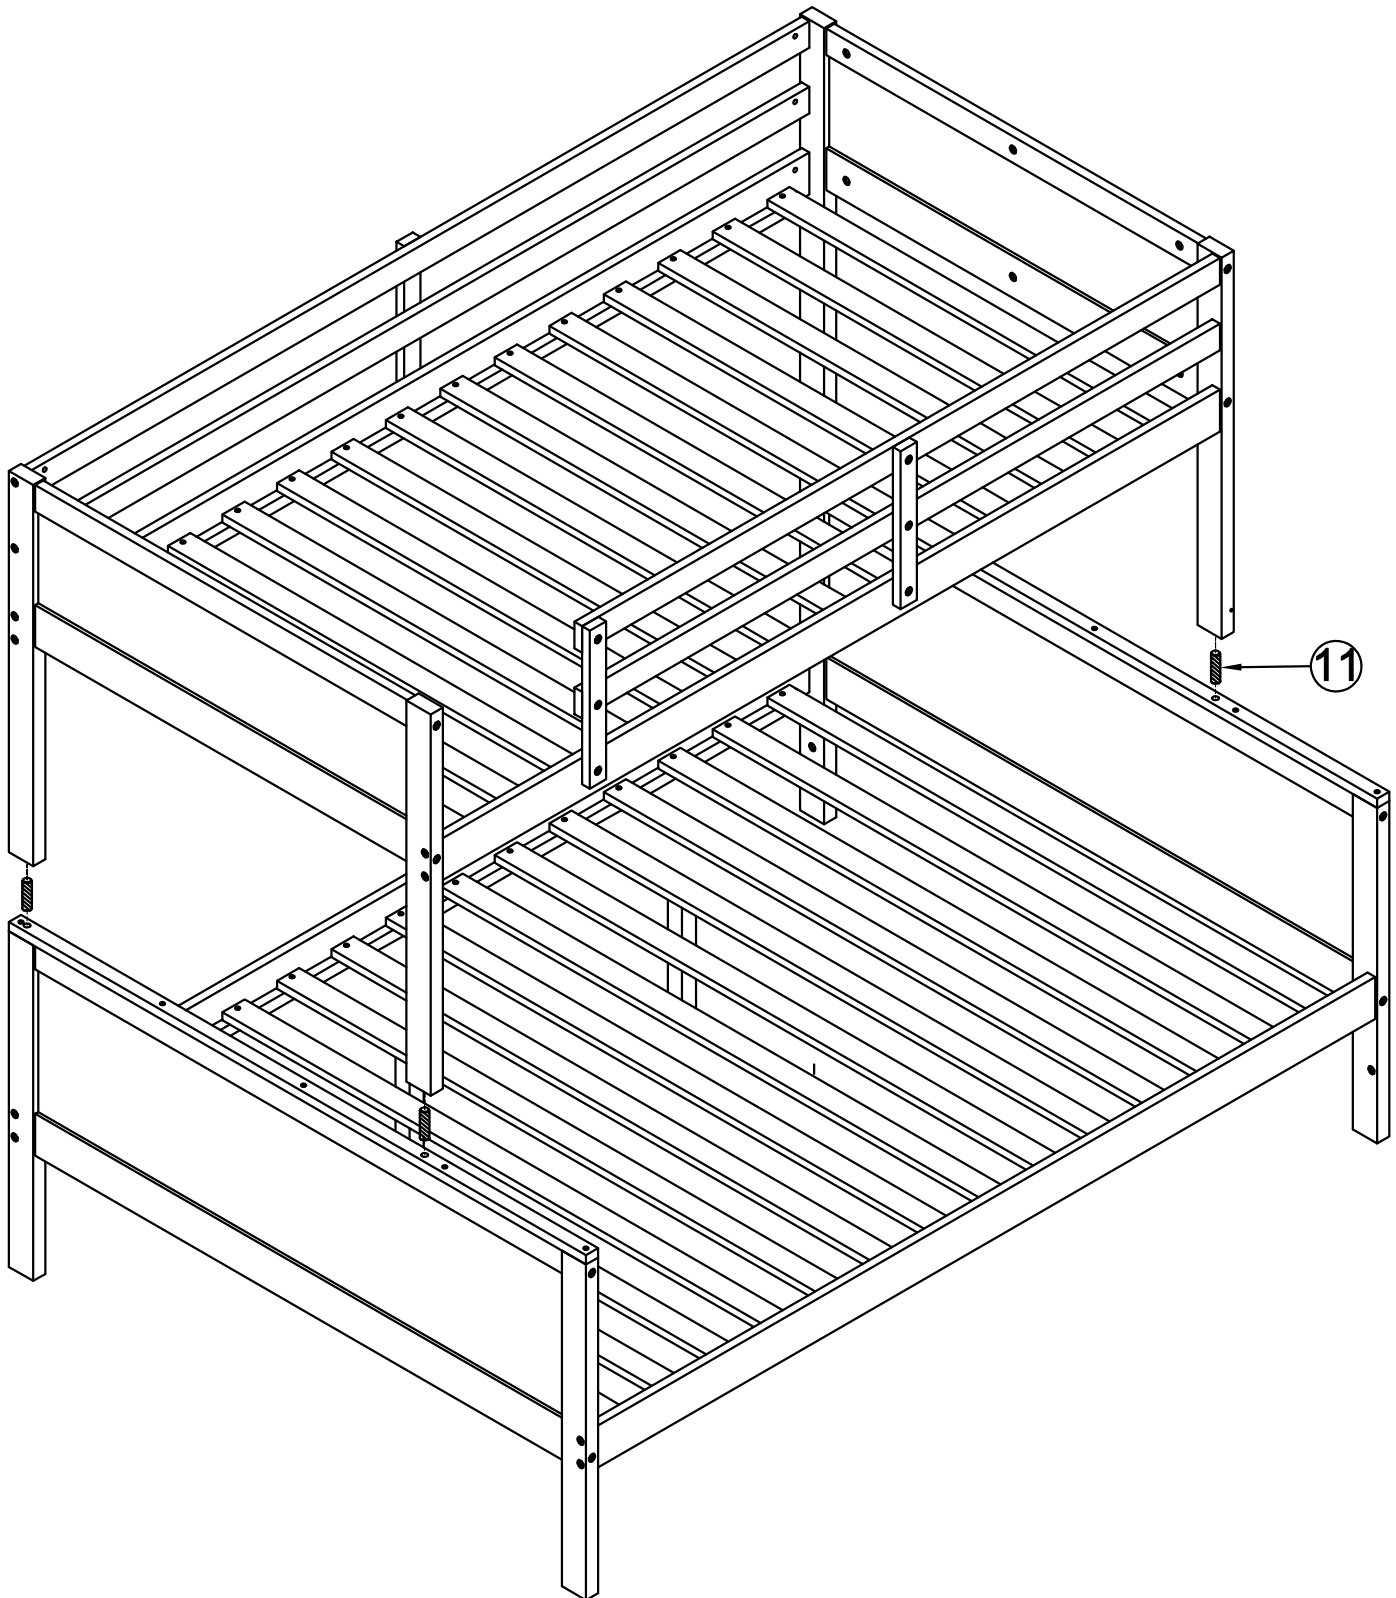

STEP 12-1:

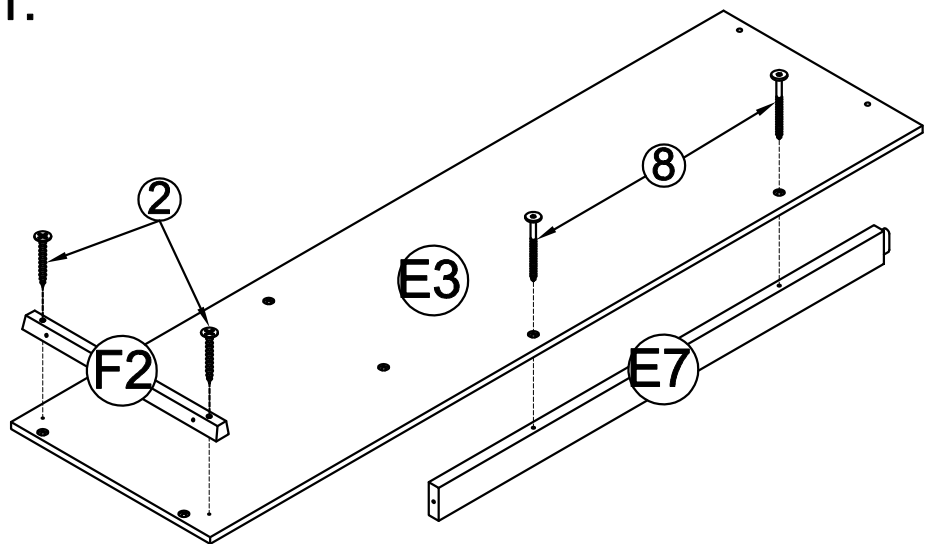


8




2pcs

2




2pcs

STEP 12-2:

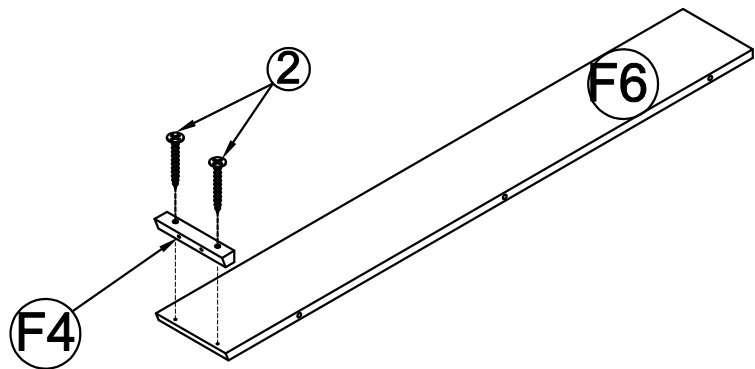


2




2pcs

STEP 12-3:

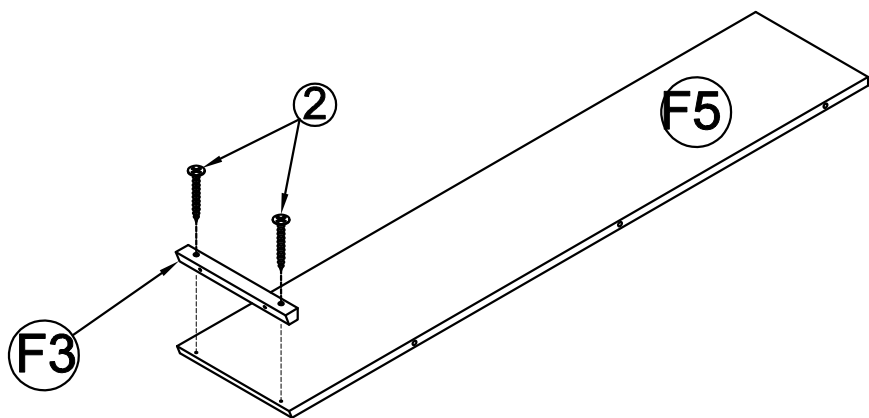


2



2pcs

## STEP 12-4:

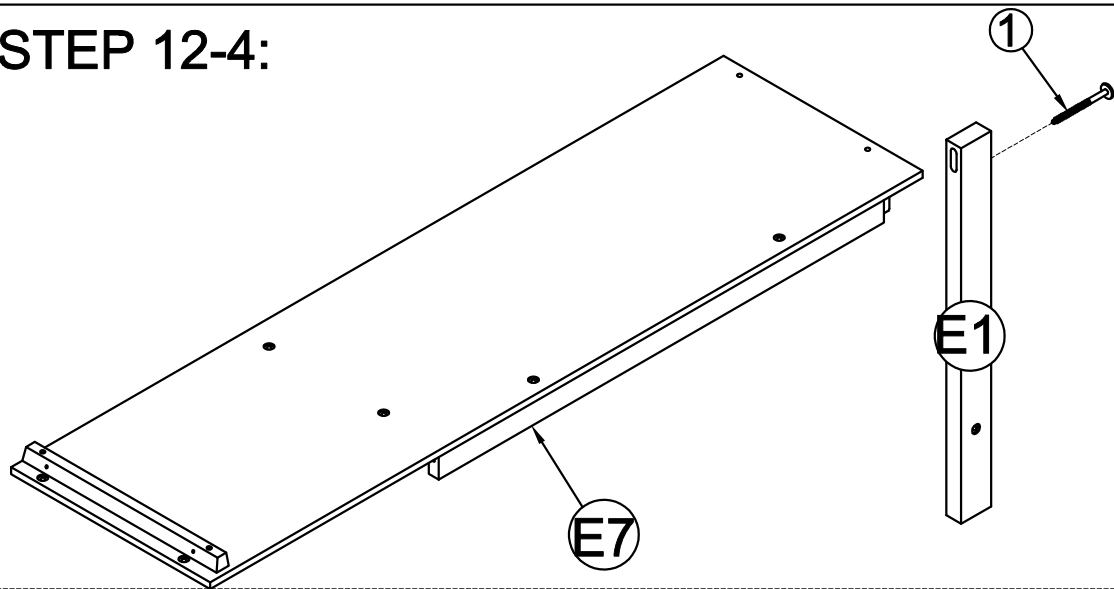


1



1pc

## STEP 12-5:

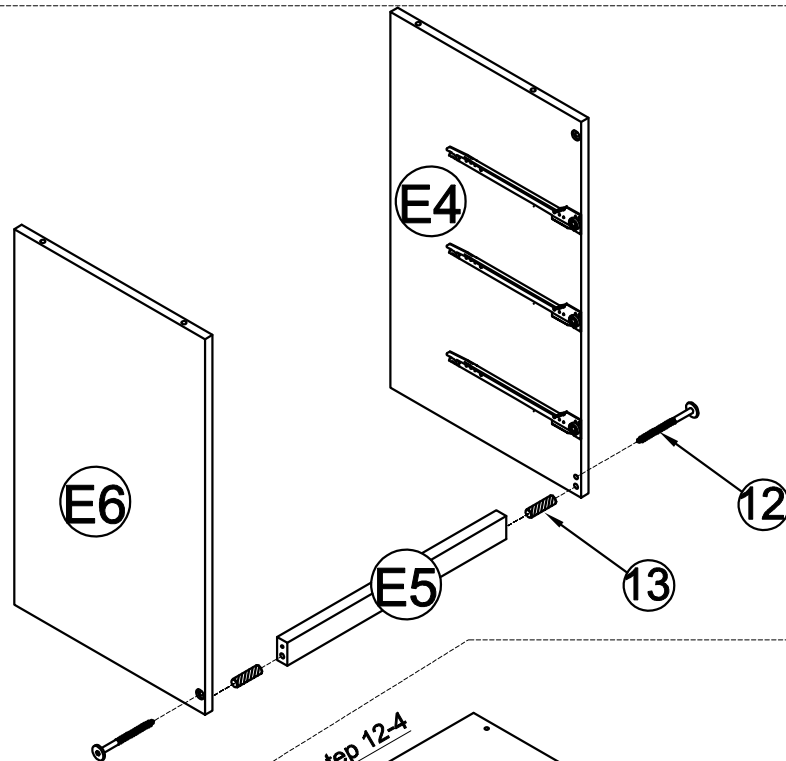

12




2pcs

13




2pcs

## STEP 12-6:

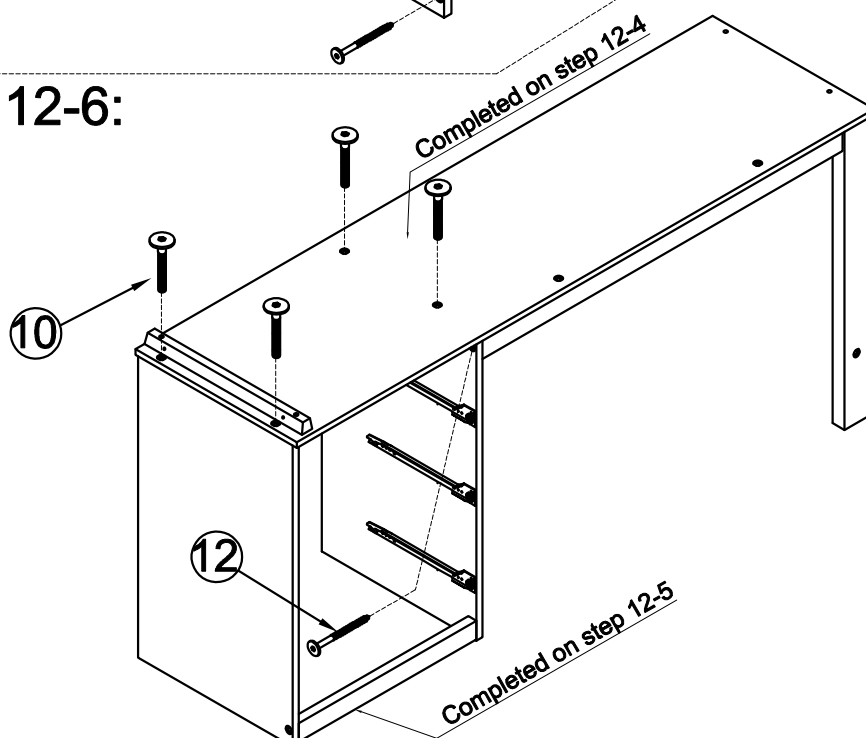

12



1pc

10



4pcs

## STEP 13: Following below illustration:

- Using hardware #12, #14 to Assembly Frames (Completed on step 11, 12-6) with E2 Rail.
- Look at detail view for more detail

12




2pcs

14



1pc

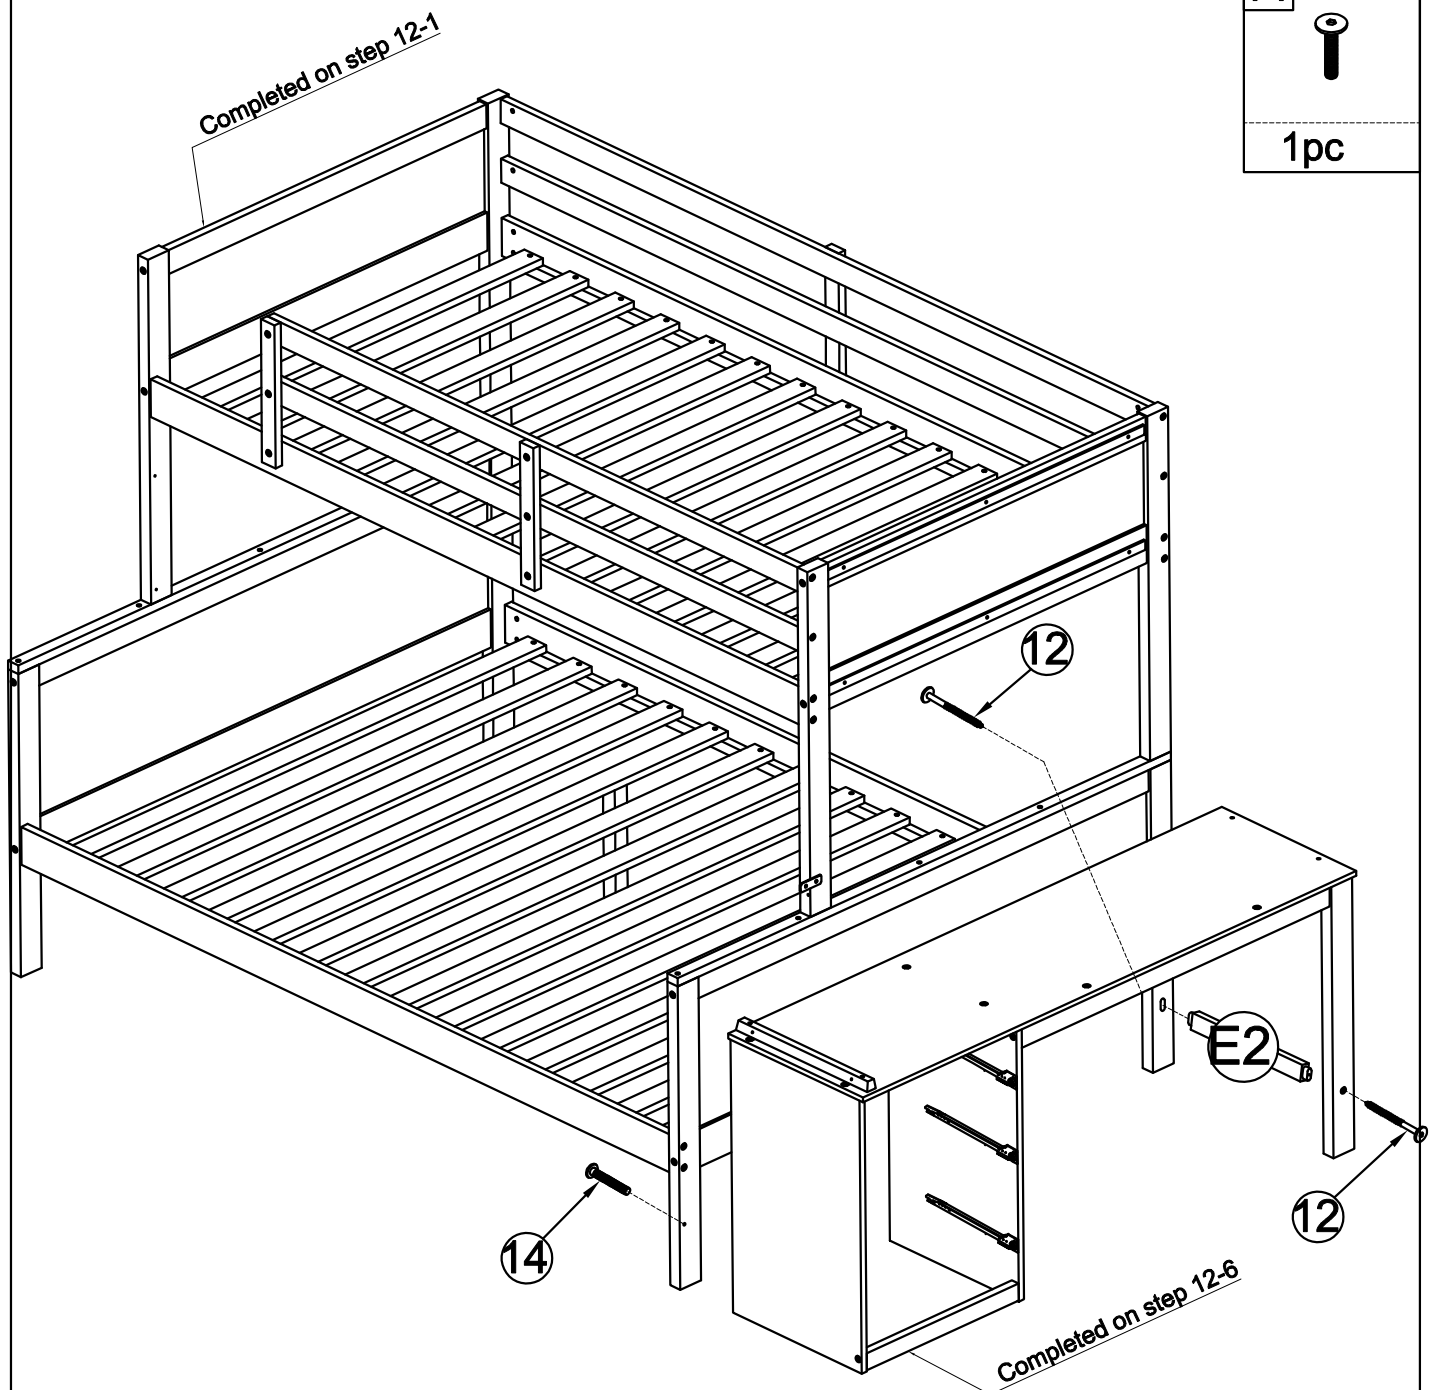


## STEP 14: Following below illustration:

- Using hardware #7 to Assembly Frames (Completed on step 12-2,12-3) with Frames (Completed on step 13)
- Look at detail view for more detail

7



6pcs

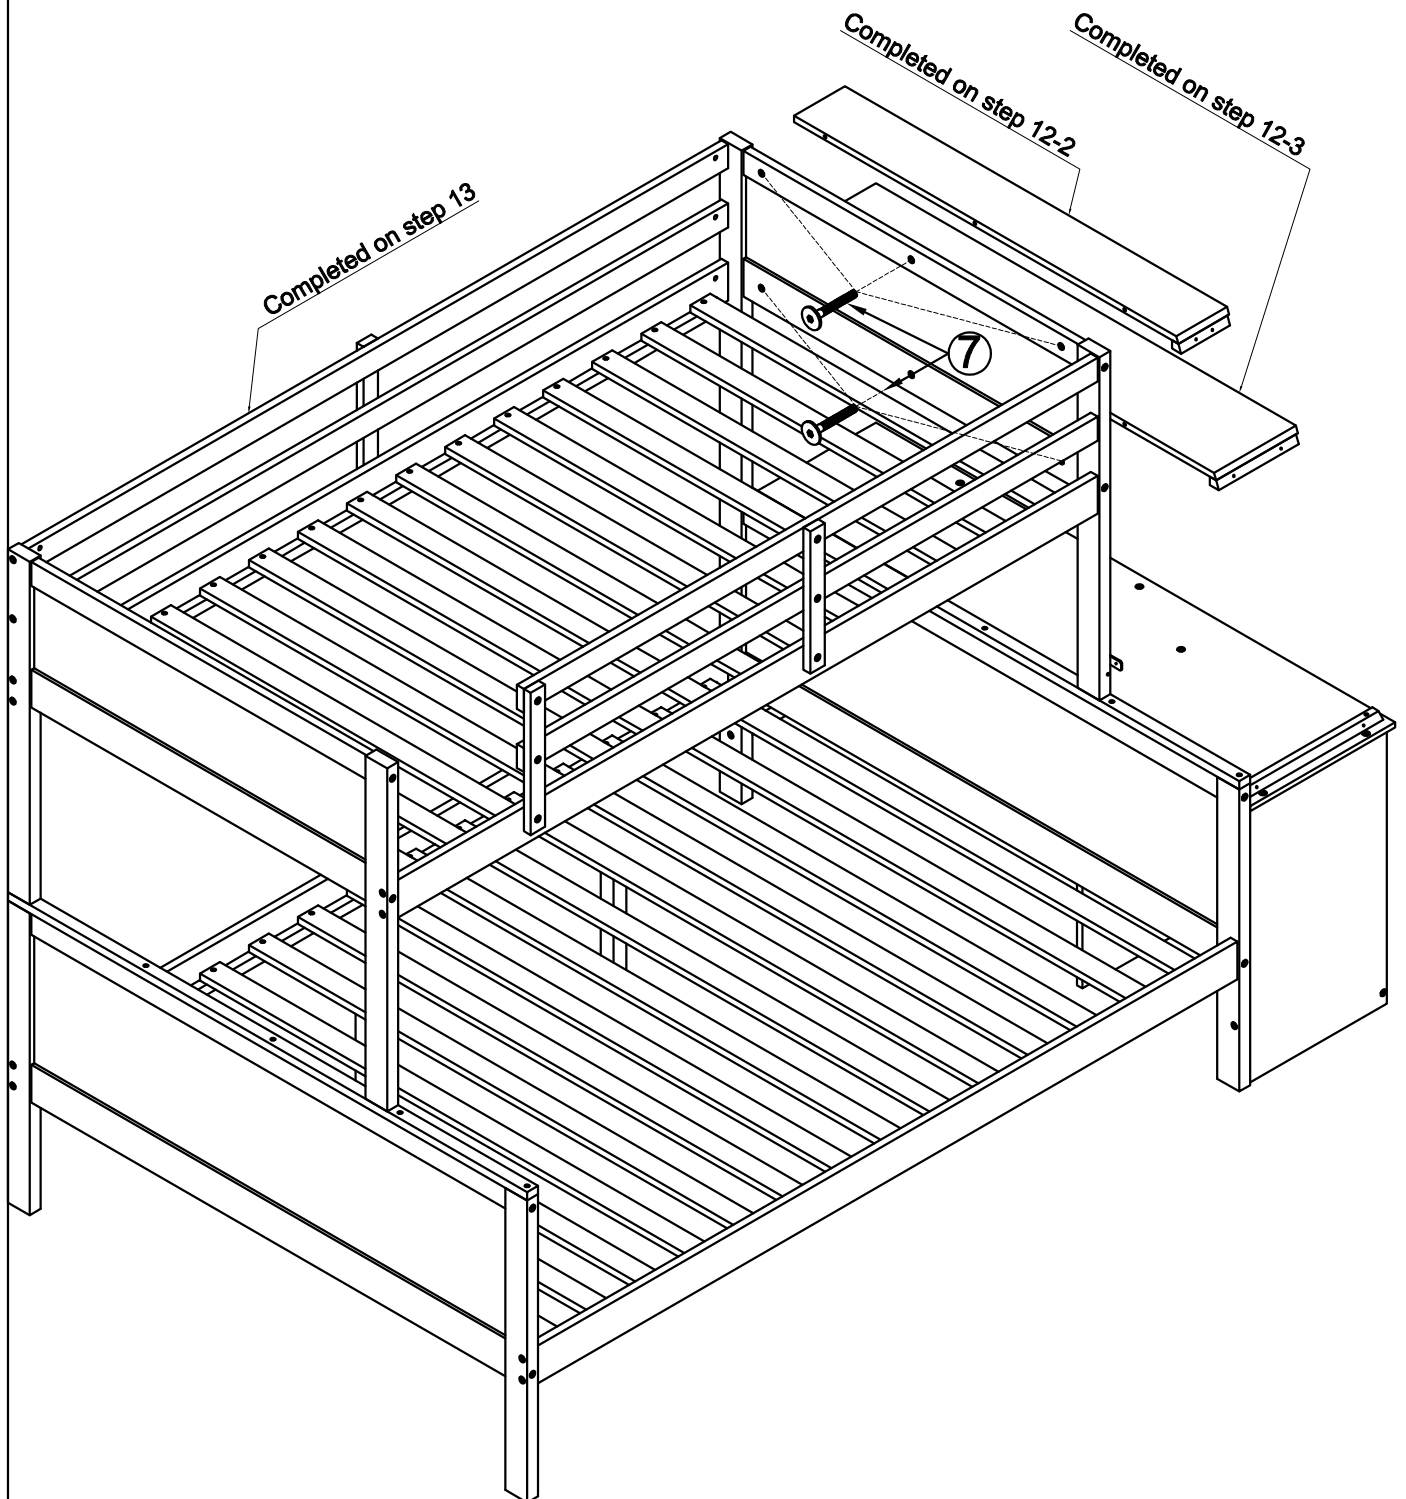


## STEP 15: Following below illustration:

-Using hardware #7 to Assembly Frames (Completed on step 14) with E8 Panel

7




4pcs

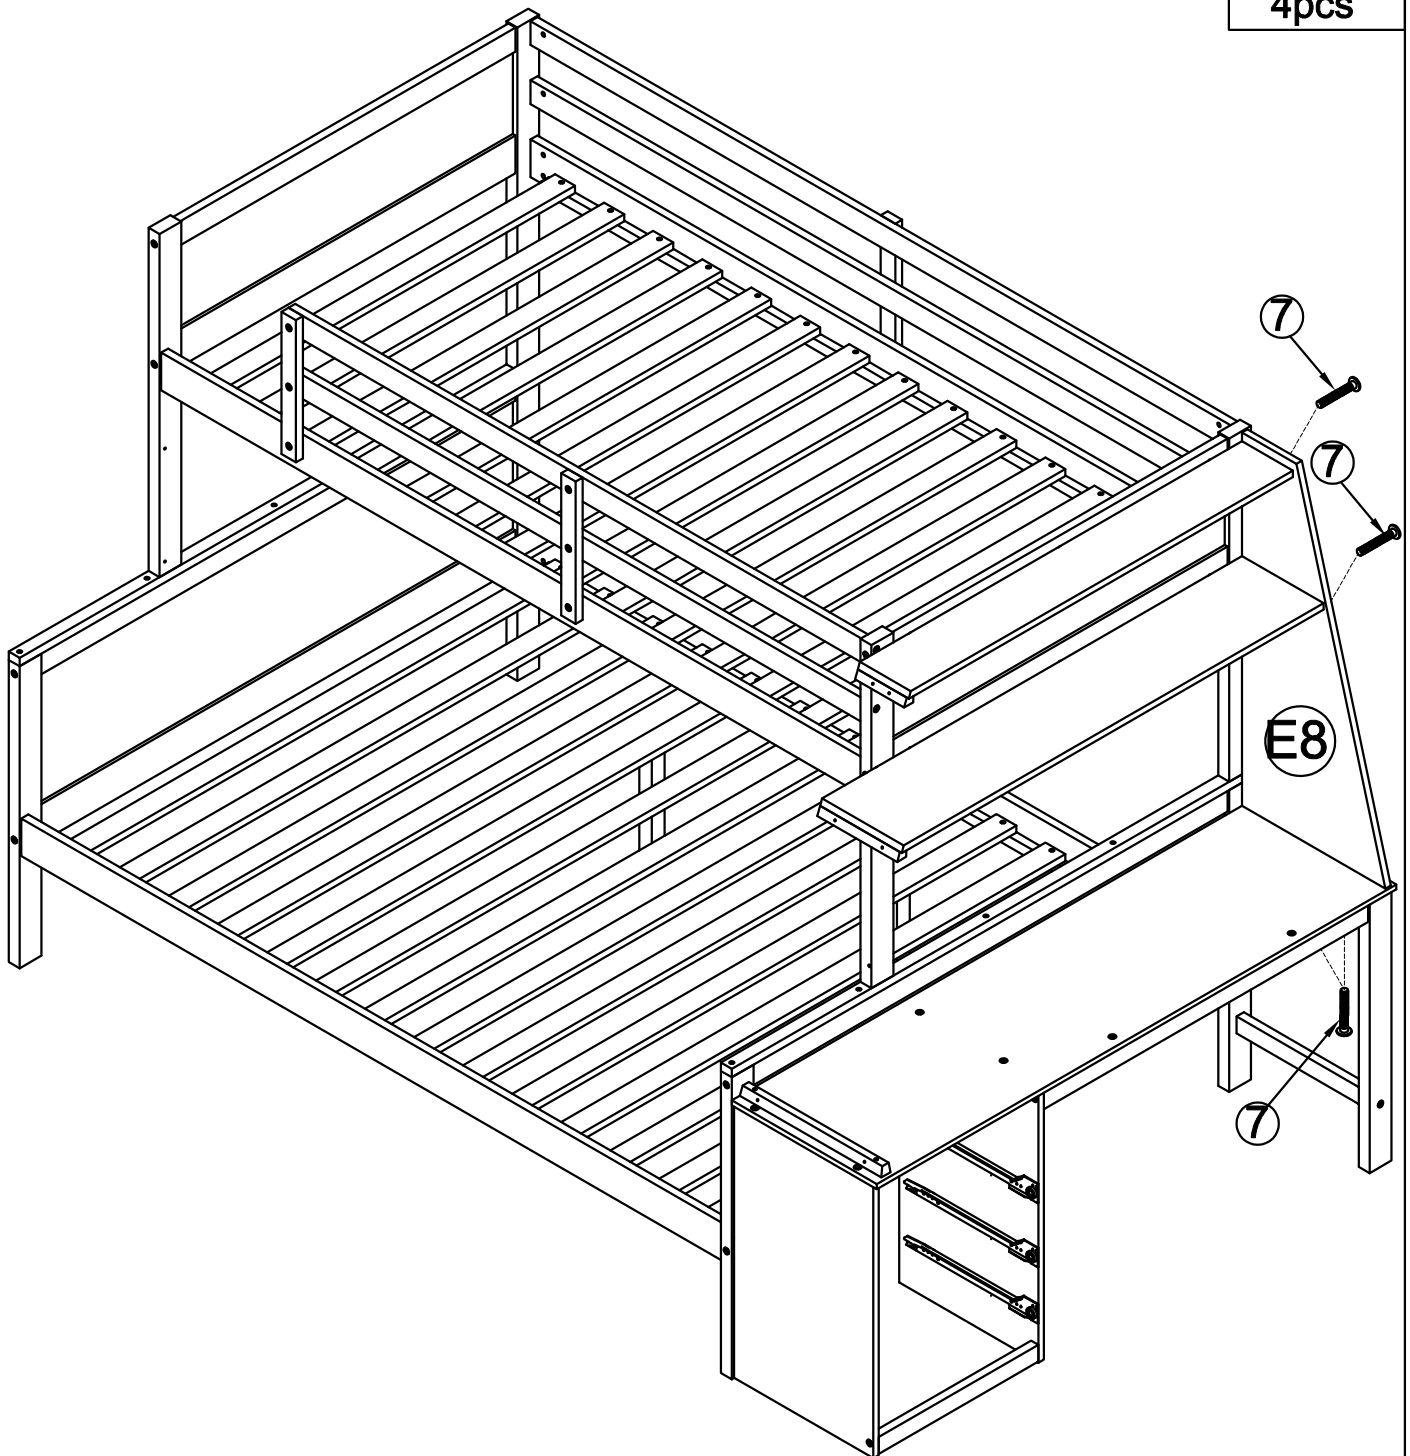


## STEP 16: Following below illustration:

-Using hardware #2 to Assembly Frame (Completed on step 15) with F1 Panel

2



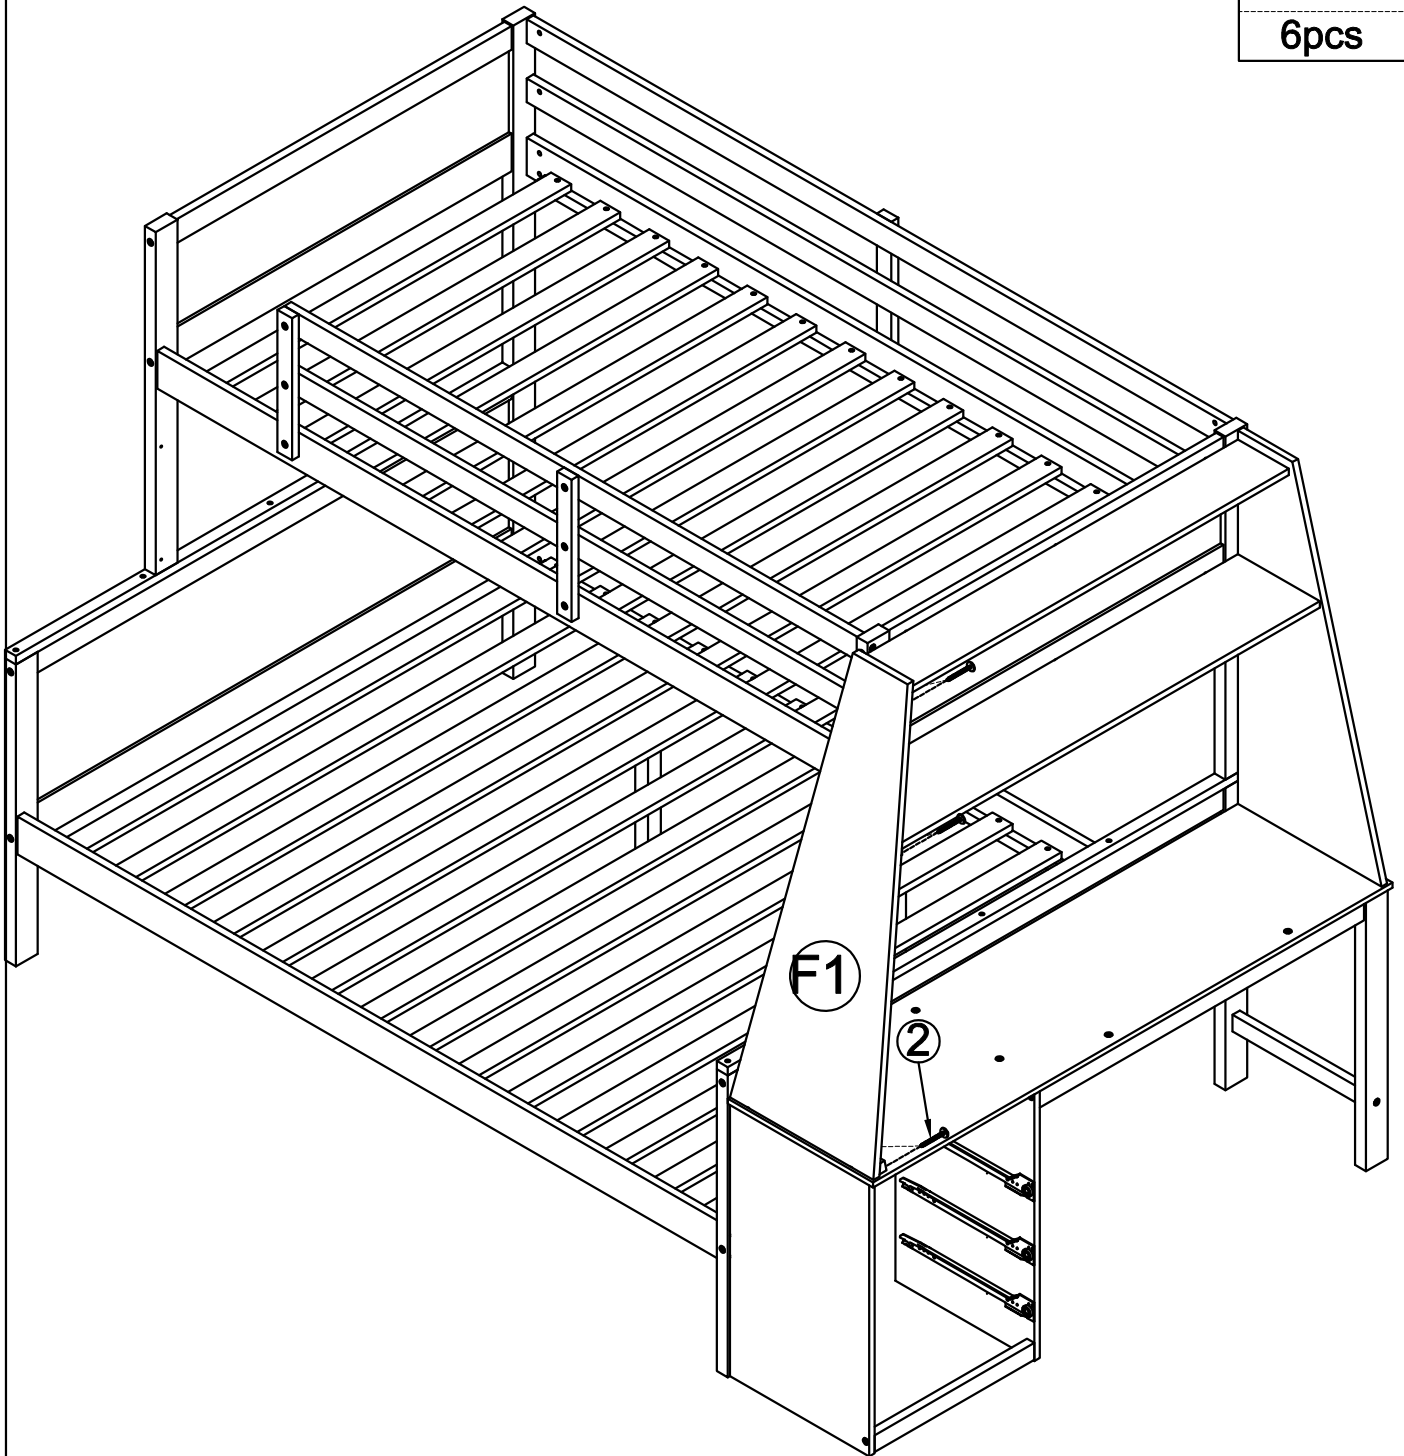

6pcs







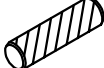
## STEP 17: Following below illustration:


-Using hardware #16 and Dowel 15 to Assembly Frame (Completed on step 16) with E9 Panel

15		16	
	1pc		5pcs

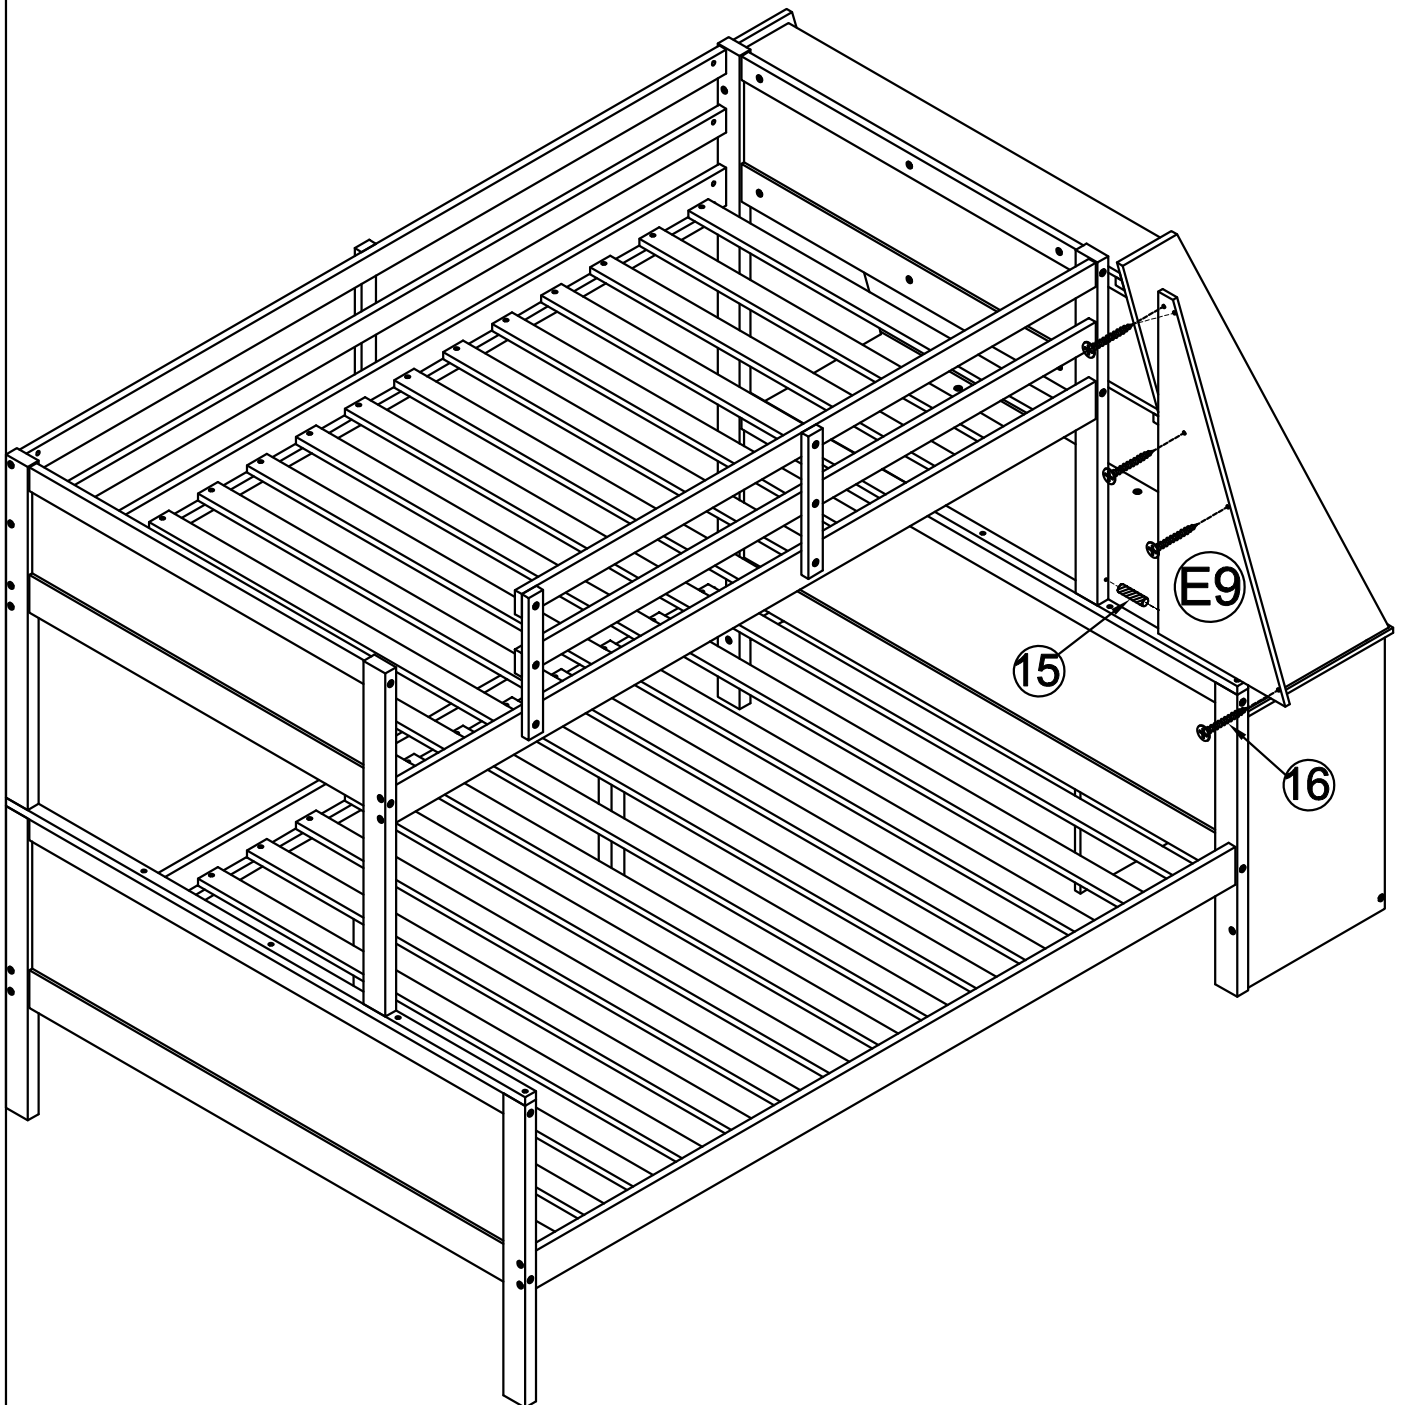



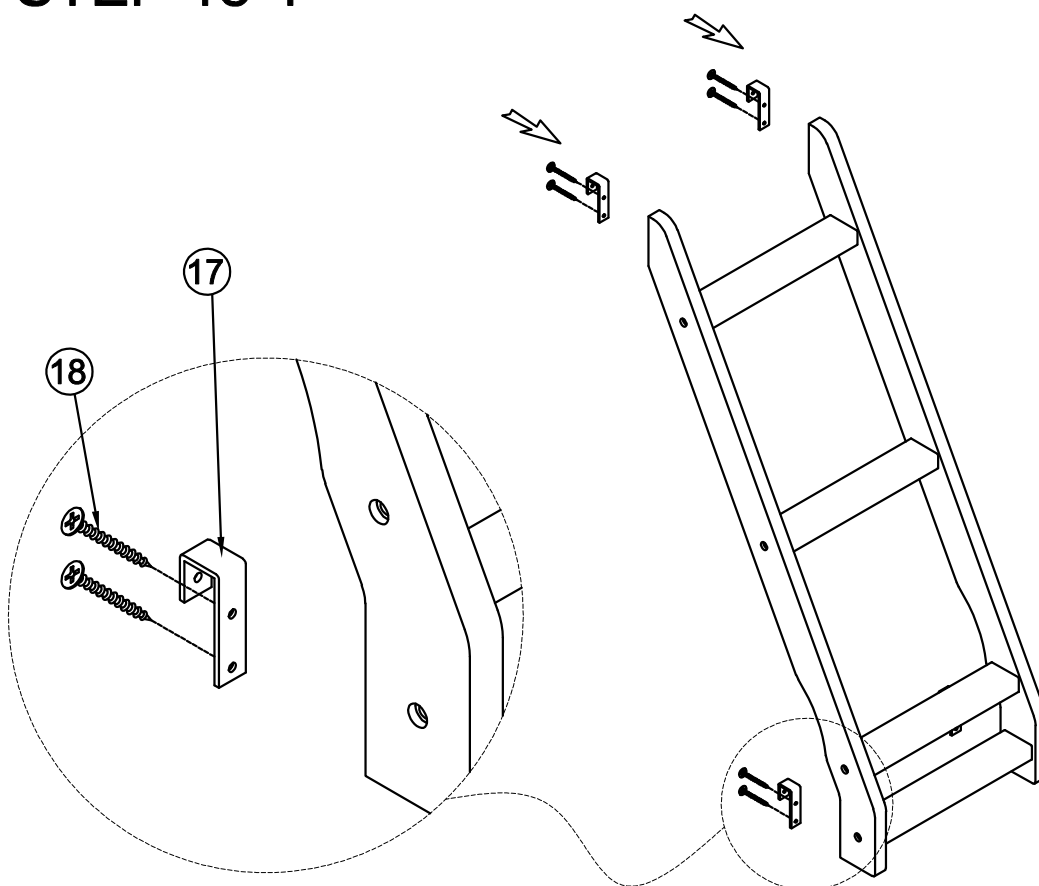
## STEP 18-1

12	3
	
8pcs	16pcs

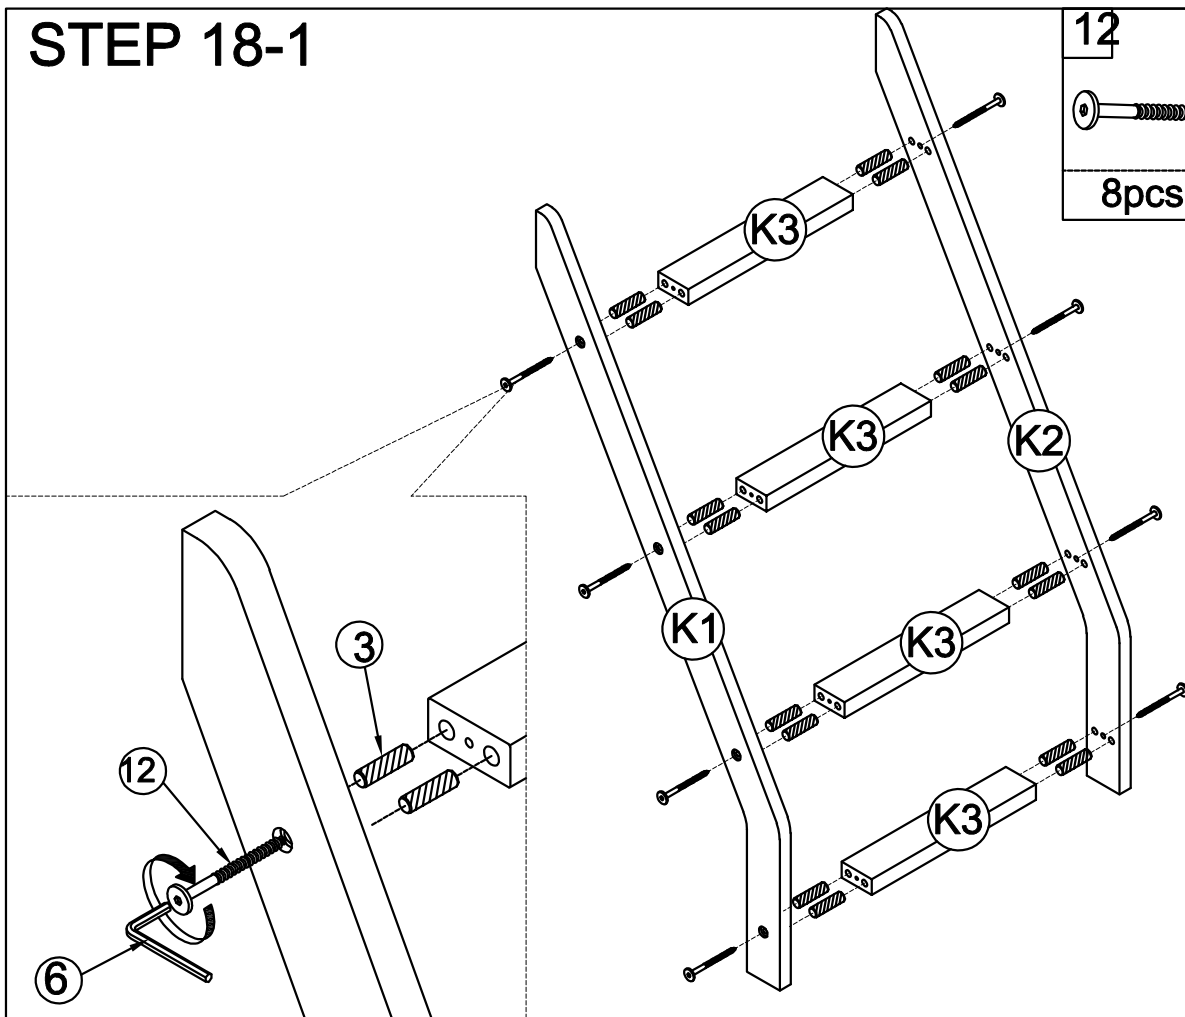

## STEP 18-1

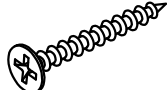
18	17
	
8pcs	4pcs




## STEP 19: Following below illustration:

-Using hardward #16 to Assembly Frame (Completed on step 17) with T1 Panel

16




2pcs

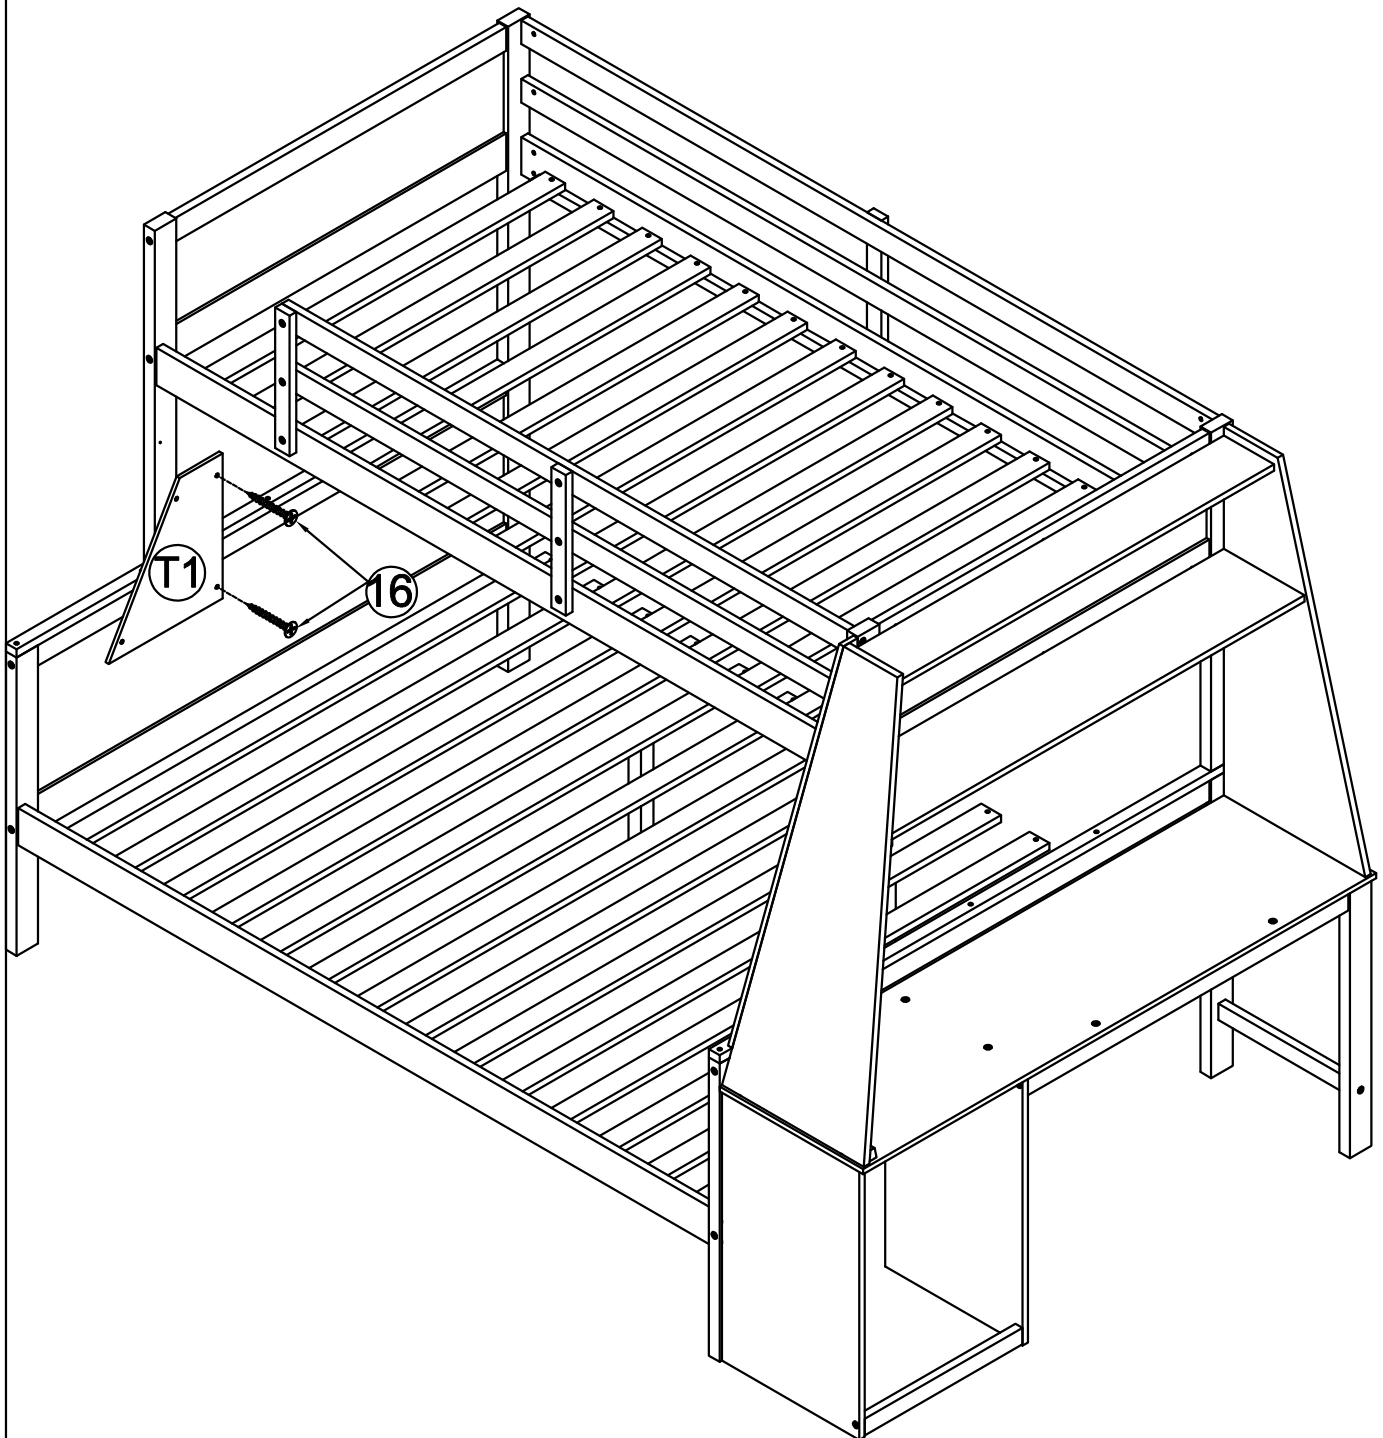

## STEP 20: Following below illustration:


-Using hardware #16,#18 to Assembly Frame (Completed on step 19) with Frame (Completed on step 18-2)

16




2pcs


18



4pcs



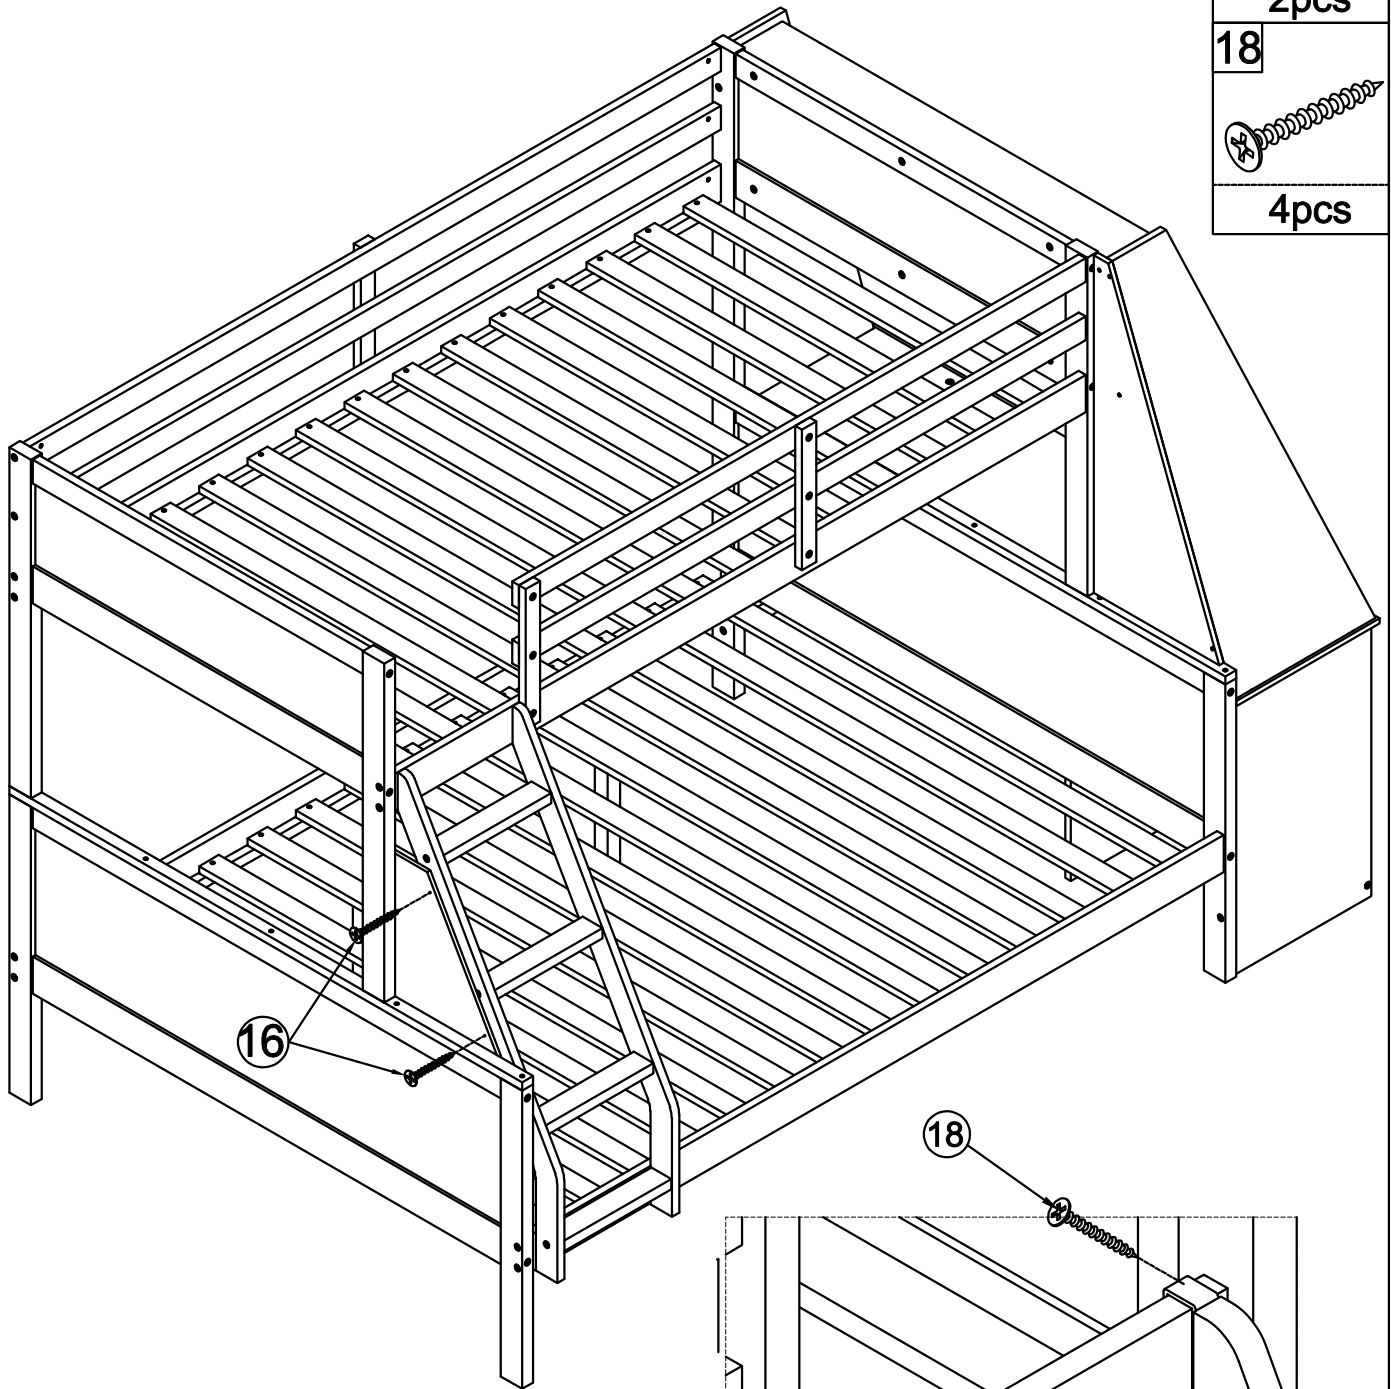


INSIDE VIEW

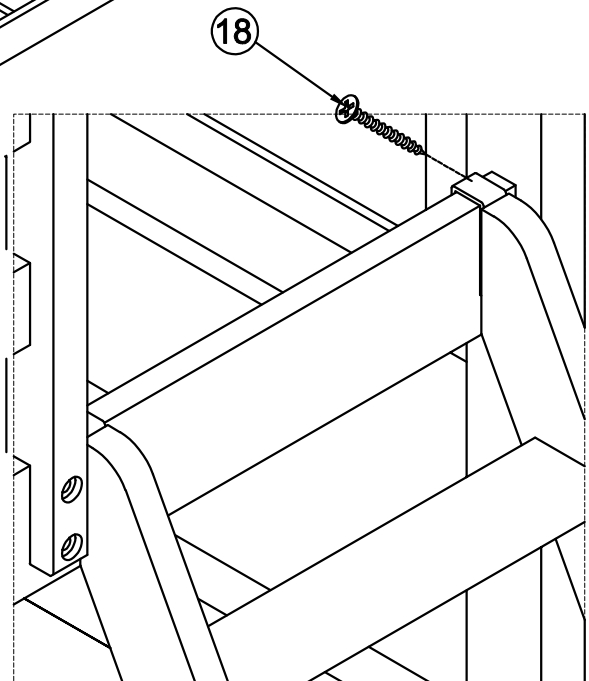

## STEP 21-1: Following below illustration:

-Using hardware #18,#19 to connect With Slats D5(x2)



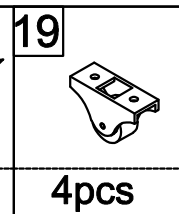
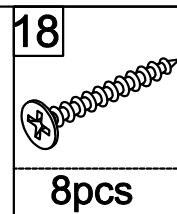
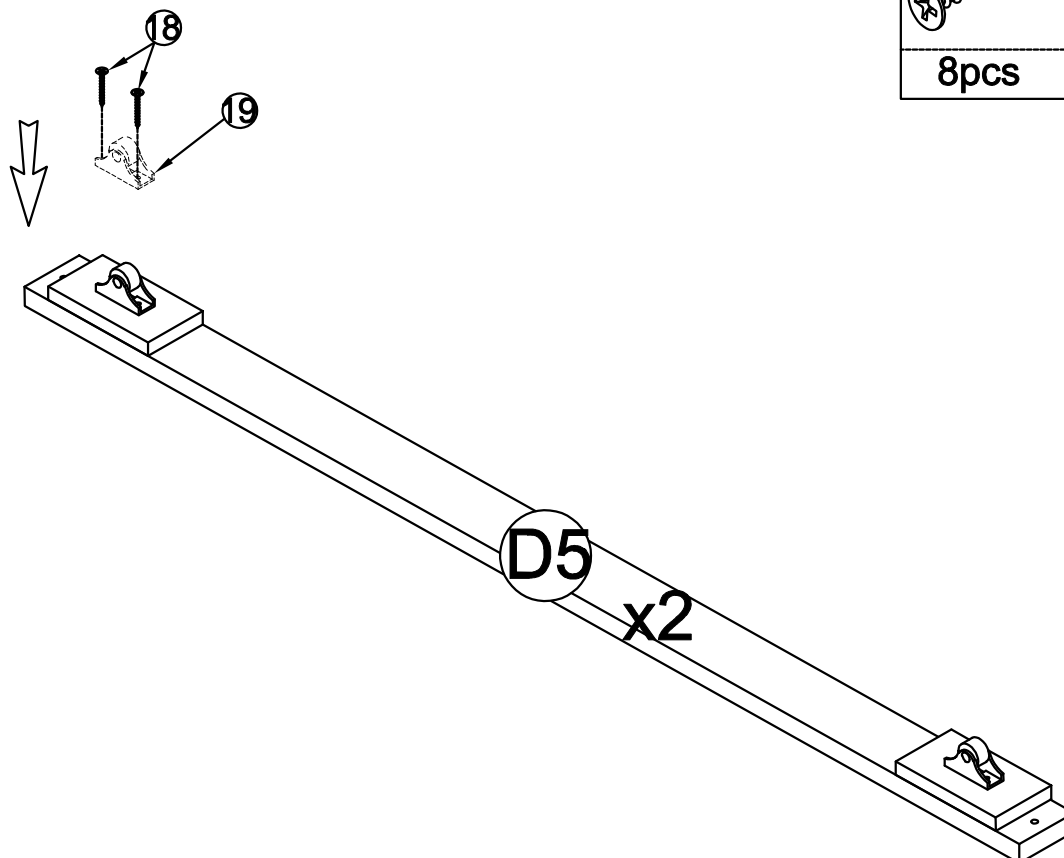


## STEP 21-2: Following below illustration:



-Screw 5 slats D1 and 2 slats D5 with Front Trundle D6 and Back Trundle D7 by using hardware #2.


-Screw Steel Bracket (#20) with Front Trundle(D6) and slats D5,D1 using hardware #18

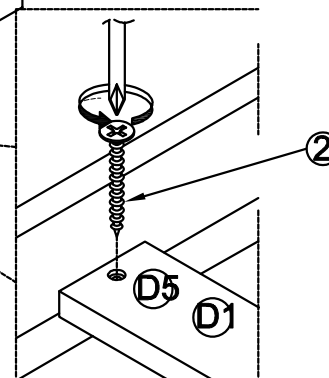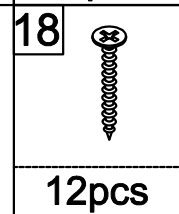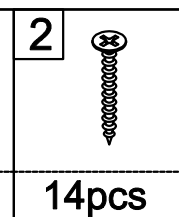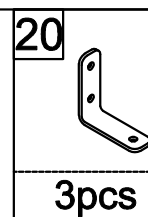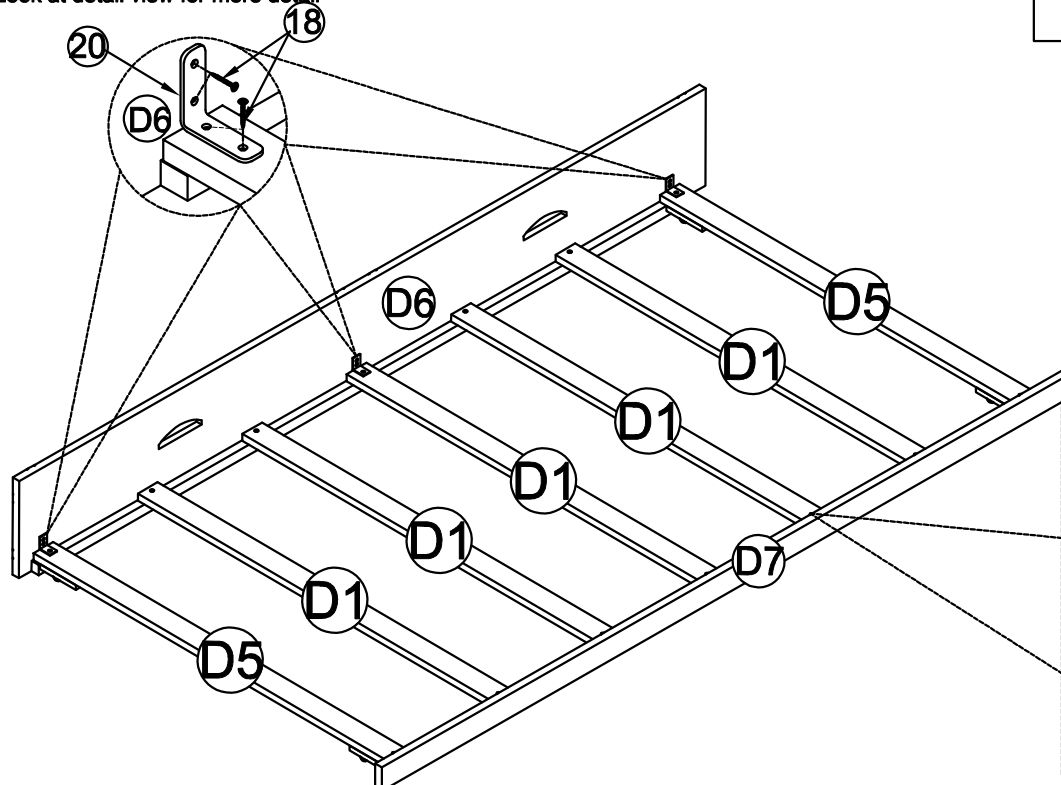-Look at detail view for more detail





STEP 22-1:ASSEMBLY DRAWER

22	21
	
3pcs	3pcs

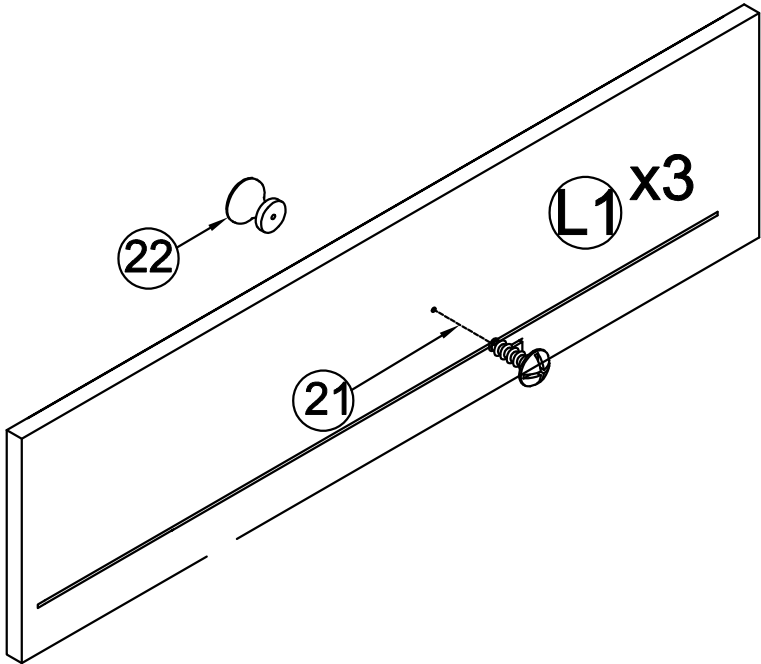


STEP 22-2:ASSEMBLY DRAWER

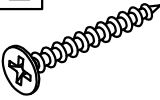2

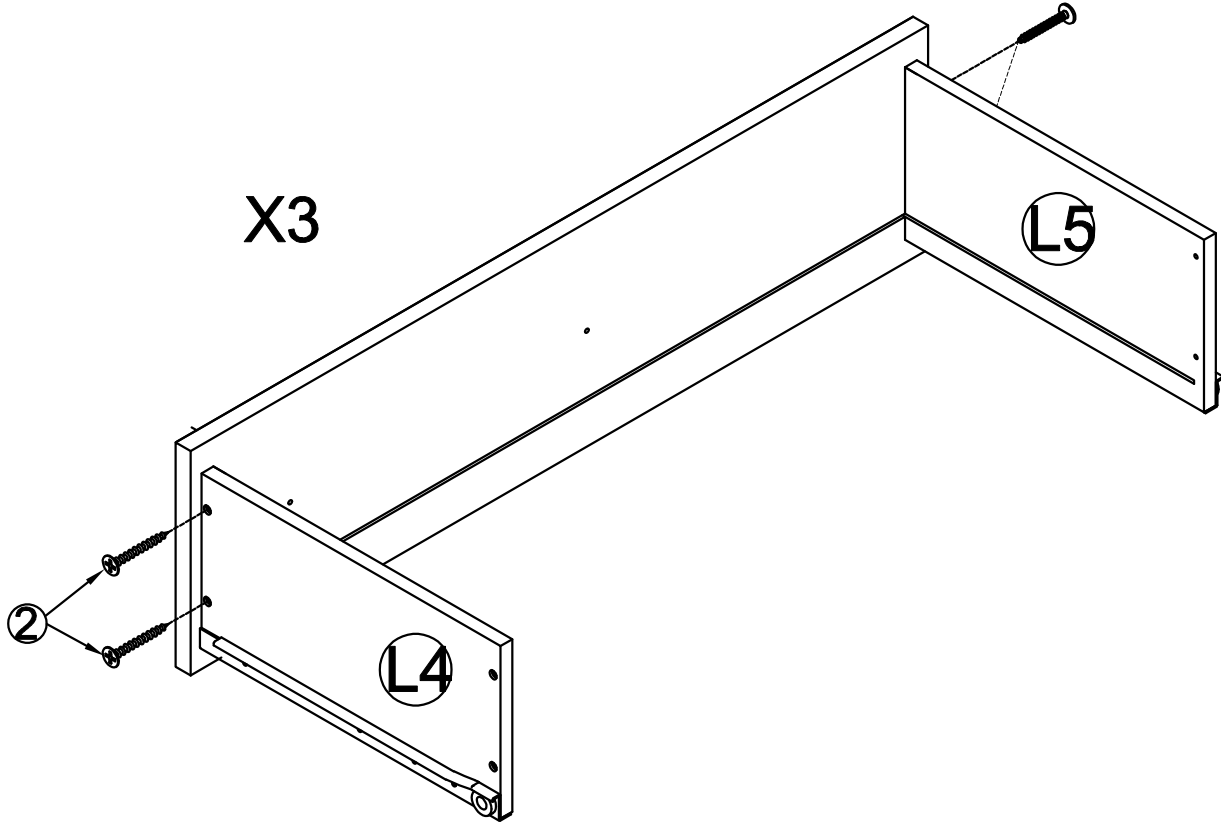4x3pcs




## STEP 22-3:ASSEMBLY DRAWER

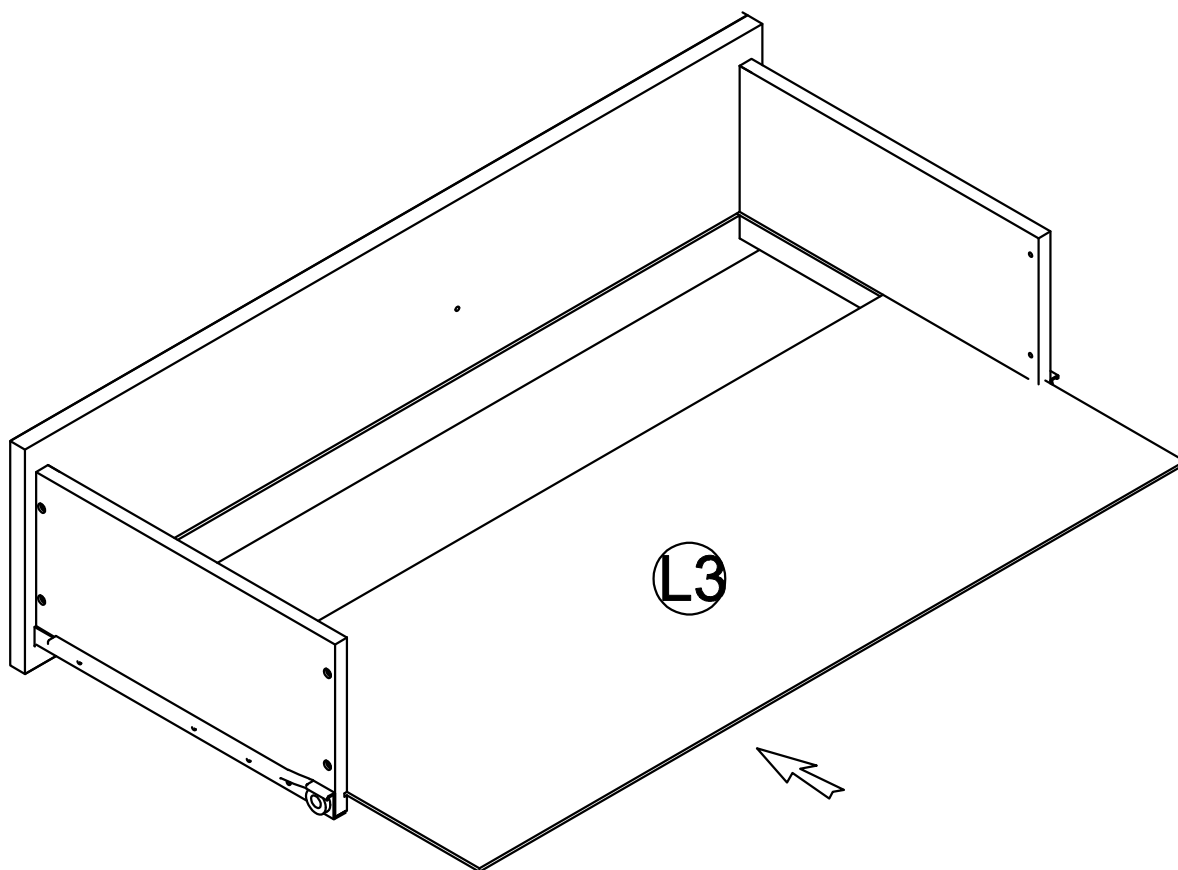X3




## STEP 22-4:ASSEMBLY DRAWER

X3

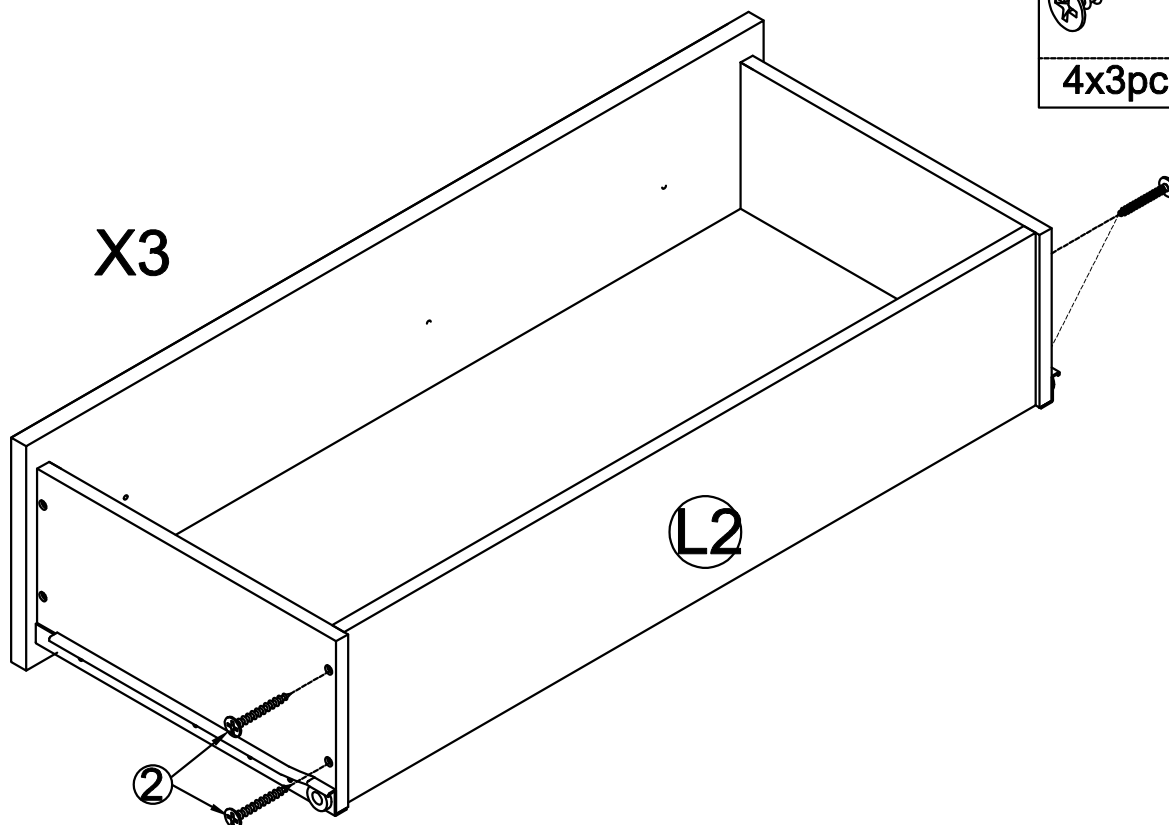

2



4x3pcs

## STEP 23: CONGRARULATION. YOU HAVE COMPLETED THE BED.

Push 3 drawer and trundle into it position

