

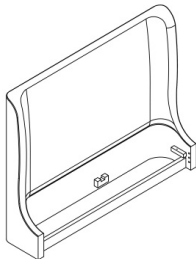
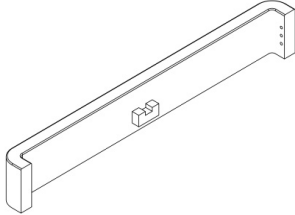


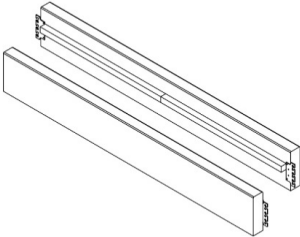
ASSEMBLY INSTRUCTION

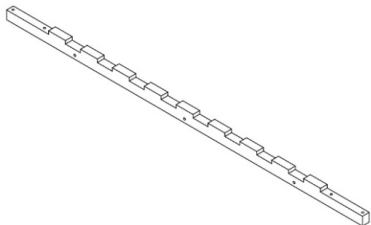

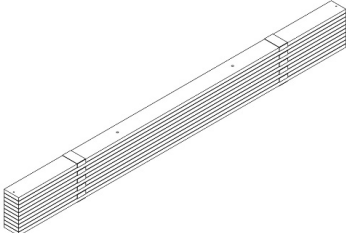

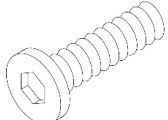




SUNPAN

Sunpan Product Name: **TIERRA BED - QUEEN**

Please visit our website www.sunpan.com for more great products

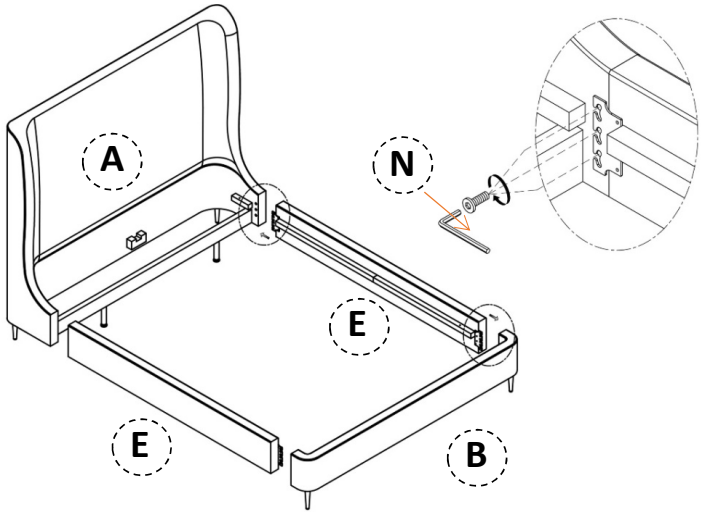
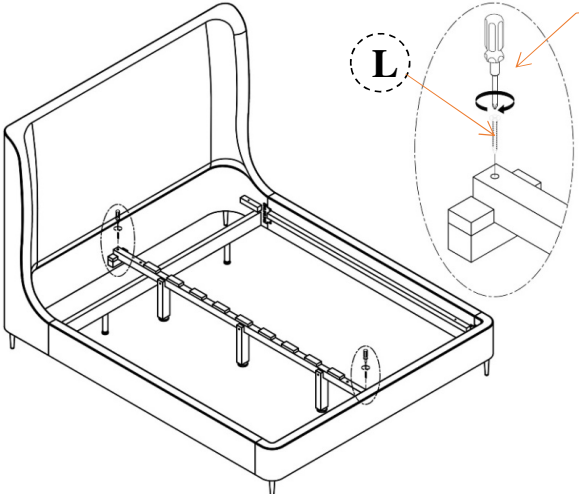
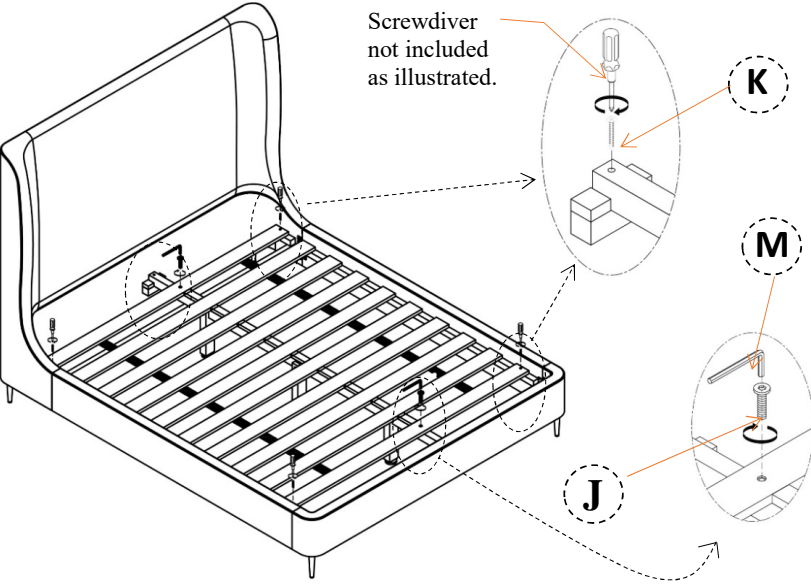
For assembly questions please call **1-800-787-1019 (or +1-416-736-0094)** outside North America or email to info@sunpan.com

PARTS LIST			
Before you begin, please layout all parts and ensure you have the correct count.			
PARTS	DESCRIPTION	QUANTITY	ILLUSTRATION
A	Headboard	1	
B	Footboard	1	
C	Round Wooden Legs Support	2	
D	Metal Legs	4	
E	Side Rails	2	

F	Center Rails	1	
G	Center Legs	3	
H	Slats	10	
I	Bolts (6*20)	16	
J	Bolts (8*35)	5	
K	Screws (4*30mm)	4	
L	Screws (4*50mm)	2	
M	Allen Key M4	1	
N	Allen Key M5	1	

ASSEMBLY INSTRUCTIONS

STEPS	DESCRIPTION	ILLUSTRATION
1	<p>Attach the Round Wooden Legs (C) to Headboard (A) by turning to tighten all.</p> <p>Attach Metal Legs (D) to the Headboard (A) with Bolt (I) using Allen Key M4 (M).</p>	
2	<p>Attach Metal Legs (D) to the Footboard (B) with Bolt (I) using Allen Key M4 (M).</p>	
3	<p>Secure Center Legs (G) to the Center Rail (F) with Bolts (J) attached on Center rail (F) using Allenkey M4 (M).</p>	

<p>4</p>	<p>Attach siderails (E) to Headboard (A) and Footboard (B) by inserting the hook hardware on the Siderail (E) to the bolts attached on Headboard and Footboard using Allen Key M5 (N) to tighten all bolts.</p>	
<p>5</p>	<p>Attach the assembled Center rail (F) and Center legs (G) to Headboard (A) and Footboard (B) with Screw (L) using Screwdriver.</p>	 <p>Screwdriver not included as illustrated.</p>
<p>6</p>	<p>Place the Slats on the bed and fit the First and Last Slats (H) to the Side rail (E) with Screw (K) by using Screwdriver.</p> <p>Fit the First and Last Slats (H) to the Center rails (F) with Bolts (J) attached on Center rails (F) by Allen key M4 (M) provided.</p>	 <p>Screwdriver not included as illustrated.</p>

ASSEMBLY TIPS:

- Please check parts and hardware before assembling. Follow each instruction step by step.
- Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.
- Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.
- Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement.
Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive exposure to sunlight may cause fading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.