ASSEMBLY INSTRUCTIONS



WARNING!

ITEM NO.: BD-8006

REVISED MAR 20, 2020

Serious or fatal injuries can occur from furniture tip over. Use tip over restraint (provided) to secure this product to the wall.

Description Item No.	: BROKLYN 6 DRAWER DRESSER : BD-8006
nem no.	

- 1 -

BEFORE ASSEMBLY


Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

WARNING:

Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your product. Protect the surface of the product with cloth if you are using any product with rubber feet or base.

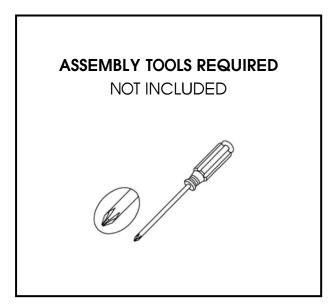

PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Тор	1		В	Bottom frame	1	
с	Vertical panel	1		D	Side panel (L-R)	2	
E	Back rail	1		F	Back panel	2	
G	Support leg	1		н	Drawer side (L-R)	12	
I	Drawer front	6	· · · · · · · · · · · · · · · · · · ·	J	Drawer back	6	
к	Drawer bottom	6		М	Support bar	6	

ITEM NO.: BD-8006 REVISED MAR 20, 2020 Printed in Vietnam

- 3 -

HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6 x 30mm)	14			Wooden knob (Ф30 x 30mm)	12	\bigcirc
2	Spring Washer (Ф6.5 x 11mm)	14	Ø	7	METAL KNOB (430 x 25mm) GOES WITH FINISHED ITEM ONLY.	12	\bigcirc
3	Flat Washer (Ф6.5 x 13mm)	14	\bigcirc	8	Short Screw (M4 x 30mm)	12	<u></u>
4	Allen key (M4 x 30mm x 110mm)	1		9	Short Pan head screw (M4 x 15mm)	2	(+++++
5	Long Screw (M4 x 35mm)	75		10	Long Pan head screw (M4 x 50mm)	2	(++++++++++++++++++++++++++++++++++++++
6	Medium Pan head screw "Metal knob: (M4x22mm) "Wooden knob: (M4x25mm)	12	Dooppoor	11	Steel Tip Bracket	4	00
				12	Flat Nylon Tie	2	\bigcirc

NOTE: WARNING LABEL (INCLUDED)


A WARNING



west drawers. This is a permanent label. Do not remove!

ITEM NO.: BD-8006 REVISED MAR 20, 2020


Attach side panel (D) and vertical panel (C) to top (A) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (4).

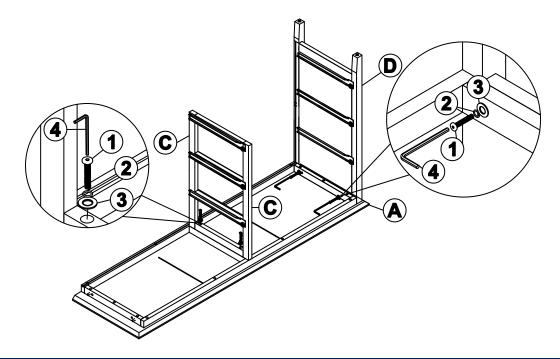

STEP 2


Attach bottom frame (B) to side panel (D) and vertical panel (C) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (4).

Slide back panels (F) and back rail (E) into the grooves as shown below.

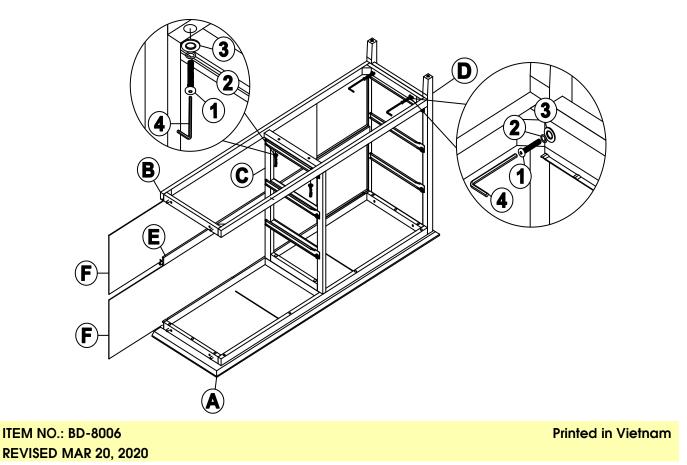


Attach the other side panel (D) to top (A) and bottom frame (B) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (4).

Attach support leg (G) to bottom frame (B) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (4).

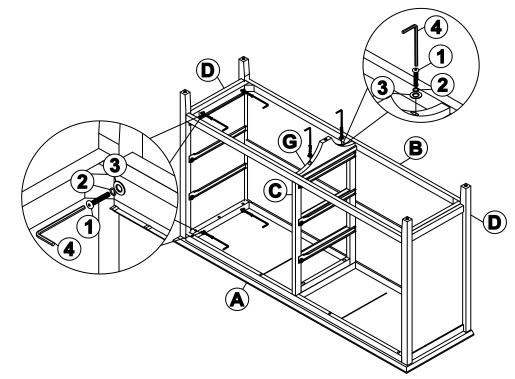


STEP 4

Attach back rail (E) to the unit with screws (5) as shown below .Tighten with a screwdriver.

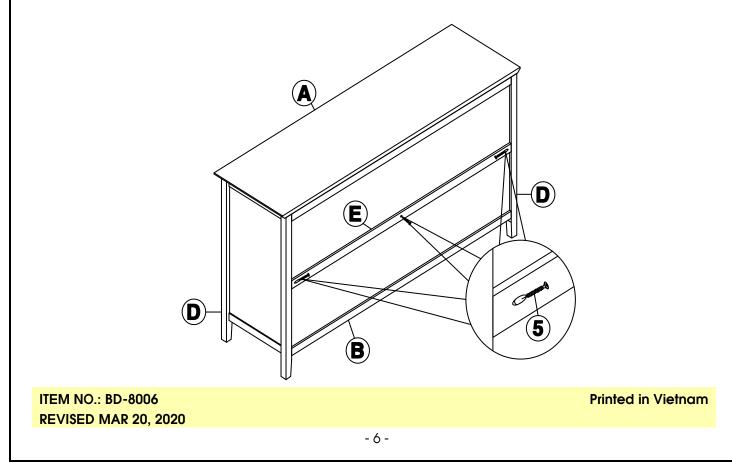


Attach drawer sides (H) to drawer front (I) with screws (5) as shown below. Tighten with a screwdriver. Insert drawer bottom (K) into the grooves at bottom of drawer sides (H) and drawer front (I) as shown below.

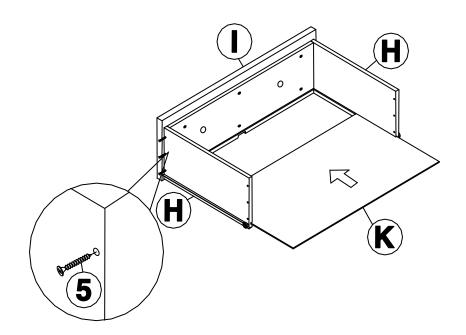


STEP 6

Attach drawer back (J) to drawer sides (H) with screws (5) as shown below. Tighten with a screwdriver.

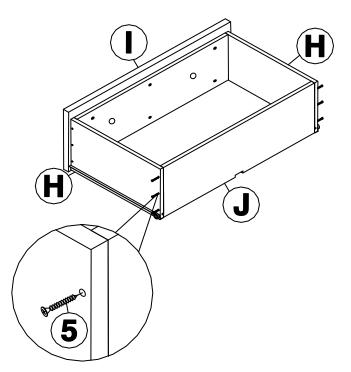


ITEM NO.: BD-8006 REVISED MAR 20, 2020

Attach support bars (M) to bottom of drawers with screws (8) as shown below. Tighten with a screwdriver.

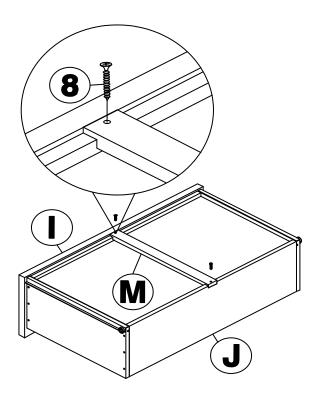

STEP 8

Attach knobs (7) to front of drawers with pan head screws (6) as shown below. Tighten with a screwdriver. Carefully put the drawers into the unit.

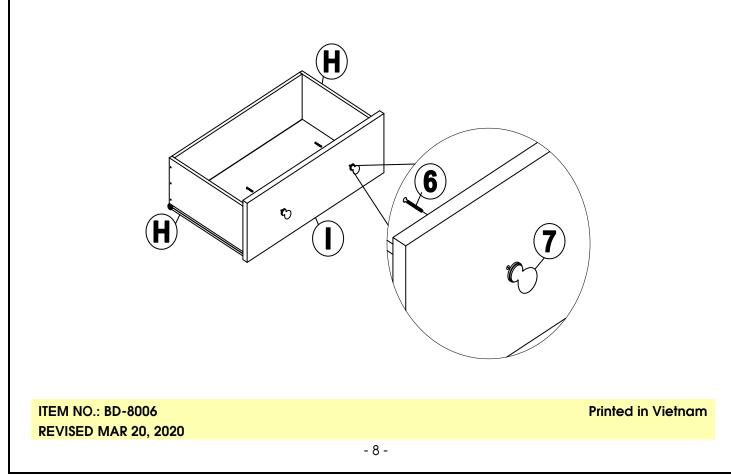

Attach brackets (11) to the back of the unit with screws (9) through the smaller holes in the brackets as shown below.

Important!

Properly attach the other brackets (11) to the wall in an area of *drywall or plaster with a wood stud:* Mark the attachment point(s) with a pencil at the appropriate height **positioned over the wood stud(s) in the wall**.

Place the unit into position so both mounting brackets are vertically in line.

Adjust the levelers to the appropriate height to level the unit.

Properly attach the other brackets (11) to the wall stud with screws (10) through the smaller holes as shown below.

Lace the end of flat nylon ties (12) through the larger holes in each mounting bracket. Bring both ends together and slide the flat ends through the locking ends and draw it through until all slack is removed.

Confirm that the strap is securely laced and locked.

