
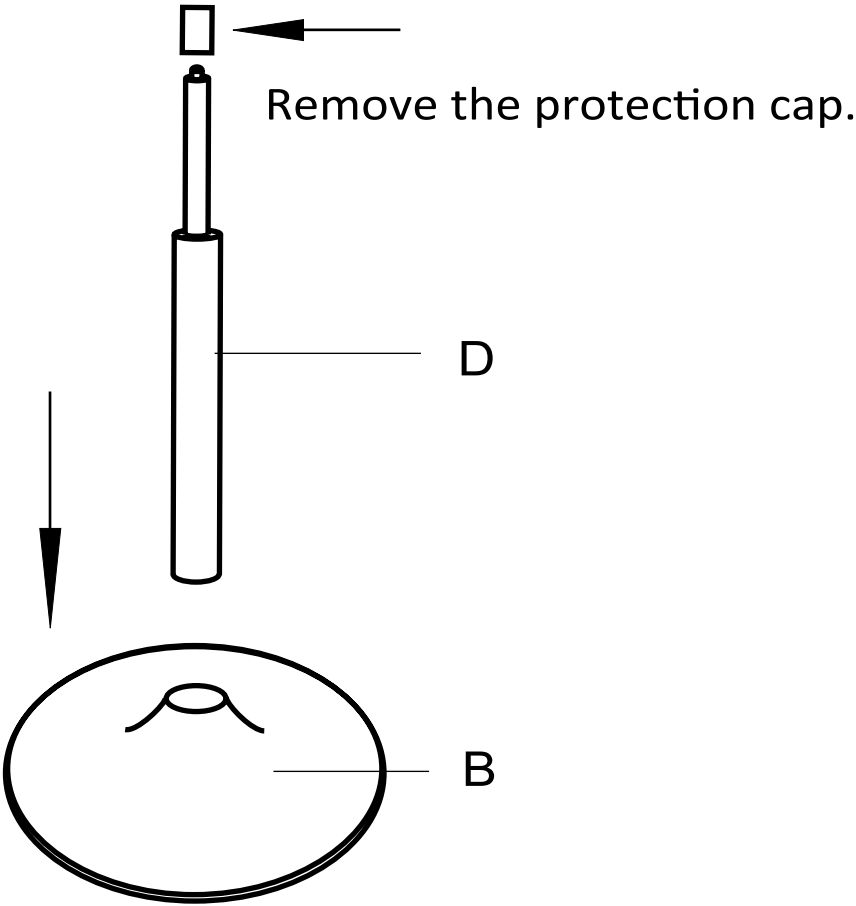


ASSEMBLY INSTRUCTION



Step 1

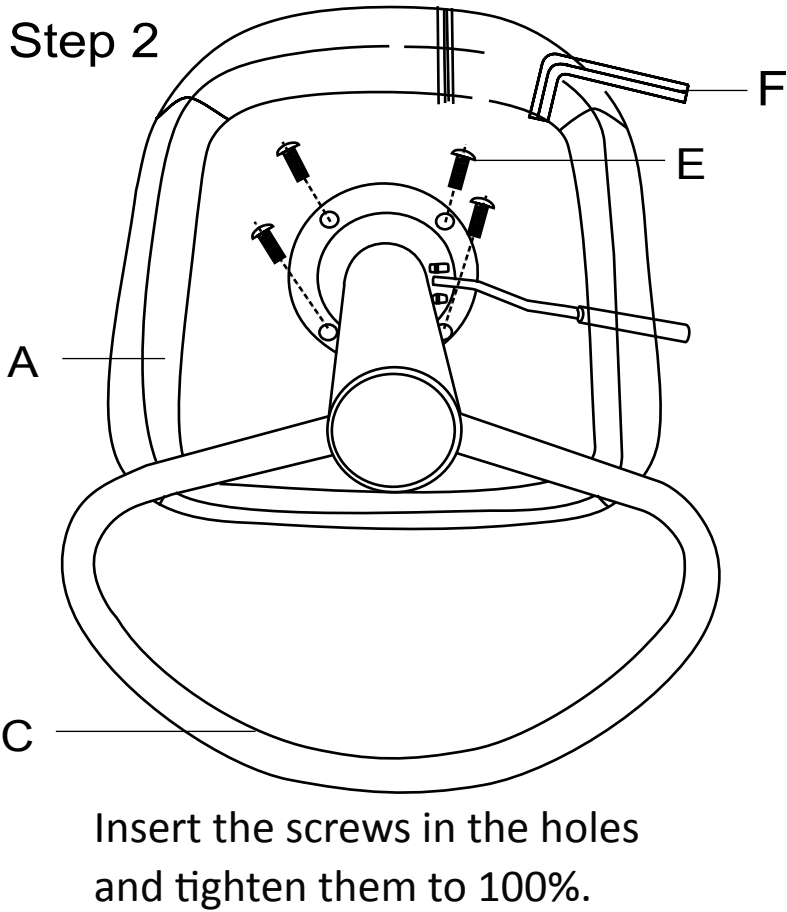




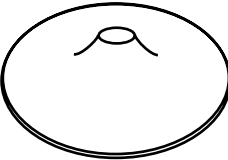


Step 2

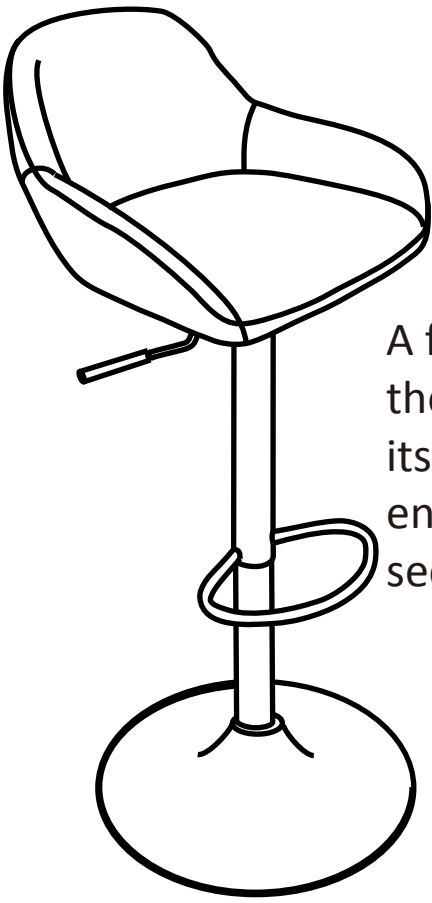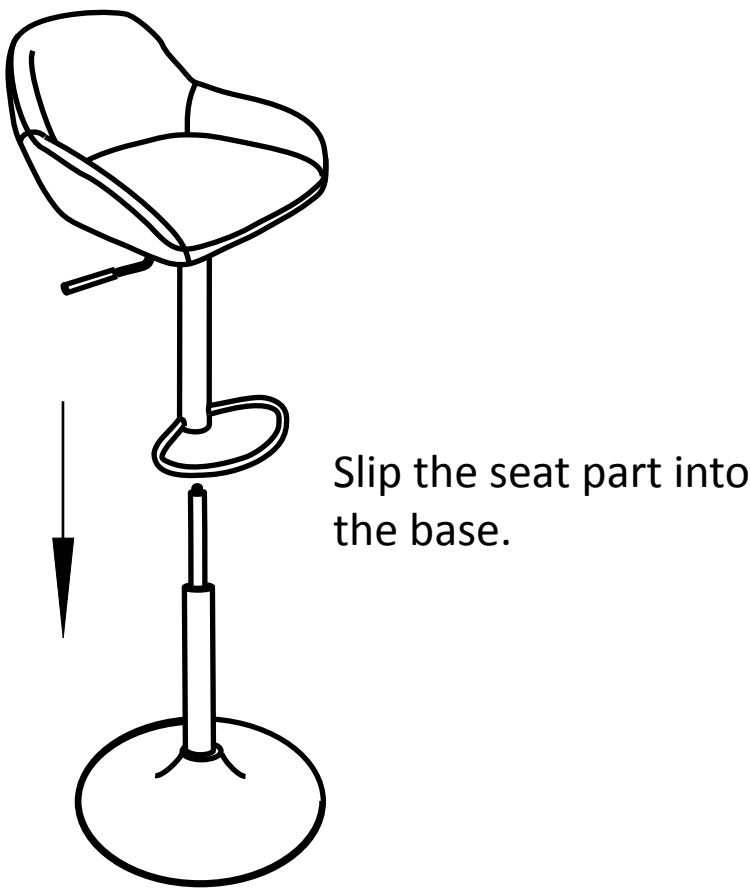

Step 3

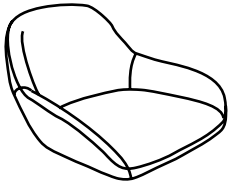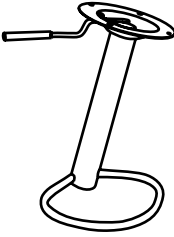

A few days after initial assembly, the product may acclimate to its new environment. Please ensure all screws are still securely tightened.

HARDWARE LIST	CODE	PARTS	QTY.	CODE	PARTS	QTY.	CODE	PARTS	QTY.
	A		1	C		1	F	 M6	1
	B		1	D		1			
				E	 M6 X 16MM	4			

Get social with us and discover more about our products, tips and exclusive discounts!

