


# ASSEMBLY INSTRUCTION


## MODEL: #21/22-DINING CHAIR

DO NOT FULLY TIGHTEN BOLTS UNTIL THE ENTIRE ITEM IS COMPLETELY ASSEMBLED


**A=1PC**

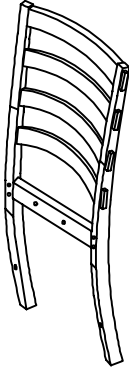


**B=1PCS**

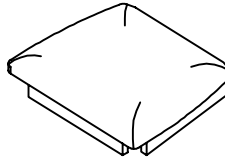





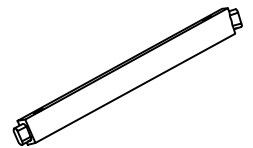


**C=2PCS**




**D=2PCS**




No.	Description.		Q.Ty
1	BOLT Ø 5/16" x 38mm		02 Pcs
2	BOLT Ø 5/16" x 75mm		04 Pcs
3	BOLT Ø 5/16" x 50mm		04 Pcs
4	FLAT WASHER		10 Pcs
5	SPRING WASHER		10 Pcs
6	ALLEY KEY		1 Pcs
7	SCREW Ø1/6" x 42mm		4 Pcs

### STEP 1

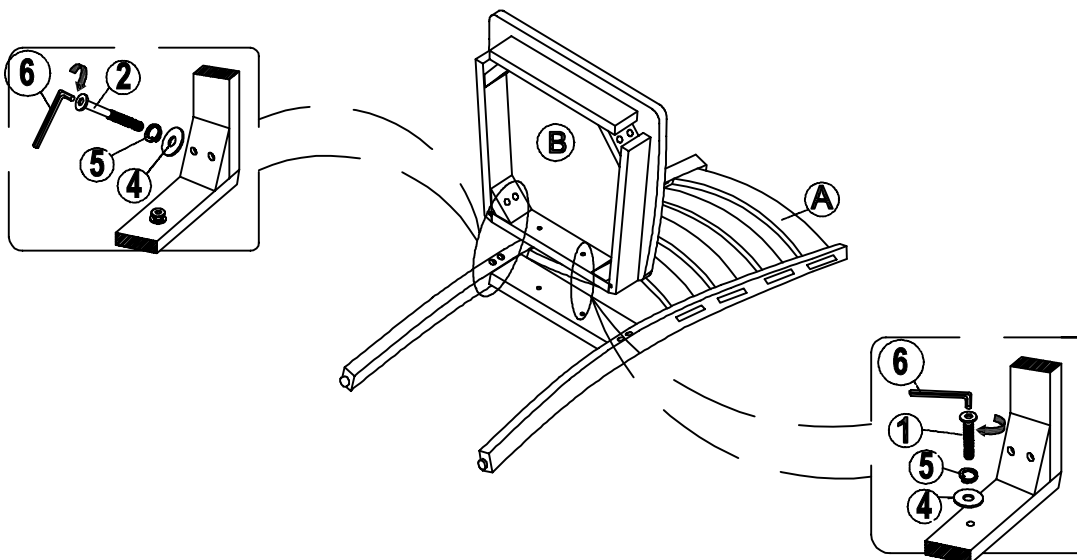

**STEP 2**

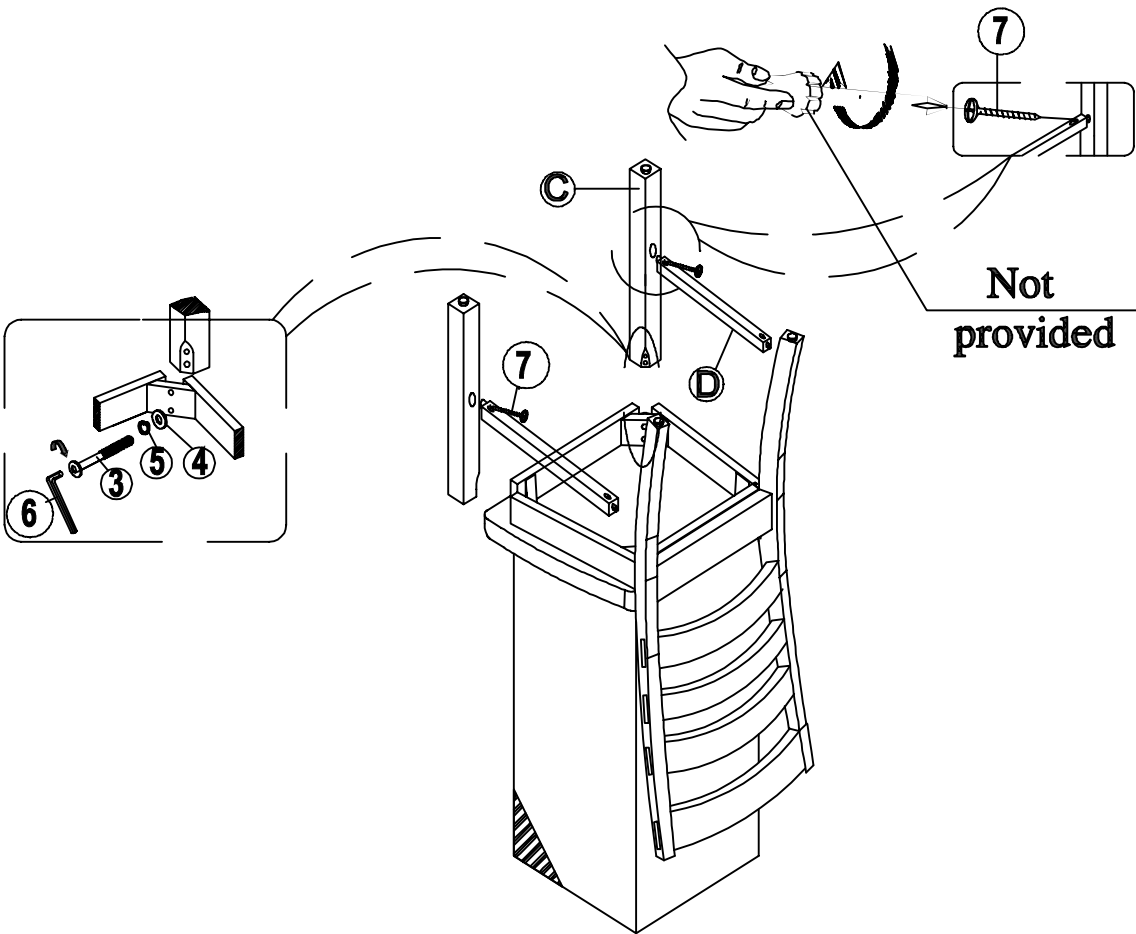

**COMPLETTELY**

