


7. Parts Breakdown

FIGURE 7

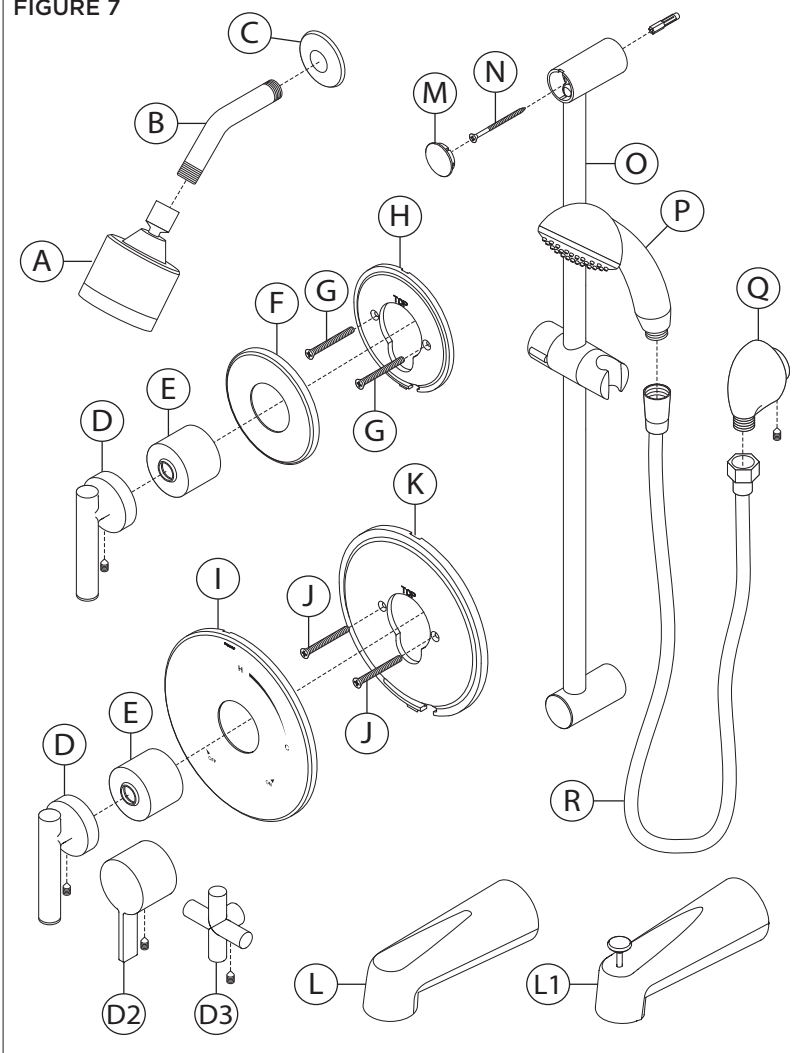

*Order in-line vacuum breaker (EF-109) for hand shower systems without dual checks.

Replacement Parts		
Item	Description	Part Number
A	Showerhead	352SH
B	Shower Arm	300S
C	Flange	
D	Standard Handle	T-242A
D1	Blade Handle	RTS-090
D2	Cross Handle	RTS-091
E	Dome Cover	T-19/20
F	Diverter Escutcheon	T-416A
G	Screws	
H	Mounting Plate	
I	Shower Escutcheon	Brass: RTS-009 Plastic: RTS-010
J	Screws	
K	Mounting Plate	
L	Tub Spout	067
L1	Diverter Tub Spout	352TS
M	Slide Bar Assembly	RA-009
N		
O		
P	Hand Shower	EF-100
Q	Wall Elbow	EF-105
R	60" Hose	RTS-045

Notes:

- 1) Append appropriate suffix for premium finish.
- 2) Append appropriate flow rate to showerhead or hand shower for low flow.
- 3) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall. Leave opening on bottom of escutcheons for weep hole.
- 4) Apply plumber tape to all threaded connections.