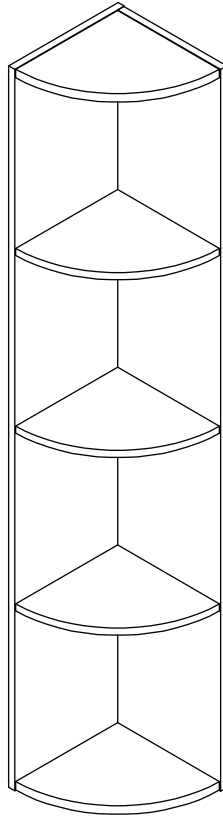


ASSEMBLY INSTRUCTIONS

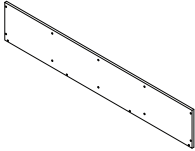
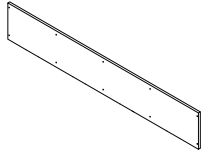










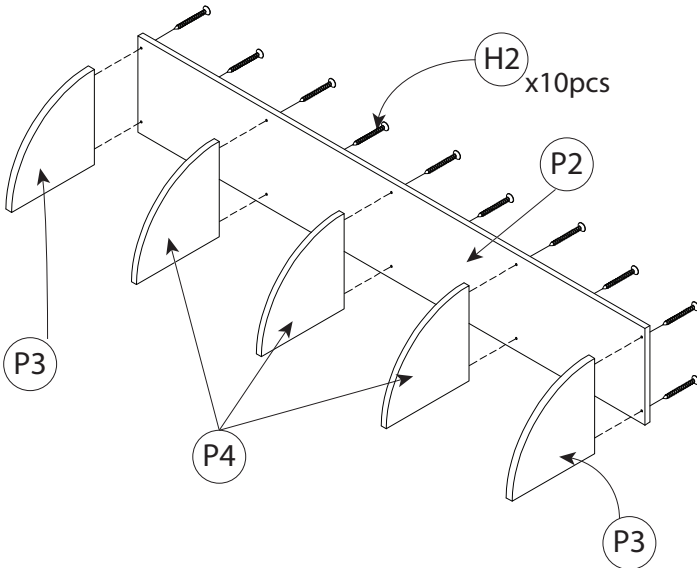
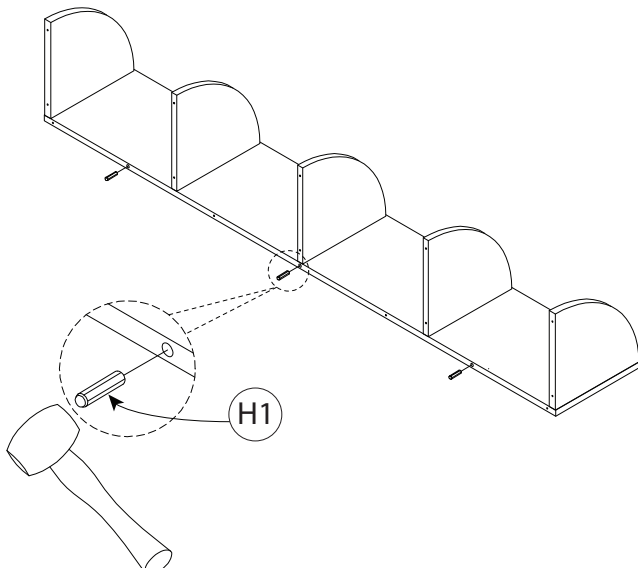
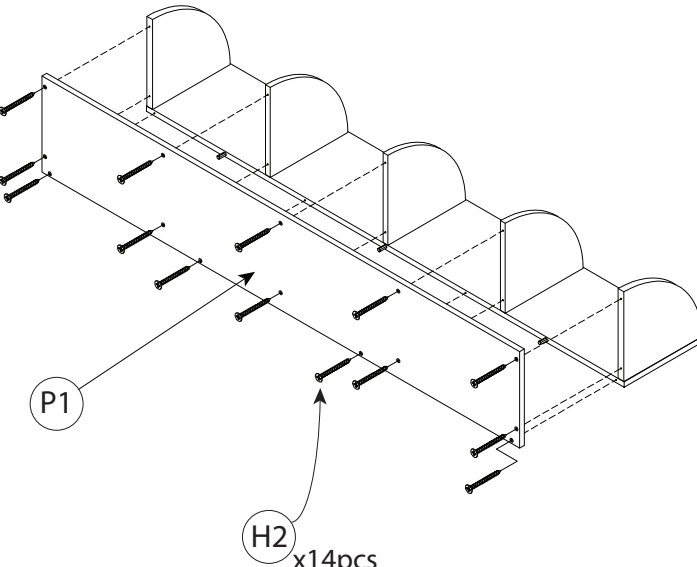
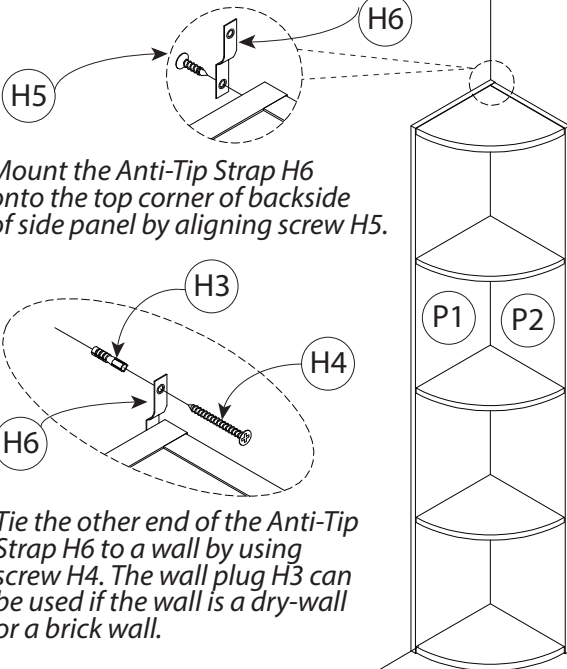
CORNER SHELVING UNIT



NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION				
<div>P1</div> <div>Quantity: 1</div> <div></div> <div>Side Panel Left</div>	<div>P2</div> <div>Quantity: 1</div> <div></div> <div>Side Panel Right</div>	<div>P3</div> <div>Quantity: 2</div> <div></div> <div>Top & Bottom Panels</div>	<div>P4</div> <div>Quantity: 3</div> <div></div> <div>Shelving Panels</div>	
HARDWARE LIST				
<div>H1</div> <div>Wooden Dowel m8 x 25mm</div> <div></div> <div>Quantity: 3 pcs</div>	<div>H2</div> <div>Screw #9 x 1 1/2"</div> <div></div> <div>Quantity: 24 pcs</div>	<div>TOOLS REQUIRED</div> <div></div> <div>SCREW DRIVER</div> <div></div> <div>MALLET</div>		
ANTI-TIPPING FITTINGS				
<div>H3</div> <div>Wall Plug</div> <div></div> <div>Quantity: 1 pc</div>	<div>H4</div> <div>Screw #9 x 1 1/2"</div> <div></div> <div>Quantity: 1 pc</div>	<div>H5</div> <div>Screw m3.5 x 12mm</div> <div></div> <div>Quantity: 1 pc</div>	<div>H6</div> <div>Anti-Tip strap</div> <div></div> <div>Quantity: 1 pc</div>	
<div>STEP 1</div> <div></div>		<div>STEP 2</div> <div></div>		
<div>STEP 3</div> <div></div>		<div>STEP 4 Assemble Anti-Tip Fittings</div> <div></div> <div>Mount the Anti-Tip Strap H6 onto the top corner of backside of side panel by aligning screw H5.</div> <div>Tie the other end of the Anti-Tip Strap H6 to a wall by using screw H4. The wall plug H3 can be used if the wall is a dry-wall or a brick wall.</div>		