

Desert Metal Design

Headboard Installation Instructions

*** For video instructions go to www.desertmetaldesign.com and click on installation***

Included:

Headboard
Mounting Screws
Mounting Bracket


Tools Needed

Screwdriver/Drill (preferred)
Measuring tape
Stud Finder (Optional)
Level (Optional)


The provided hardware is intended for mounting the headboard through drywall with wooden studs or backing. If the headboard is being mounted to masonry or drywall with no studs you will need to purchase the appropriate mason/drywall anchoring hardware and follow the installation instructions for that particular anchor system along with our instructions below.

- 1- Measure 26" from the top of the mattress and mark that height. This will be the measurement to the **bottom** of your mounting bracket. Draw a level line the size of your headboard where the bracket will be mounted level.

- 2- Using a stud finder or other means, find the studs in the wall. Mark the studs on the line drawn on the wall. Using the supplied mounting bracket align the brackets holes in order to hit at least two studs and mark with a pencil through the holes. If you cannot hit two studs purchase heavy duty drywall anchors to support the weight.

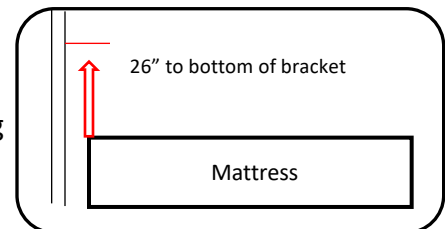

- 3- If possible, have someone hold the headboard up to double check the placement of the headboard before drilling into the wall.
- 4- Use the supplied screws to attach the bracket to the wall at one contact point with the hanging edge facing up.
- 5- Use a level to level the bracket and secure the second point of contact to the wall. If you do not have a level measure equal distances from the mattress and secure.
- 6- Hang the headboard from the half inch tubing welded to the headboard into the 1/2" mounting bracket slot. And you are done!

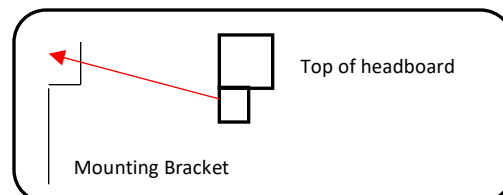

Thank you and enjoy your headboard!

Sincerely,

Desert Metal Design
www.desertmetaldesign.com

*** For video instructions go to www.desertmetaldesign.com and click on installation***

