

## NOTICE

\*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

\*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

\*This item may require periodic tightening.

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.


\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly (included): Allen Key

## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


## Part List

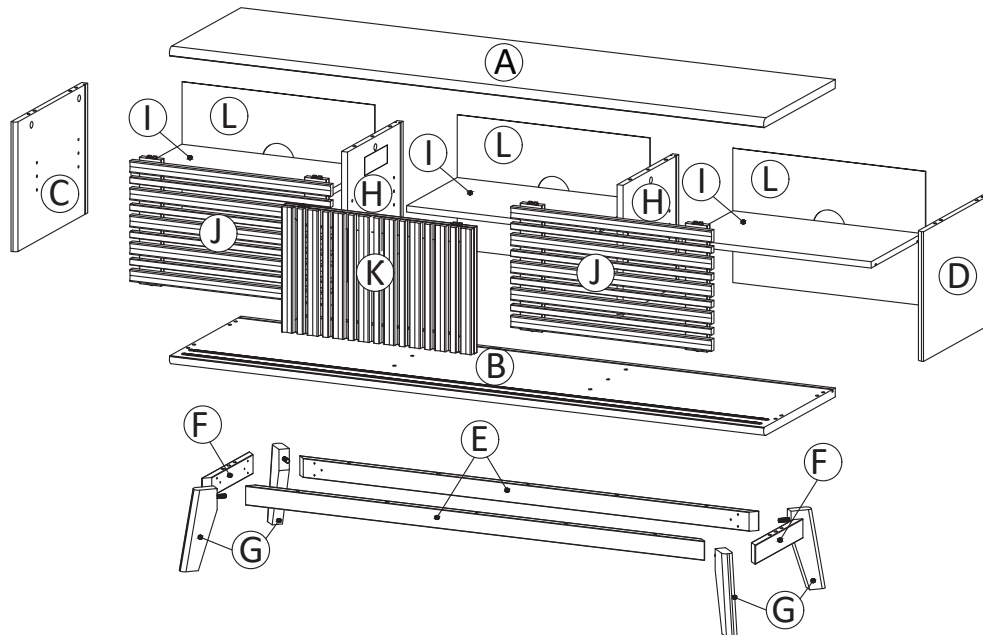

 **SAFAVIEH**  
FURNITURE

**Model# MED9640**

**Product Dimensions: 59"Wx15"Dx21"H**

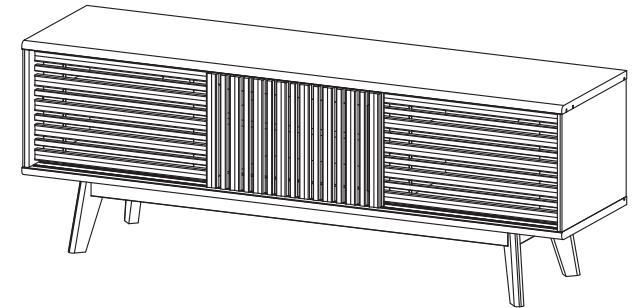






















## WARNING :

**WEIGHT CAPACITY: 82 LBS.**

**Warning : Do not stand on media stand.**

**Warning : Do not over torque bolts.**

Hardware List

<div>HW1x6</div> <div></div> <div>Ø 6 x 35 mm</div>	<div>HW2x6</div> <div></div> <div>Ø 15 mm</div>	<div>HW3x22</div> <div></div> <div>Ø 8 x 30 mm</div>	<div>HW4x6</div> <div></div> <div>M 7 x 50 mm</div>	<div>HW5x10</div> <div></div> <div>M 6.4 x 53 mm</div>
<div>HW6x24</div> <div></div> <div>M 4 x 16 mm</div>	<div>HW7x24</div> <div></div> <div>M 3.5 x 13 mm</div>	<div>HW8x14</div> <div></div> <div>M 6 x 12.5 mm</div>	<div>HW9x12</div> <div></div> <div>M 3.5 x 15.5 mm</div>	<div>HW10x12</div> <div></div> <div></div>
<div>HW11x4</div> <div></div> <div></div>	<div>HW12x12</div> <div></div> <div></div>	<div>HW13x6</div> <div></div> <div>Ø 15 mm</div>	<div>HW14x4</div> <div></div> <div></div>	<div>HW15x1</div> <div></div> <div></div>
<div>HW16x2</div> <div></div> <div></div>	<div>HW17x5</div> <div></div> <div></div>	<div>HW18x6</div> <div></div> <div></div>	<div>HW19x6</div> <div></div> <div></div>	<div>HW BC410x4</div> <div></div> <div></div>
<div>HW US11x1</div> <div></div> <div></div>				

## Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Bottom Skirt 1	2
F	Bottom Skirt 2	2
G	Leg	4
H	Center Board	2
I	Adjustable Shelf	3
J	Door 1	2
K	Door 2	1
L	Back Board	3

Piece	Description	Qty
HW1	Cambolt	6
HW2	CamLock	6
HW3	Dowel	22
HW4	Screw M 7 x 50 mm	6
HW5	Screw M 6.4 x 53 mm	10
HW6	Screw M 4 x 16 mm	24
HW7	Screw M 3.5 x 13 mm	24
HW8	Screw M 6 x 12.5 mm	14
HW9	Screw M 3.5 x 15.5 mm	12
HW10	Shelf Pin	12
HW11	Flange Nut	4
HW12	Wedge	12
HW13	Screw Cap	6
HW14	Floor Protector	4
HW15	Wrench	1
HW16	Allen Key	2
HW17	Bumper	5
HW18	Sliding Top	6
HW19	Sliding Bottom	6
HW BC410	Corner Brace	4
HW US11	Anti Deflection Bar	1

# PREPARATION


\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.


\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly (included): Allen Key


\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

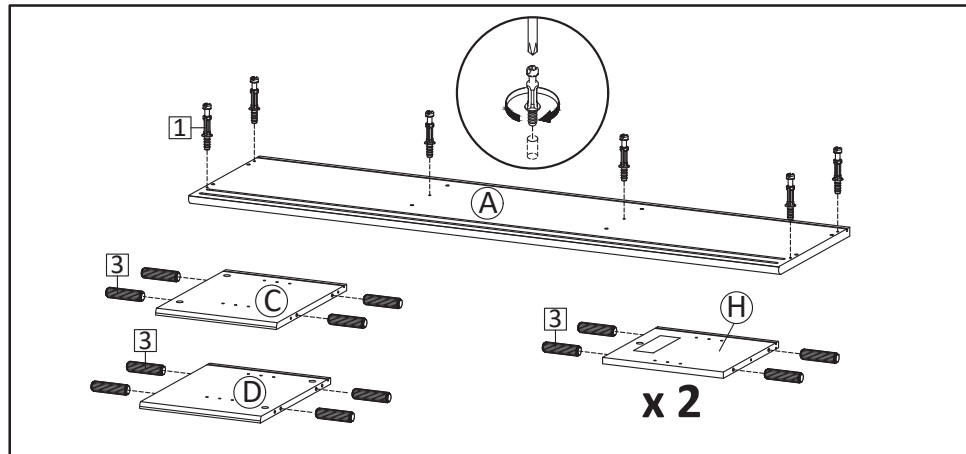


**STEP1:** Insert Cambolt (HW1) into Top Board (A). Insert Dowel (HW3) into Side Board Left (C), Side Board Right (D) and Center Board (H) as figure.

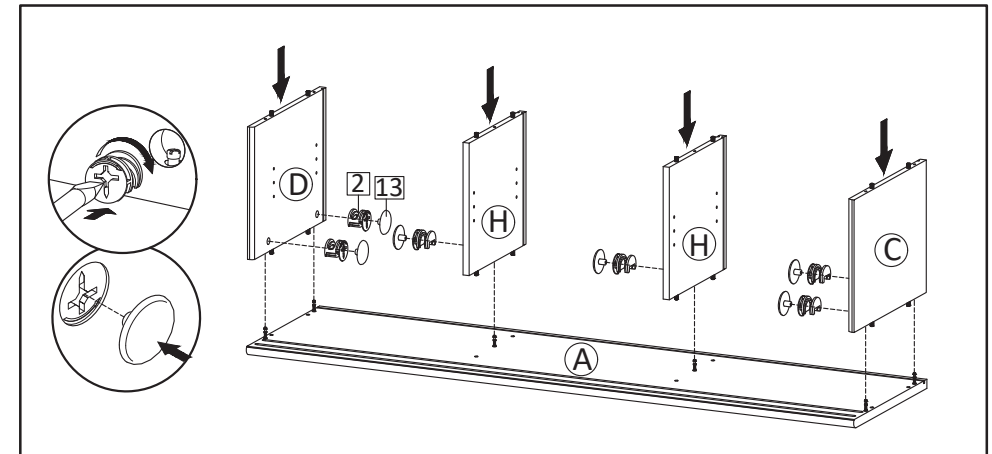

**STEP2:** Attach Side Boards (C&D) and Center Boards (H) into Top Board (A). Insert Camlock (HW2) then tighten using screwdriver. Put Screw Cap (HW13) over the camlock as picture.

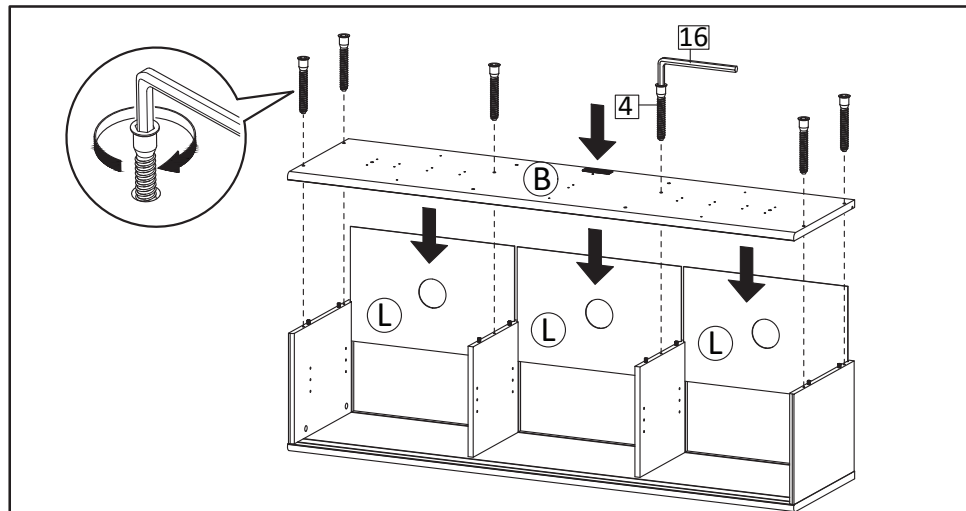

**STEP3:** Attach Back Board (L) and Insert Bottom Board (B), secure with Screw M7x50mm (HW4), tighten screws using Allen Key (HW16).

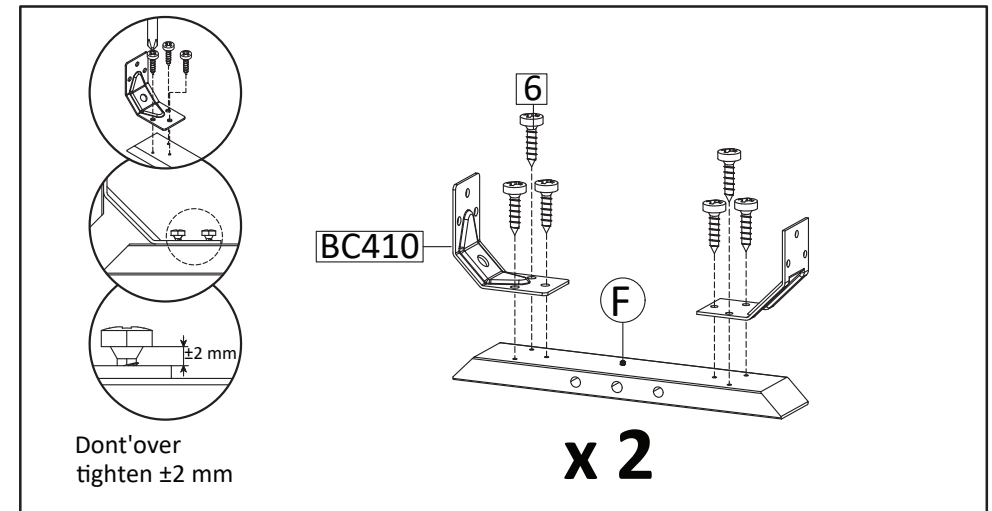

**STEP4:** Now let's combine the bottom skirt. Start with installing Corner Brace (HW BC410) into Bottom Skirt 2 (F) using Screw M4x16mm (HW6). Do not overtight screw yet, leave around 2mm gap.

# PREPARATION


\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.


\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly (included): Allen Key


\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

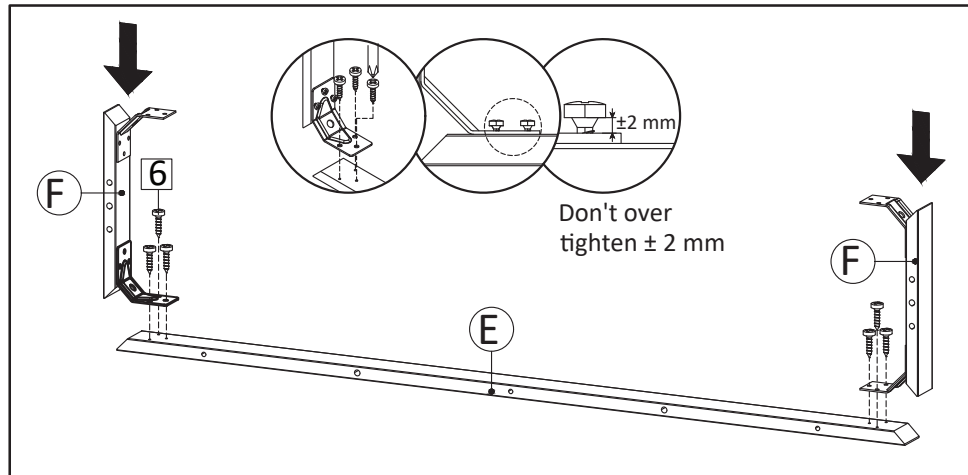


**STEP5 :** Combine the Bottom Skirt 2 (F) from step 4 with Bottom skirt 1 (E), using Screw M4x16mm (HW6). Do not overtight screw yet, leave around 2mm gap.

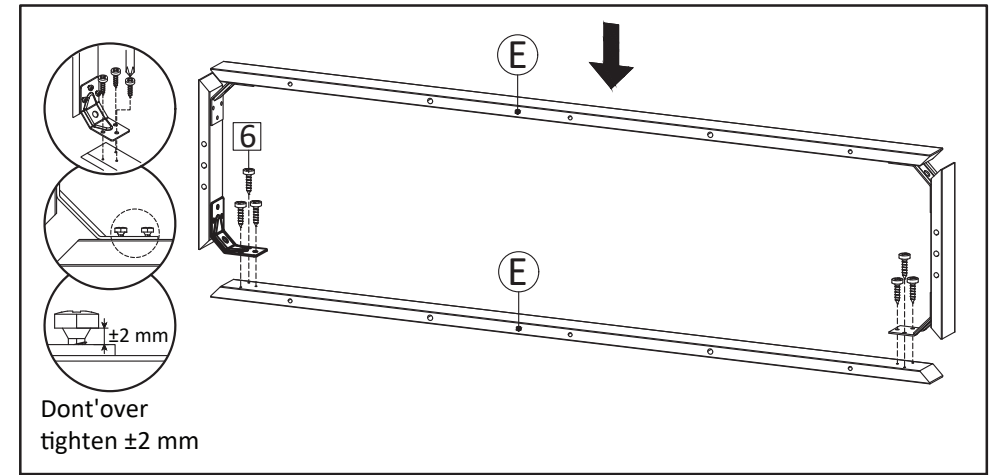

**STEP6:** Combine components from step 5 with remaining Bottom skirt 1 (E), using Screw M4x16mm (HW6). Do not overtight screw yet, leave around 2mm gap.

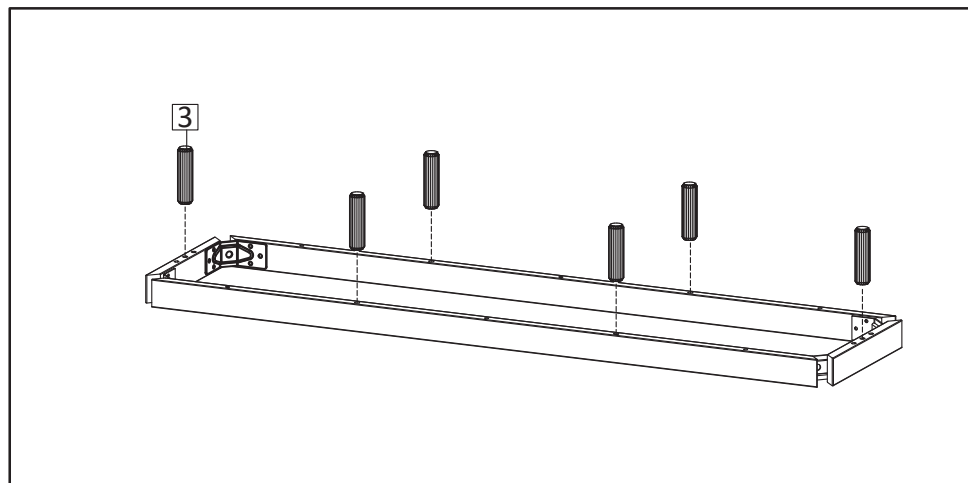


**STEP7:** Insert Dowel (HW3) into assembled Bottom skirt from previous step.

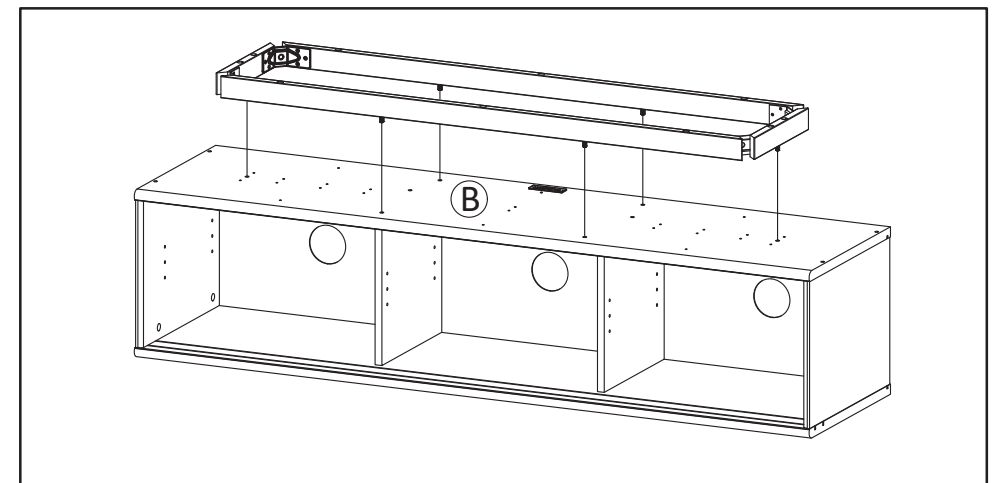


**STEP8:** Bring the assembled bottom skirt and insert into Bottom Board of the media stand.

# PREPARATION


- \*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 60 minutes.
- \*Tools Required for Assembly (included): Allen Key
- \*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

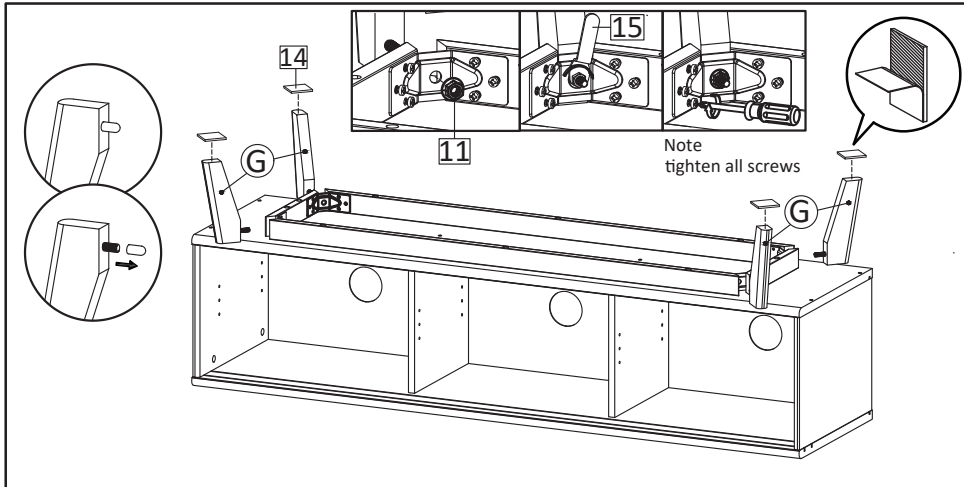


**STEP9:** First, let's fix the leg by inserting leg to Corner Brace, Insert Flange Nut (HW11) first into the hanger bolt of leg, tighten all the Flange Nut using provided Wrench (HW15). Second, after ensuring that all legs has been tightened, continue with tighten all screws on the corner brace. Peel off paper from Floor Protector (HW14) and stick it onto the leg.

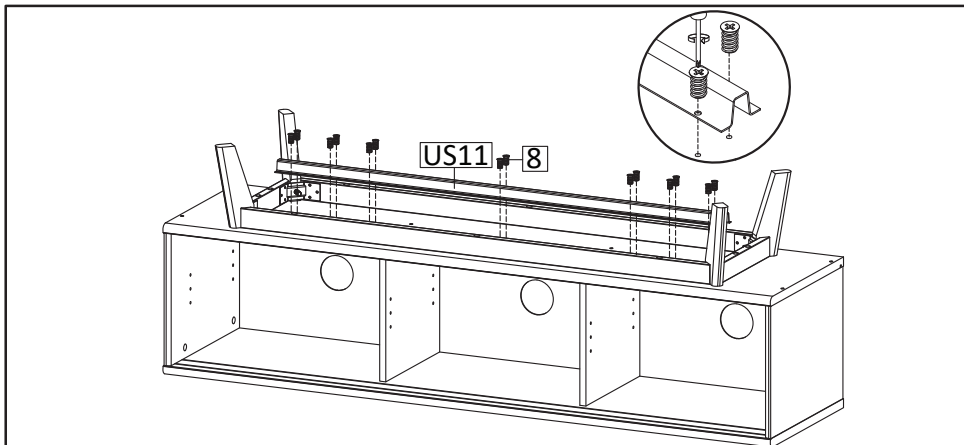

**STEP11:** Place Anti-Deflection Bar (HWUS11), secure with screw M6x12.5mm (HW8), tighten using screwdriver.

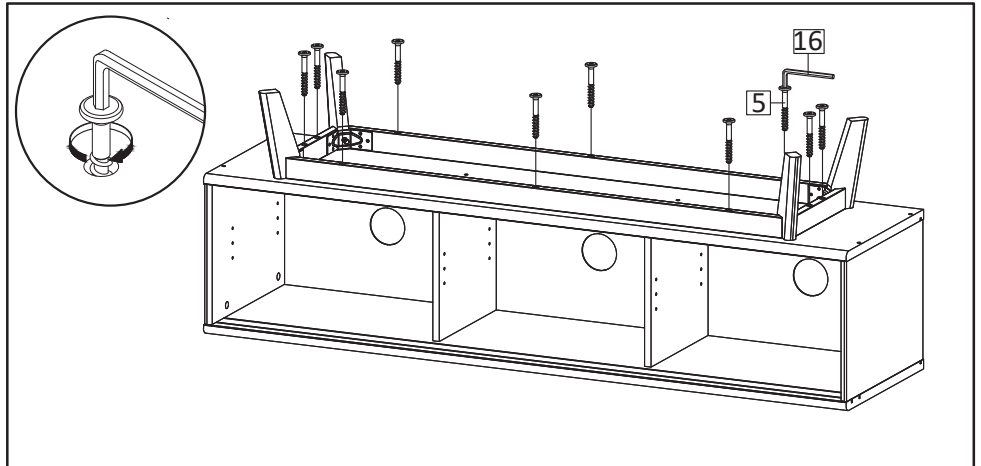

**STEP10:** Insert Screw M6.4x53mm (HW5) using Allen Key (HW16) into assembled bottom skirt.

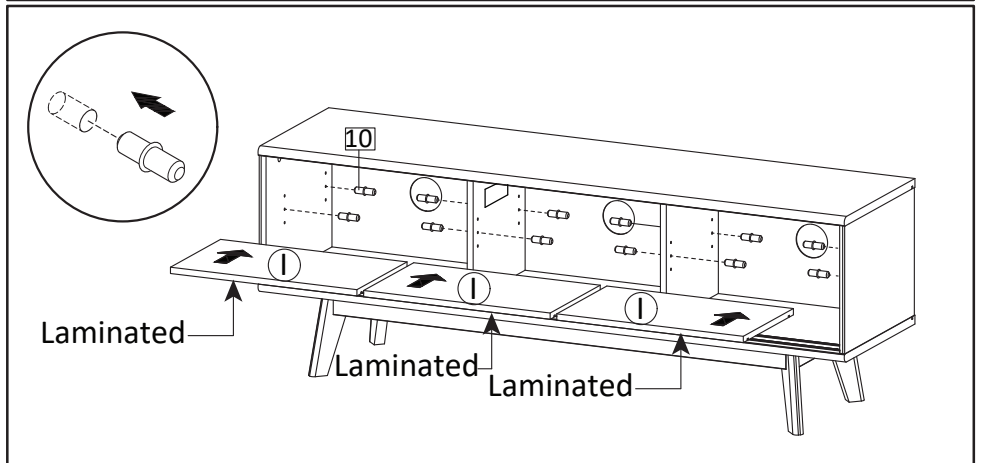

**STEP12:** After bringing the product upright, insert Shelf Pin (HW10) into the holes on Side board & Center board, on the desired level. Then place the Adjustable Shelf (I) by inserting the grooving on the shelf into the shelf pin.



# PREPARATION


\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.


\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly (included): Allen Key


\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

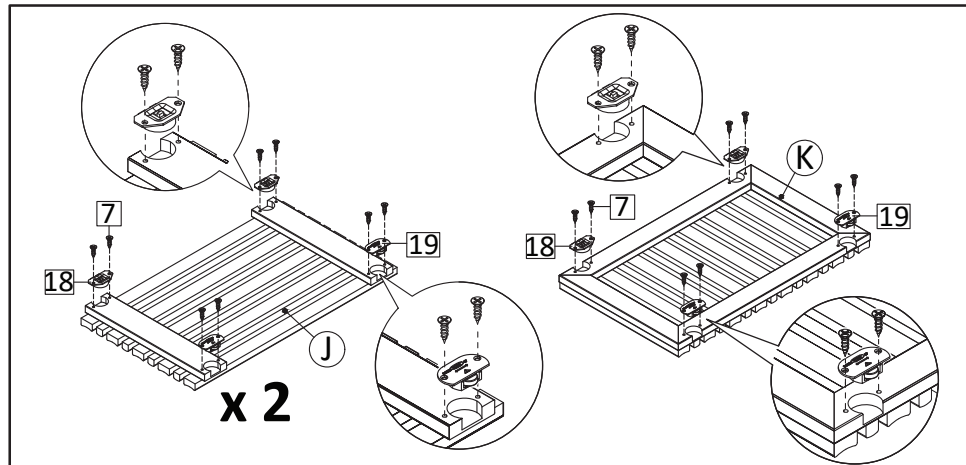


**STEP13:** Insert Sliding Top (HW18) and Sliding Bottom (HW19) using Screw M3.5x13mm (HW7) into Door 1 (J) and Door 2(K),tighten with a screwdriver position as shown in the figure.

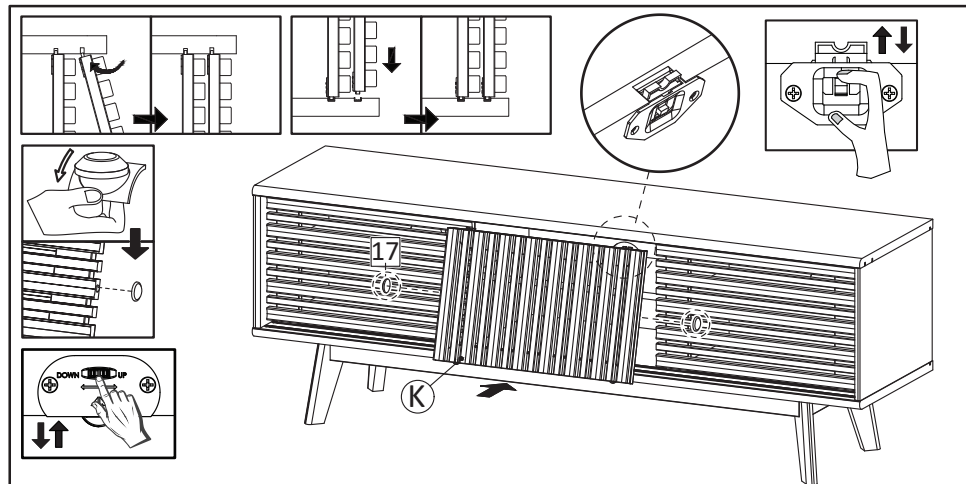

**Step15:** Install the doors 2 (K) and insert the Sliding Top (HW18) pin into the front groove line of the Top Board. Position the Sliding Bottom (HW19) into the sliding track of Bottom Board. Adjust gap of the door, by scroll the button on Sliding Roller (HW19). Follow the down and up direction. Slide both doors to right and left ensuring the door has been placed properly in the front sliding track.

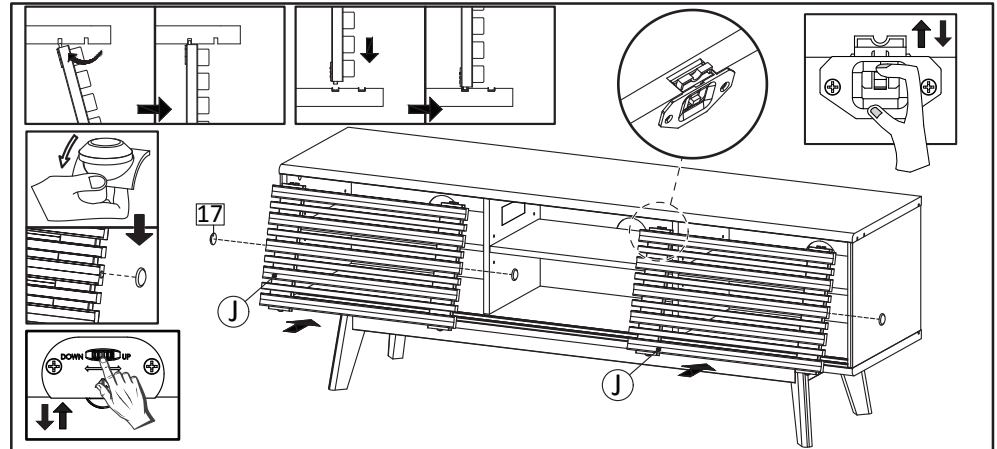

**Step14:** Install the doors 1 (J) and insert the Sliding Top (HW18) pin into the back groove line of the Top Board. Position the Sliding Bottom (HW19) into the sliding track of Bottom Board. Adjust gap of the door, by scroll the button on Sliding Roller (HW19). Follow the down and up direction. Slide both doors to right and left ensuring the door has been placed properly in the back sliding track.

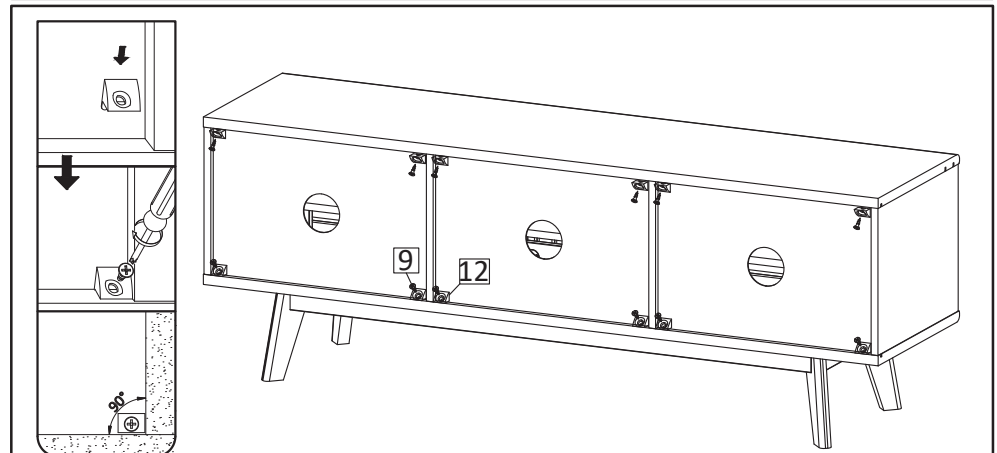


**STEP16:** Use Wedge (HW12), Screw M3.5x15.5mm (HW9) to tighten the back of media stand by using screwdriver. Please align the top board and bottom board in 90° position against the side board, before securing the wedges (HW12).

## PREPARATION

---

- \*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 60 minutes.
- \*Tools Required for Assembly (included): Allen Key
- \*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

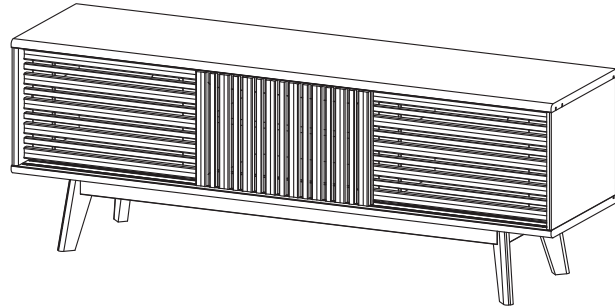

**STEP17:** Assembly is Complete.



# TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

