
6779-4464 Closet Shelves & Drawers

No tools


required.






STEP 1:

□ Clip fabric shelf with poles (B) to side frames (A). The clip rests at the top of each horizontal wire on the side frame.

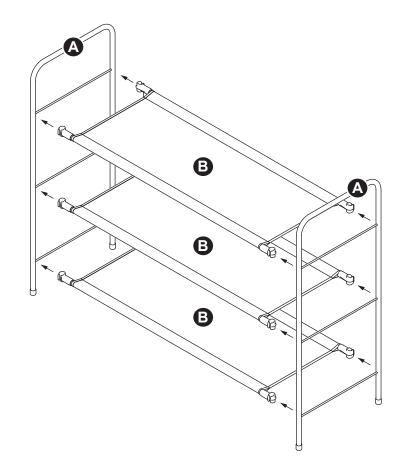

STEP 2:


□ Unfold each fabric drawer (C) and insert each drawer bottom (D). Place the assembled drawers onto a shelf.

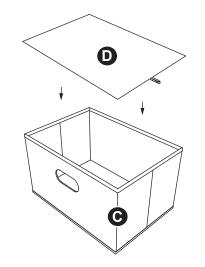


8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Consumer Care Team, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday, or email: help@whitmor.com. Visit us online at www.whitmor.com







A 2 ea Side frame





C 2 ea Fabric drawer



E 12 ea Shelf Clip (Already preassembled to fabric shelf with poles)



D 2 ea Drawer Bottom Insert



← rame Caps (Already preassembled to side frame A)