


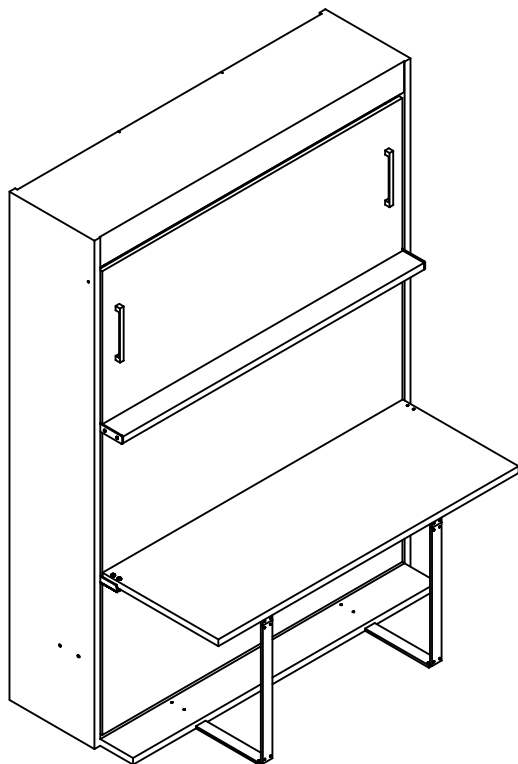

MULTIMO

A 203 T BELLEZA



75min.




Technical Service



180min.











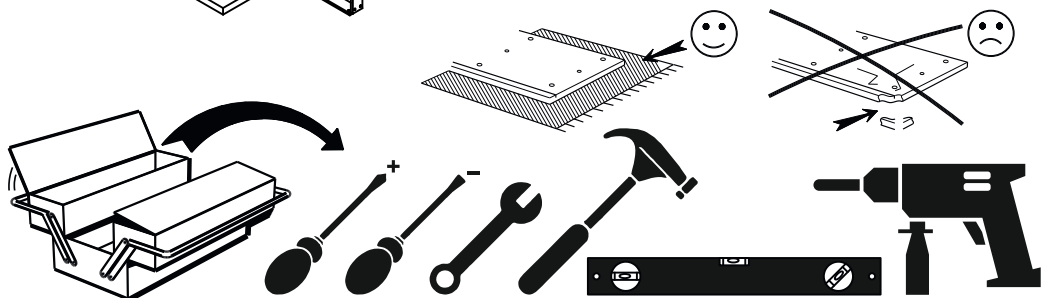











End User












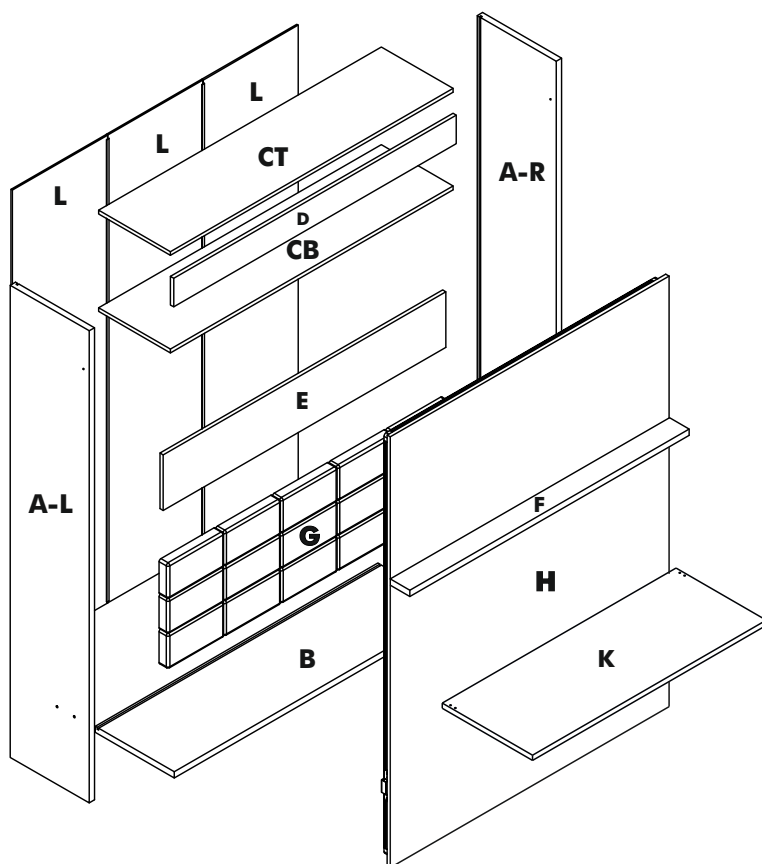
Assembly Instructions

Track Title	Piece	(inch)			(mm)			
		Thickness	Length	Width	Piece	Thick	Height	Most
A	2	1,18	89,76	17,32	2	30	2280	440
B	1	1,18	62,05	24,41	1	30	1576	620
C	2	0,71	62,05	15,75	2	18	1576	400
D	1	0,71	62,05	5,43	1	18	1576	138
E	1	0,71	62,05	10,24	1	18	1576	260
F	1	1,18	61,34	4,33	1	30	1558	110
K	1	1,18	61,34	23,62	1	30	1558	600
G	1	1,18	61,34	23,62	1	50	1570	500
H	1	0,71	81,89	61,18	1	18	2080	1554
L	3	0,31	88,94	20,87	3	8	2259	530

Accessories List

MNX - 02  24 / piece IM - 01 (6x30) mm	MNG - 01  24 / piece CT - 02 (6x30) mm	OT-054  2 / piece CT - 07 (6x15) mm	CT - 01 (6x40) mm  4 / piece DSE - 01 (40x90x32) mm
 4 / piece DD - 01 (R10)	 4 / piece VD - 01(6X70) mm	 6 / piece PL - 01 (6x19x2) mm	 3 / piece VDA - 01 (6,5x50) mm
 3 / piece VTB - 01 (4,8x16) mm	 3 / piece KP - 01 (224) mm	 3 / piece VKP - 01 (22) mm	 4 / piece VD - 02 (3,5x25) mm
 12 / piece AL - 01	 2 / piece AL - 02	 4 / piece SN - 01 (M6)	 20 / piece KVL 01
 4	 5	 4 / piece	 24 / piece

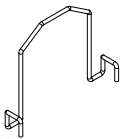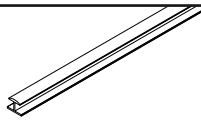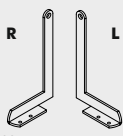
TTC 01  4 / piece	LM-11  2 / piece	H 01  2 / piece	SC - 33  2 / piece
MKZ - 02  2 / piece	TAP - 01  24 / piece	OT 10  2 / piece	HB - 02 (6x10) mm  4 / piece
SC - 34  2 / piece			




STEP 1

MNX - 02


KVL 01

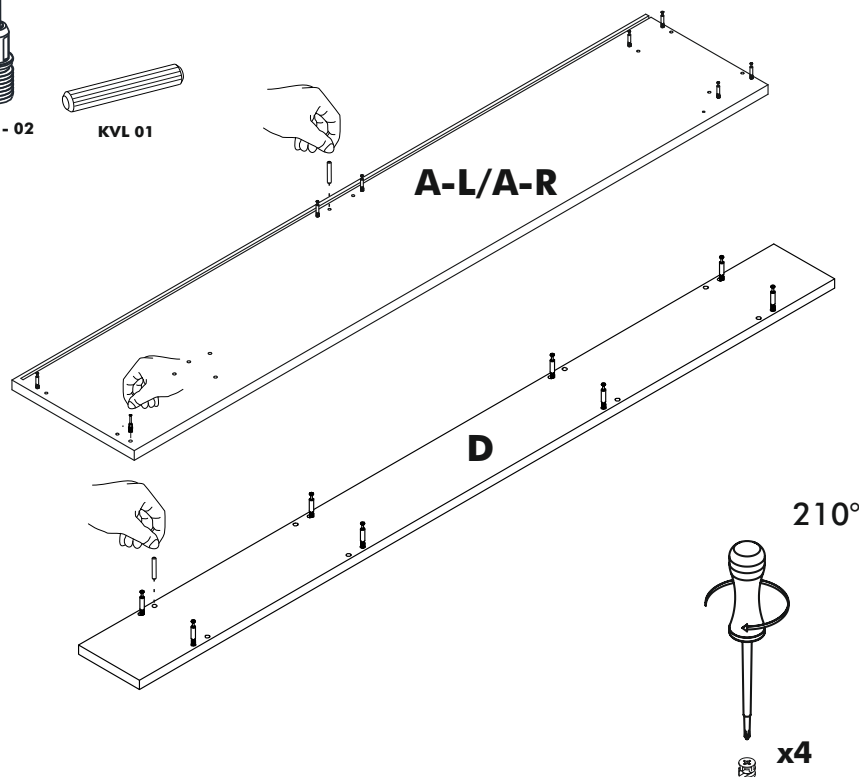


STEP 2

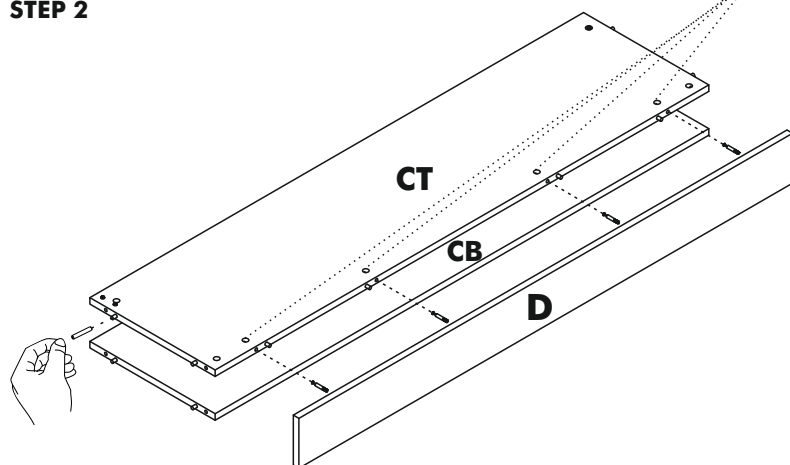


STEP 3

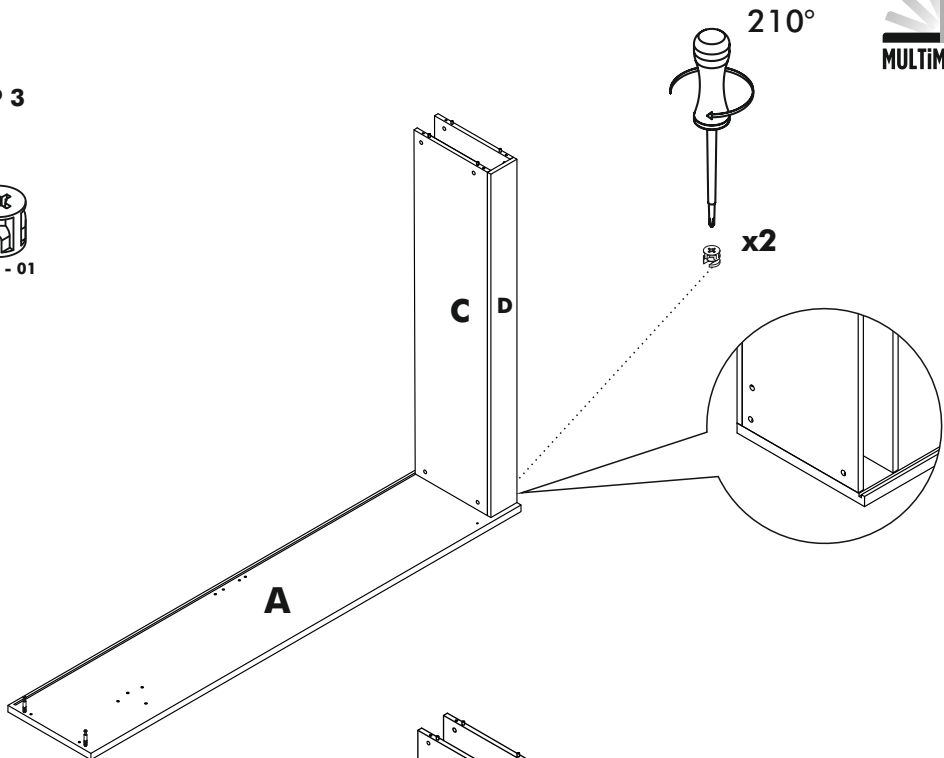


STEP 4

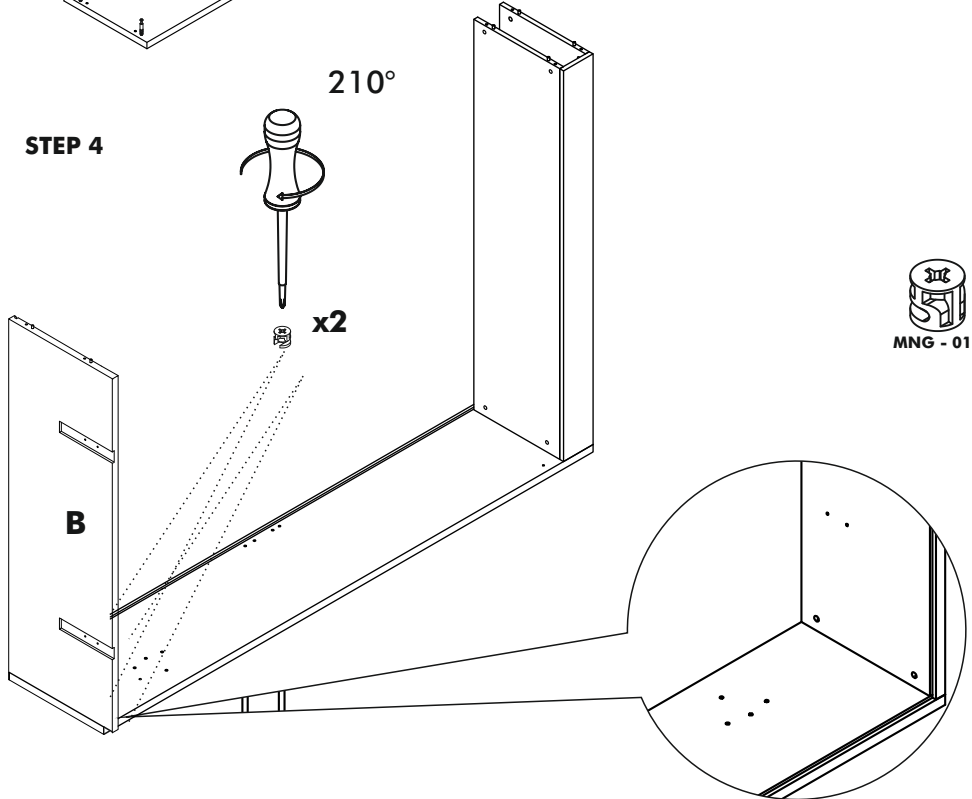


STEP 5

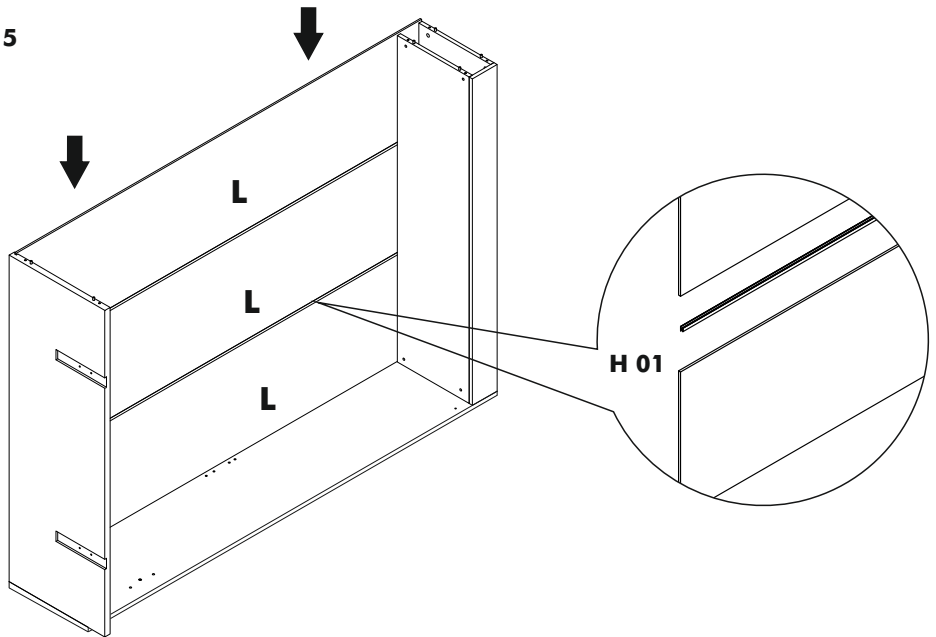


STEP 6

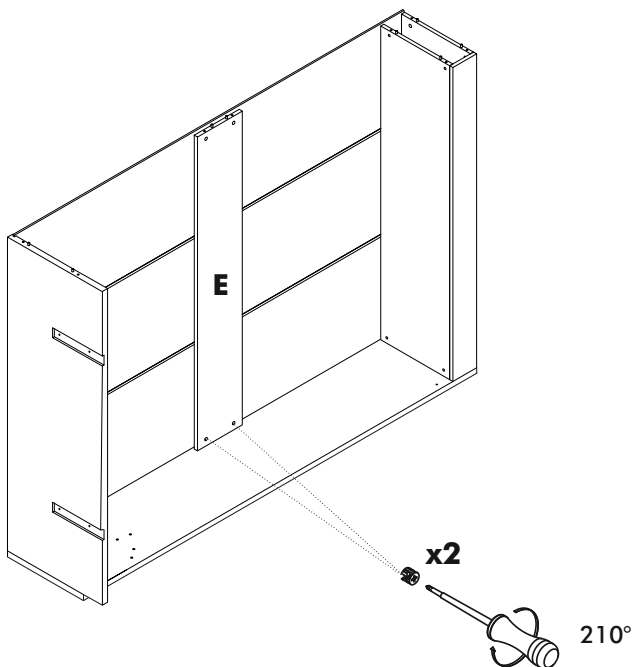



STEP 7

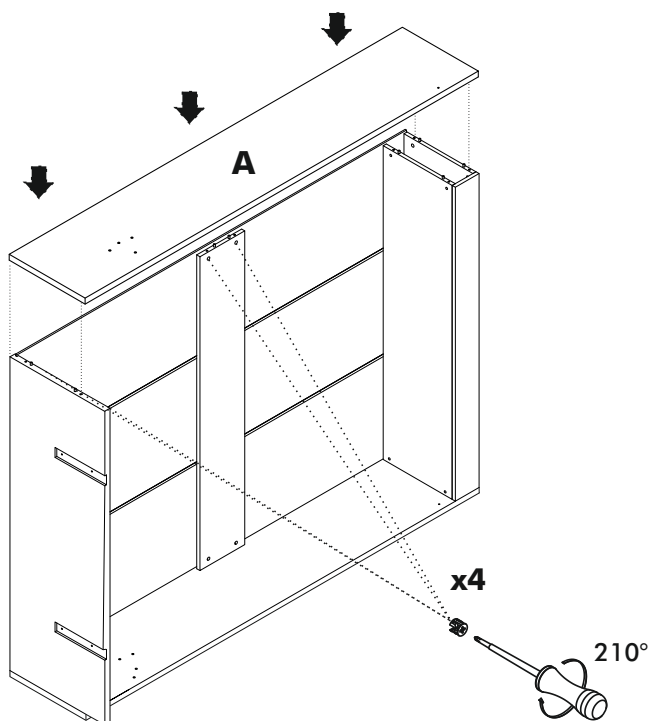


STEP 8

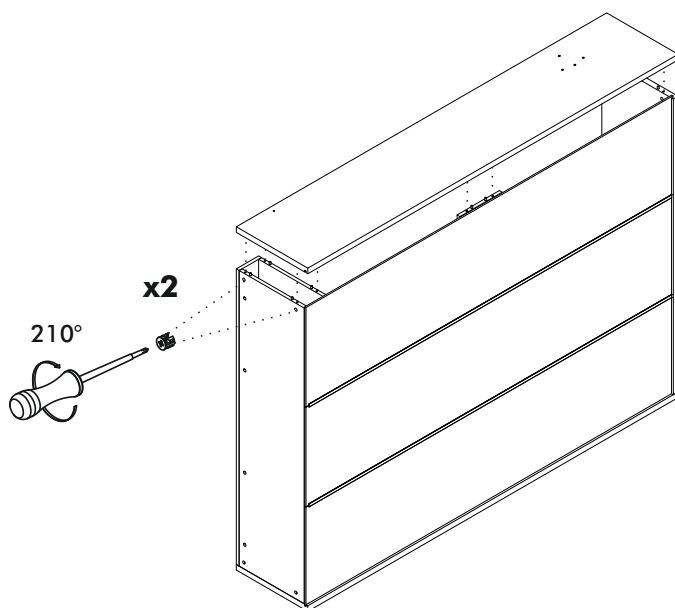


STEP 9

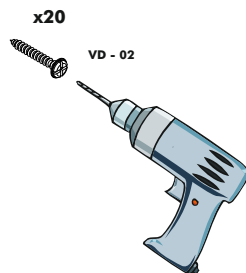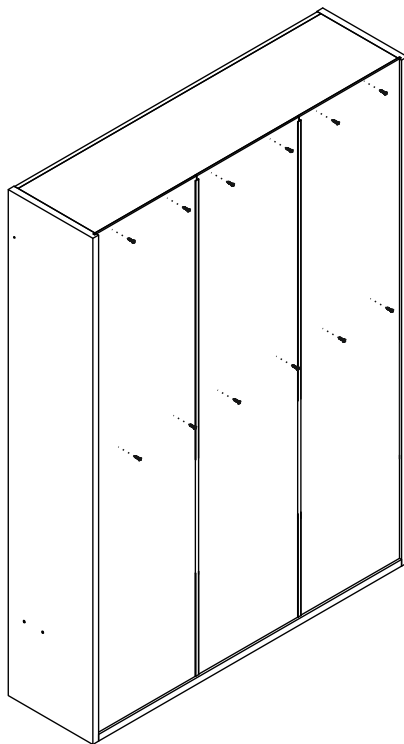


STEP 10

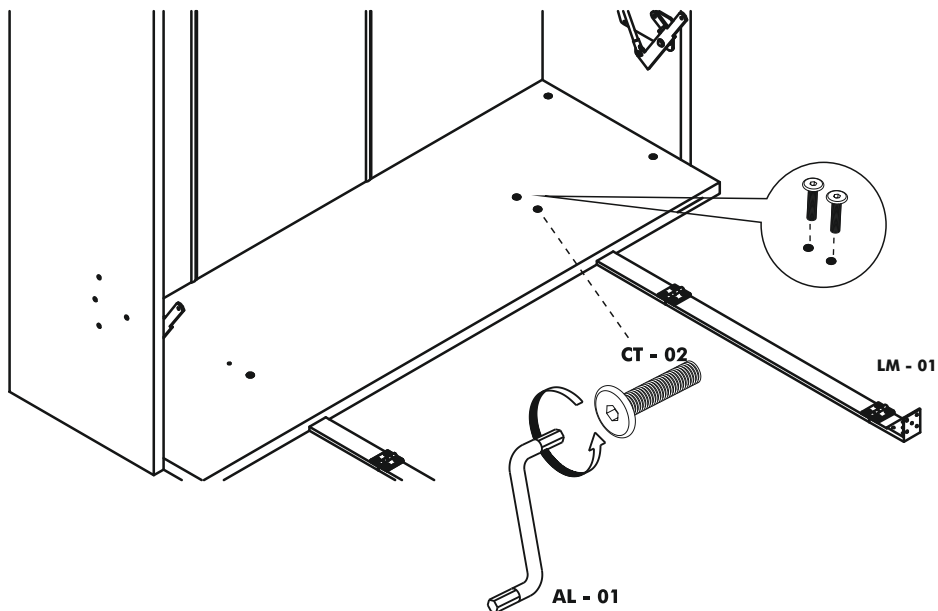


STEP 11

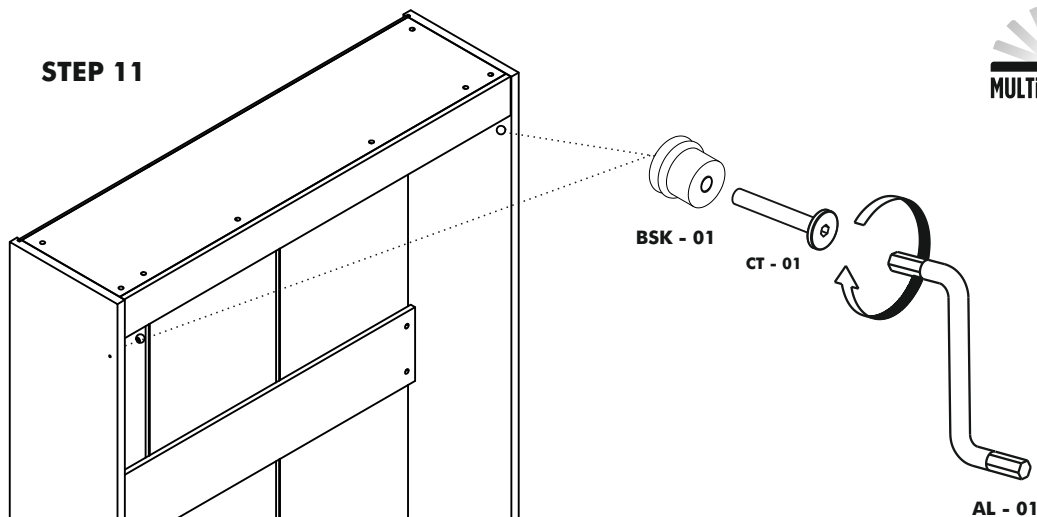


CAUTION
DO NOT UNLOCK BEFORE INSTALL

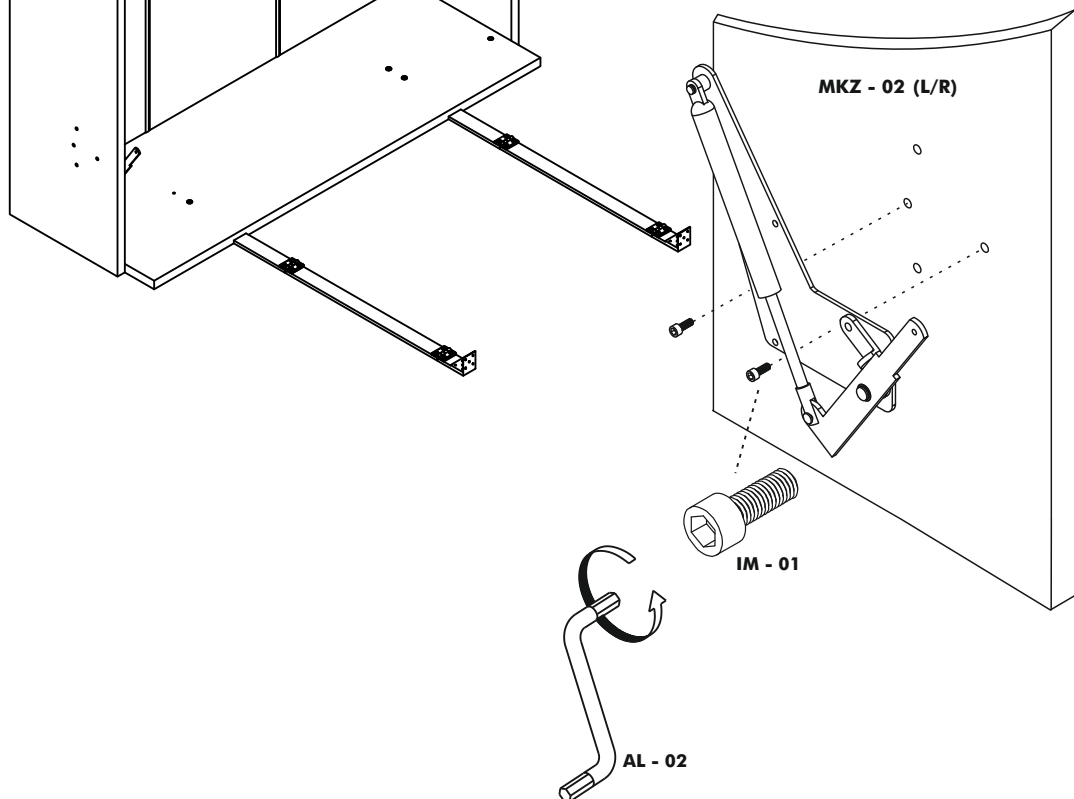


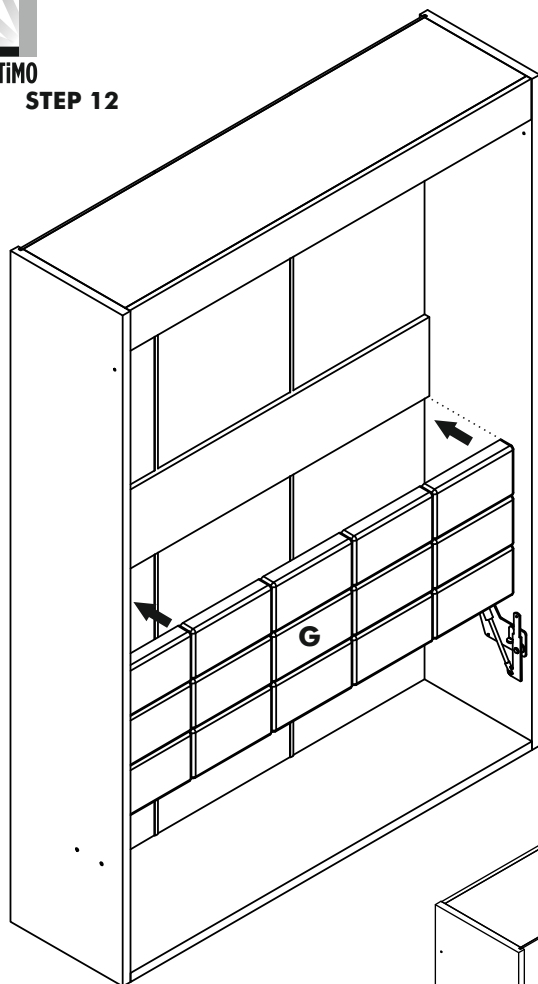

STEP 13

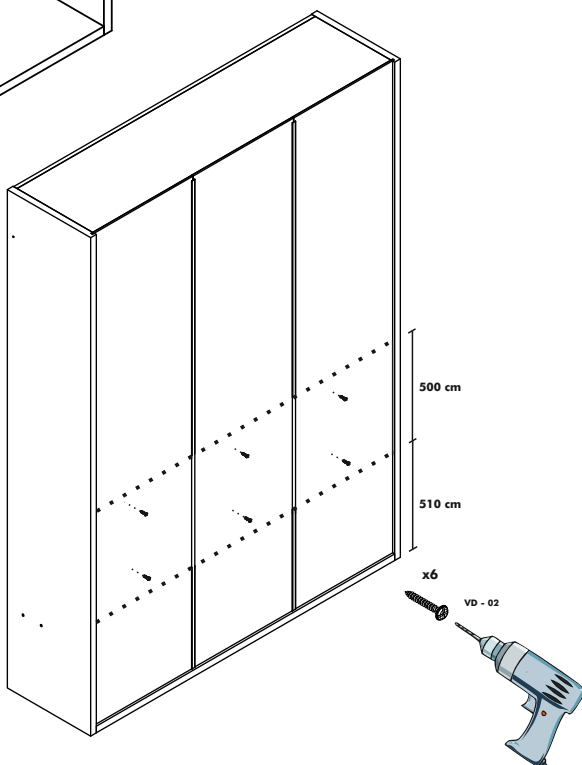

STEP 14

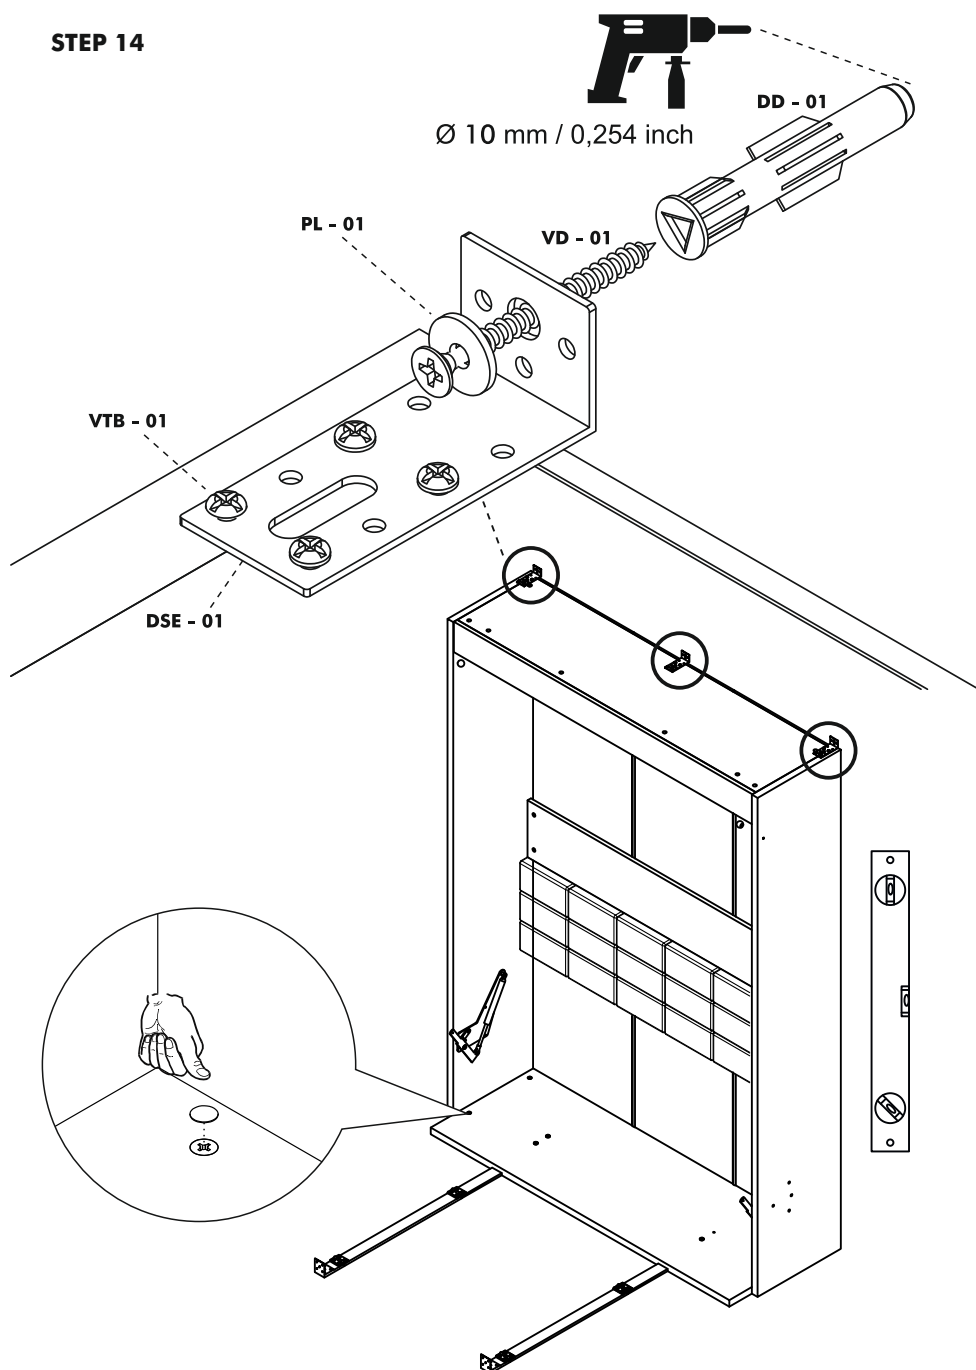



STEP 14-2

Ø 10 mm / 0,254 inc

PL - 01

VD - 01



VTB - 01

DSE - 01



FIRST LOCATE THE STUDS BY USING "STUD FINDER" IN THE WALL AND DRILL IT ACCORDING TO THE HEIGHT MEASUREMENTS GIVEN ON THE SIDE.

UPPER HOLES SHOULD BE DRILLED FOR ATTACHING BED AT NEXT STEP.


SUPPLY DRYWALL FASTENERS APPROPRIATE TO YOUR WALL TYPE. WE RECOMMEND USING STEEL TOGGLE BOLT ANCHOR THAT SHOWN BELOW

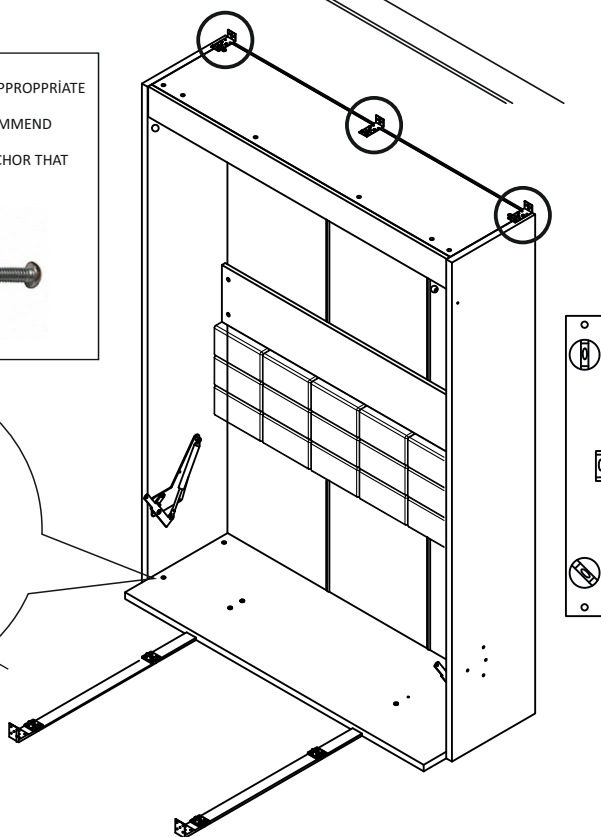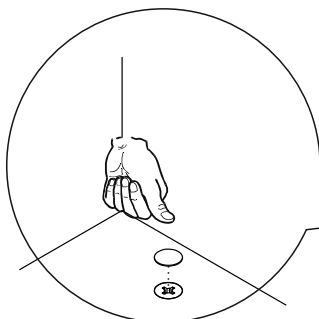


STEP 15

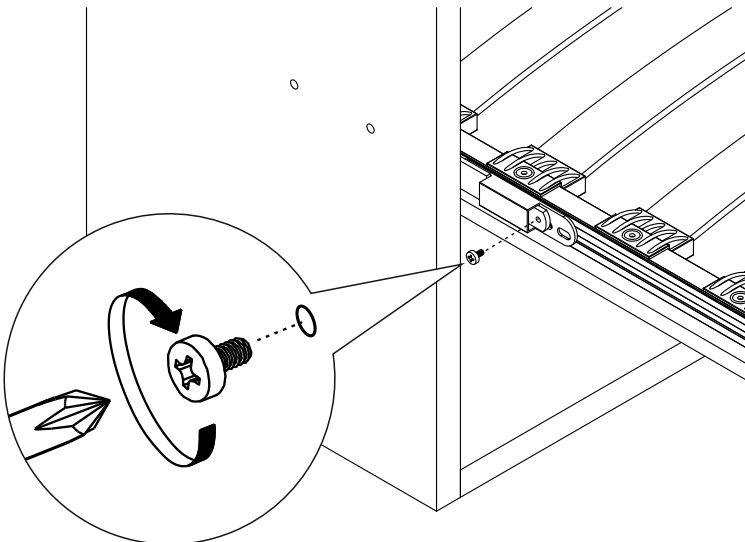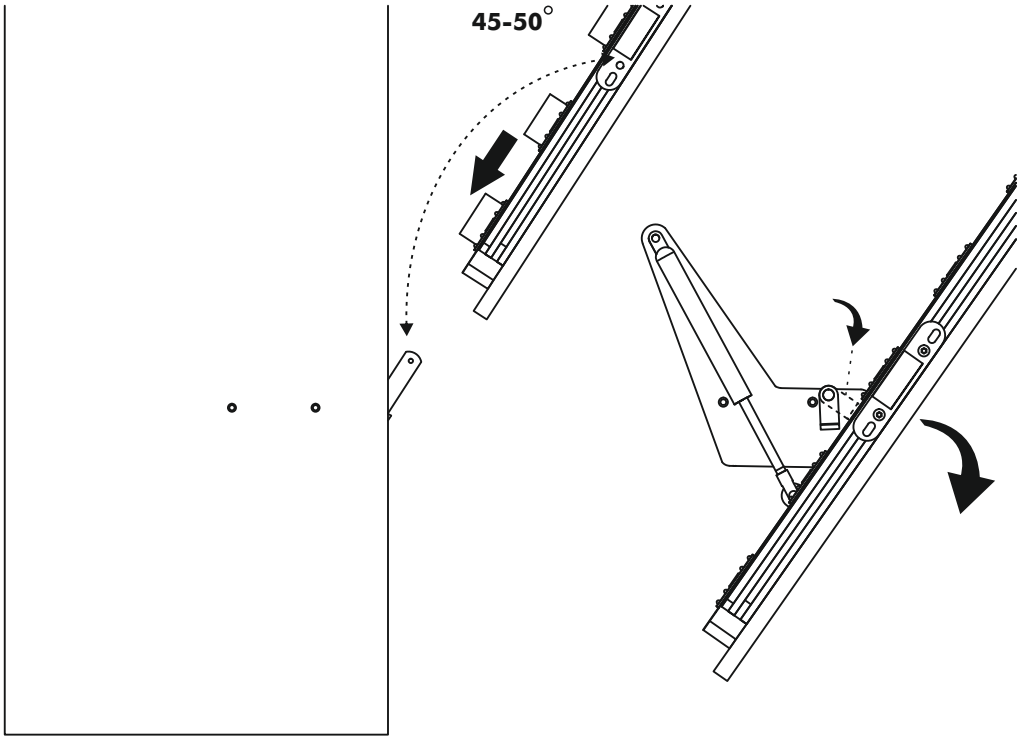


STEP 16

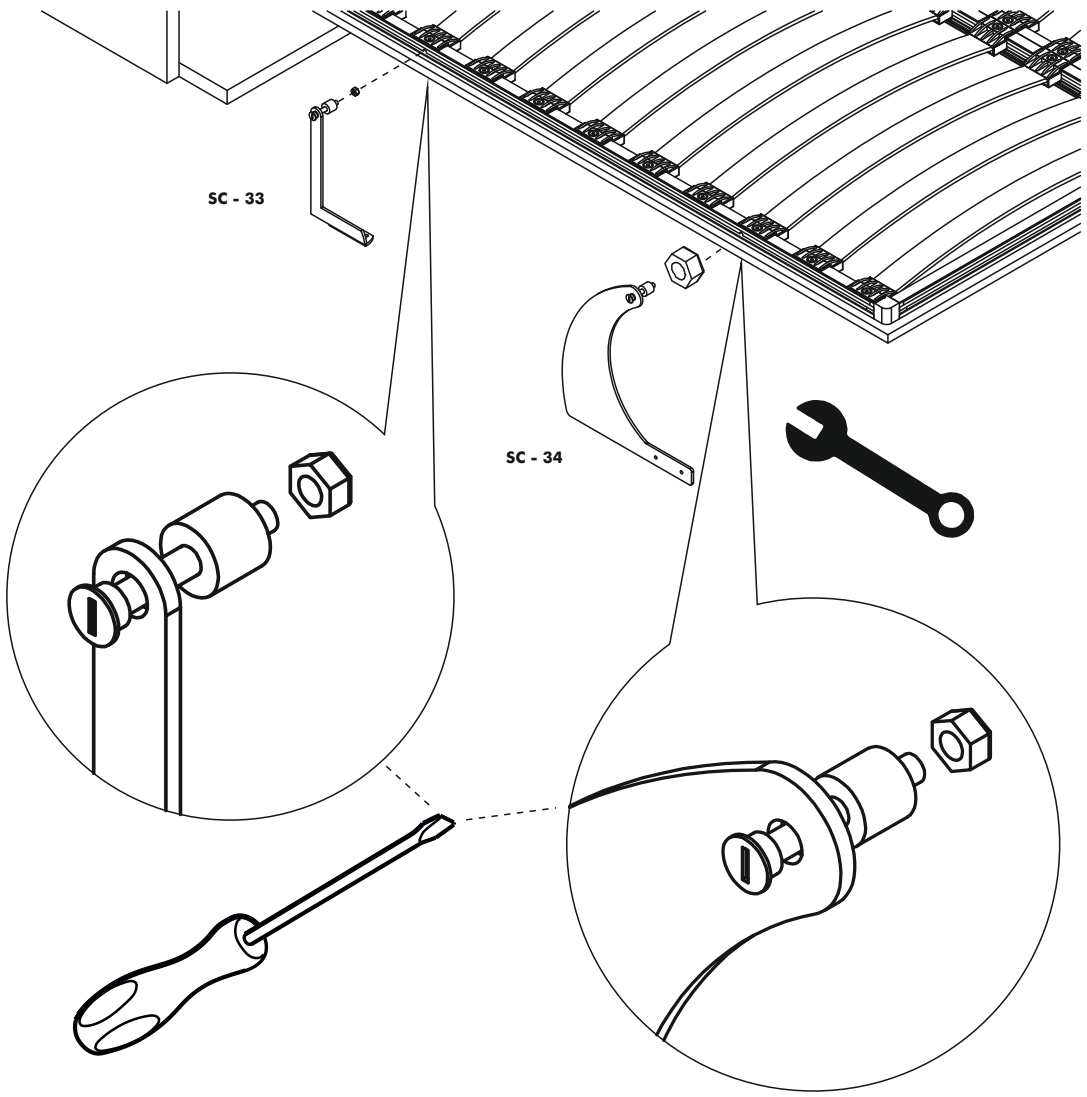


STEP 17

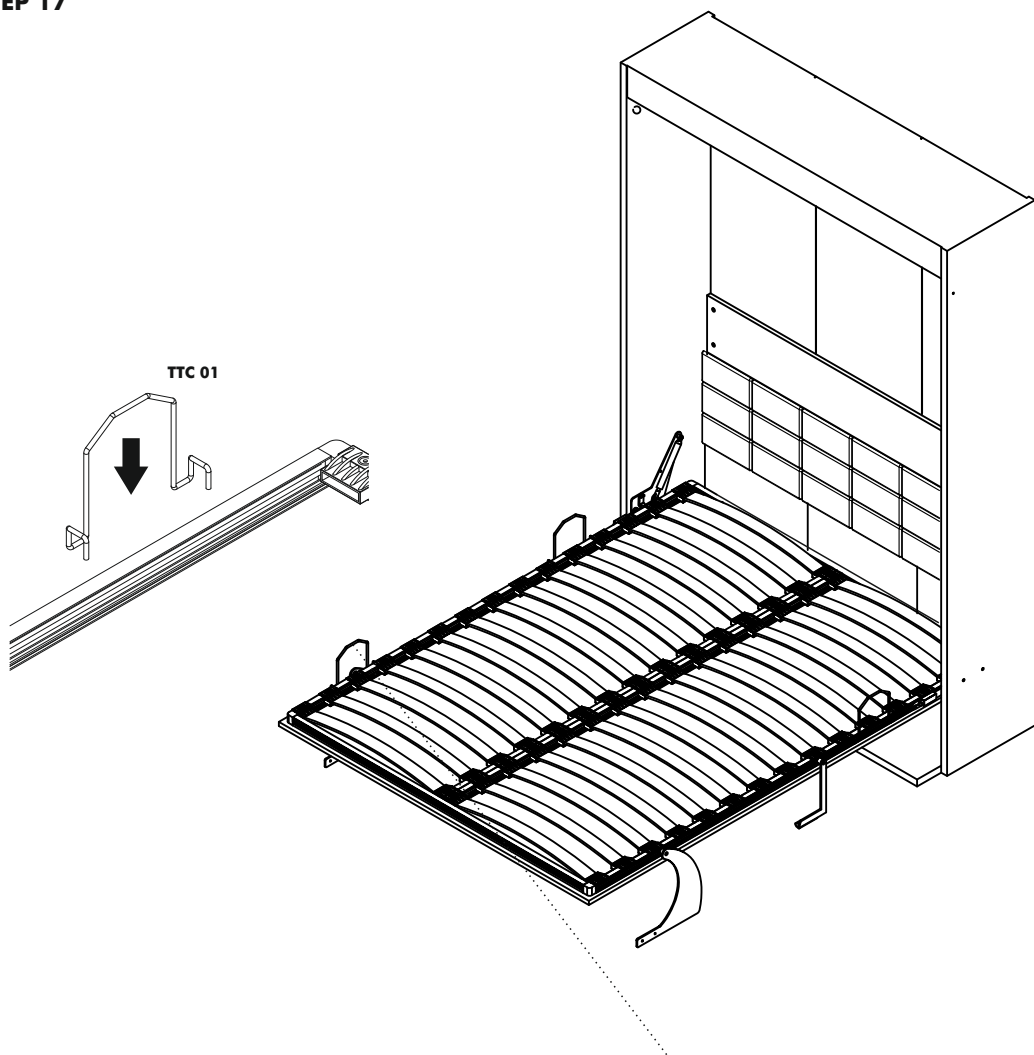

STEP 18

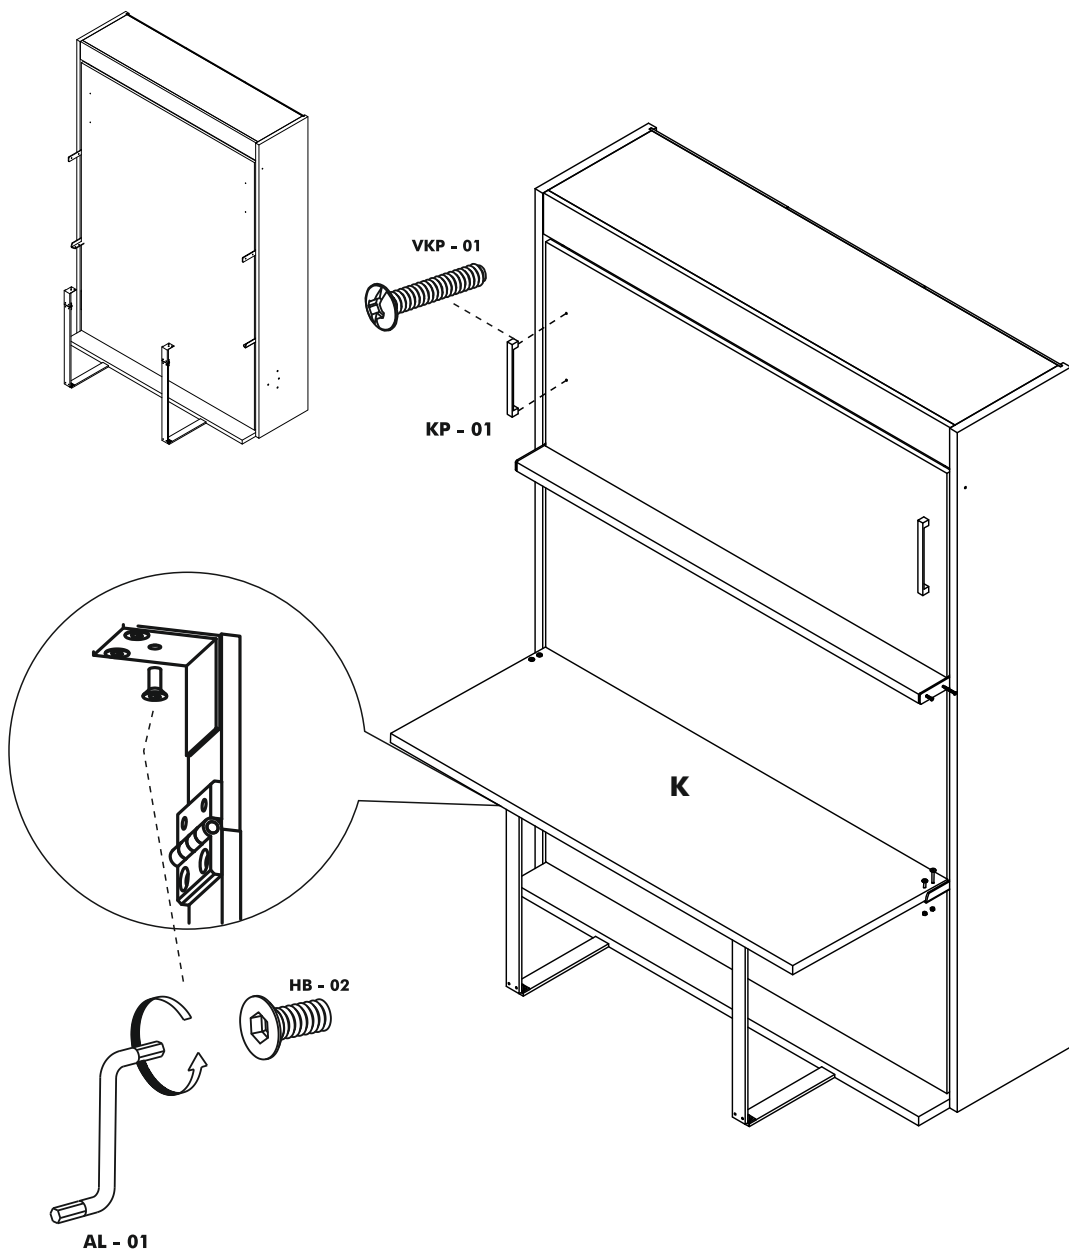

STEP 19

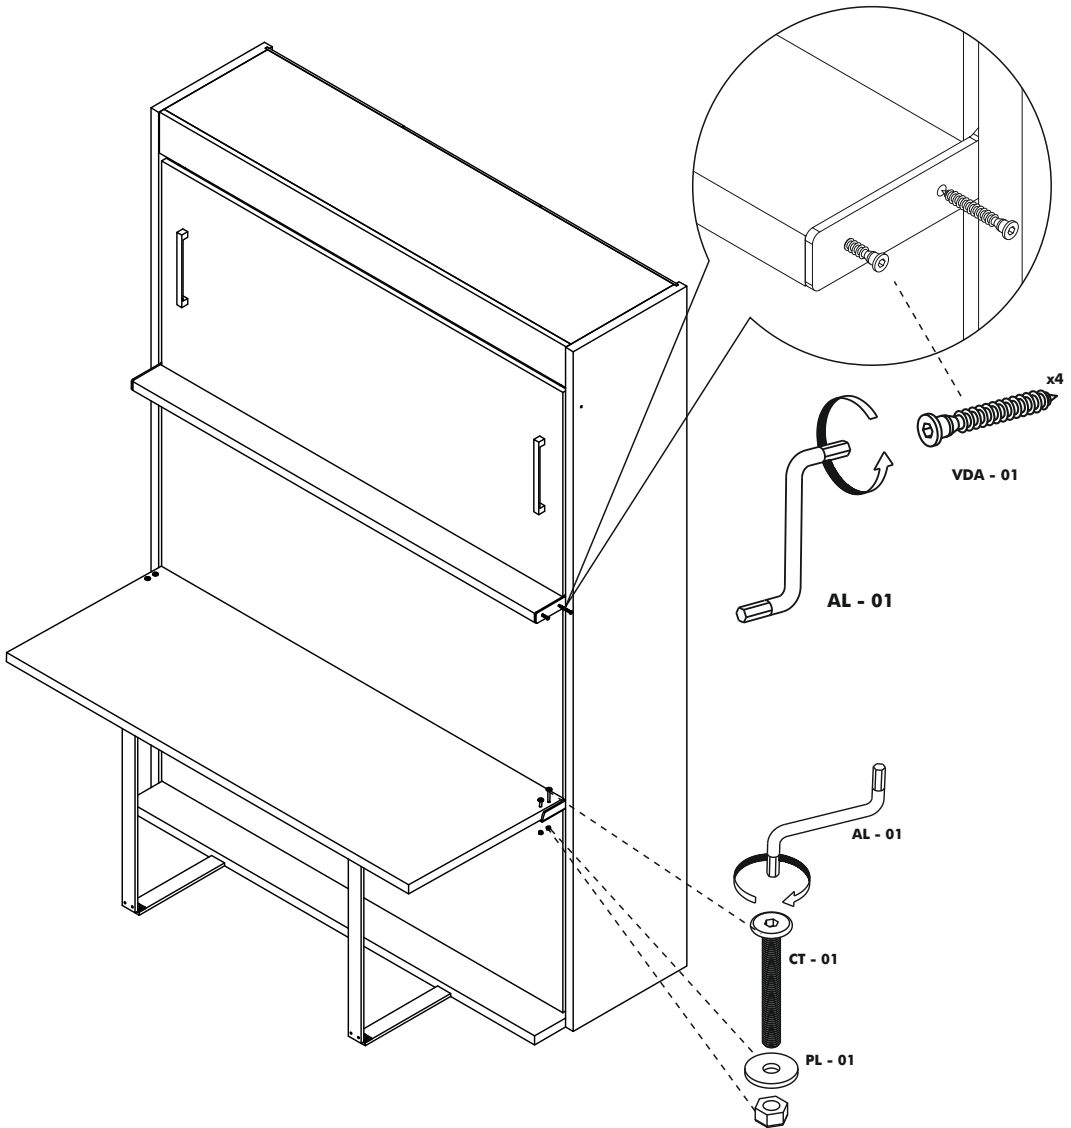

ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. When mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar strong material are also acceptable. Do not mount furniture to paper-mache or sheetrock like material without properly affixing to stud.
2. For safety and product longevity you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm hardware remains properly affixed and connections snug.
3. Wall Bed mattress thickness may not exceed 8 inch. Take care to remove pillows and excess blankets before closing. Doing so keeps mechanism free of obstruction and unnecessary stress.
4. Do not lean or rest heavy objects on side or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use the furniture's beds, desks and shelving as intended. Not designed to be sat, stood, leaned, jumped (etc) on. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change you must inspect interior and exterior of furniture.
7. Single, Twin, Twin XL beds accommodate the weight of one person. Improperly sleeping more than one person risks injury to person and damage to property.
8. Before any un-mounting or disassembly please contact Multimo for technical support and instruction. Failure to properly detach risks injury to person and damage to property.
9. For Bunk Beds:
 - a. Always use provided ladder when accessing top bunk.
 - b. Be slow, careful and aware of surroundings when opening top bunk.
 - c. Do not horseplay. Beds are to be slept on only.
 - d. Some have legs that fully extend when open- be aware of where the leg is and will be.



www.multimobeds.com