

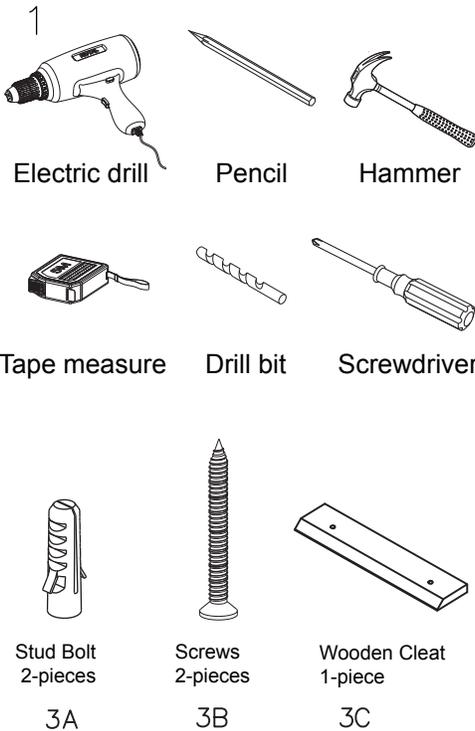


# WYNDHAM COLLECTION

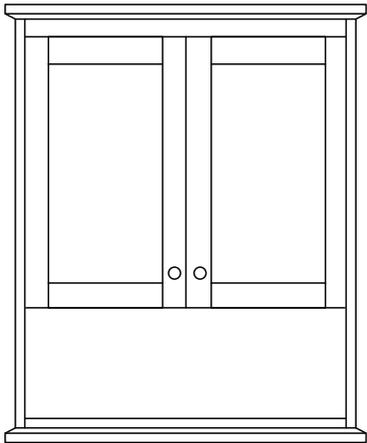


2

Measure positions on wall to reflect predrilled holes located on wooden cleat.

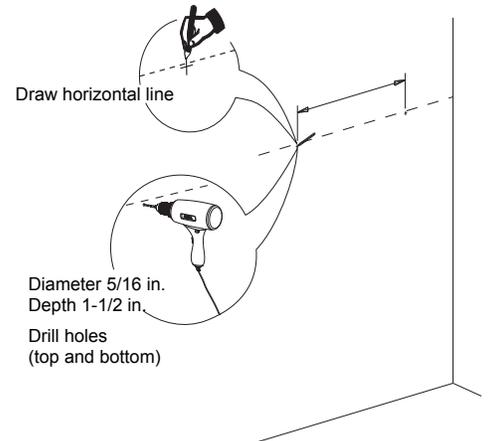



3

After holes are drilled, hammer in the stud bolts into the holes. Then line up wall cleat to match the predrilled holes. Tighten cleat to wall with screws.

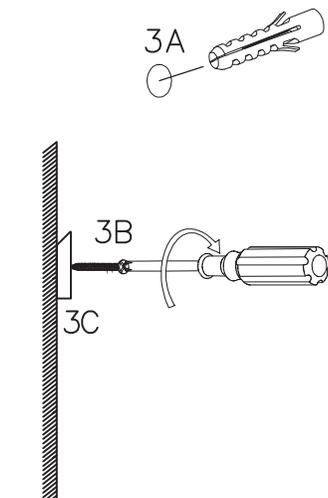

4

Line up the cabinet according to the cleat, now tightly fastened on the wall. Make sure to place cabinet on top of cleat until it is secured on the wall.

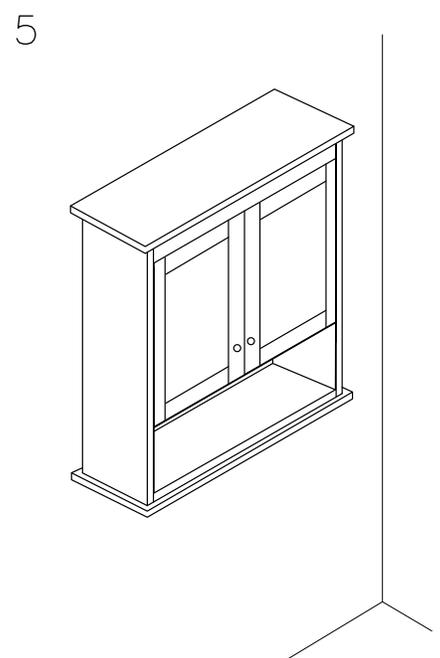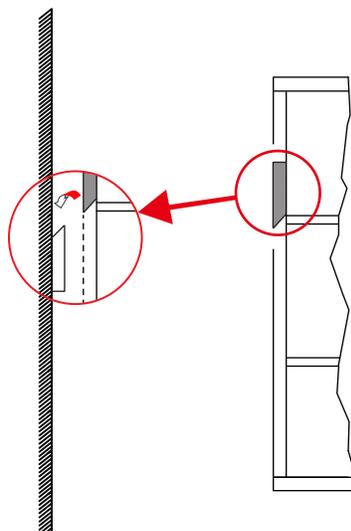

WC-2323-WC  
INSTALLATION GUIDE