


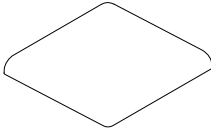






ASSEMBLY INSTRUCTION FOR ACME FURNITURE


MODEL# DN01758 Side Chair

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Separate, identify, and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of the part(s) needed.

***** Do not fully tighten screws until fully assembled *****

COMPONENT PARTS		
DECERPTION	PART NAME	Q'TY(PCS)
①	Left Leg 	1pc
②	Right Leg 	1pc
③	Back 	1pc
④	Seat 	1pc
⑤	Tube 	2pcs

HARDWARE REQUIRED:	
Ⓐ 	Bolt 1/4"x1/2" - 4pcs
Ⓑ 	Bolt 1/4"x1-5/8" - 8pcs
Ⓒ 	Allen Wrench M4 - 1pc

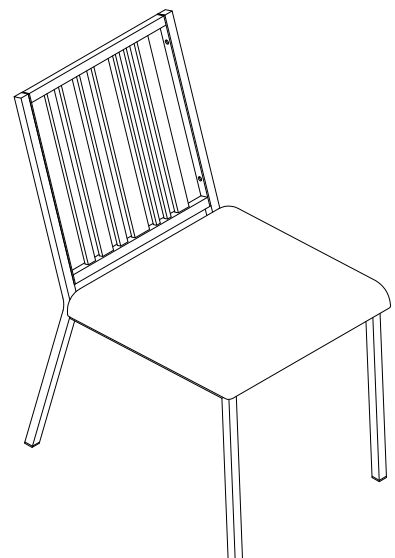

Attention:


***Mattresses not included.

***Some number parts listed on the instruction sheet may not be in parts bag as they may already be assemble.
Carefully check parts and packing materials prior to oding replacements.


How to Assemble:



STEP 1.

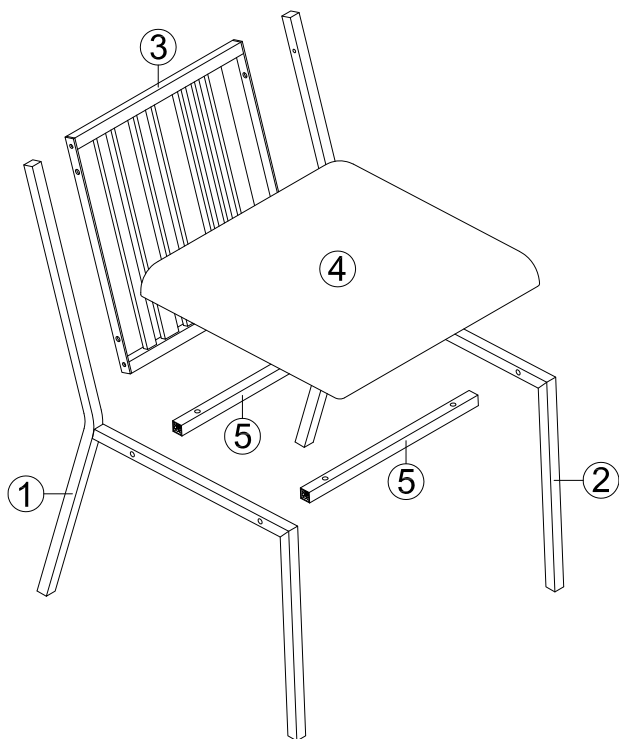Exploded View

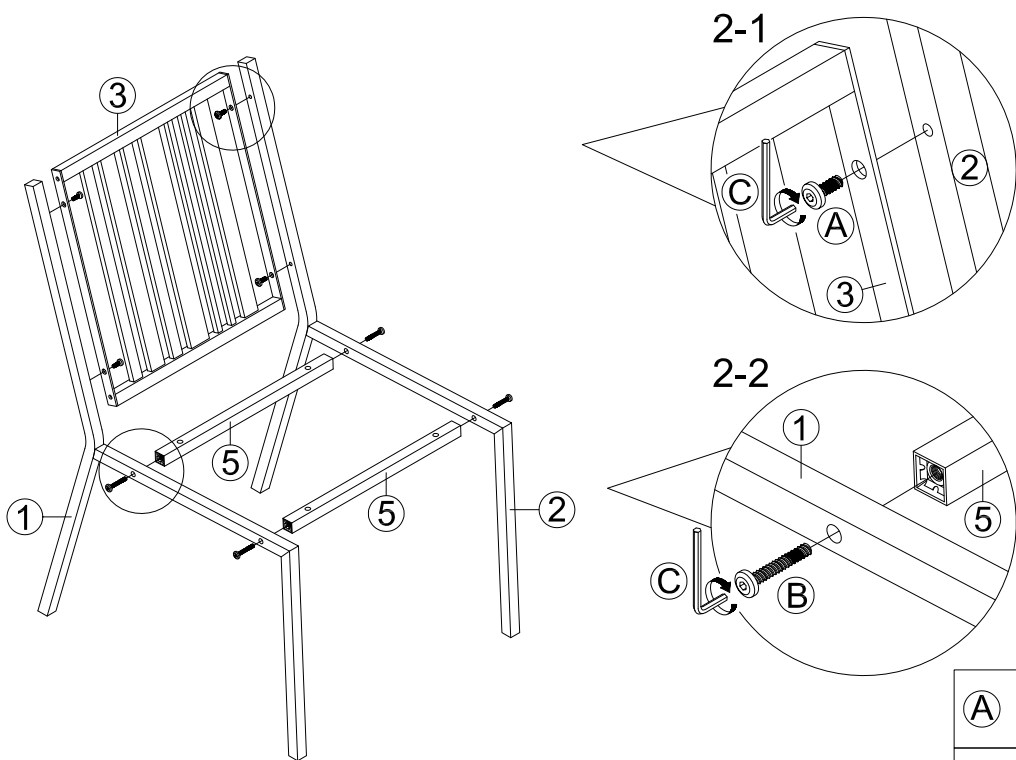


STEP 2.




(A)		4pcs
(B)		4pcs

How to Assemble:

STEP 3.

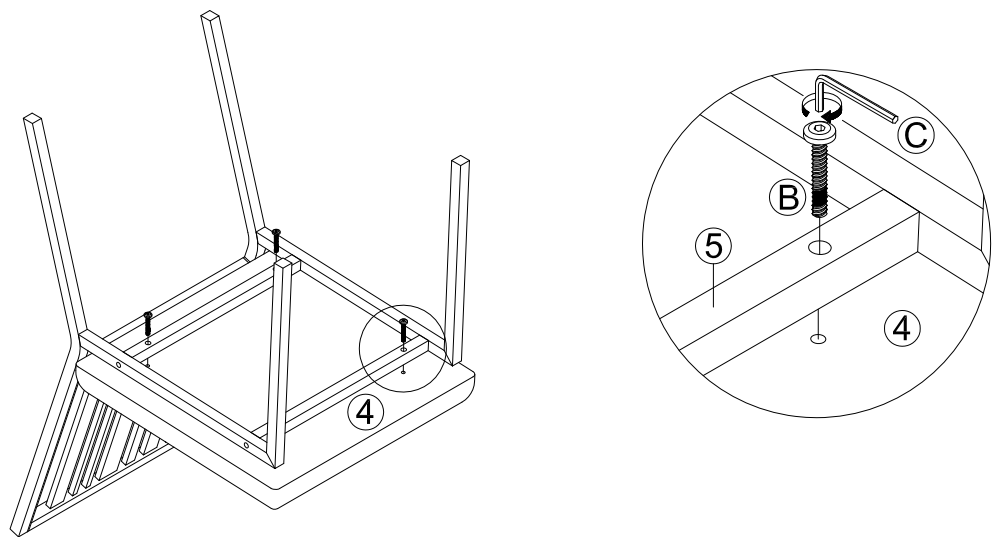

Ⓑ  4pcs

STEP 4.

