


# Adirondack Collection Hamilton Deck Chair Counter Height




## Assembly Guide

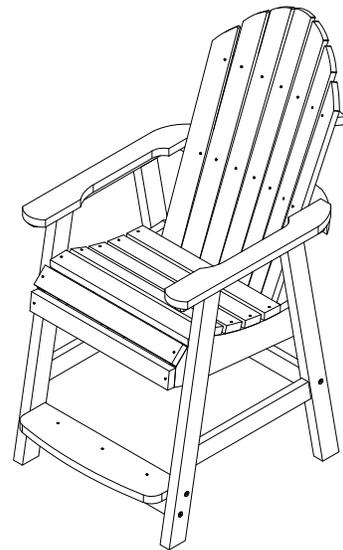


### IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started. Once all bolts are inserted, go back & tighten all the bolts.


### HARDWARE INCLUDED

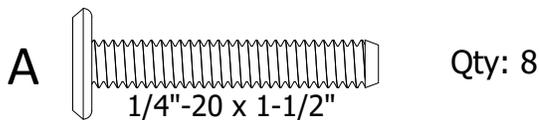

### TOOLS INCLUDED

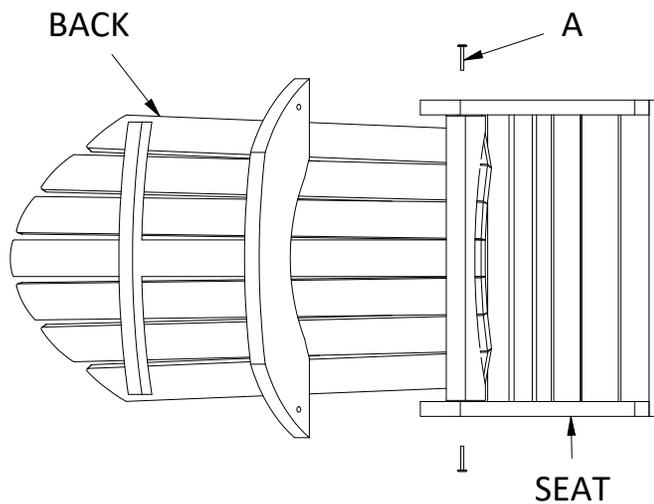


**1)** Insert (1) "A" Bolt into Lower Hole on Each Side to Attach Seat to Back. Make Sure the Back is Fully Upright. Make Bolts Snug, but Do Not Overtighten.

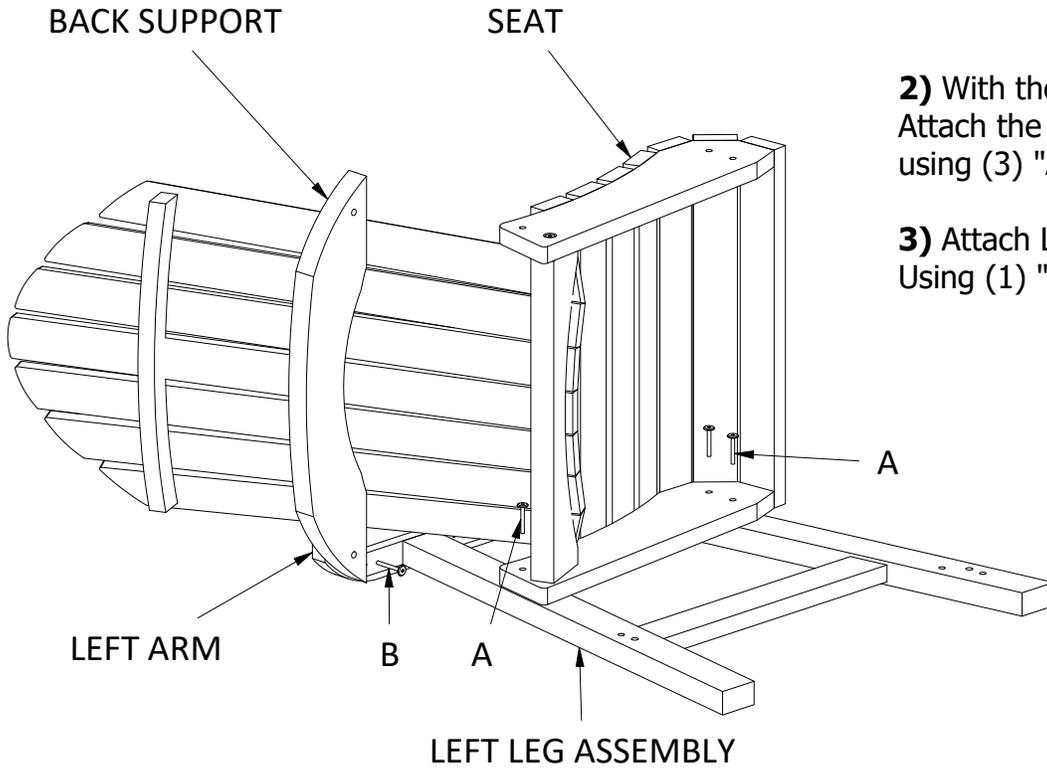

**2)** With the Chair Laying on its Left Side, Attach the Left Leg Assembly to the Seat using (3) "A" bolts.

**3)** Attach Left Arm to the Back Support Using (1) "B" Bolt.

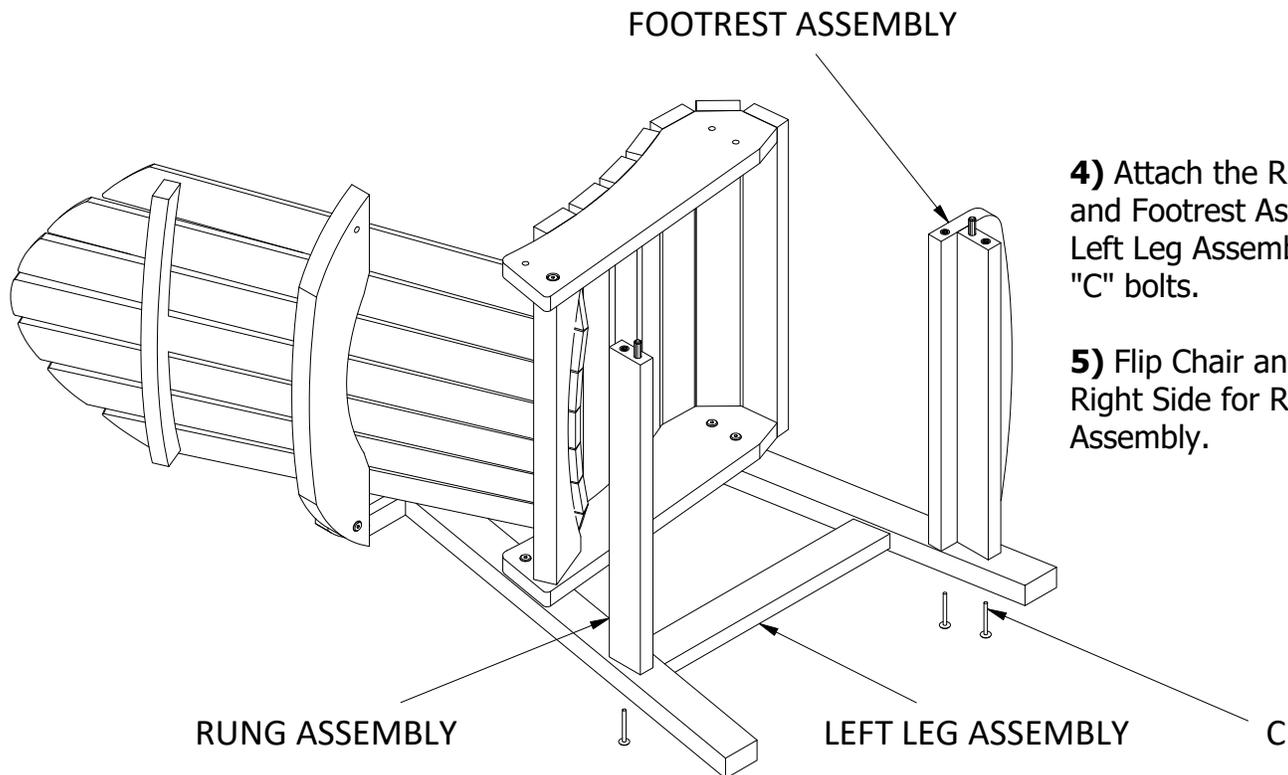

**4)** Attach the Rung Assembly and Footrest Assembly to the Left Leg Assembly using (3) "C" bolts.

**5)** Flip Chair and Repeat on Right Side for Right Leg Assembly.