

SHARE YOUR MASTERPIECE

We'd love to see your finished headboard! Share a picture on Facebook or Instagram and tag us using [@barnwalls](#).

LEAVE A REVIEW

Your feedback helps us to make better products and other people to know what to expect when they buy from Barn Walls. Please share your thoughts on your favorite platform.



We appreciate your feedback and for choosing Barn Walls.
Use this code for 10% off your next order.

THXBW



Barn Walls

219 S William Dillard Dr
Building 4 Suite 141
Gilbert, AZ 85233

info@barn-walls.com
888.773.6287



Barn Walls

ASSEMBLY INSTRUCTIONS

barn-walls.com

HANGER STYLE



For a helpful instructional video, scan this QR code with your mobile device.


Or go to the following URL:
bit.ly/bwfloat

This **Hanger Style Headboard** includes the hooks and nails that you'll need to install it. You'll also need a hammer, tape measure, and pencil.

TWIN **FULL** **QUEEN** **KING** **CALI**




1. Lay out your panels and arrange them. If you purchased a color mix, the panels are numbered and meant to be assembled from left to right when facing you. To ensure your headboard is centered, hang center panel(s) first.

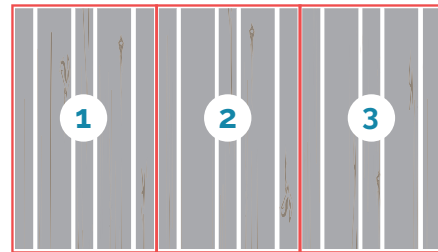

2. Mark the placement of the hooks (on the back of panel) on your wall then nail a picture hanger hook in each mark. Hang the panel on the hook. Repeat for all remaining panels and hooks.
3. Push your bed back into place and admire your new headboard! When cleaning your headboard, use wood oil polish and avoid chemicals.

LEANER STYLE

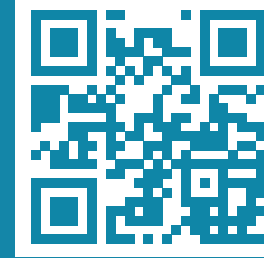

For a helpful instructional video, scan this QR code with your mobile device.


Or go to the following URL:
bit.ly/bwleaner

This **Leaner Style Headboard** includes the screws, brace boards and Velcro strips needed to install it. You'll also need a screwdriver or power drill.

TWIN **FULL** **QUEEN** **KING** **CALI**



1. Lay out your panels and arrange them. If you purchased a color mix, the panels are numbered and meant to be assembled from left to right.
2. Turn your panels over, placing them on a smooth surface, and attach the brace boards with the screws provided. Attach Velcro strips to the top brace board.

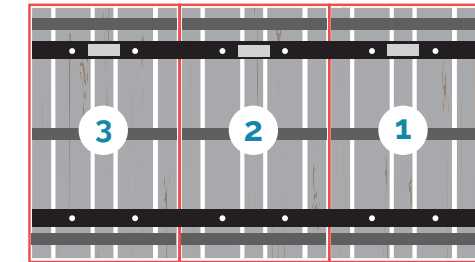

3. Position the headboard in the desired location, firmly press it against the wall to stick the Velcro to your wall.
4. Push your bed back into place and admire your new headboard! When cleaning your headboard, use wood oil polish and avoid chemicals.