


CONVENIENCE CONCEPTS

203600W
OXFORD STORAGE BENCH

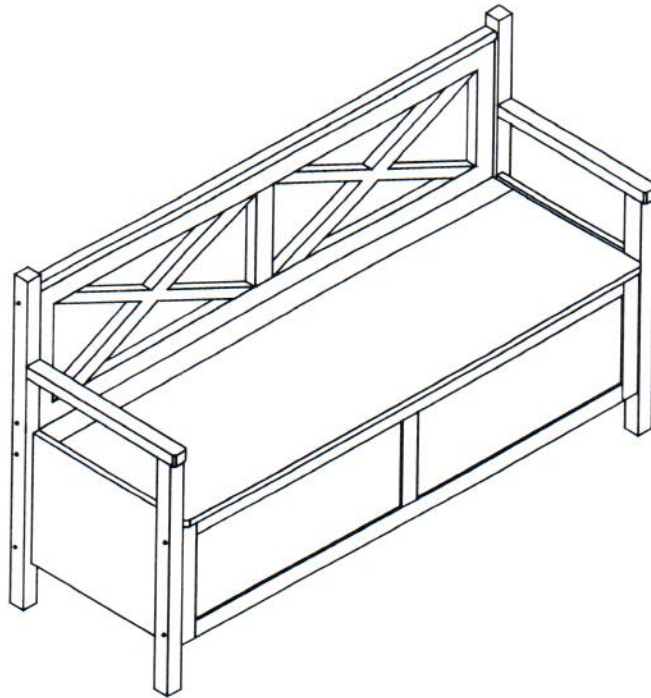

Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish.

Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.




Please do not return to the store

Broken or missing Hardware?

Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at
parts@convenience-concepts.com

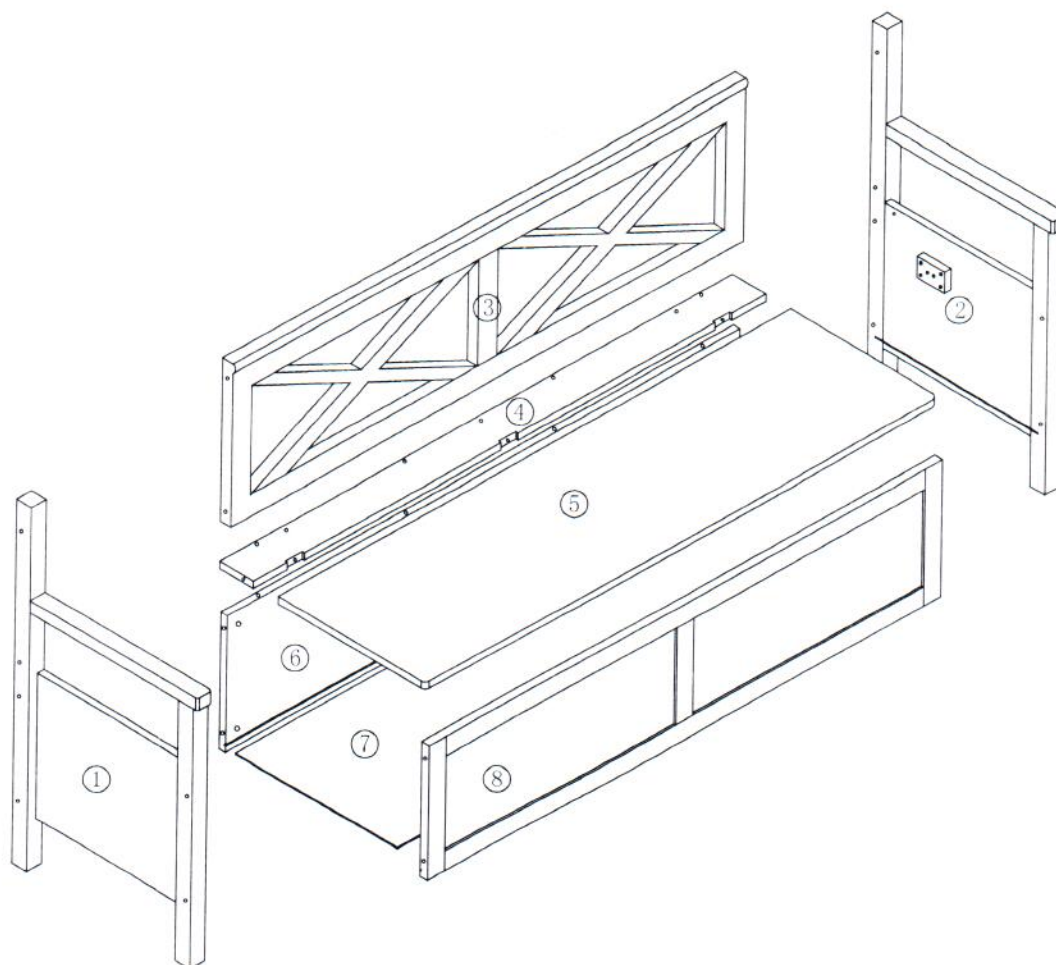

Long Bolt
A x12
6x60mm



Barrel Nut
B x12



Dowel
C x5
5.8x30mm



Screw
D x4
4x35mm



Small Hinge
E x3



Small Screw
F x12
3x12mm



Support hinges
G x1 H x1



Pan Head Screw
I x8
4x14mm



Panel Support
J x6



Screw
K x6
3x16mm




Sticker
L x16




Pad
M x3

Step 1

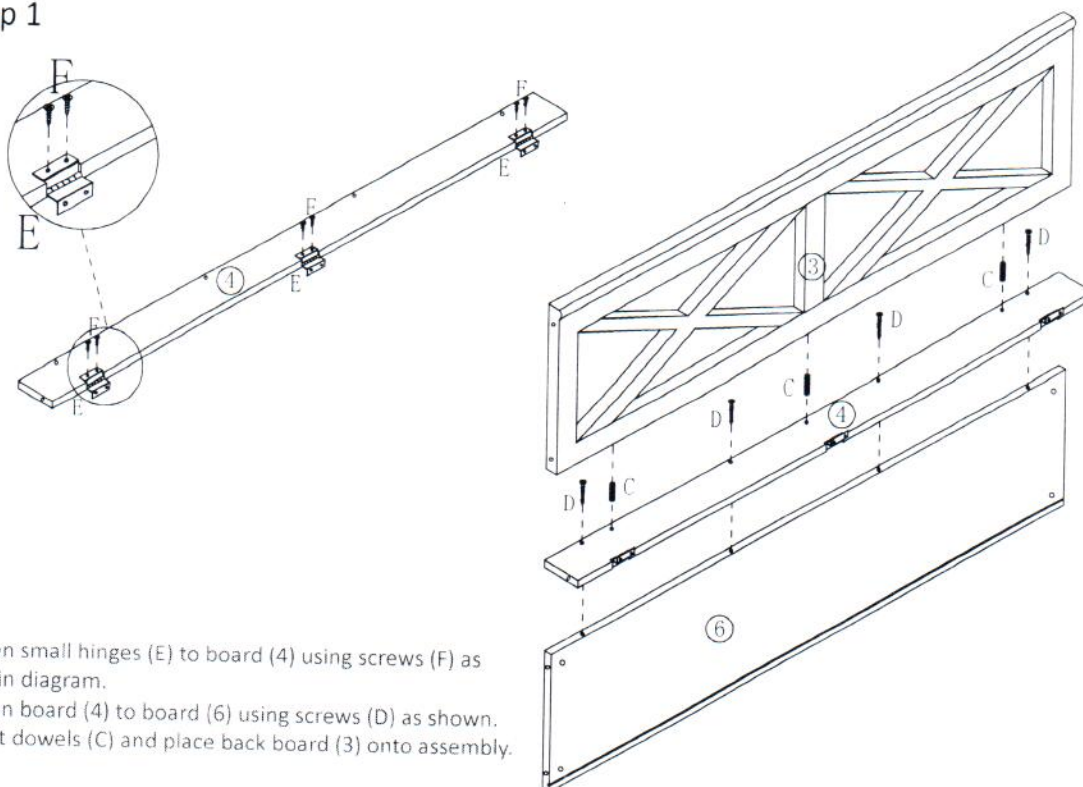

1. Fasten small hinges (E) to board (4) using screws (F) as shown in diagram.
2. Fasten board (4) to board (6) using screws (D) as shown.
3. Insert dowels (C) and place back board (3) onto assembly.


Step 2

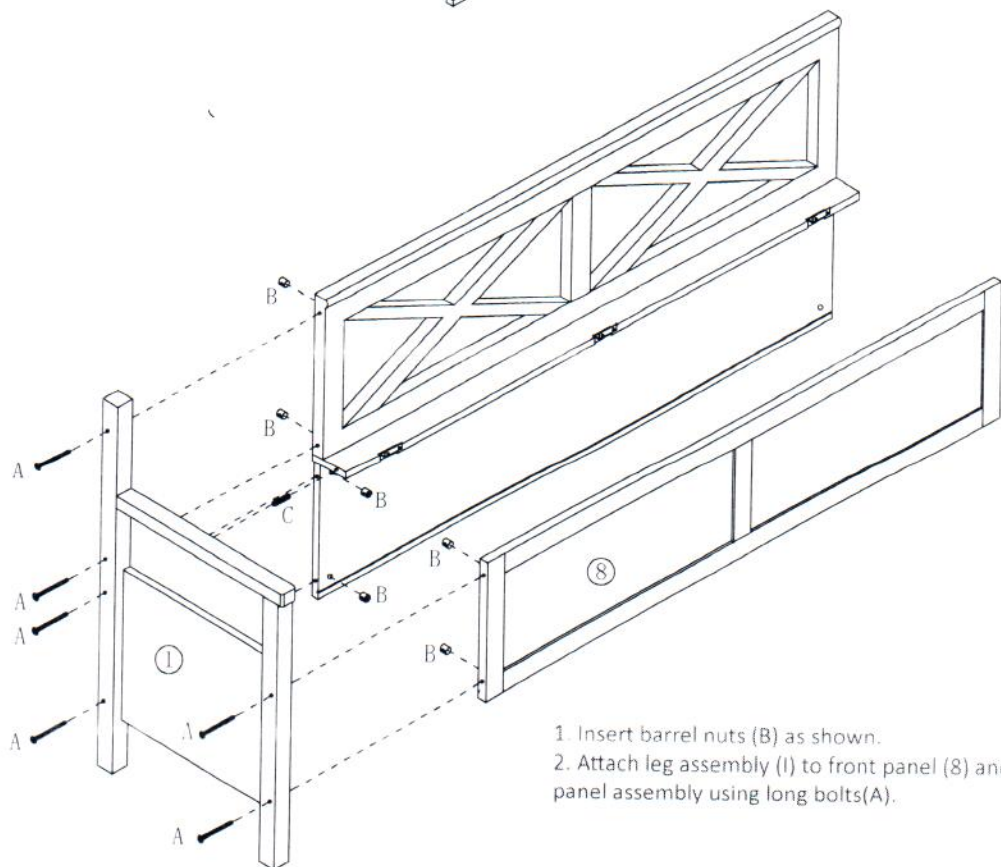

1. Insert barrel nuts (B) as shown.
2. Attach leg assembly (I) to front panel (8) and back panel assembly using long bolts (A).


NOTE: WHEN USING BARREL NUTS (B) MAKE SURE THE THREADED HOLE FACES THE BOLT (A) HOLE.

Step 3

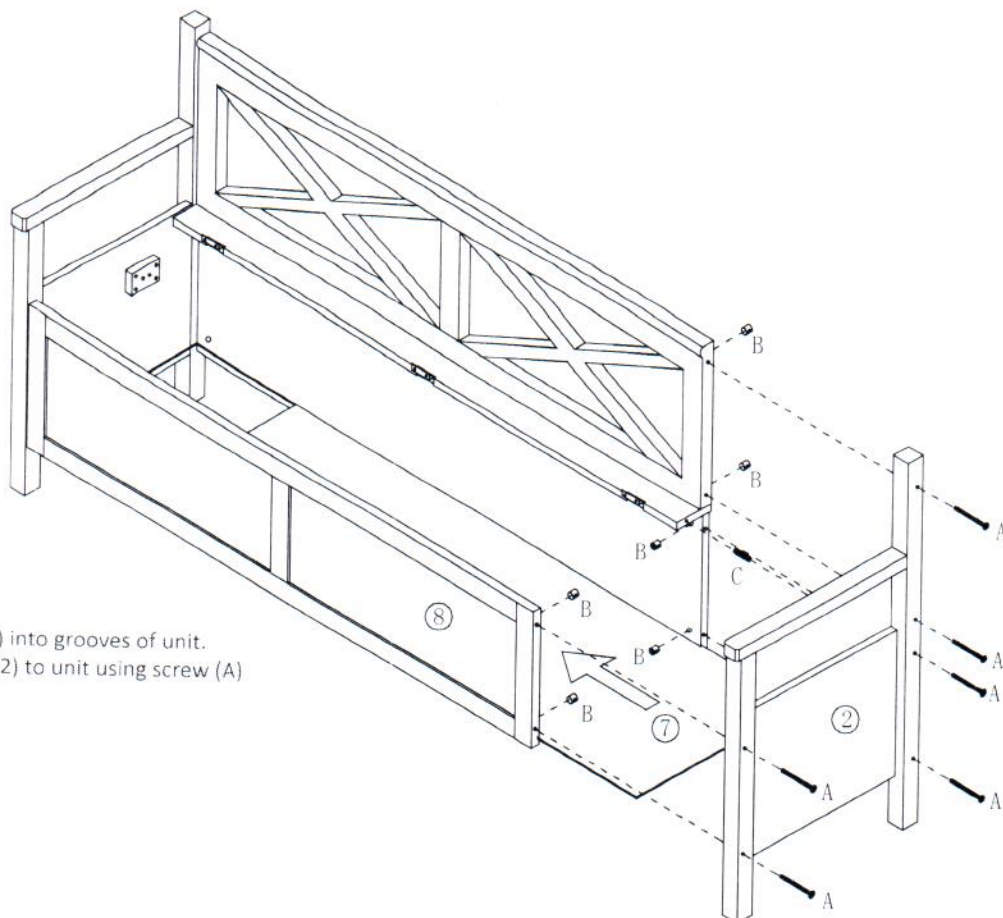


1. Slide bottom panel (7) into grooves of unit.
2. Attach leg assembly (2) to unit using screw (A) and nuts (B).

Step 4

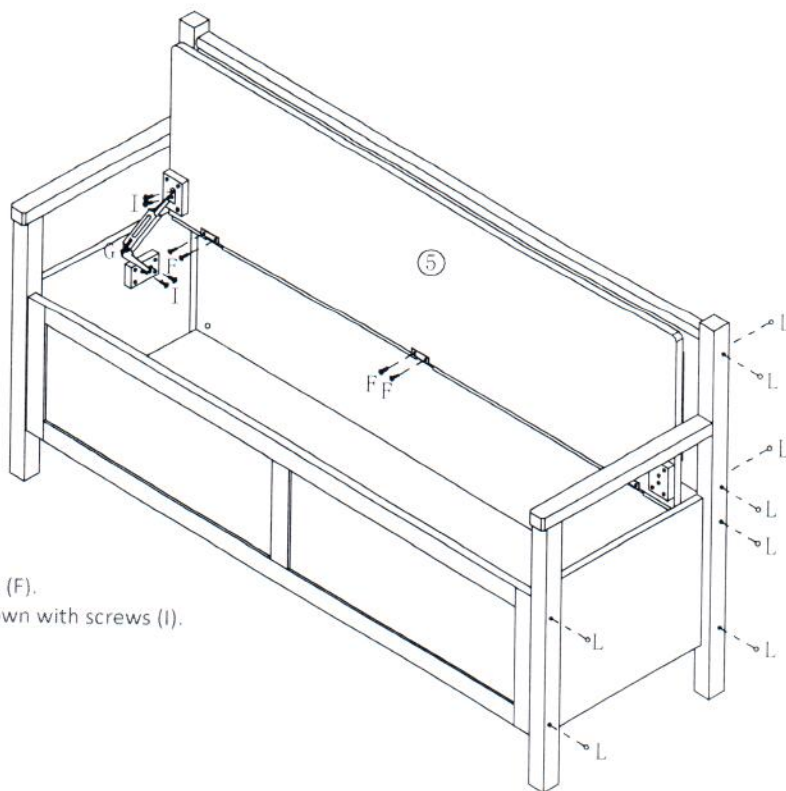

1. Attach bench lid (5) to unit with screws (F).
2. Install support hinges (G) to unit as shown with screws (I).
3. Place stickers (L) over screw holes.

Step 5

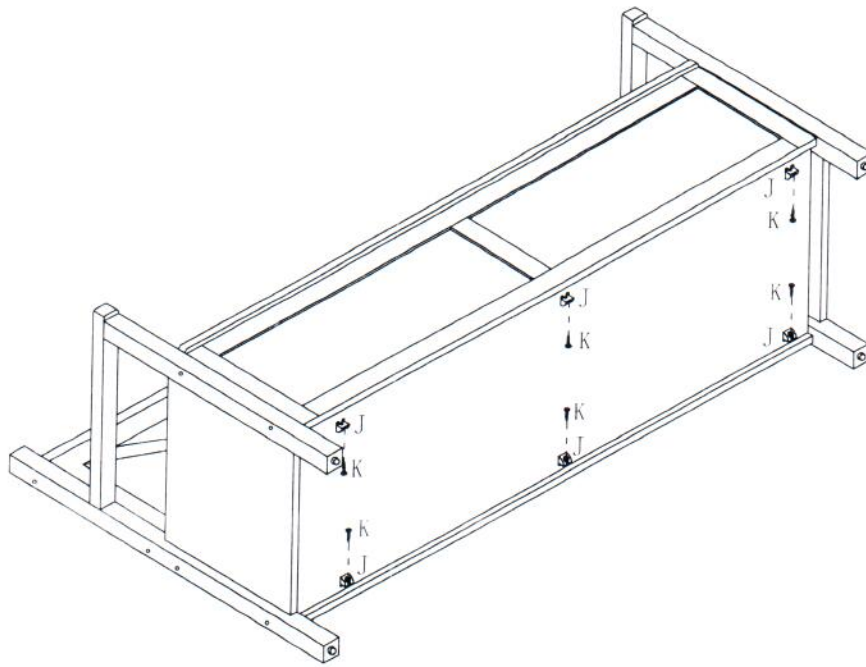

1. Attach panel support (J) to underside of unit with screws (K) as shown.