


HULALA

H O M E

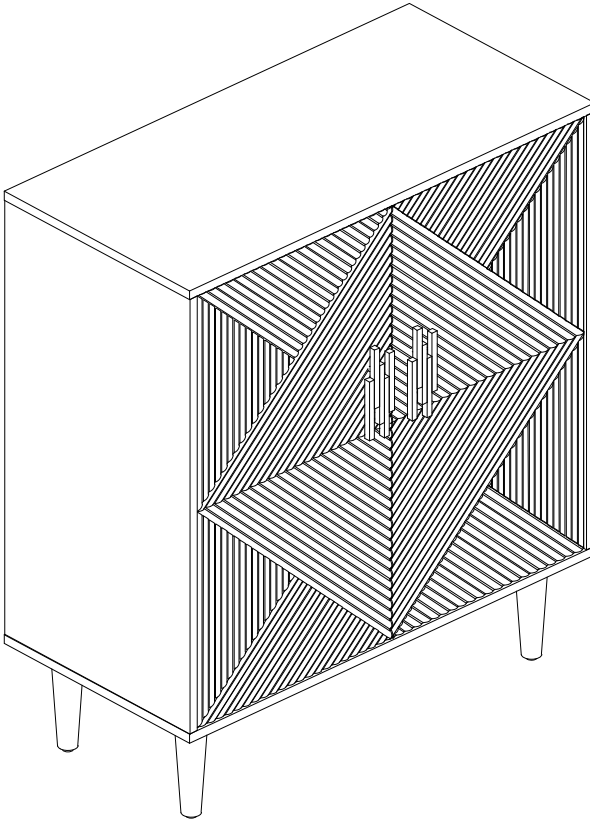

ITEM NO.SCTY0594

NOTE:


This brochure contains IMPORTANT safety info. Please read and keep for future reference.

MAINTAINANCE AND WARNING











- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner.
Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.



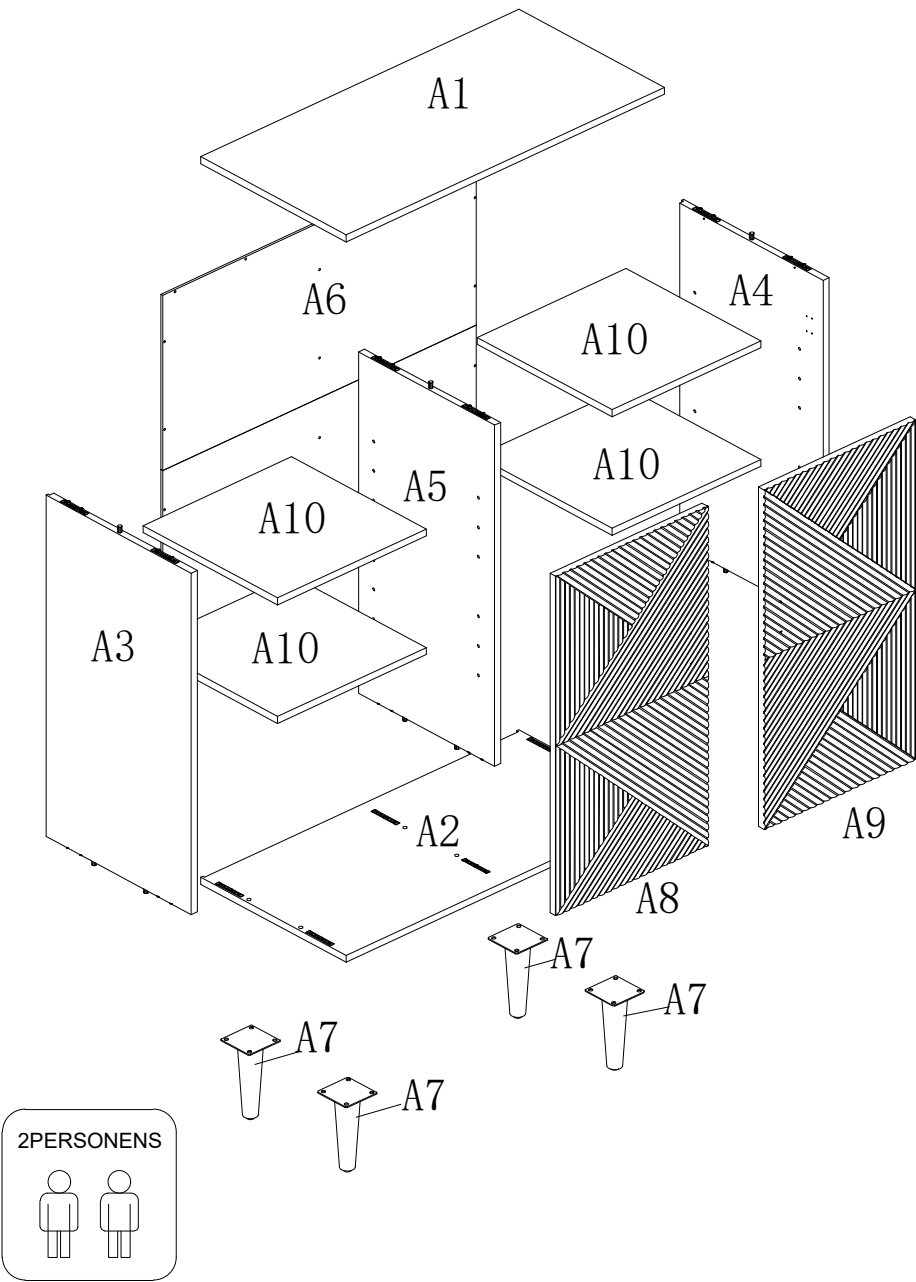







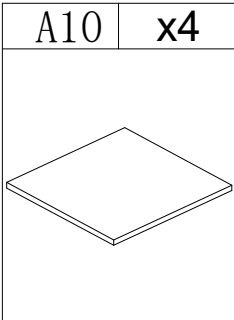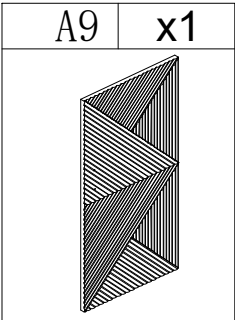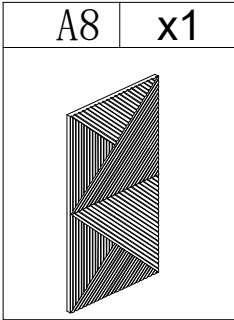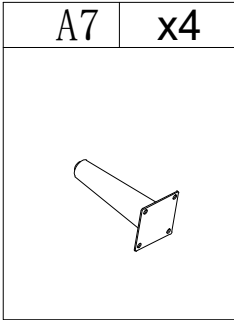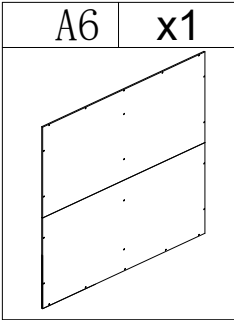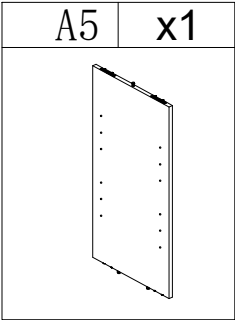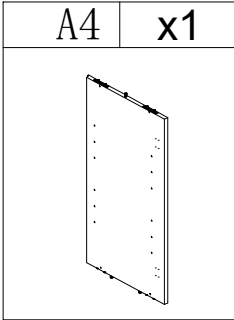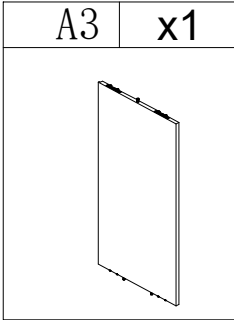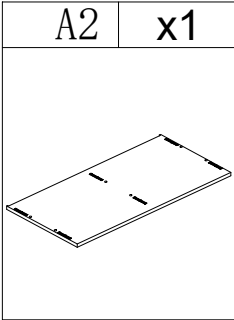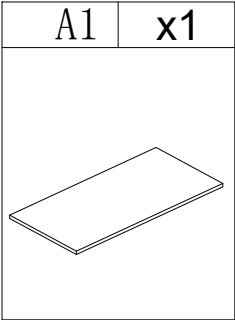




EXPLOSIVE VIEW





PARTS LIST 1








HARDWARE LIST

B1	x20	B2	x26	B3	x24	B4	x2	B5	x16	B6	x16				
															
1/4"*3/4"		Ø3*15MM		Ø3*15MM				1/4"*16MM							
B7	x2	B8	x4	B9	x4	B10	x4	B11	x4	B12	x4				
															
								Ø4*20MM		Ø4*39MM					
B13	x2														
															

TOOL LIST

B14	x1	B15	x1
			
1/4"			


HARDWARE SPARE LIST




B1	x2	B2	x2	B3	x2	B5	x2	B6	x1
									
1/4"*3/4"		Ø3*15MM		Ø3*15MM		1/4"*16MM			

ASSEMBLY INSTRUCTIONS

STEP-1

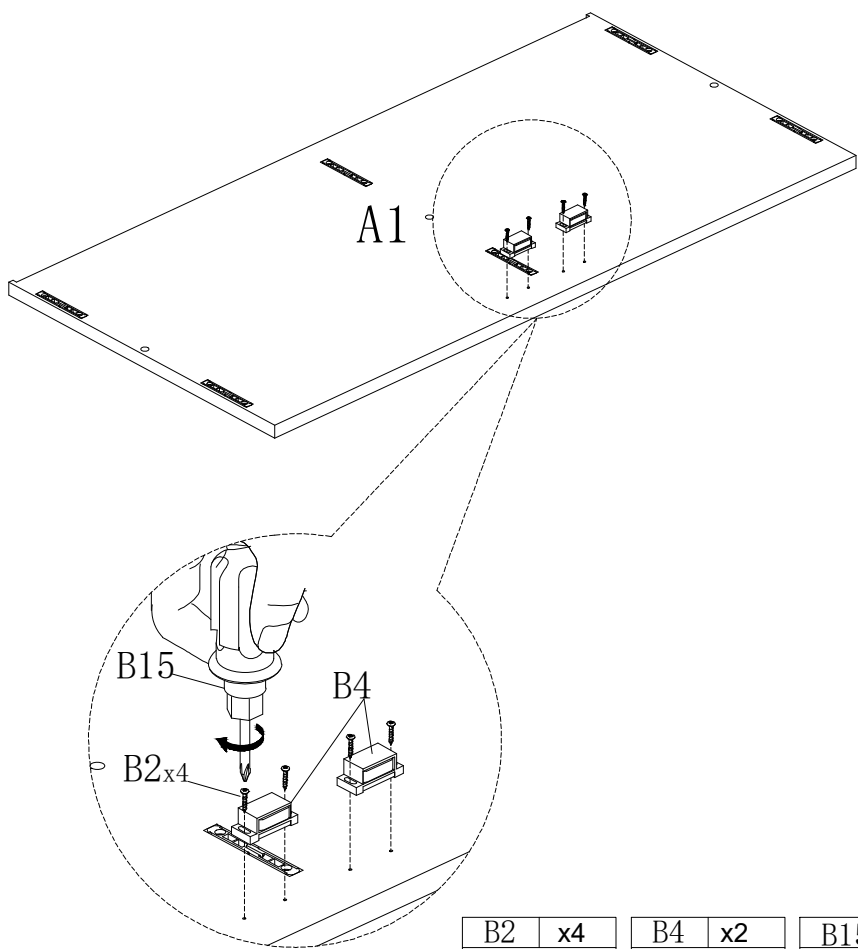1. Use screw B2 to attach magnetic catch (B4) to the corresponding hole of panel(A1), tighten screw with screwdriver B15.




B2	x4	B4	x2	B15	x1
					
Ø3*15MM					

ASSEMBLY INSTRUCTIONS

STEP-2


1.Insert part (A4&A3) into part (A1),make sure all holes aligned and then tighten it with allen key B14 as picture show.

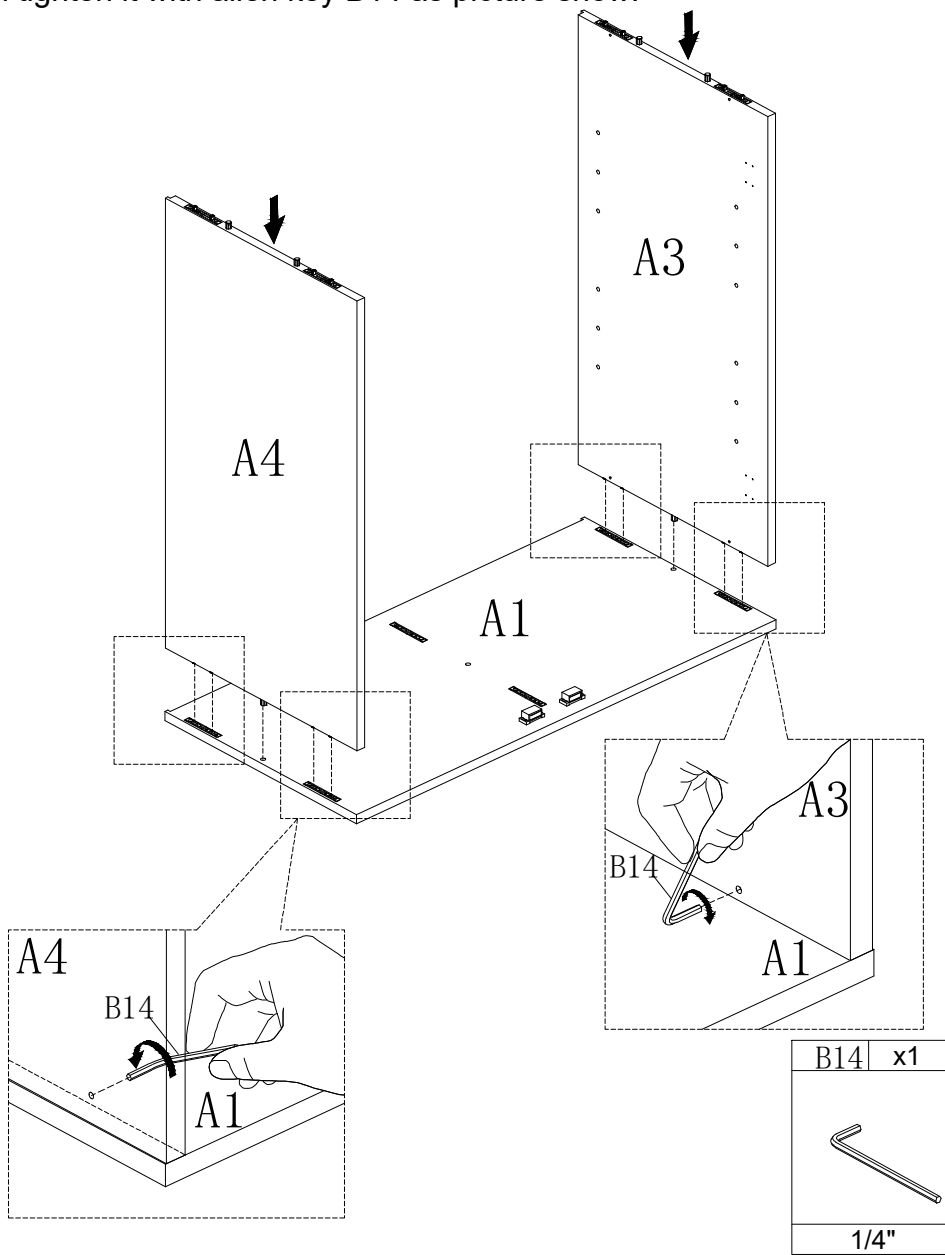

ASSEMBLY INSTRUCTIONS

STEP-3


1.Insert part (A5) into part (A1),make sure all holes aligned and then tighten it with allen key B14 as picture show.

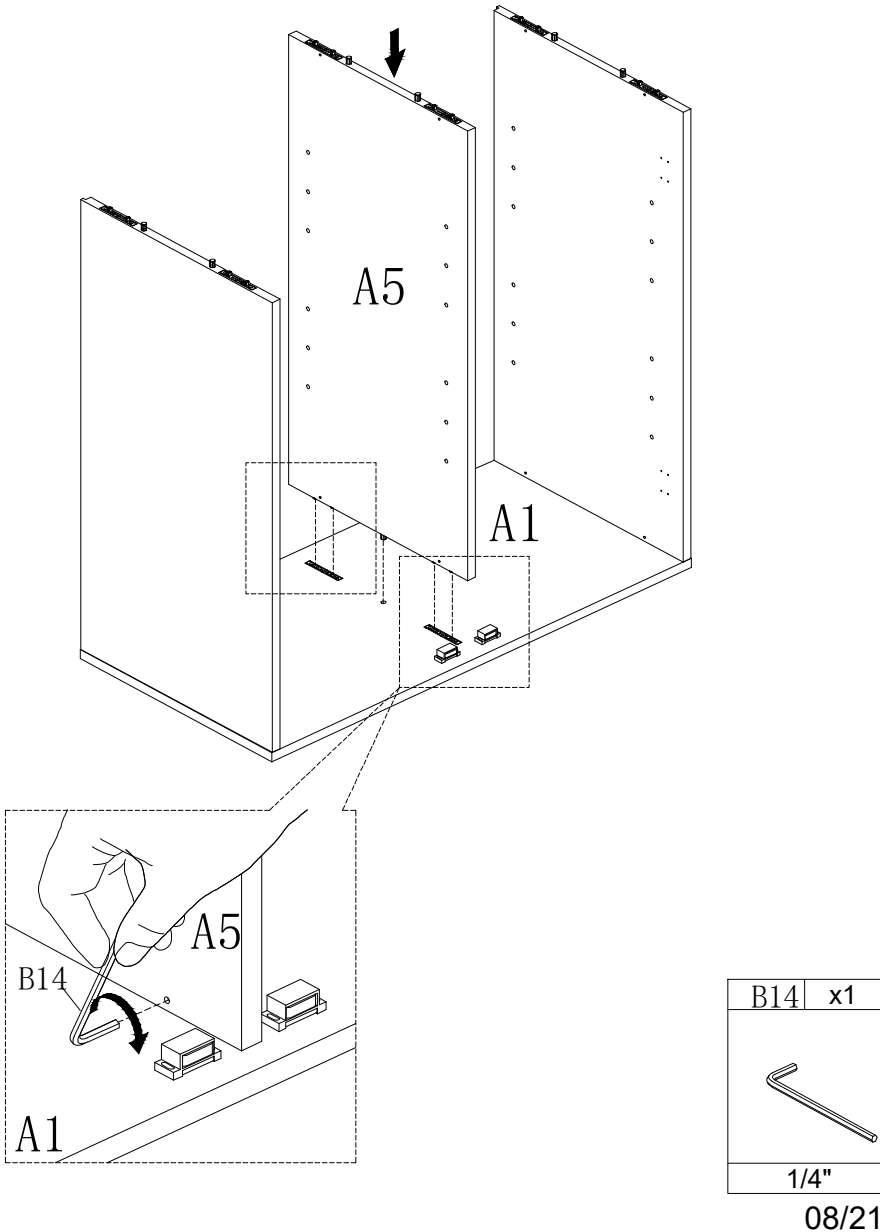

ASSEMBLY INSTRUCTIONS

STEP-4

1.Insert bottom panel (A2) into the corresponding hole of preassembled step 3 , make sure all holes aligned and use allen key B14 to tighten it as picture show.

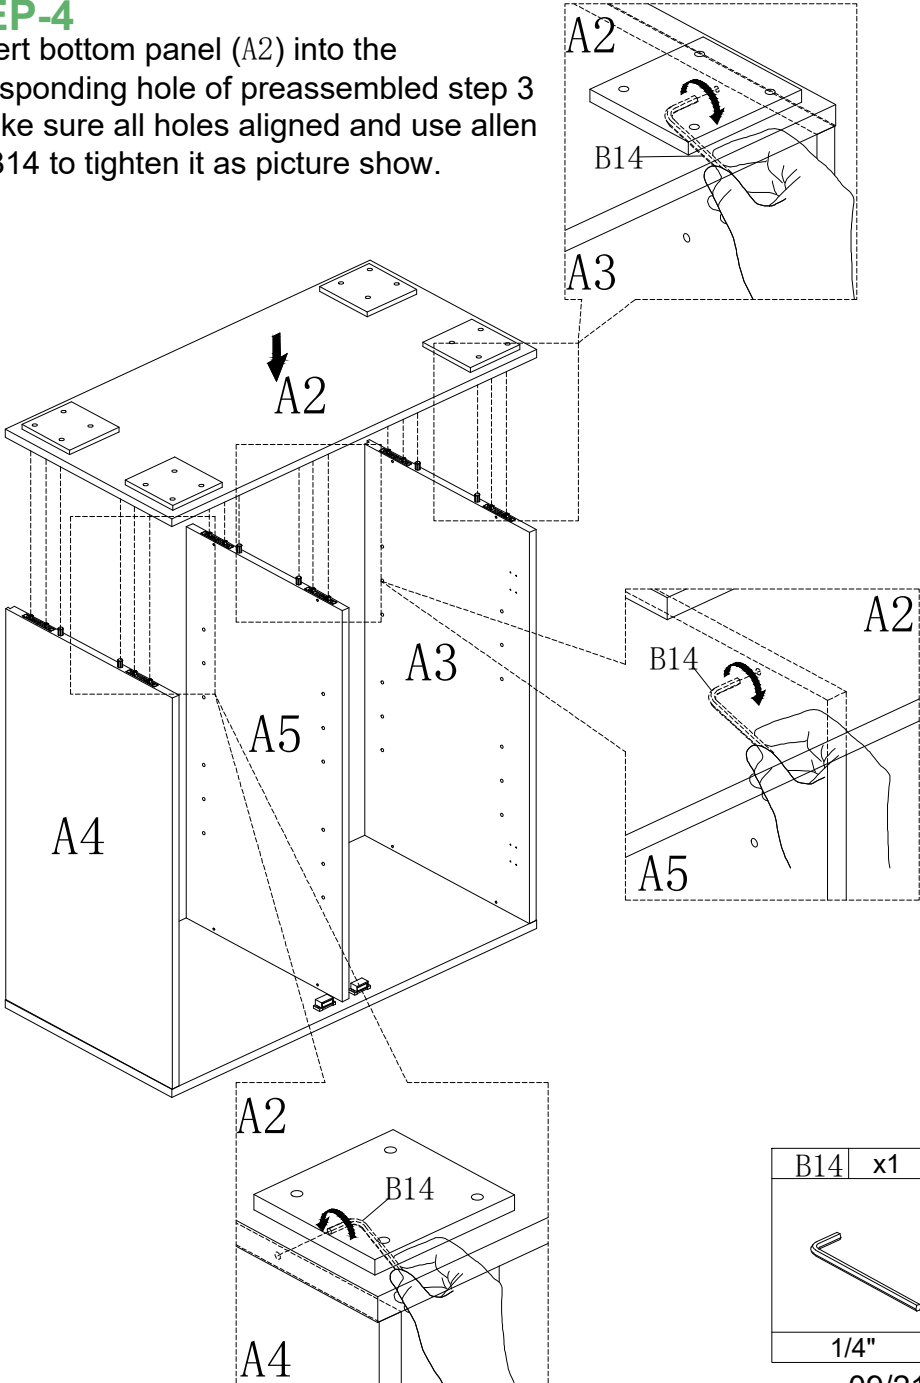


B14	x1
1/4"	

ASSEMBLY INSTRUCTIONS

STEP-5


1.Insert gasket B5 into screw B1. install leg A7 on of bottom panel A2, then tighten the screw with an Allen key B14.

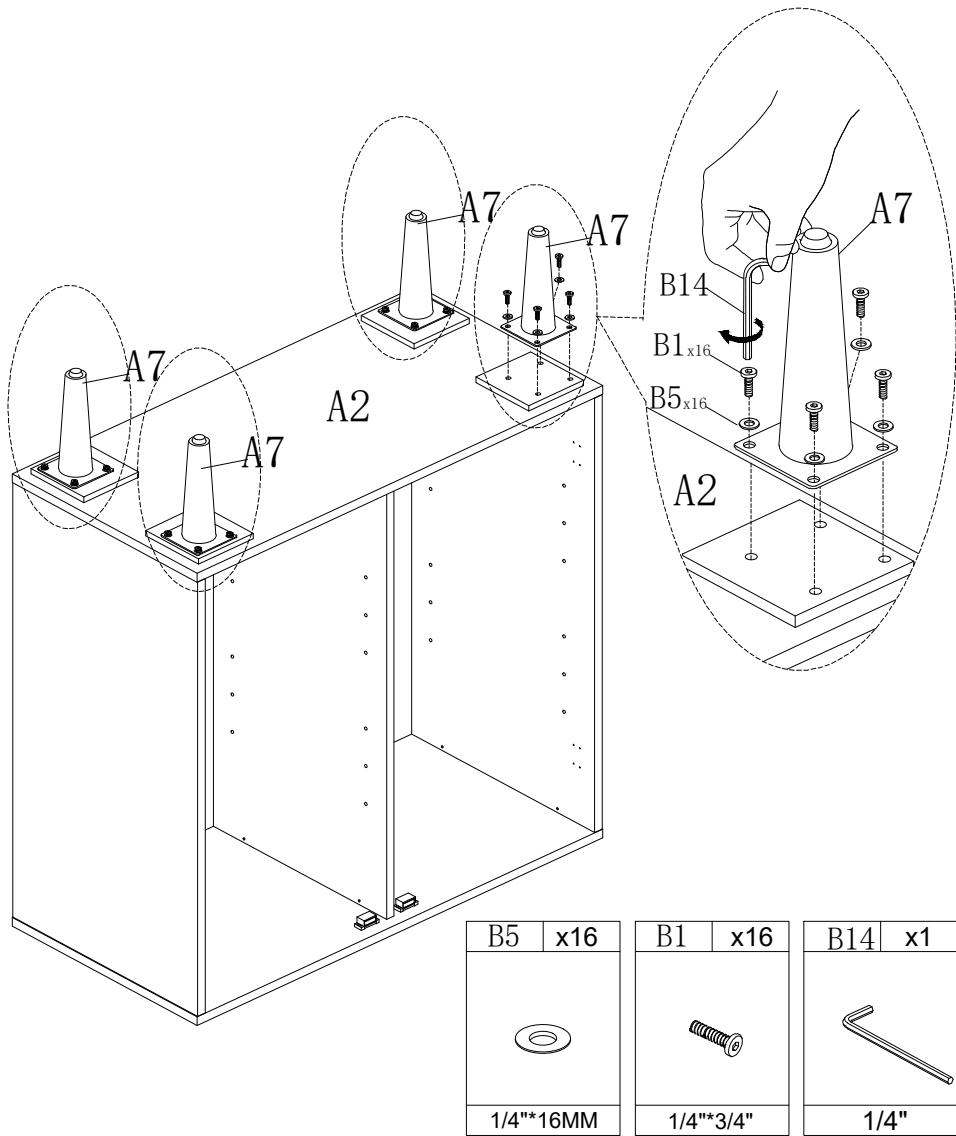



ASSEMBLY INSTRUCTIONS

STEP-6


1.insert back panel(A6) into the groove of preassembled step 5,make sure all holes aligned and use screw B2 to attach them , tighten screw B2 with screwdriver B15.

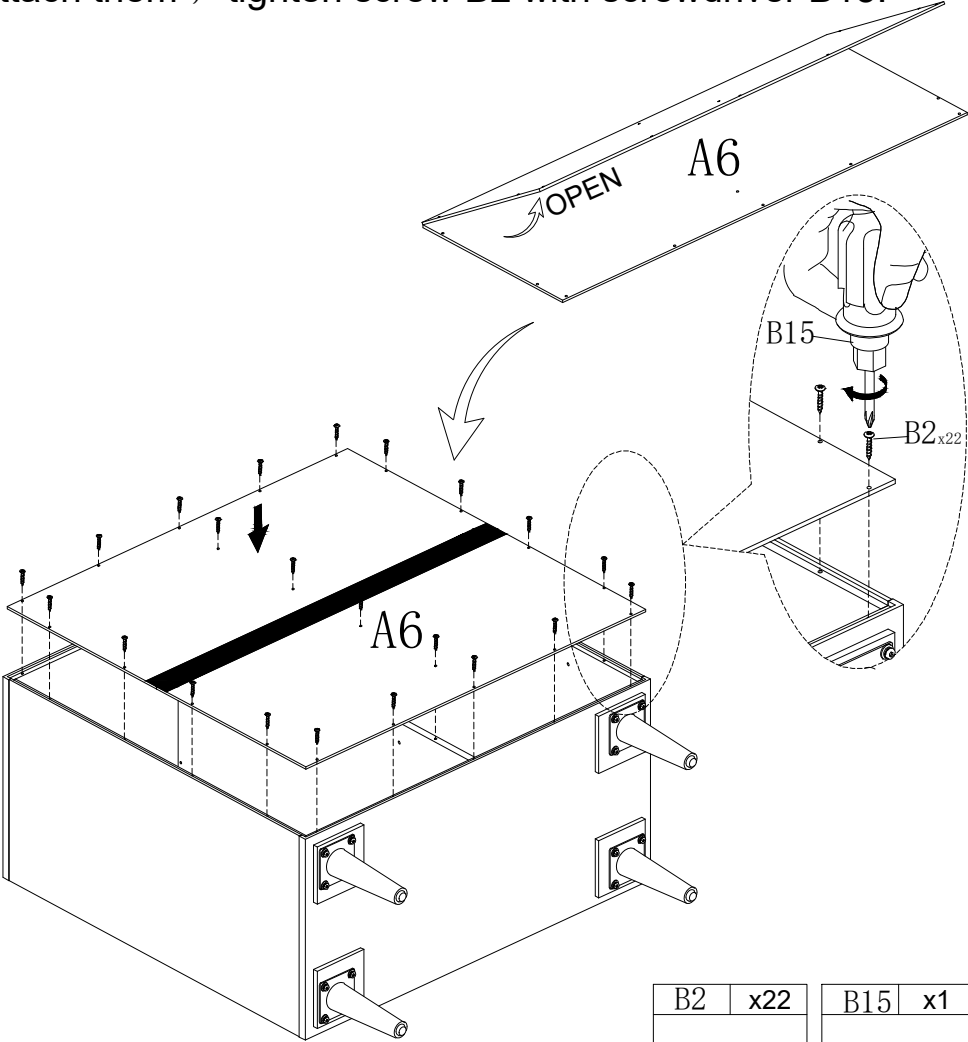

B2	x22	B15	x1
			
Ø3*15MM			

ASSEMBLY INSTRUCTIONS


STEP-7

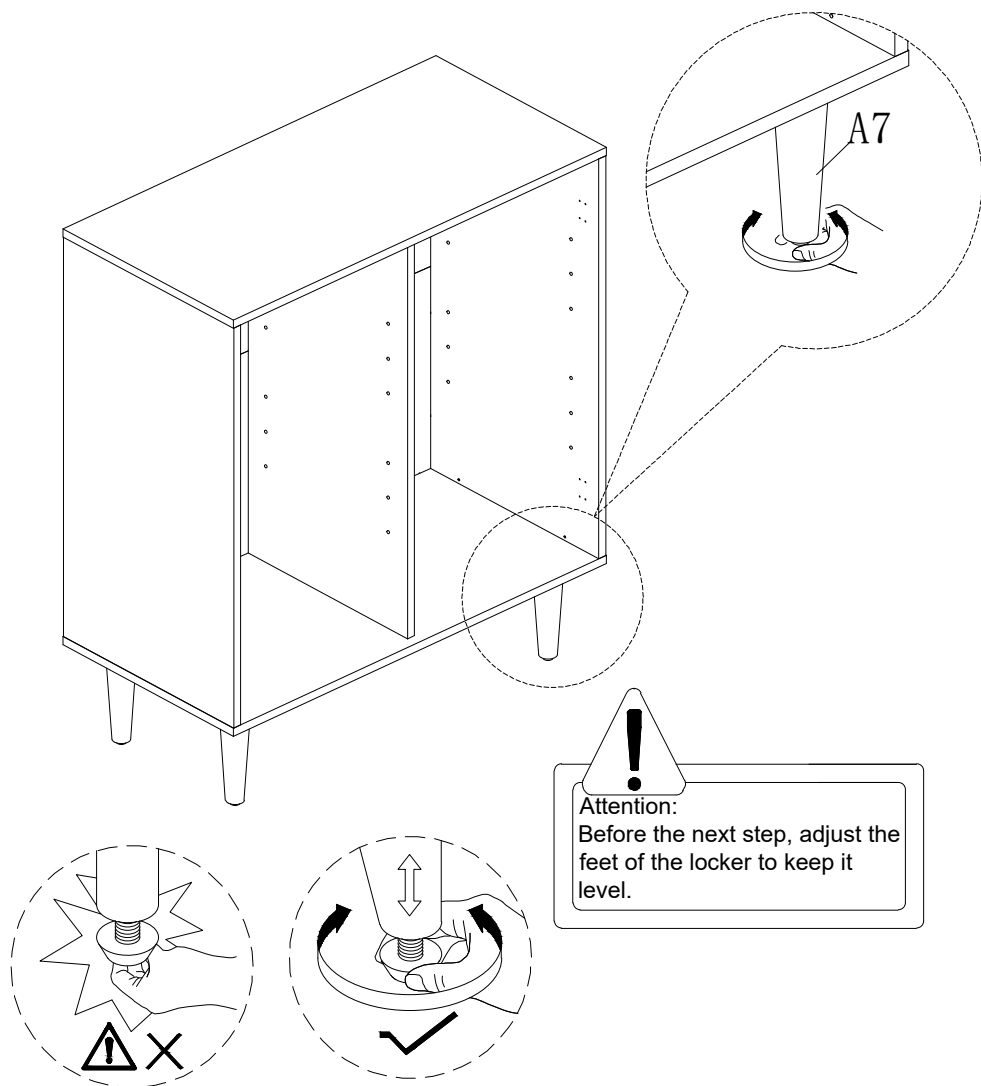




ASSEMBLY INSTRUCTIONS

STEP-8

1. Use screw B3 to attach hinge B8 to the corresponding hole of panel (A8&A9), tighten screw with screwdriver B15.

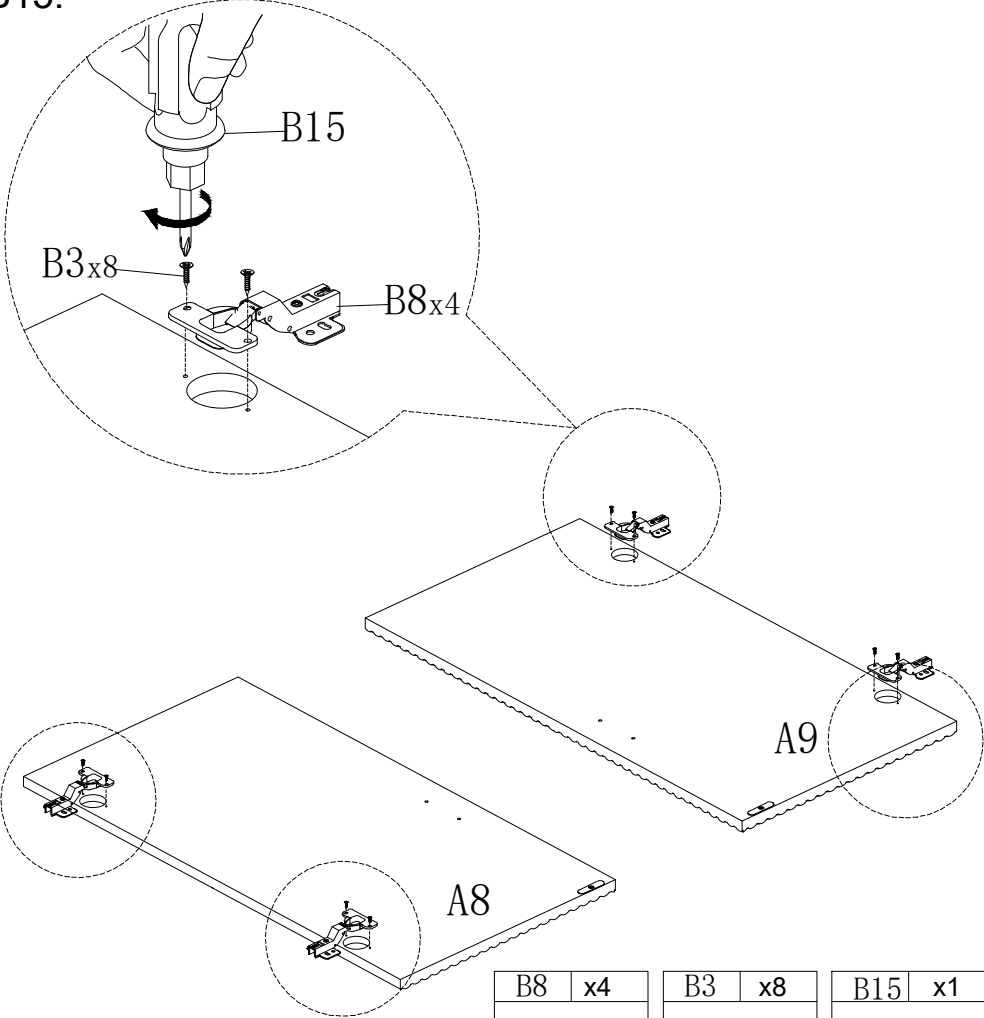


B8	x4	B3	x8	B15	x1
					
		Ø3*15MM			

ASSEMBLY INSTRUCTIONS


STEP-9

1.Move door (A8&A9) to corresponding position of side panel (A3&A4), make sure all holes aligned and use screw B3 to attach them, tighten screw B1 with screwdriver B15.

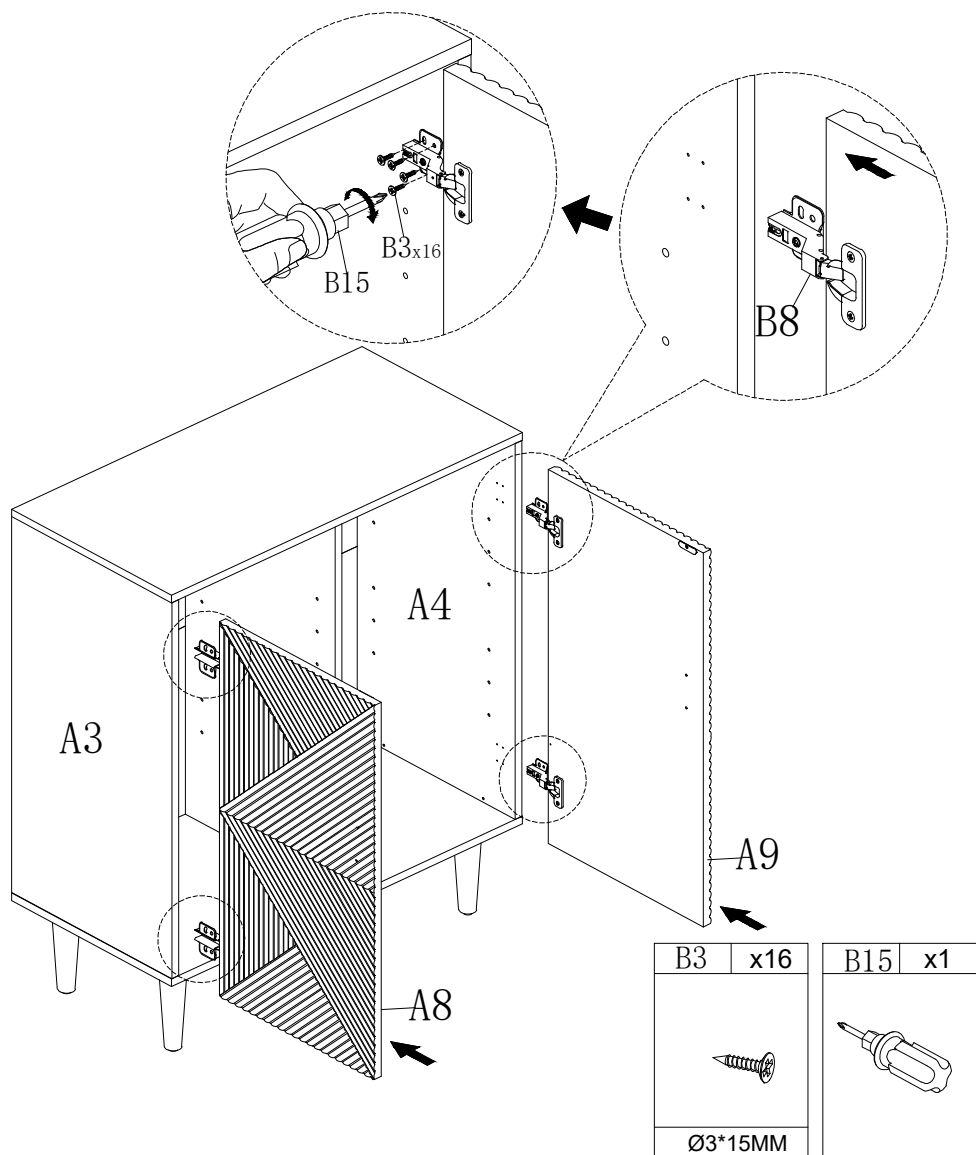


ASSEMBLY INSTRUCTIONS


Concealed hinges are three-way adjustable:

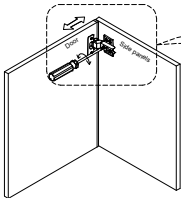


Horizontal
by screw adjustment!

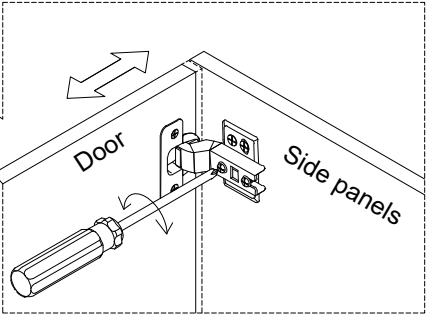


Concealed hinges are three-way adjustable:

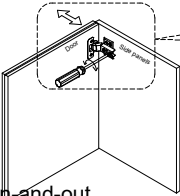


In-and-out
by loosening the hinge arm
mounting screw or via cam
adjustment!

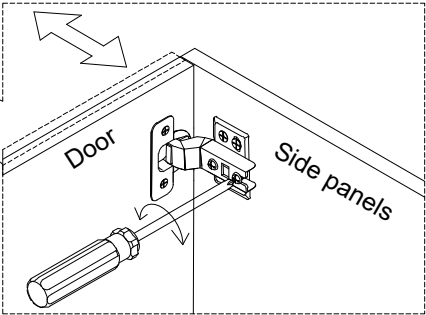

Concealed hinges are three-way adjustable:

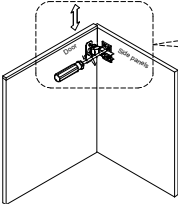

Vertical via slots in
the mounting plate
or via cam adjustment!

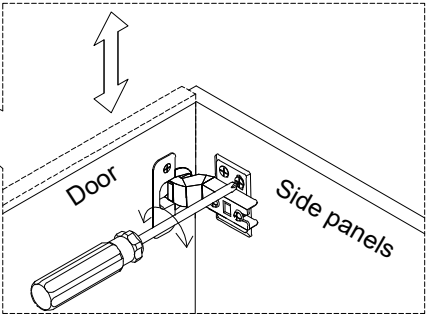

Hinge adjustment method




Video for door adjustment

ASSEMBLY INSTRUCTIONS

STEP-10


1.Insert shelf holder B6 into the corresponding hole of panel (A3&A5&A4) and then attach panel (A10) to it.

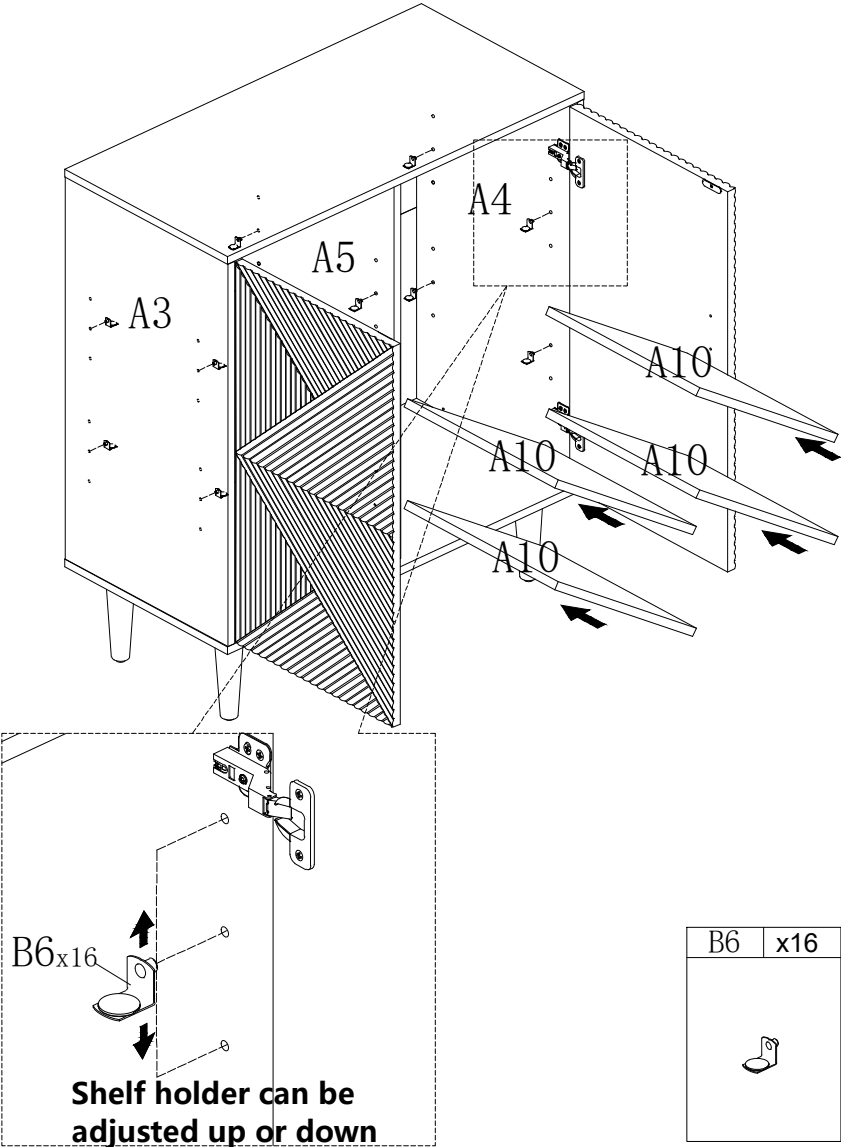




ASSEMBLY INSTRUCTIONS

STEP-11

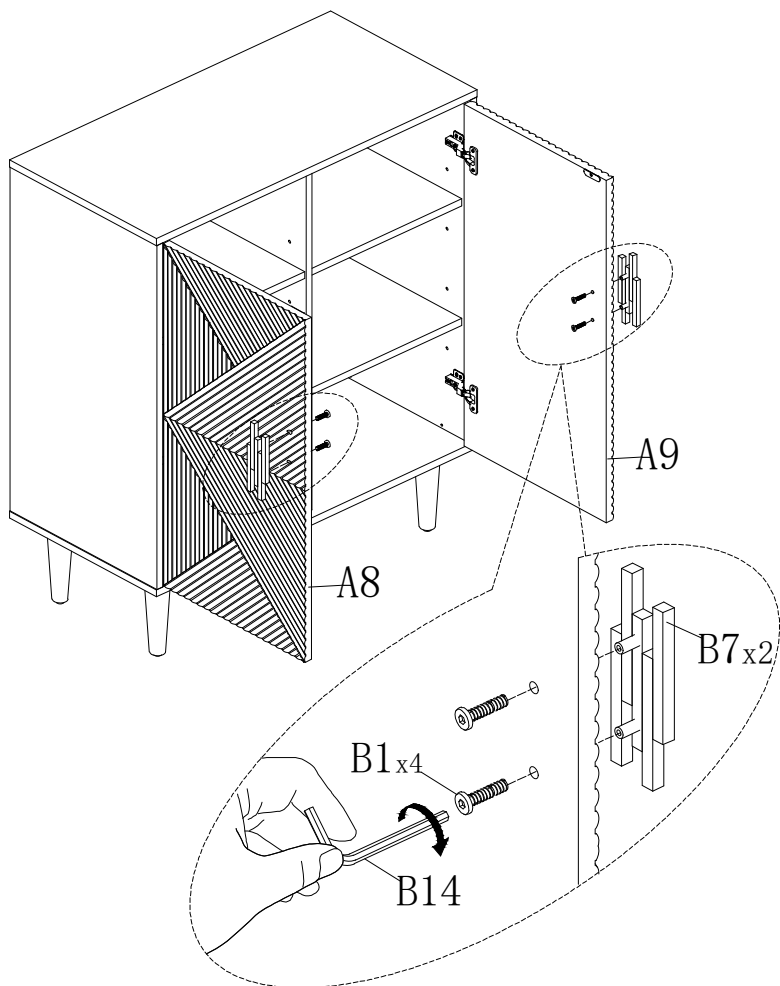1. Use bolt B1 to attach handle B7 to the corresponding hole of panel(A8&A9), tighten screw with Allen key B14.




B7	x2	B1	x4	B14	x1
					
		1/4"x3/4"		1/4"	

ASSEMBLY INSTRUCTIONS





STEP-12

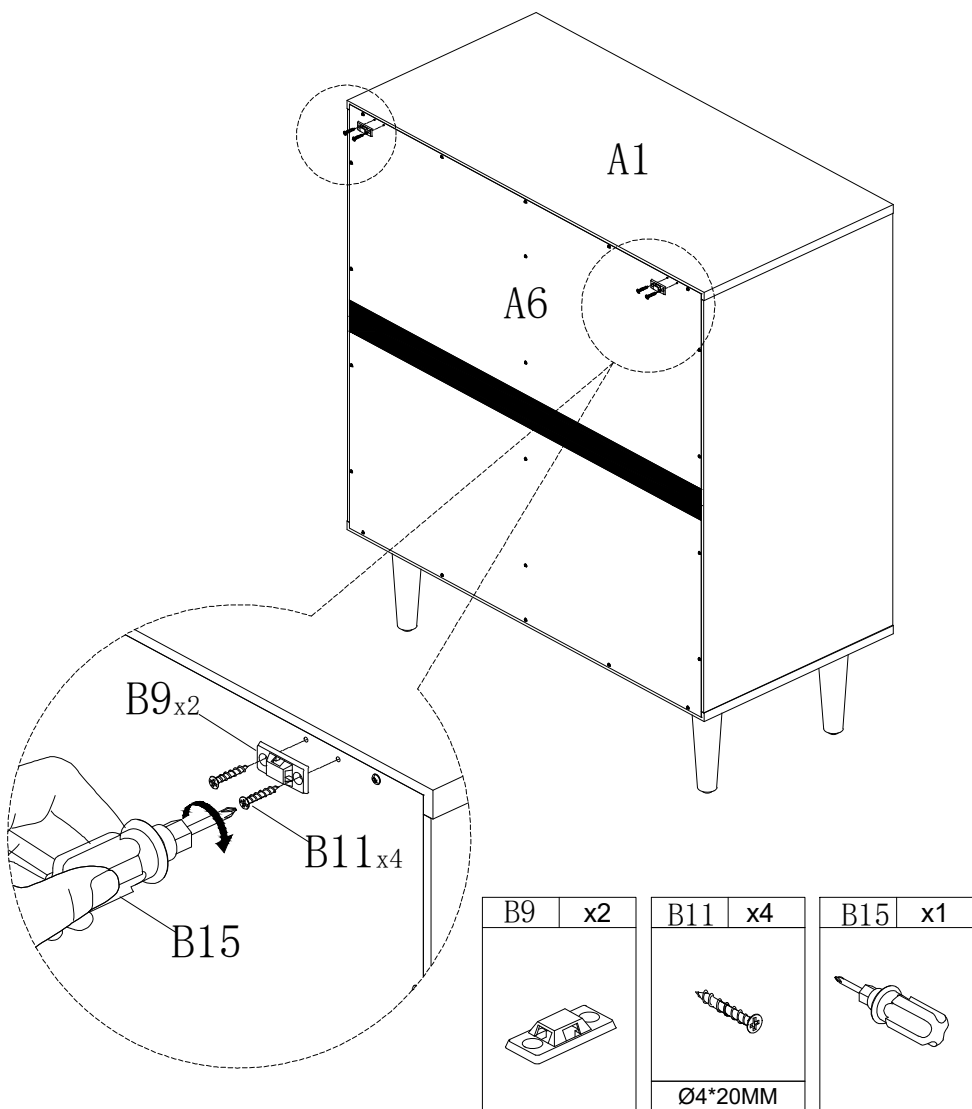1. Use screw B11 to attach part B9 to preassembly unit at step 11 ,tighten screws with screwdriver B15.




ASSEMBLY INSTRUCTIONS



STEP-13

B9	x2	B10	x4	B12	x4	B15	x1
							
				Ø4*39MM			

- 1.Install the anti-collapse device.
- 2.Mark the position on the wall, that corresponds to the location of part B9 on the of panel (A1); Drill and insert the expandable screw B10 by hammer.
- 3.Assemble the part B9 to the wall. Align the hole in the part B9 with the expandable screw B10, use screw B12 to attach it and tighten by screwdriverB15.

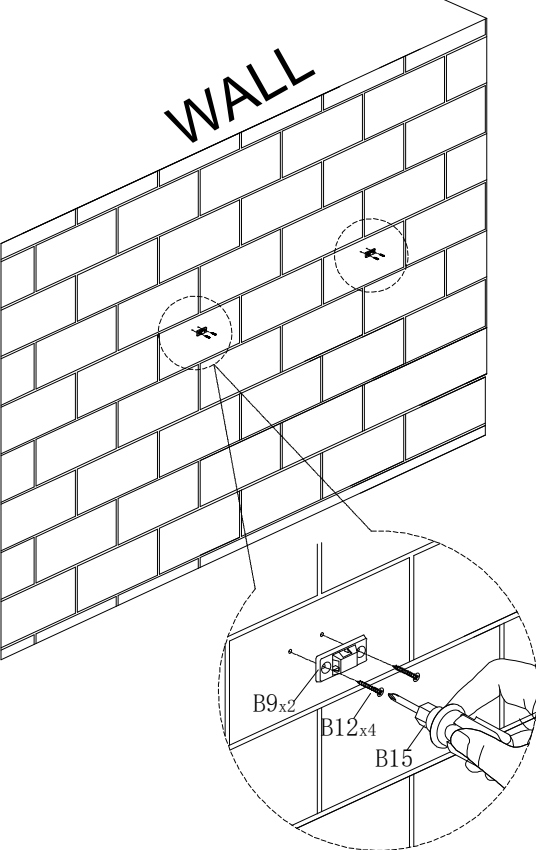

NOT PROVIDED

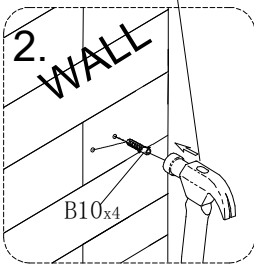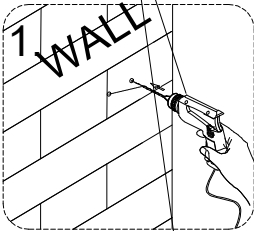


ASSEMBLY INSTRUCTIONS

STEP-14



1.Let the plastic belt B13 pass through the both part B9 and pull tightly.

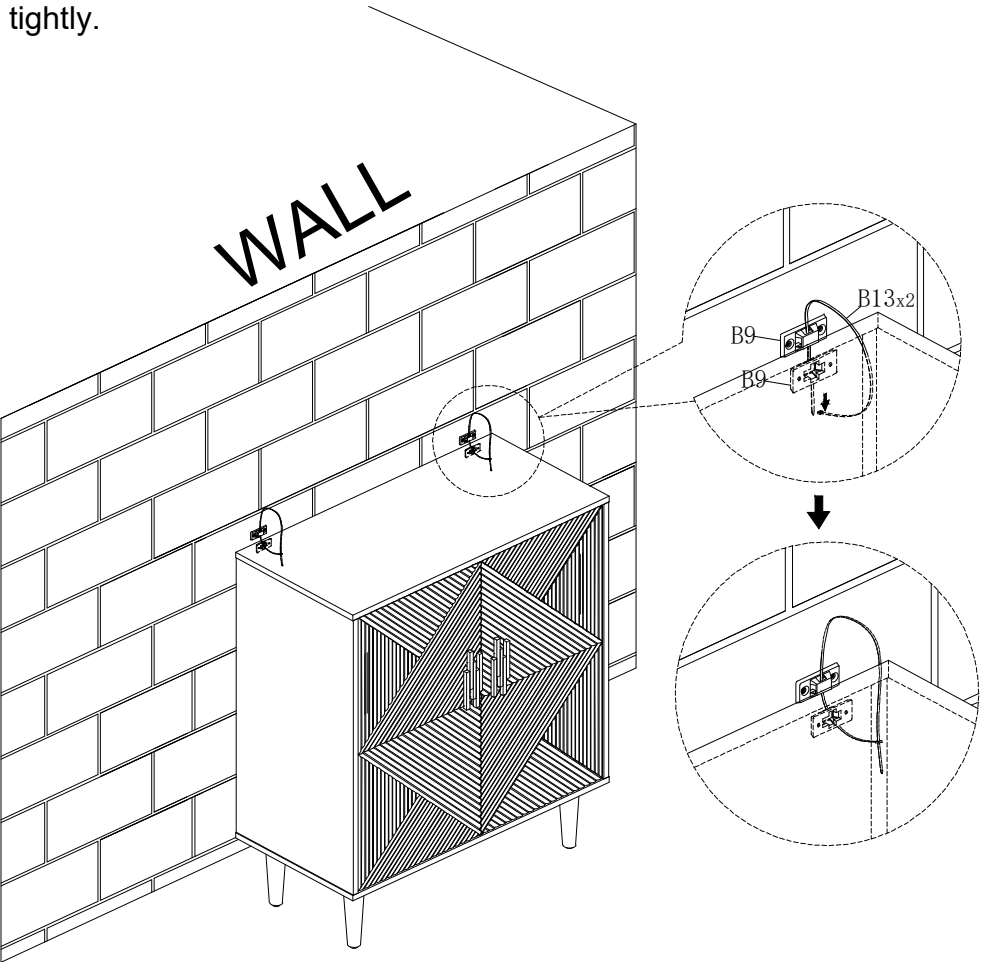

WARRANTY

1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
customerservice@hulalahome.com
For return, please check the return policy with
the retailer or market place you bought from.

Appreciate your purchasing from us.
Pop up your life by our furniture piece!