


Trim Diagram
Refrax™ Pendant RE0205A

Important: Label on back
contains important information on your
crystal option. Please save in case you
ever need to order matching crystal.

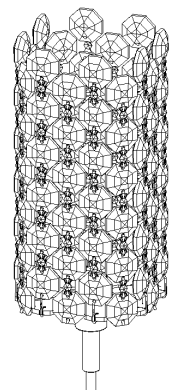


SCHONBEK®



SCHONBEK®

Trim Diagram
Refrax™ Pendant RE0205A

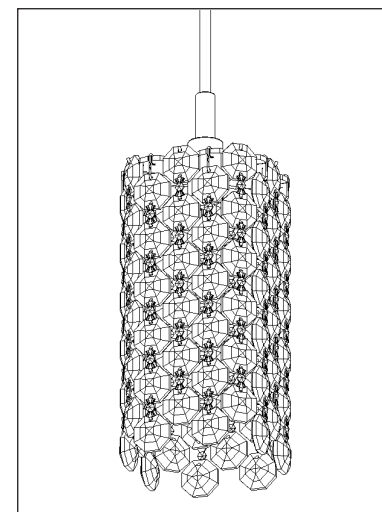

1 Light
Length: 2", Width: 2", Height: 5"

This design is the proprietary trade
dress/trademark of Swarovski Lighting, LTD.




Please save your trim diagram for future reference.

IMPORTANT: Label on back contains important
information on your crystal. Please save in case you
ever need to order matching crystal.

SCHONBEK® is a member of the Swarovski group.

Swarovski Lighting, LTD., 61 Industrial Blvd., Plattsburgh NY 12901-1908
Tel: 800.836.1892 or 518.563.7500 www.schonbek.com


©2015 SWAROVSKI LIGHTING, LTD.

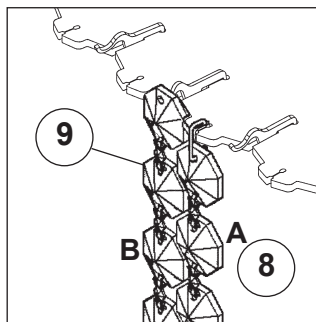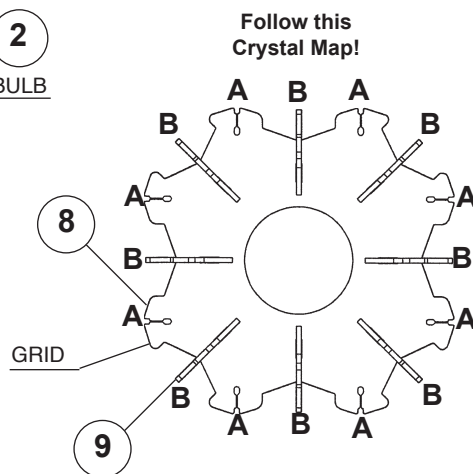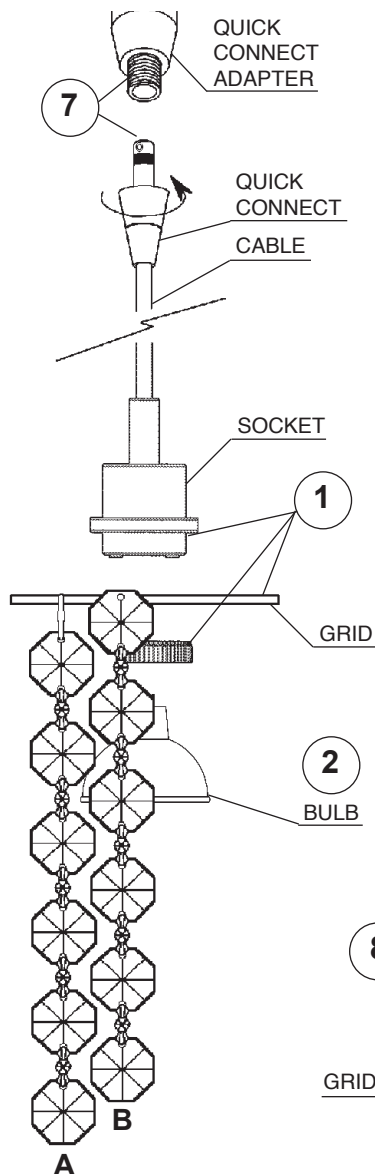


Pendants may be mounted to monorail systems, monopoints or line voltage track by coupling to the quick connect transformer adapter. Attached to the socket is a cable that may be cut on site during installation to any length (see instructions below).

- 1** Position the pendant grid against the socket and secure in place by screwing the metal collar onto the socket.
- 2** Plug bulb carefully but completely into socket. Use only an MR11 glass covered lamp bulb.


How to Shorten the Cable:

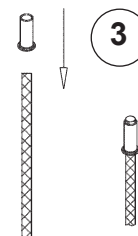


- 3** Cut the cable cleanly with wire cutter to desired length, and slide brass collar over wire. Position collar so that a small section (1/16") of braided wire protrudes from the top of the collar.

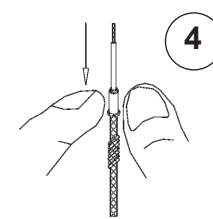

- 4** Grasping the collar, slide braided outer wire back to expose inner wire. Trim 1/8" of insulation from the inner wire with wire stripper.

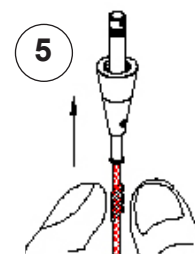

- 5** Feed inner wire into quick connect adapter until it reaches top set screw. Feed braided outer wire and brass collar into quick connect.

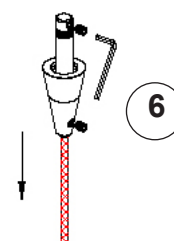

- 6** Tighten top set screw first, then lower set screw snugly. Smooth out any bulges in braided wire.

- 7** Screw quick connect into quick connect adapter until it seats. If you adjust the orientation of the pendant, be careful not to loosen the connection.
- 8** Hang A chains first, following the crystal map. Hook the connectors into the pinholes located towards the outside of the grid. See illustration to the left.
- 9** Hang B chains by sliding the octagon with an open hole onto the pin. Chains B will nest into position between A chains. See illustration to the left.