For Style 1153W9 Assembly Instruction Sheet #S-1153W9

ois Required: Pathead screwitiver, Philips screwitiver, pliers, wire outliers, who shippers, electrical tops, safely glasses.

pit Source: (1) SLIGGESTED LED GO BILLS MAX ZW (Not Include).


Standard Assembly Time: 10-00 minutes
specialar: identity and impact at parts before beginning installation. Check package content list and diagrams below to be sure at parts are
specialar: identity and impact at parts before beginning installation. Check package content list and diagrams below to be sure at parts are
specialar. If any parts are missing or demaged, do not ellempt to assemble, install, or operate the fidure. Context customer service for replacement.


Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the folium. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fluture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

Package Contents

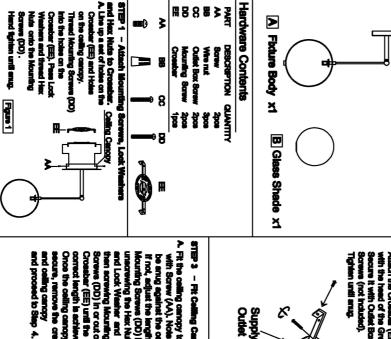

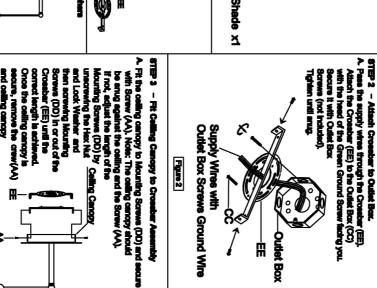

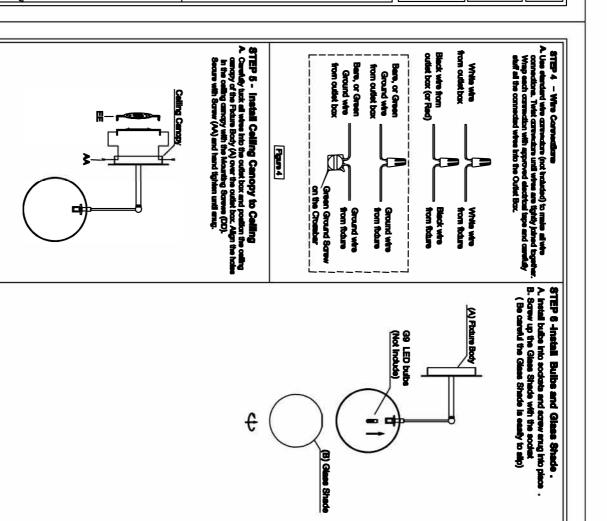


Figure 3

Pgun 6

Figure 6