

INSTALLATION INSTRUCTIONS



Confidentialal : A

SKU: KD-70090






SIZE: 900x460x880mm

PROHIBIT COPY


- Prior to in stallation please check received items against the Packing List . please report any missing items to your local dealer immediately.
- Protect all surfaces from sharp objects, high hert sources,direct prolonged sunlight and chemical hazards.
- Professional installation recommended.

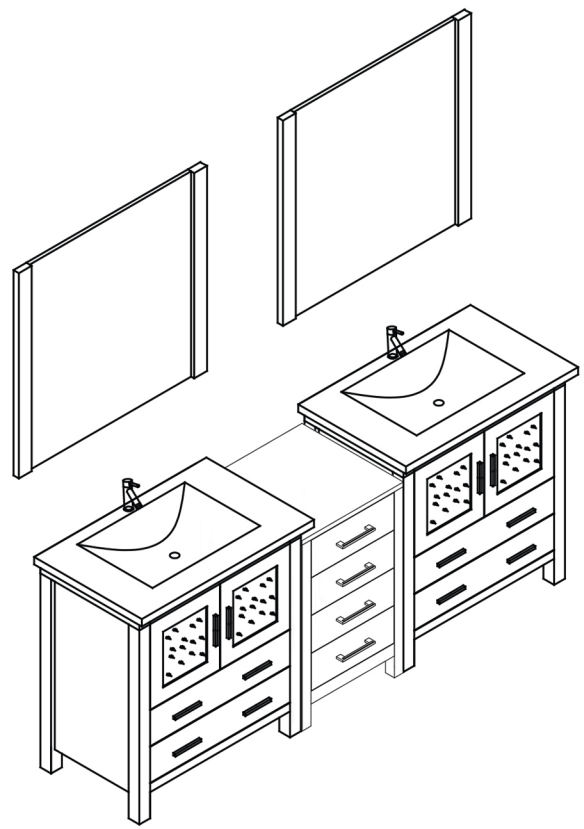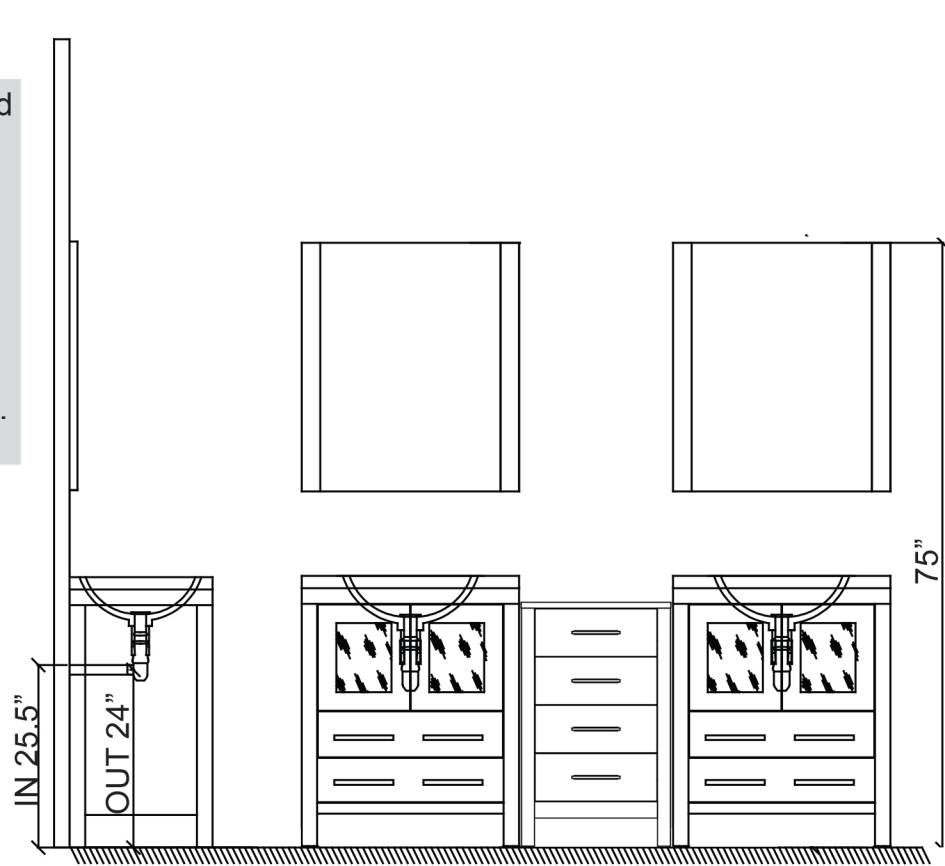


PACKING LIST

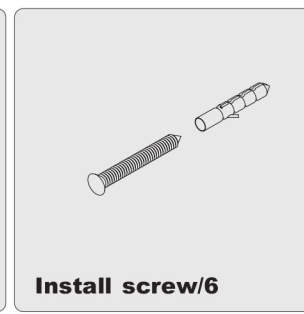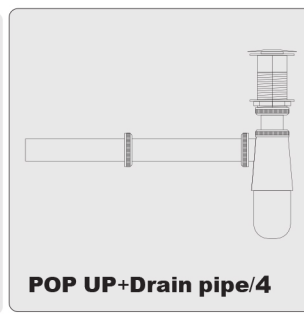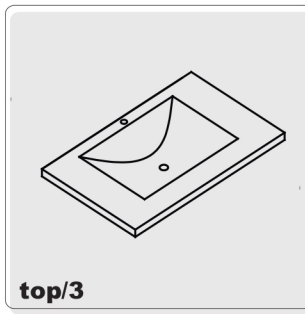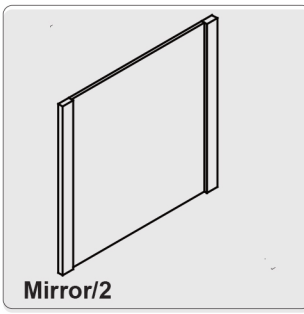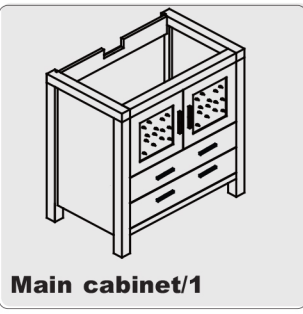




## REQUIRED TOOLS

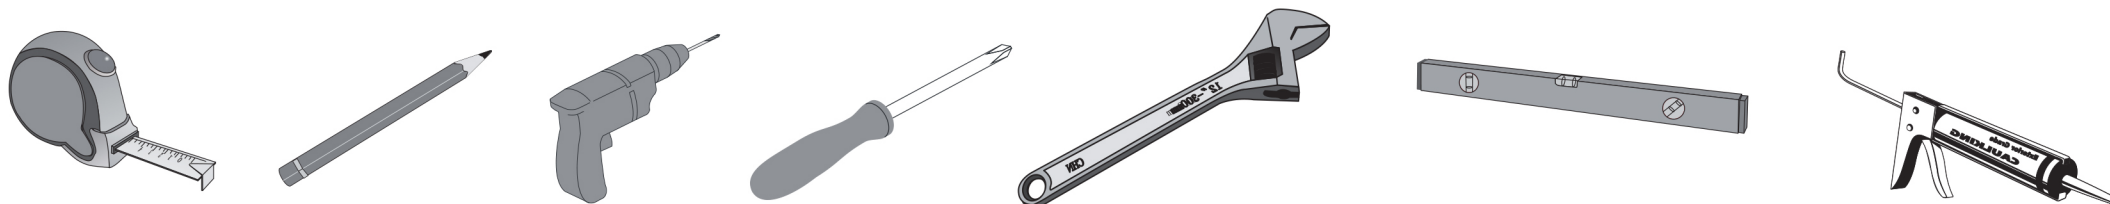


## DRAWER SLIDER ATTACHMENT AND DETACHMENT

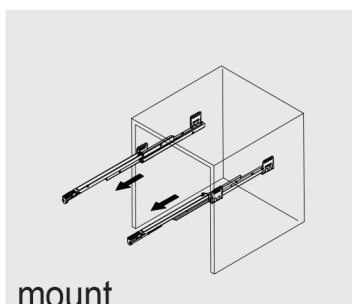


mount

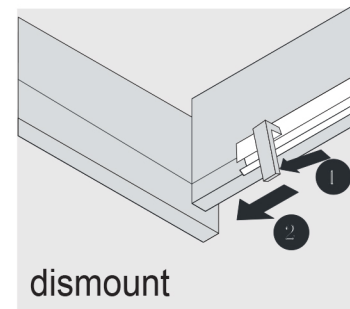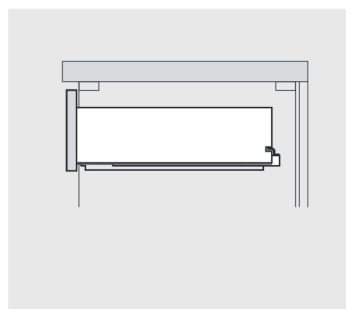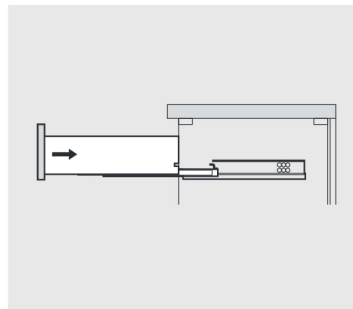

dismount

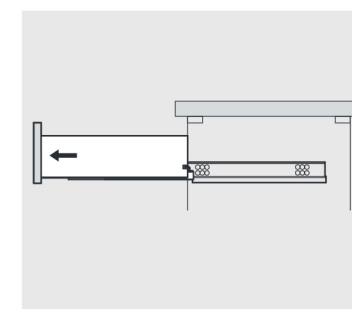


## INSTALLATION AND ADJUSTMENT OF HINGES

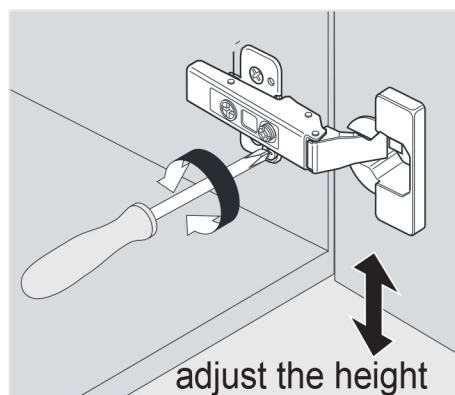


adjust the height


adjust for left and right

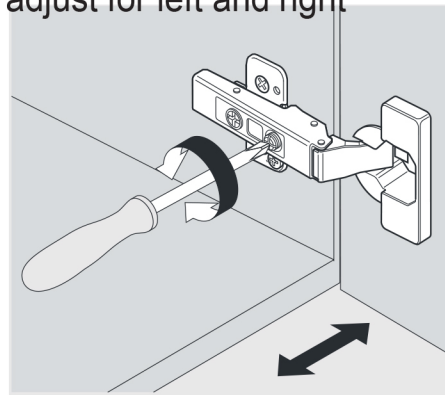


adjust for forward and backward

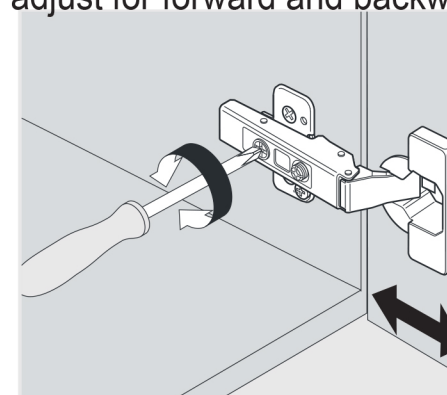


**INSTALLATION PROCESS**

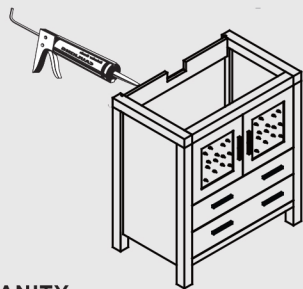




**1:GLUE AT VANITY**

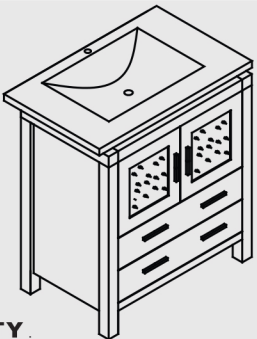




**2: Install TOP AT VANITY**

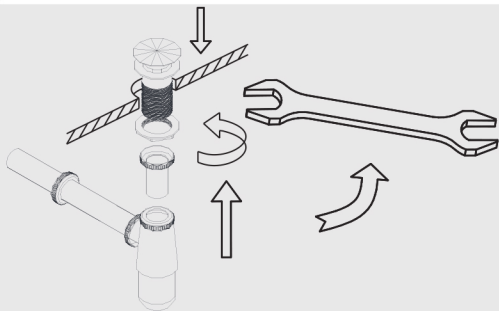

**3:Install the pop up and faucet .**

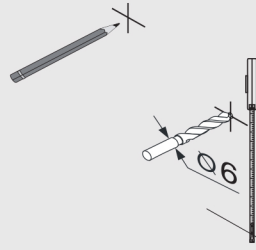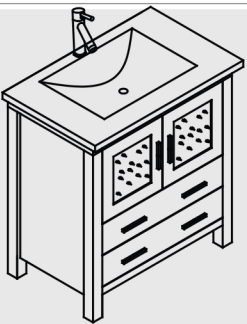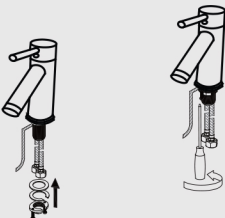


**4:Install mirror**

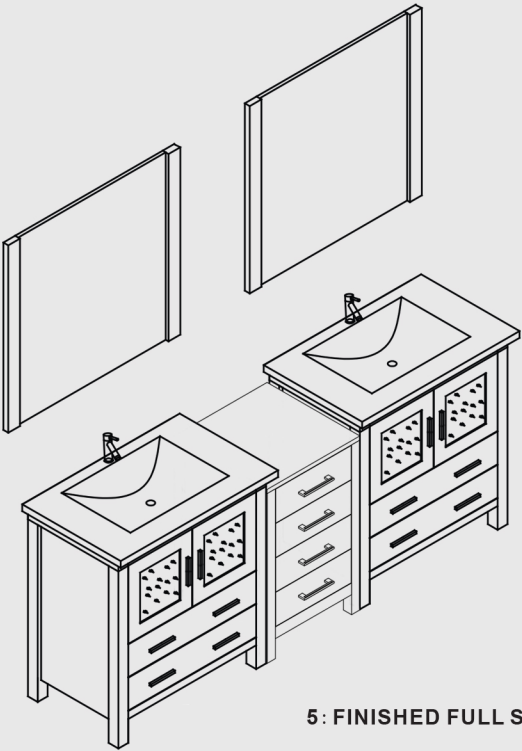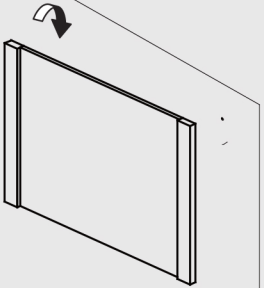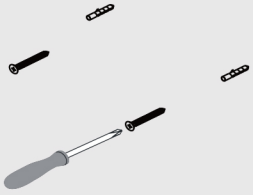


**5: FINISHED FULL SET**


**PACKING LIST**

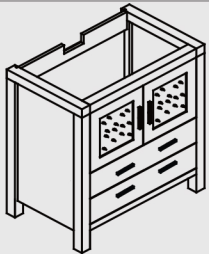


**Main cabinet/1**

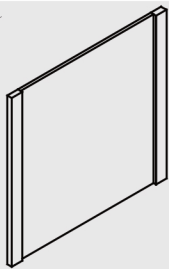


**Mirror/2**

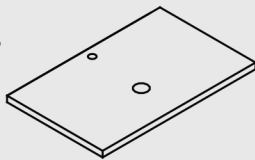

**top/3**

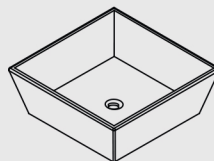


**basin/4**

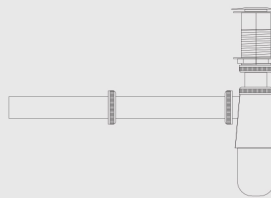

**POP UP+Drain pipe/5**




**FAUCET/6**




**Install screw/7**

**INSTALLATION PROCESS**

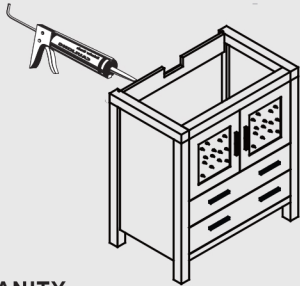


**1:GLUE AT VANITY**

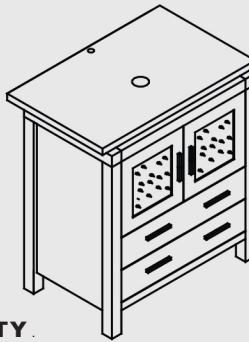

**2: Install TOP AT VANITY**



**3:install Basin**

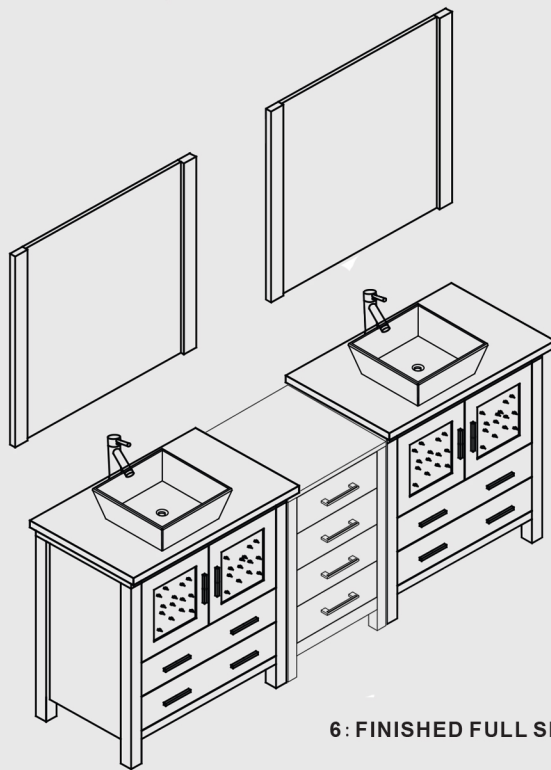

**6: FINISHED FULL SET**