



Assembly Intruction


INTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325


Code

SST5

Hardware

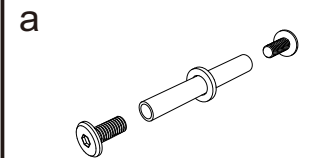

BOLT 2,36' (4 pcs)



BOLT 1,8' (2 pcs)

Tool




Socket Wrench 4mm

Total Section


2 Section

1

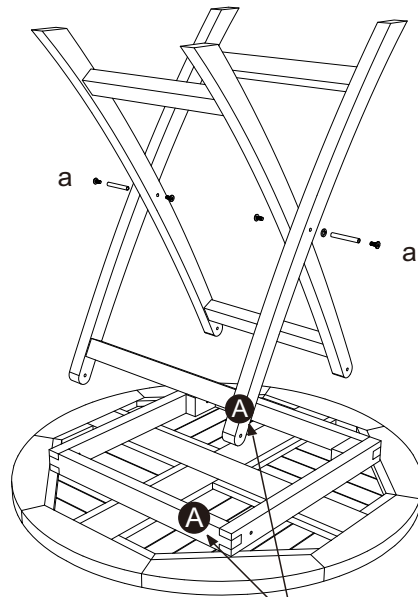

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**

2

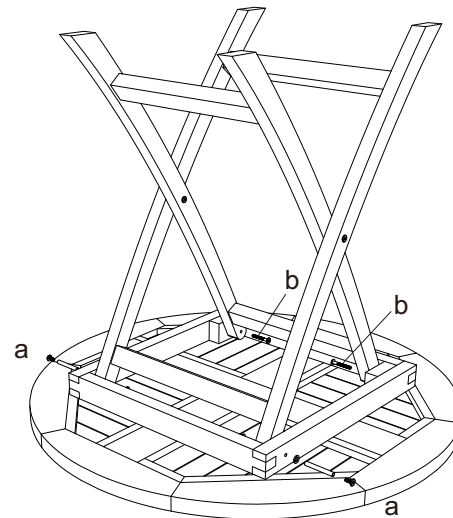

3



Make sure to use Gorilla Glue (Included)
on all wood joints before assembly