
CHIC TEAK

MAKE SURE THE LETTERS MATCH BEFORE ASSEMBLING NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325

Assembly Instruction

INSTRUCTION DE MONTAGE MONTAGEANLEITUNG SAMLEVEJLEDNING

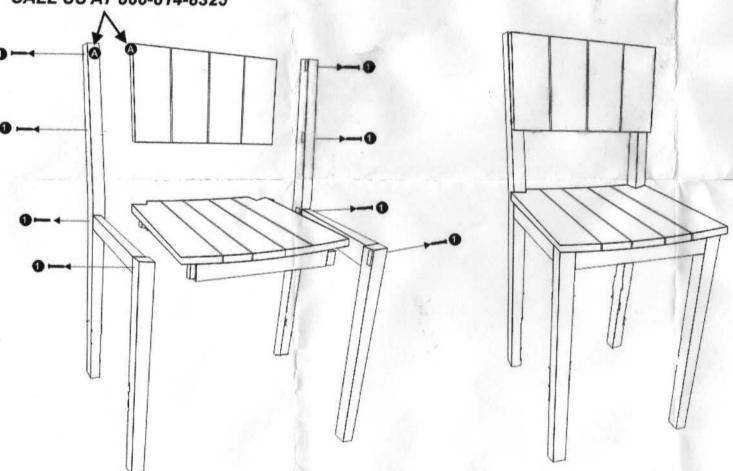

Make sure to use Gorilla Glue (Not Included) on all wood joints before assembly

Code


BOAT 53

Hardware



1.F-Bolt (8 Pcs)

Tool



Socket Wrench

Total Section

6 Section