


BED ASSEMBLY INSTRUCTIONS

PARTS INCLUDED

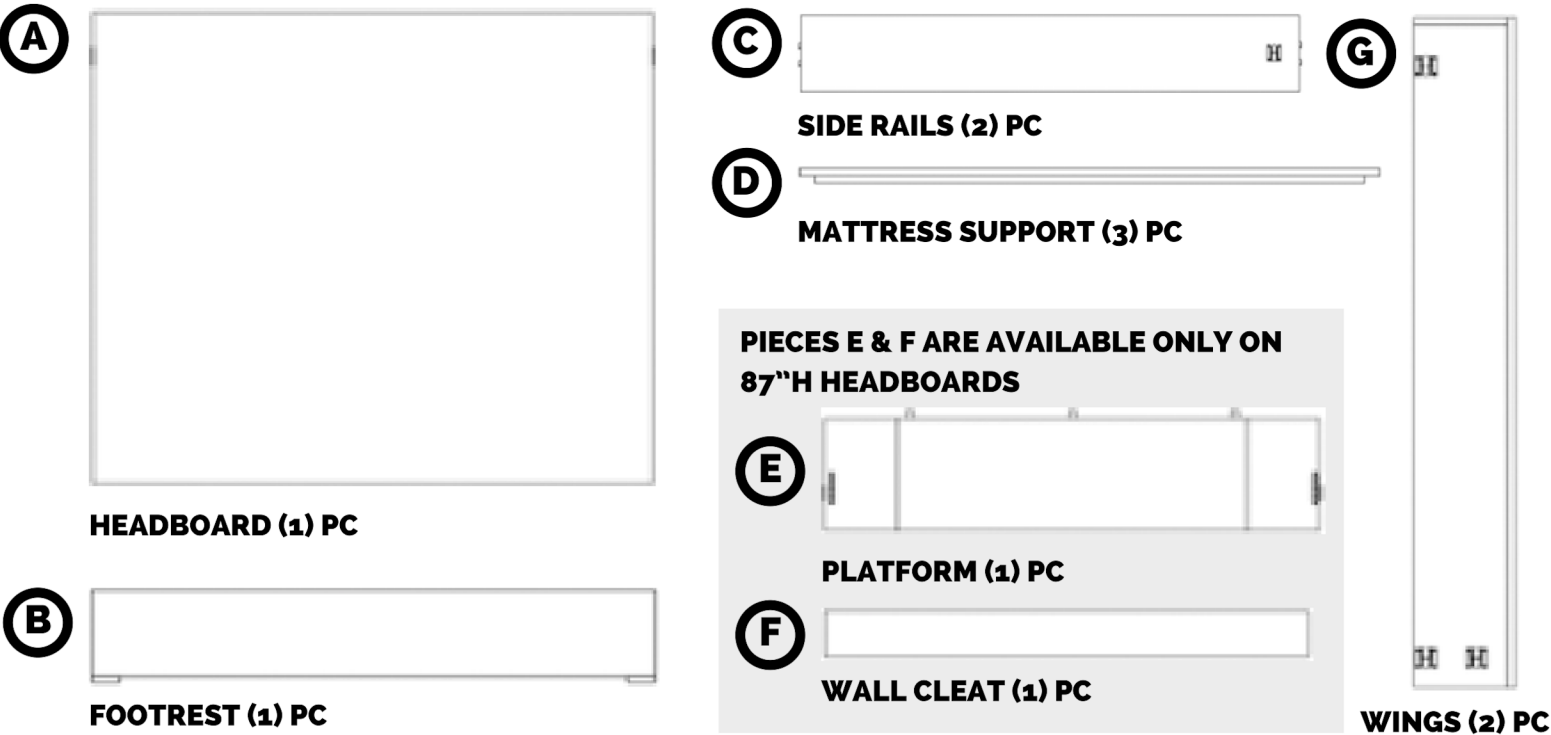

TOOLS REQUIRED (NOT INCLUDED):



MALLET



SCREWDRIVER




DRILL



SCREWS



WALL PLUGS

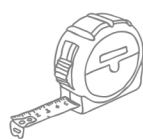


MEASURING TAPE


ASSEMBLY INSTRUCTIONS

MAY REQUIRE OF 2 ADULTS

IDENTIFY ALL THE PARTS INCLUDED LISTED AT THE BEGINNING OF THIS DOCUMENT ACCORDING TO THE MODEL OF YOUR BED.

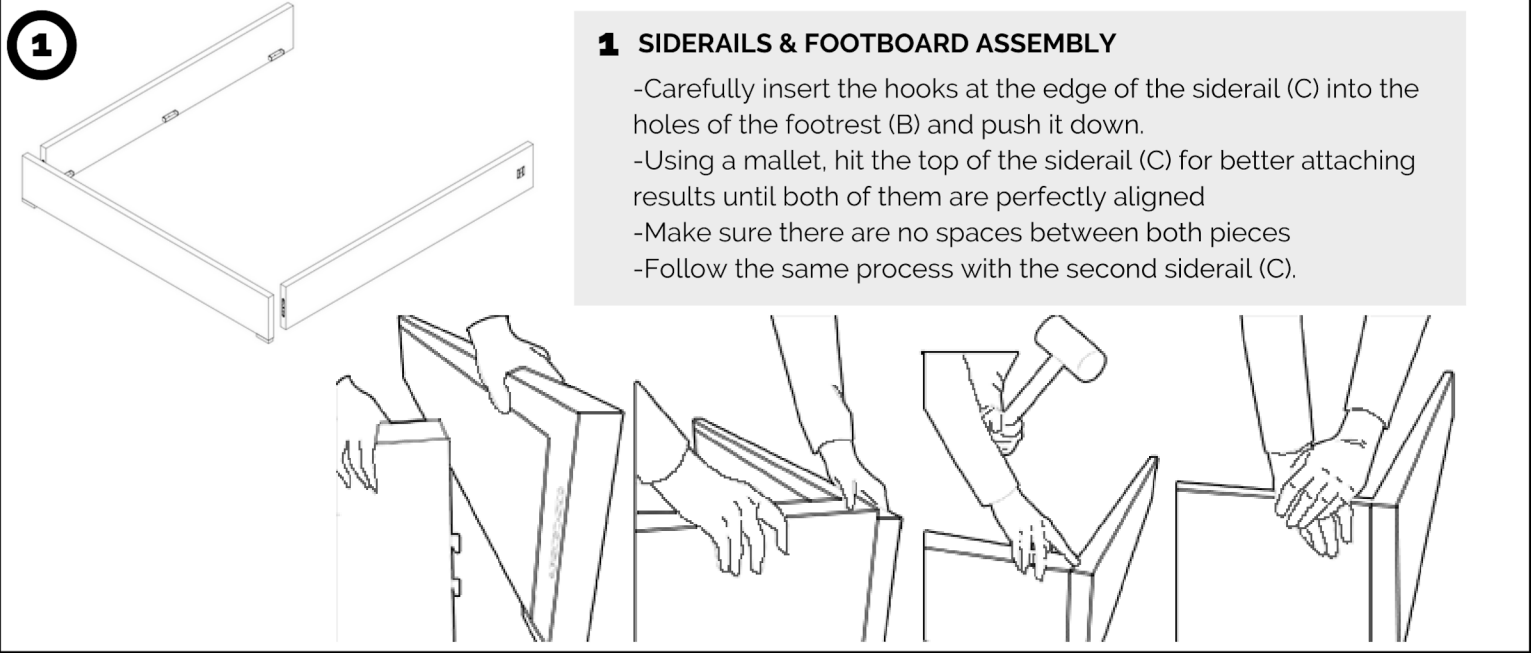

2

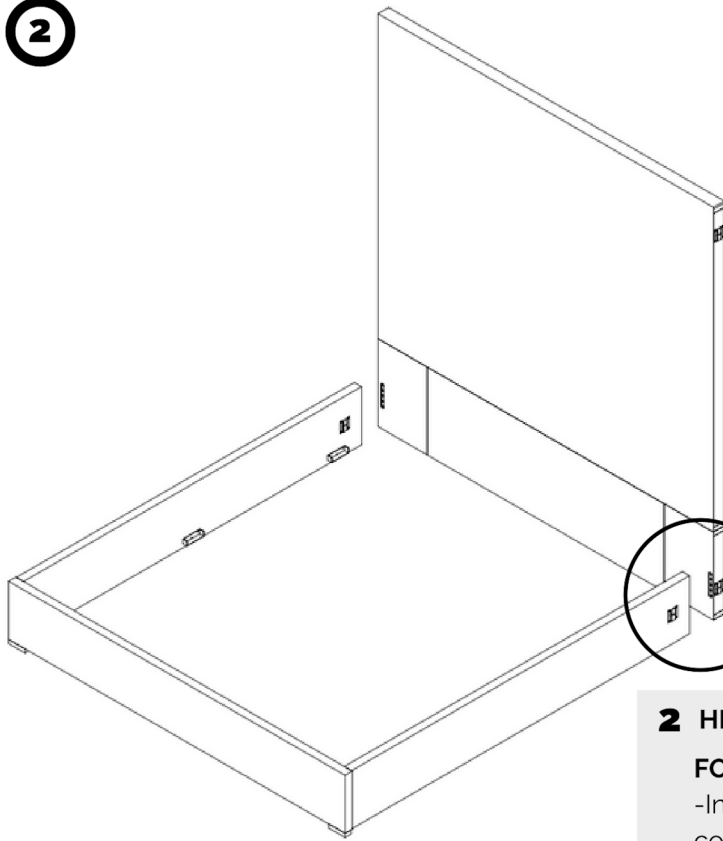

2 HEADBOARD ASSEMBLY

FOR 67" HEIGHT HEADBOARDS

-Insert the hooks of the other edge of the siderail (C) into the corresponding holes of the headboard (A).

FOR 87" HEIGHT HEADBOARDS


-Insert the hooks of the other edge of the siderail (C) into the corresponding holes of the platform (E).

FOR ANY HEADBOARDS OPTION

-Use the mallet to gently hit the top. Make sure it is firmly attached with no spaces between both pieces.

-Complete the same process with the other siderail (C).


3

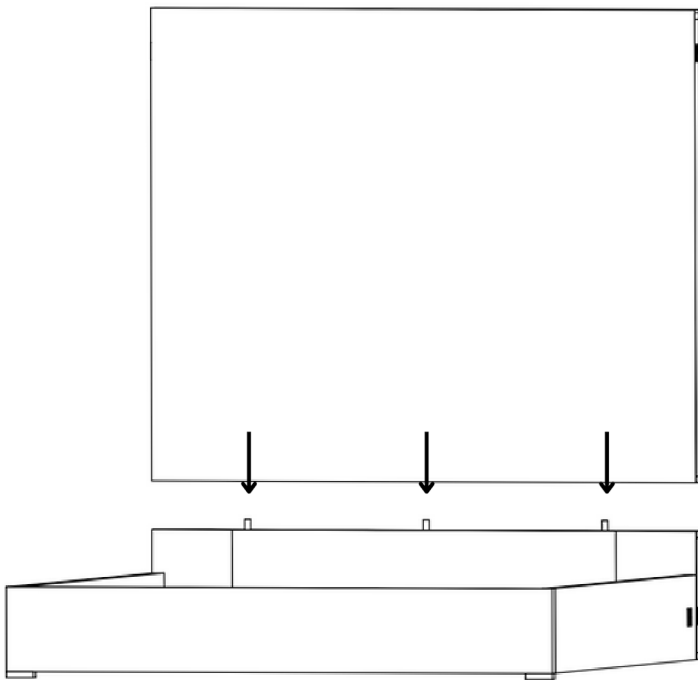

3 ONLY FOR 87" HEIGHT HEADBOARDS



-Attach Headboard (A) into the platform (E) by aligning nodes with the foles & pushing pieces together

4

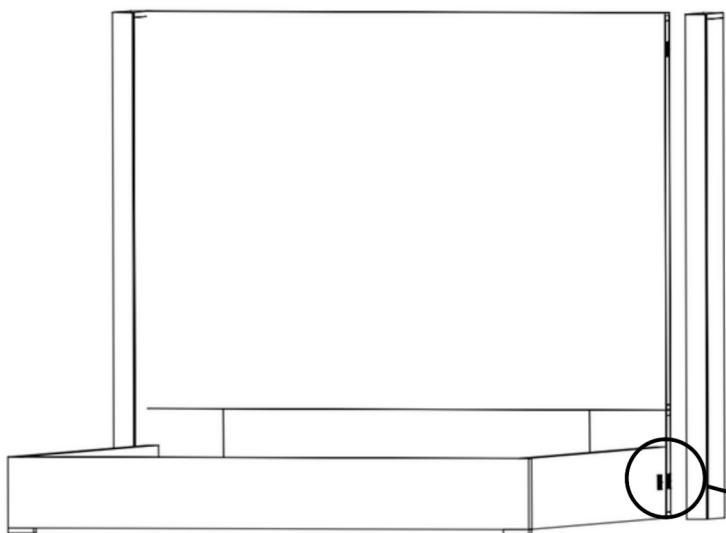


4 WINGS ASSEMBLY

-Please insert each wing (G) using the clips to the headboard (A) and siderails (C).
Use a screwdriver to open each clip for better engagement.

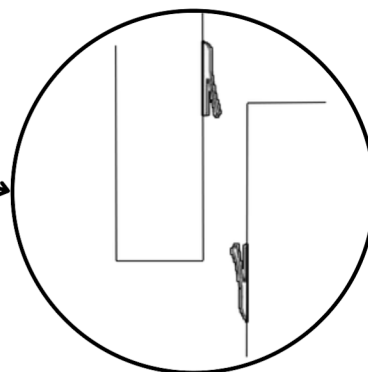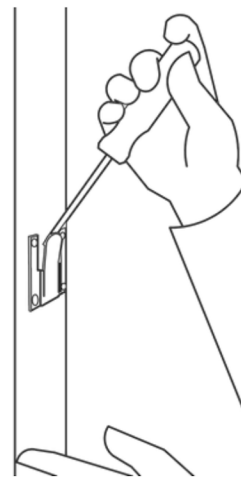

5


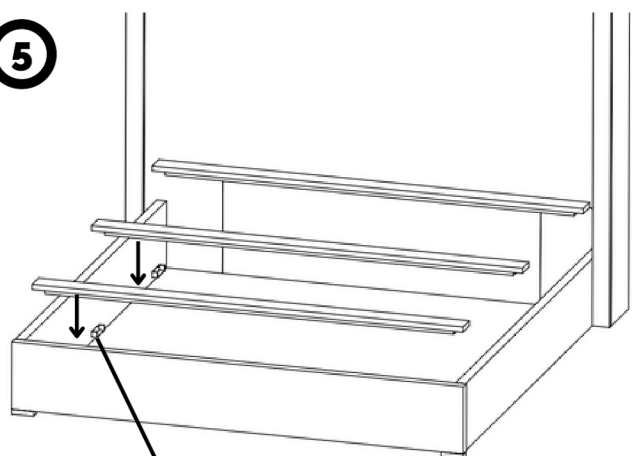



5 SUPPORTING SLATS PLACEMENT

-Place the solid wood slats (d) in the corresponding supporting base inside of the siderails (C).

FOR ADJUSTABLE BEDS

Remove the 6 brackets with a screwdriver and do not use the mattress support (D)

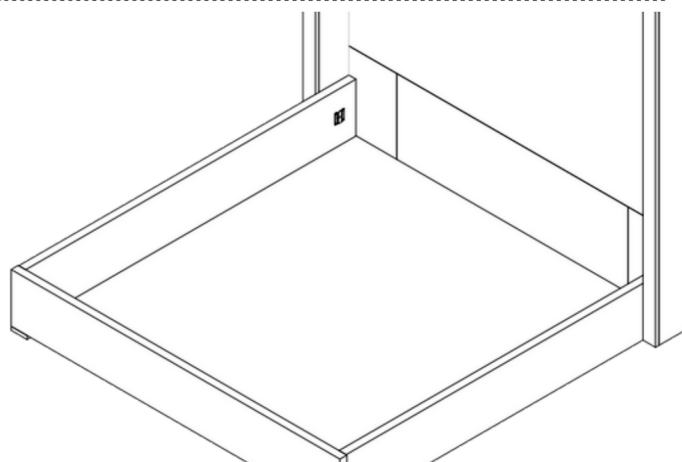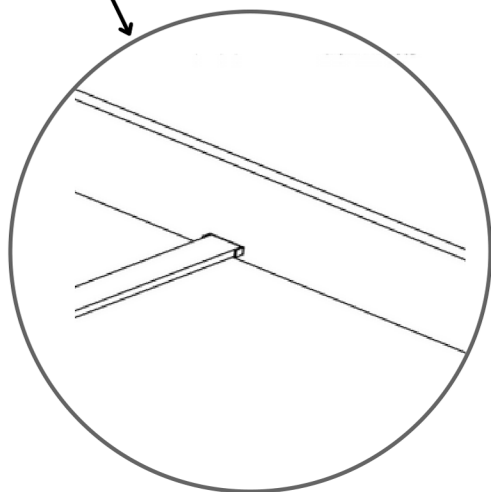


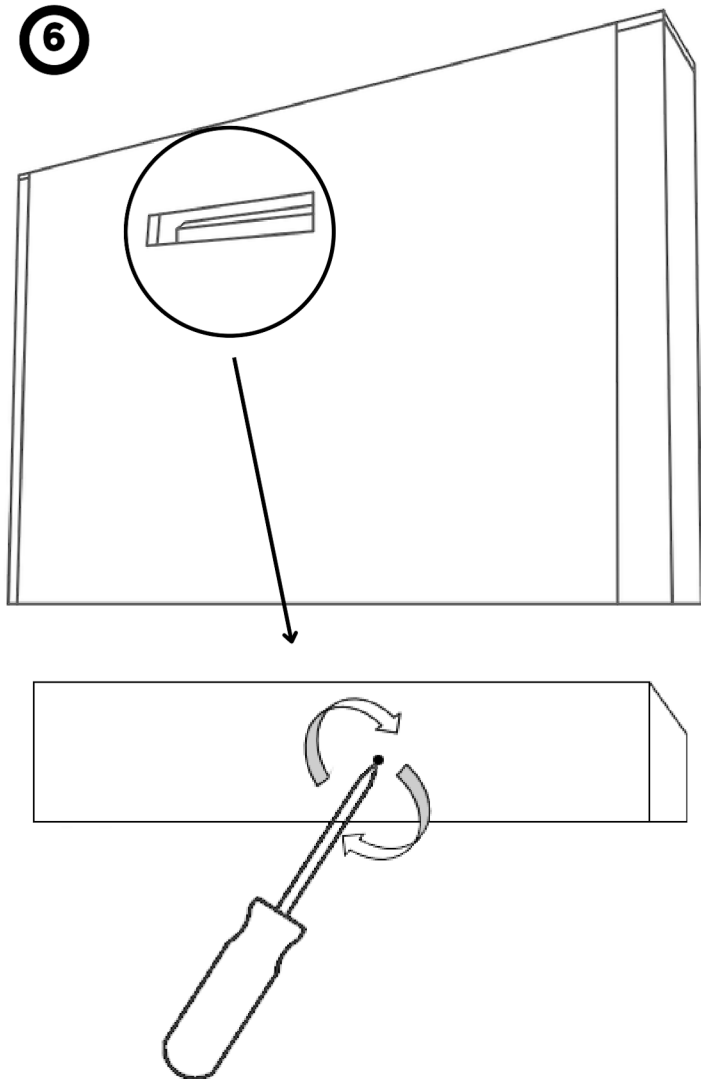6

**THE WALL CLEAT IS NOT INCLUDED ON THE 67"
HEADBOARD MODEL**

6 FOR 87"H HEADBOARDS ONLY

- Headboard (A) must be fixed to the wall
 - Using a screwdriver, remove the screw from the wall cleat (F) behind the headboard, (not included with the 67" tall model).
 - In the 87" tall models, mount the top of the headboard (A) on its base.
 - With the help of a measuring tape, mark the corresponding height for the cleat on the wall (F) and the position of the holes to be drilled.
 - Once drilled, insert the wall plug and fix the cleat (F) using the screws according to your wall materials.
 - Attach the headboard (A) to the cleat (F) by simply hooking them together.
- For 67" tall models, simply lean the headboard (A) on the wall while completing the frame assembly.

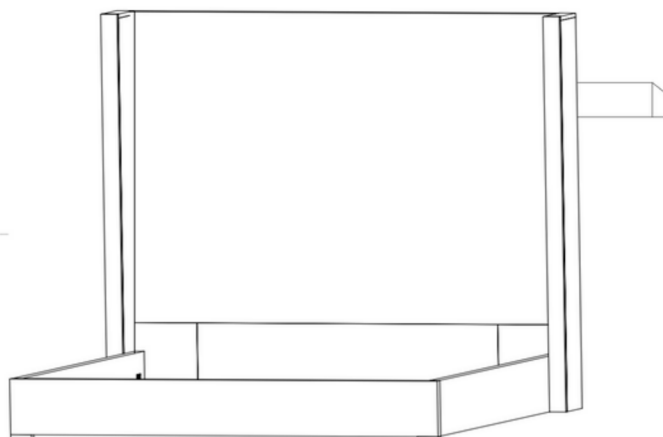

NATIVA™
INTERIORS

customerservice@nativainteriors.com