# GOLDBERG BROTHERS, INC. Wagon Wheel Horseshoe Hanger - Installation Instructions


#### Included Hardware

Wagon wheel hangers (2) Track stops (2)


T-guide (1) T-guide screws (2) Carriage bolts (6) Lock washers (4)

Washers (6) Hex lag bolts (6)


Spacers (6) Hex nuts (4) Felt Pads (2)




Premium hardware set installed with no casing, base or other trim.

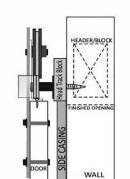

Premium hardware set installed on track trim board that is equal to or thicker than casing, base, or other trim.

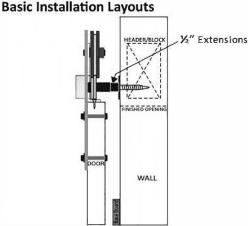


Premium hardware set + ½" extension kit installed where casing, base, or other trim is up to ½" thick.

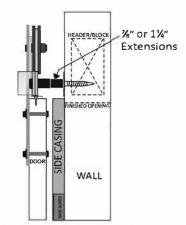



Premium hardware set + %" or 1%" extension kit installed where casing, base, or other trim is up to %".

### **Door Prep and Hanger Installation**


At 3"and 9" from both sides of the top half of the door, measure down 11/4" and drill 1/4" pilot holes followed by %" holes. 6" from both sides of the top half of the door, measure down 41/2" and drill

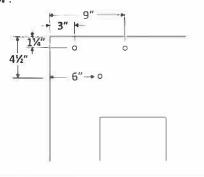

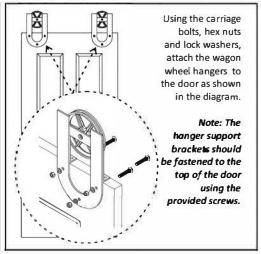


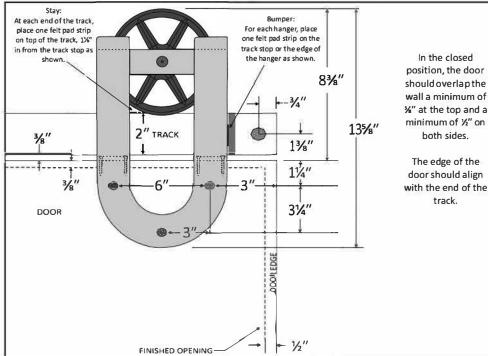

### T-guide Installation

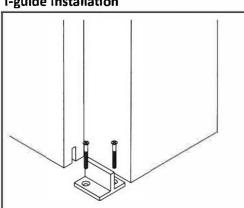

Using the T-guide screws, attach the T-guide to the floor by aligning the edge of the guide with the edge of the finished opening as shown above.

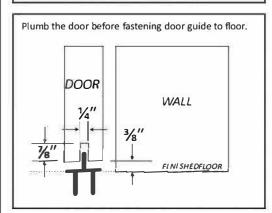


Goldberg Brothers barn door track and hardware sets come with a one-year manufacturer's warranty for defective parts under normal installation and use. Warranty is subject to repair or replacement of defective components at manufacturer's discretion and does not include


Goldberg Brothers does not warrant the loss of finish at points where roller is in contact with track. Goldberg Barn Track is sold as a rustic finished hardware and Goldberg does not warrant the imperfections seen through the finish in the steel parts. It is part of the look.


With the exception of our stainless steel products, Goldberg Brothers does not warrant any products installed and used outdoors or where they are exposed to weather, running water products installed and used outdoors or where they are exposed to weather, running water or water condensation. Under these conditions, rust and other damage will naturally occur.


nty does not include loss of defects caused by elements outside the control of ioldberg Brothers, Inc., such as natural disasters, weather, fire, water leakage, abuse, aproper Installation, or anything else deemed out of the control of Goldberg Brothers, Inc.


#### **Track Installation**

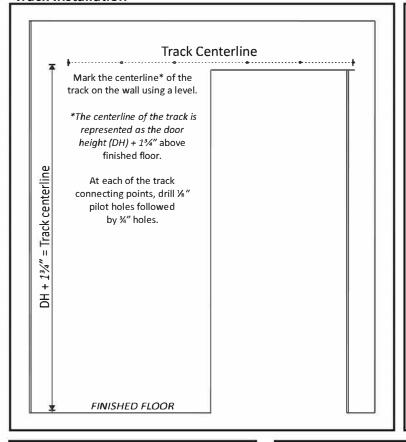

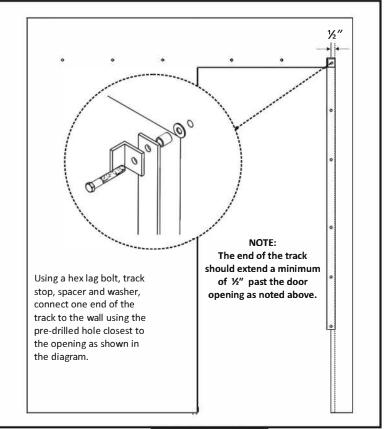


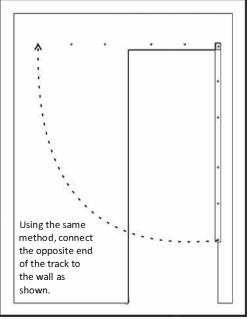

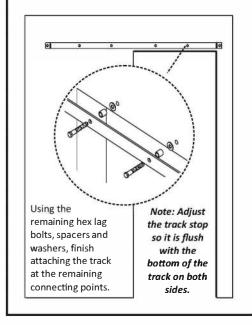

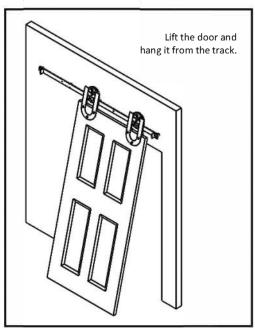

## **Optional Accessories**

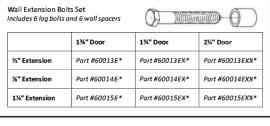




Door Guide "U"

1 set
Includes 2 "U" guides, 2 wood screws
and 1 felt pad
Part #6001U\*

NOTE: Use the provided T-guide screws for U-guide installation.



Sidewall Guide Bracket

1 each


Includes 1 bracket,

4 machine screws, 4 nuts and 1
felt pad

Part #6001SW\*

NOTE: Use the

provided T-guide screws for sidewall guide installation.



Soft Stop 1 set Includes 2 Soft Stop mechanisms, 2 triggers and 4 wood screws Part #6001SOFT11 (4'-7' track) Part #6001SOFT17 (8'+ track)



Goldberg Brothers, Inc. 10488 W Centennial Rd, Suite 100 Littleton, CO 80127 (303) 321-1099