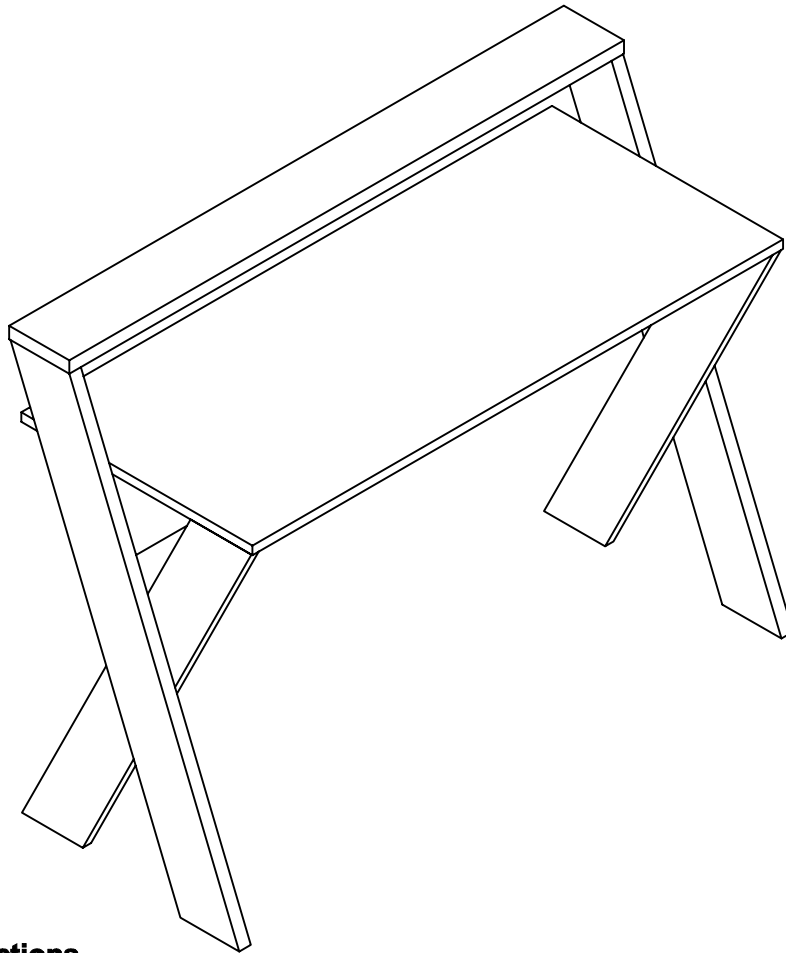


CONVENIENCE CONCEPTS

125707 Computer Desk



Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish.

Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store

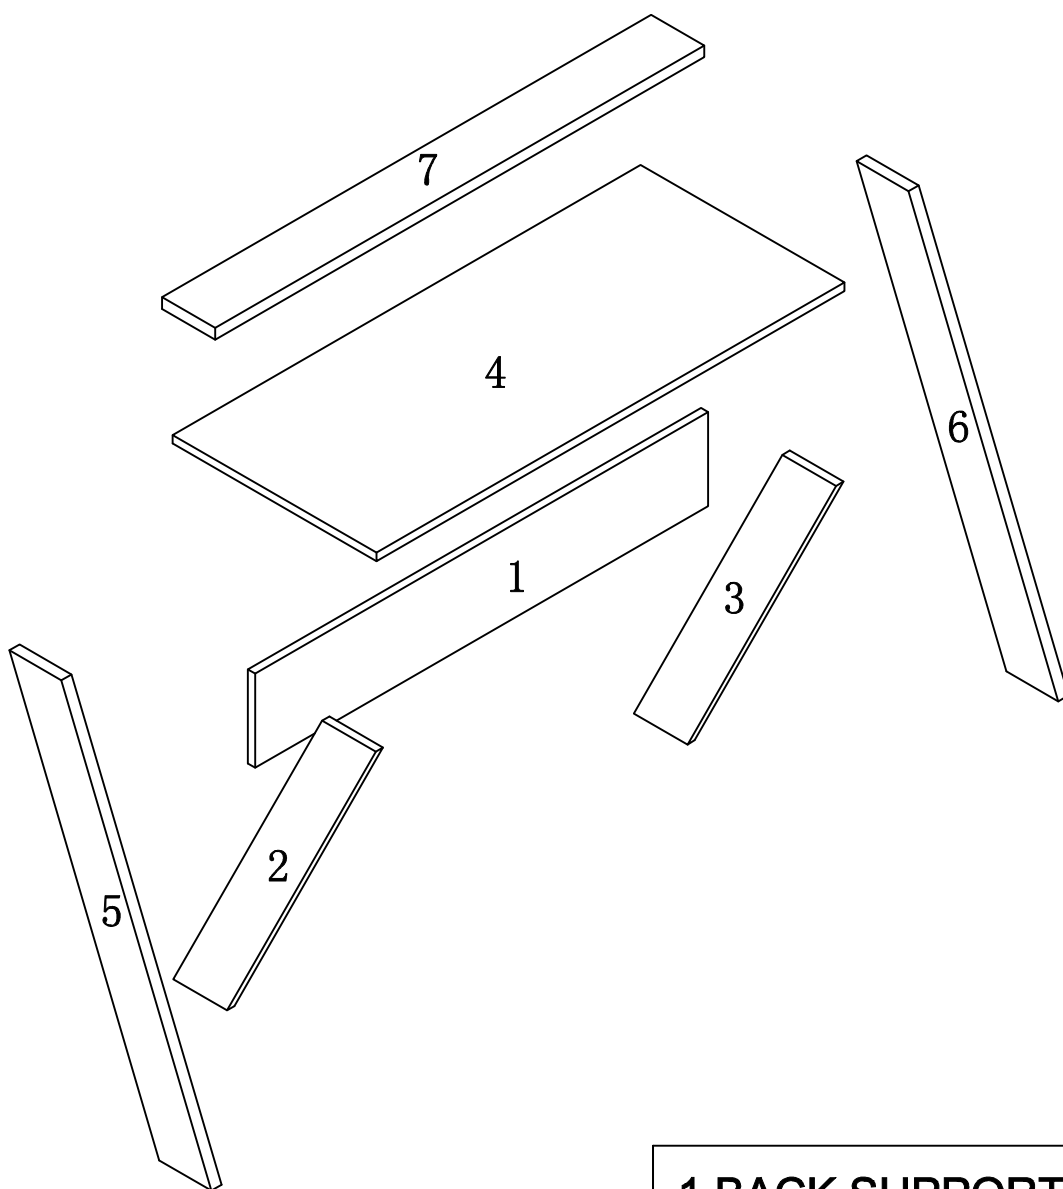
. Broken or missing Hardware?

. Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

PARTS IDENTIFICATION

ITEM#:125707














Please count and verify all parts
before assembly






1.BACK SUPPORT	(1pc)
2.SMALL LEG (LEFT)	(1pc)
3.SMALL LEG(RIGHT)	(1pc)
4.DESK TOP	(1pc)
5.LARGE LEG(LEFT)	(1pc)
6.LARGE LEG(RIGHT)	(1pc)
7.TOP PANEL	(1pc)

HARDWARE IDENTIFICATION


ITEM#:125707

A		Cambolt	L29	12pcs
B		Camlock	ø15	12pcs
C		Dowel	ø8×25	11pcs
D		Nut	M6×11	4pcs
E		Allen Head Bolt	ø6×65	4pcs
F		Barrel nut	ø10×15	4pcs
G		Wrench	M4	1pc
H	 (RC)	Stickers	ø18	24pcs
I		Hammer in Foot	ø16	4pcs
J		Bolt	M6×35	4pcs
K		Glue	Glue: For securing please apply to wood dowel first before inserting into panel	1pc

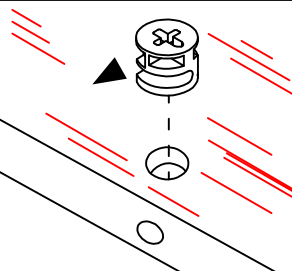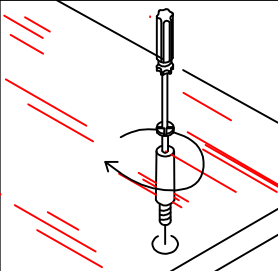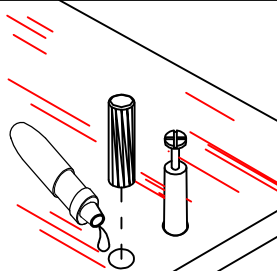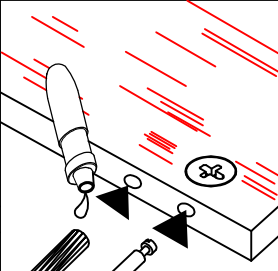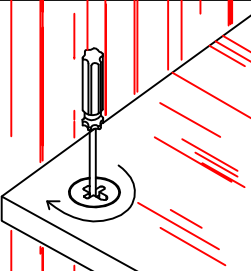Assembling the unit with camlocks and wood dowels.


				
Insert camlock, camlock must face bolt hole	Gently screw cam dowel into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

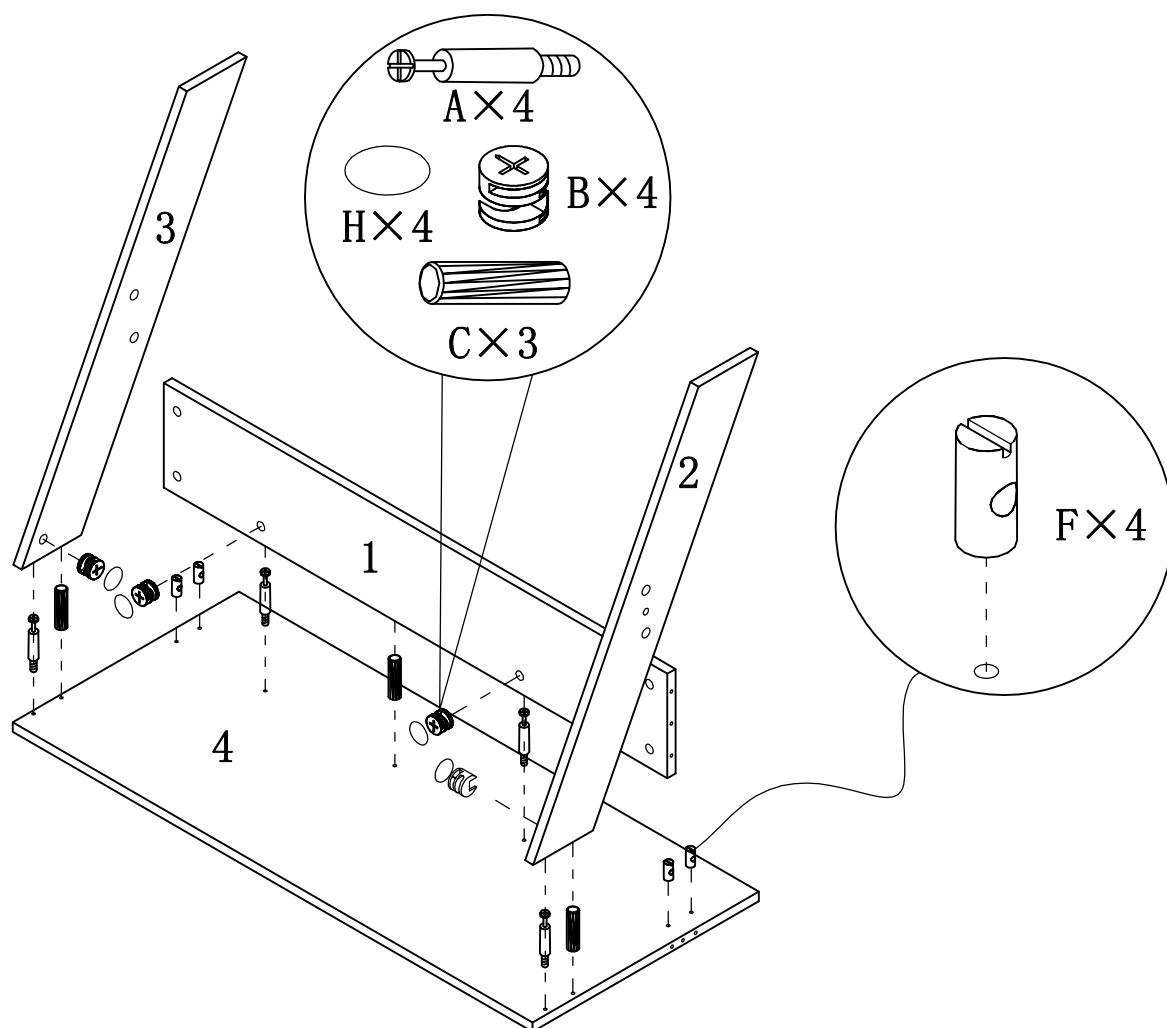Step 1



1. Attach camlock hardware to desk top (4) .
2. Insert barrel nuts (F) into holes,makeing sure threads face side holes.
- 3.Insert camlocks into back support (1) and small legs (2) and (3) .
4. Assemble legs and back support onto desk top.
Gently tighten camlocks.

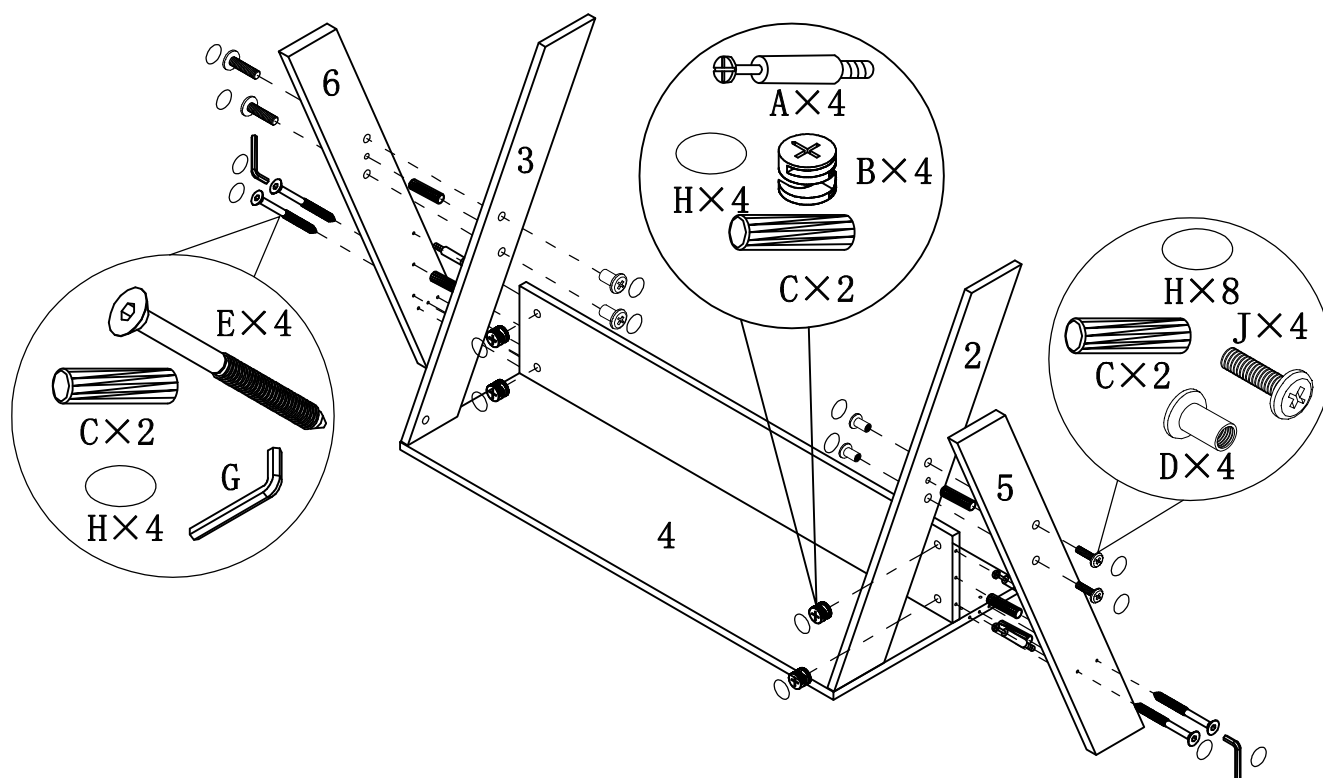Step 2



1. Attach camlock hardware to back support panel (1) and large legs (5) & (6).

2. Fasten large legs (5) & (6) to assembly using camlocks and bolts.

3. -Camlocks will fasten large legs to back panel.

-Allen head bolts (E) will fasten large legs to desktop (4), using barrel nuts F, a small screwdriver can be inserted into hole to align barrel nut.

-Bolt (J) will attach large legs to small legs using nuts (D).

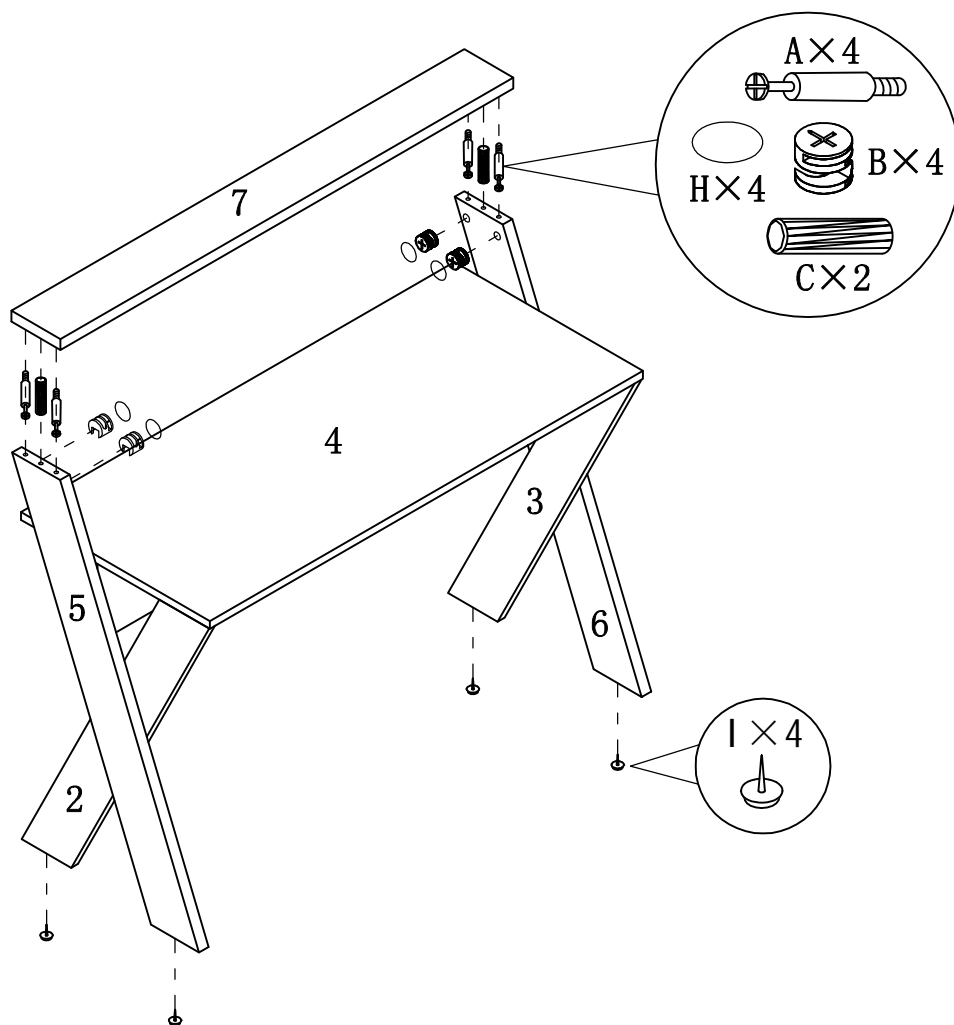
4. If desired, place stickers (H) over cam and screw holes.

Step3

1: Attach camlock hardware top panel (7) and tops of large legs (5)&(6).

2: Connect top panels (7) to assembly.

3: Rest unit on it's side and insert hammer in feet.



Step4

Enjoy your new desk !

