




Item # : AF30SOIC
Assembly Instructions

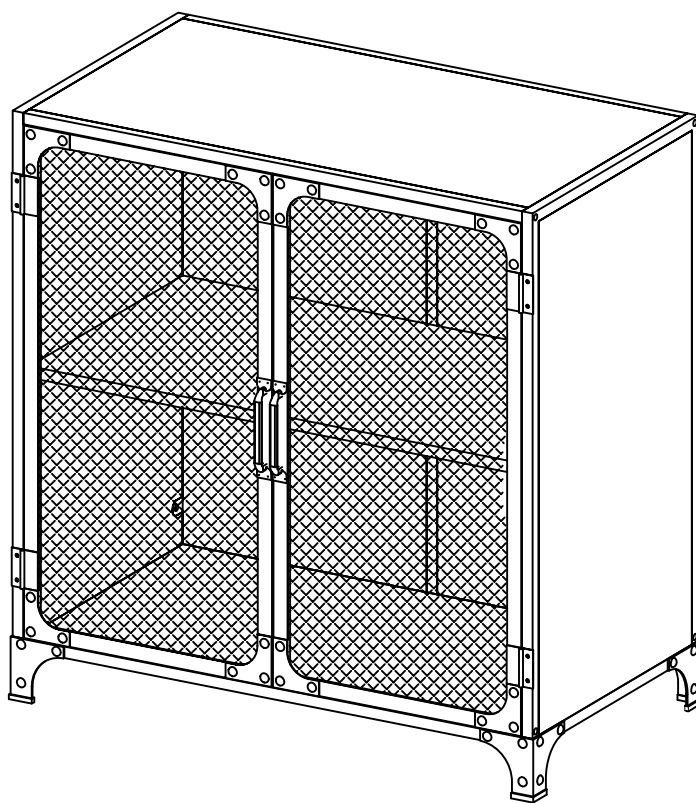


*Please visit our website for the most current instructions, assembly tips, report damage, or request parts. **www.walkeredison.com***


Revised 05/30/2018

General Assembly Guidelines





- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The main type of hardware used to assemble this product is: bolts.
- V. Power tools should not be used to assemble this product .

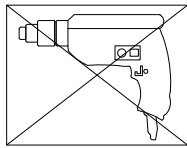


Parts List

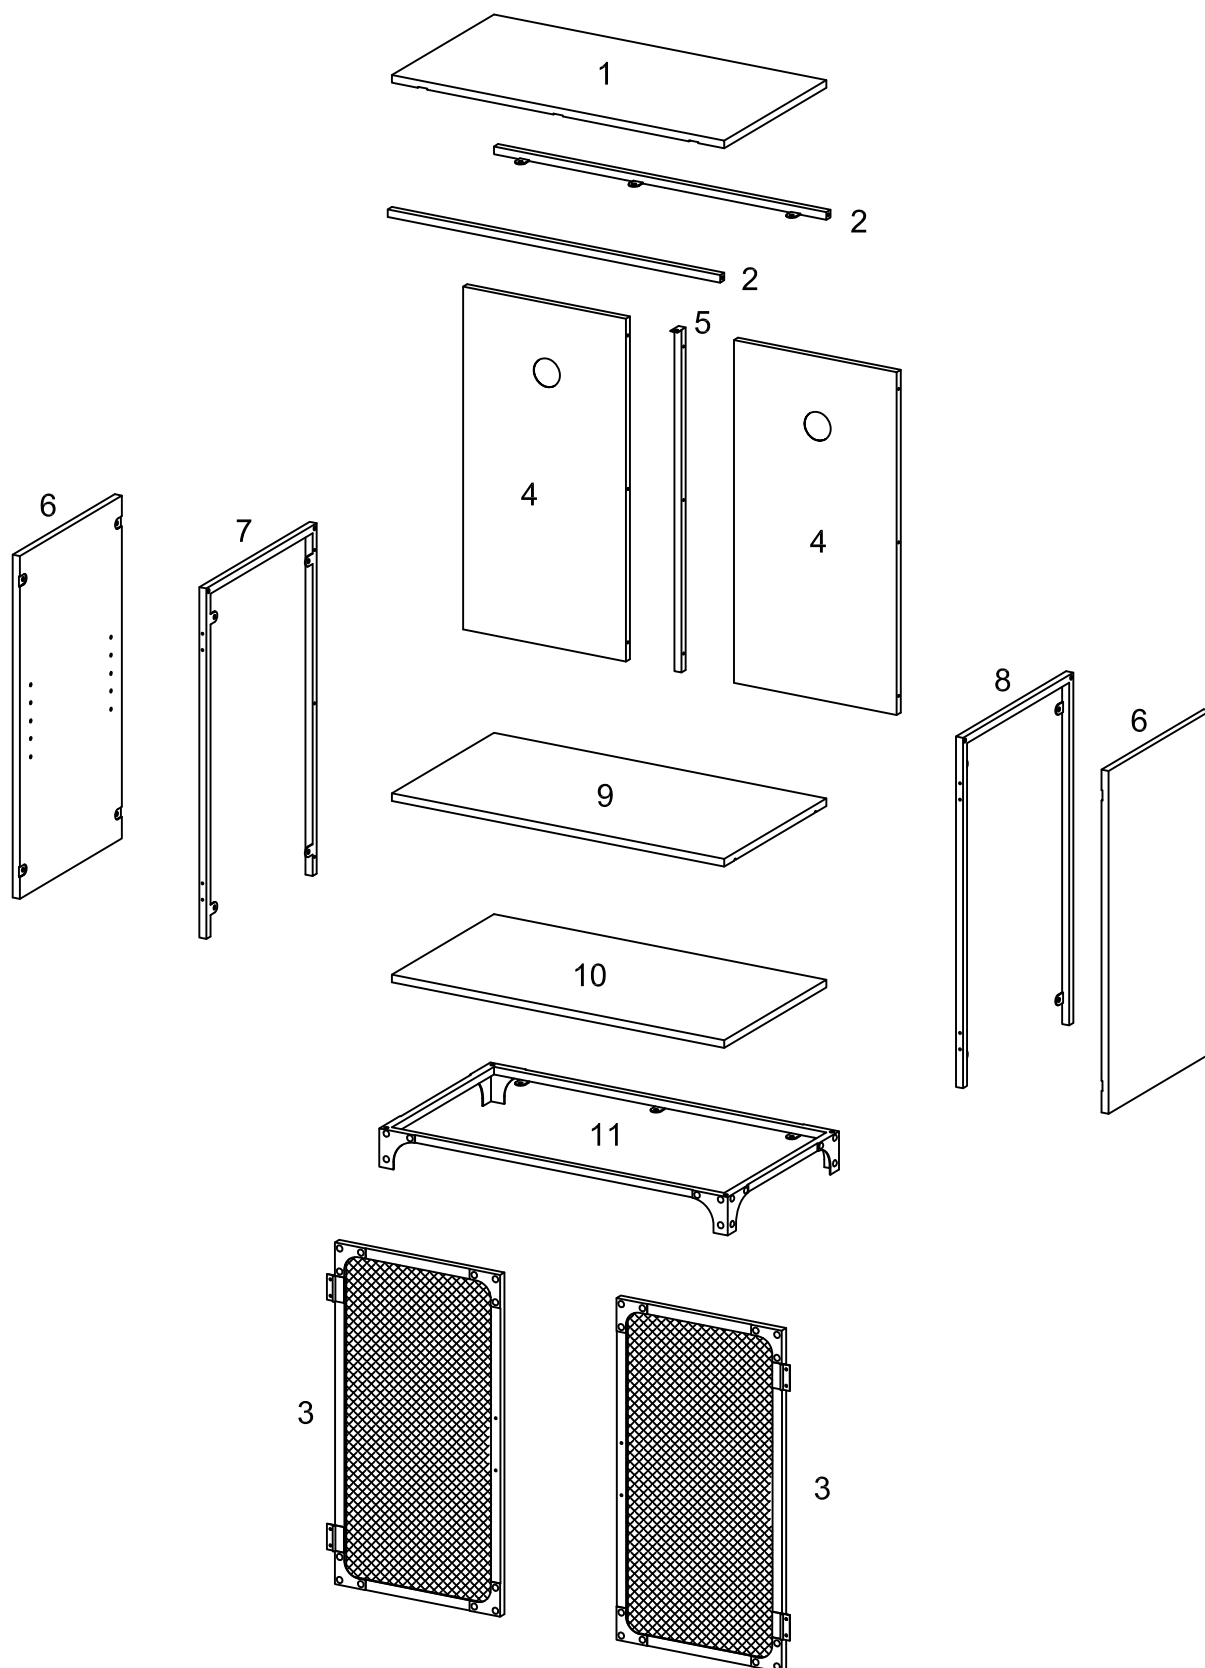

Hardware List


A		Ø1/4"x12mm	Bolt	19 pcs
B		Ø1/4"x25mm	Bolt	9 pcs
C		Ø4x12mm	Screw	8 pcs
D			Shelf support pin	4 pcs
E		Ø5/32"x20mm	Bolt	4 pcs
F		Ø3x16mm	Screw	4 pcs
G			Door stopper	2 pcs
H		Ø4x8mm	Screw	12 pcs
J		Ø1/4"x15mm	Bolt	1 pc
K		M4	Hex key	1 pc
L			Handle	2 pcs
M			Plastic Cap	4 pcs

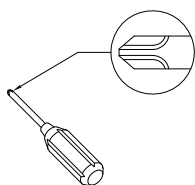

Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

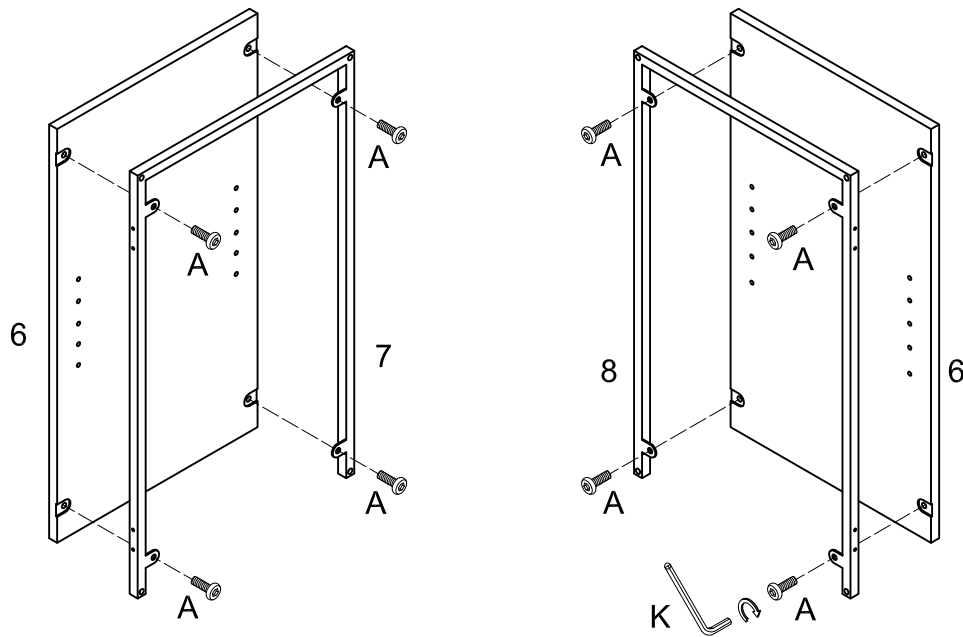


Attach part (7,8) to part (6) using bolt (A) with hex key (K).

Step 2

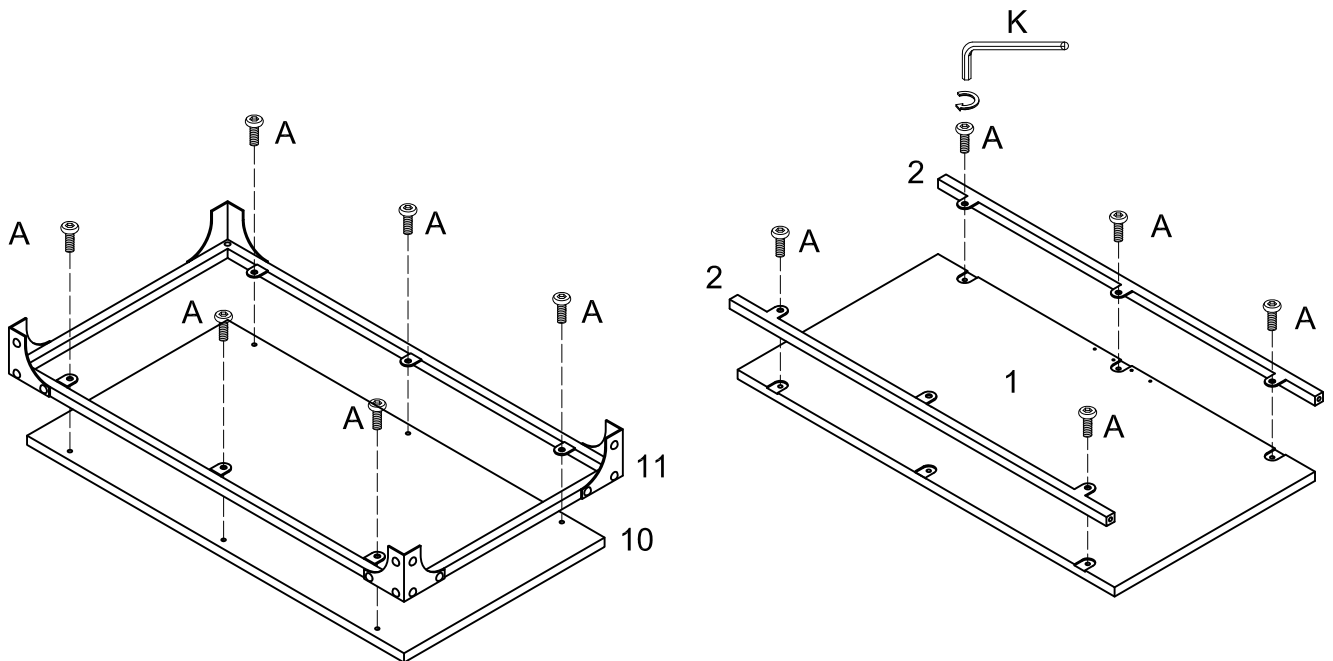


Attach part (11) to part (10) and part (2) to part (1) using bolt (A) with hex key (K).

Step 3

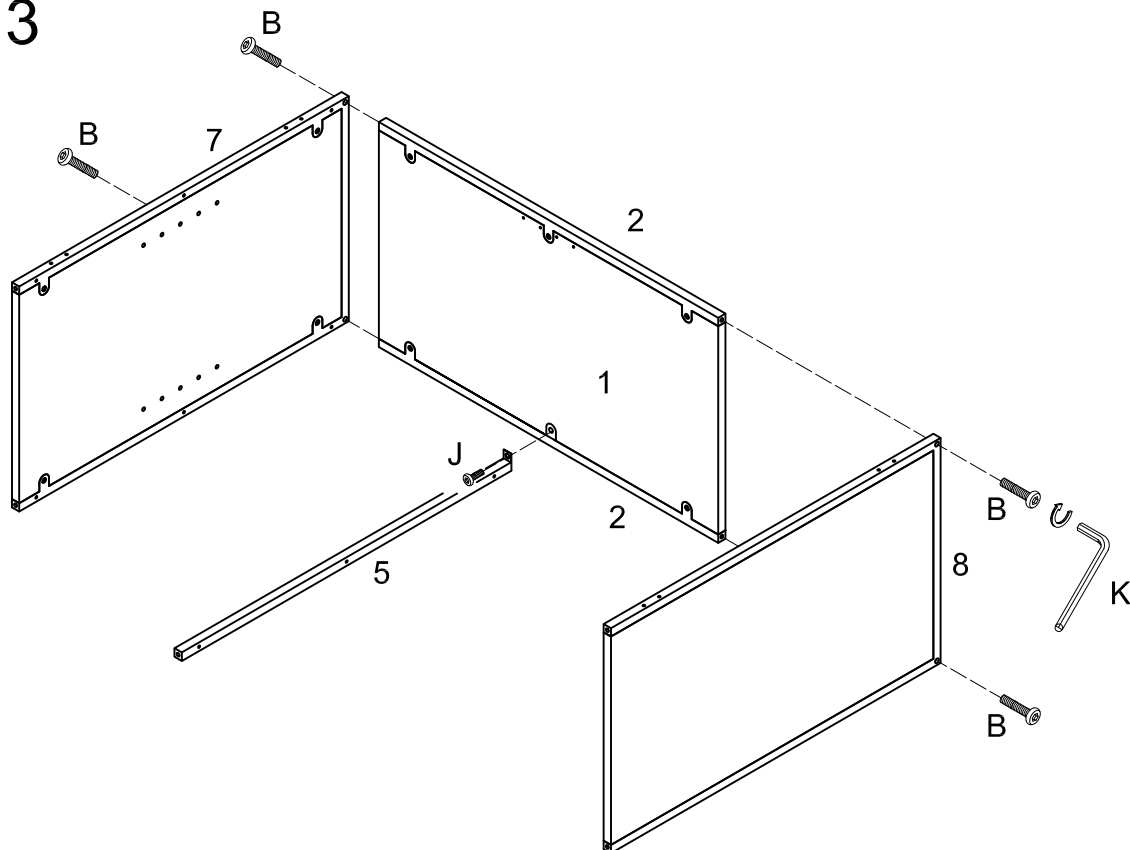


Attach part (5) to part (2) using bolt (J), and part (7,8) to part (2) using bolt (B) with hex key (K).

Step 4

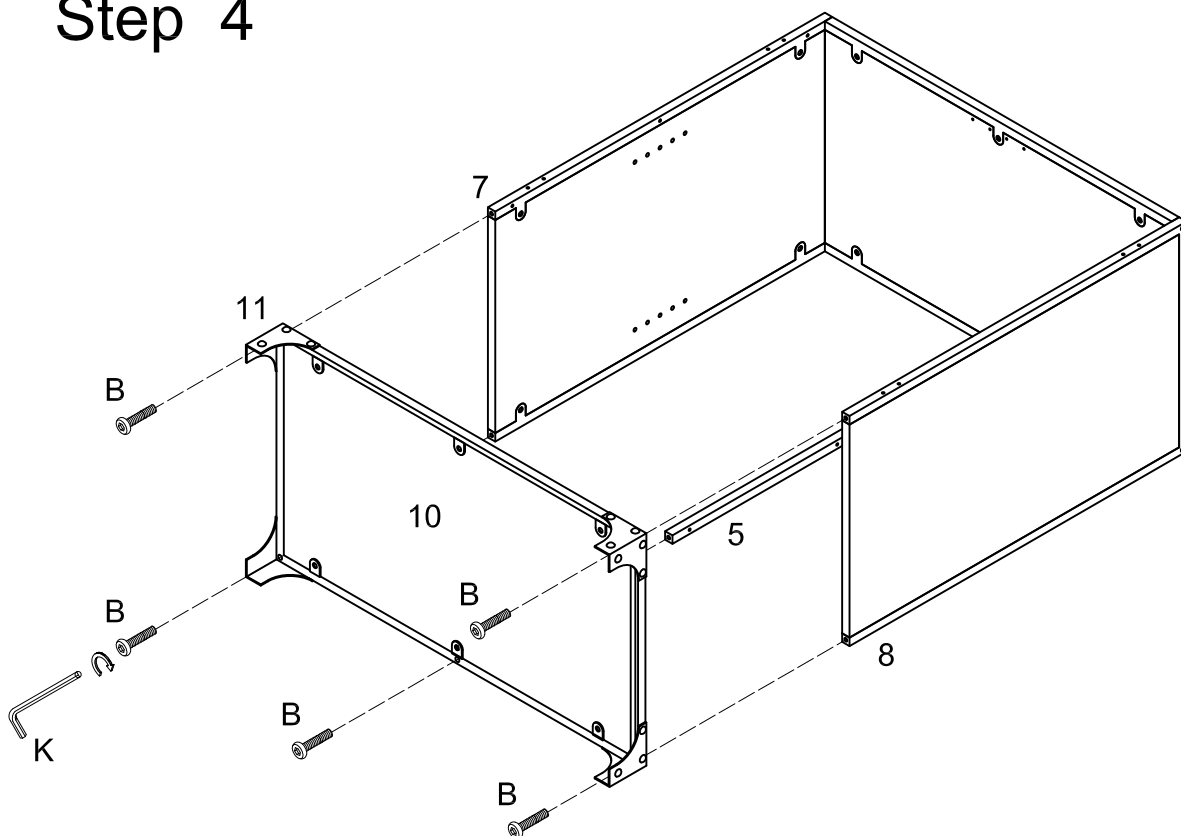


Attach part (10) to part (5,7,8) using bolt (B) with hex key (K).

Step 5

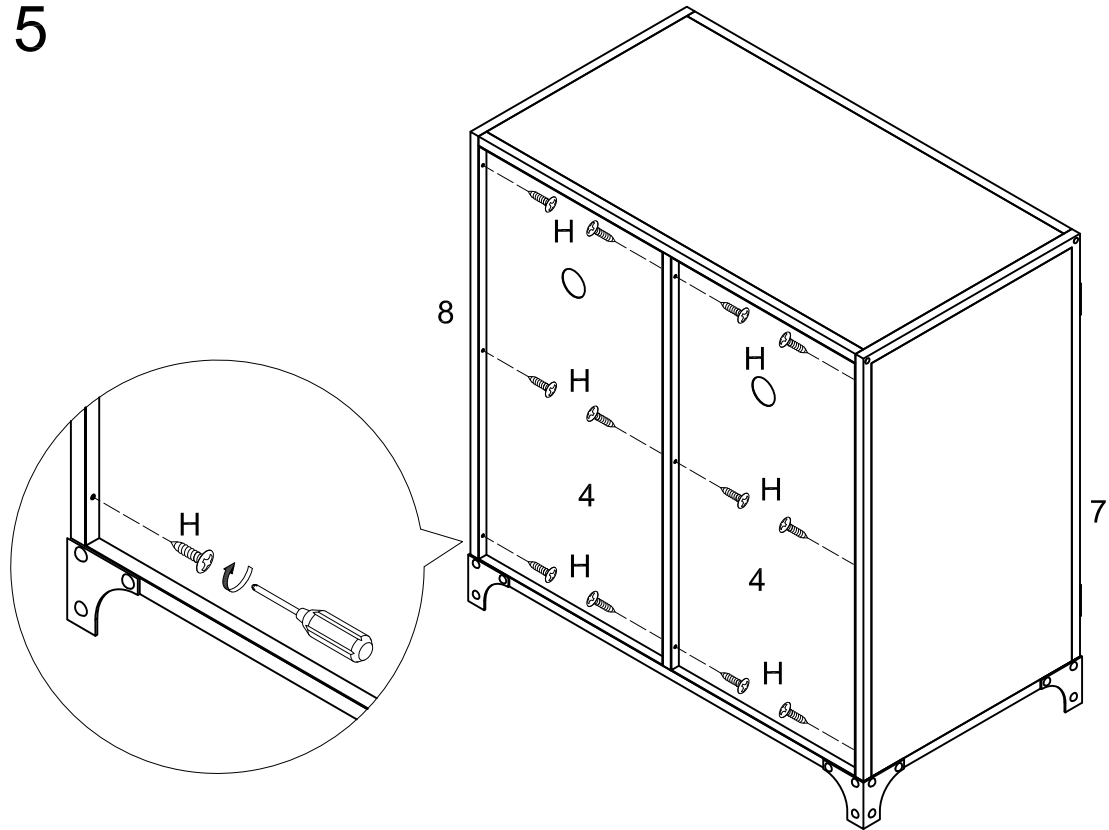


Secure back panel (4) to part (7,8) with screw (H).

Step 6

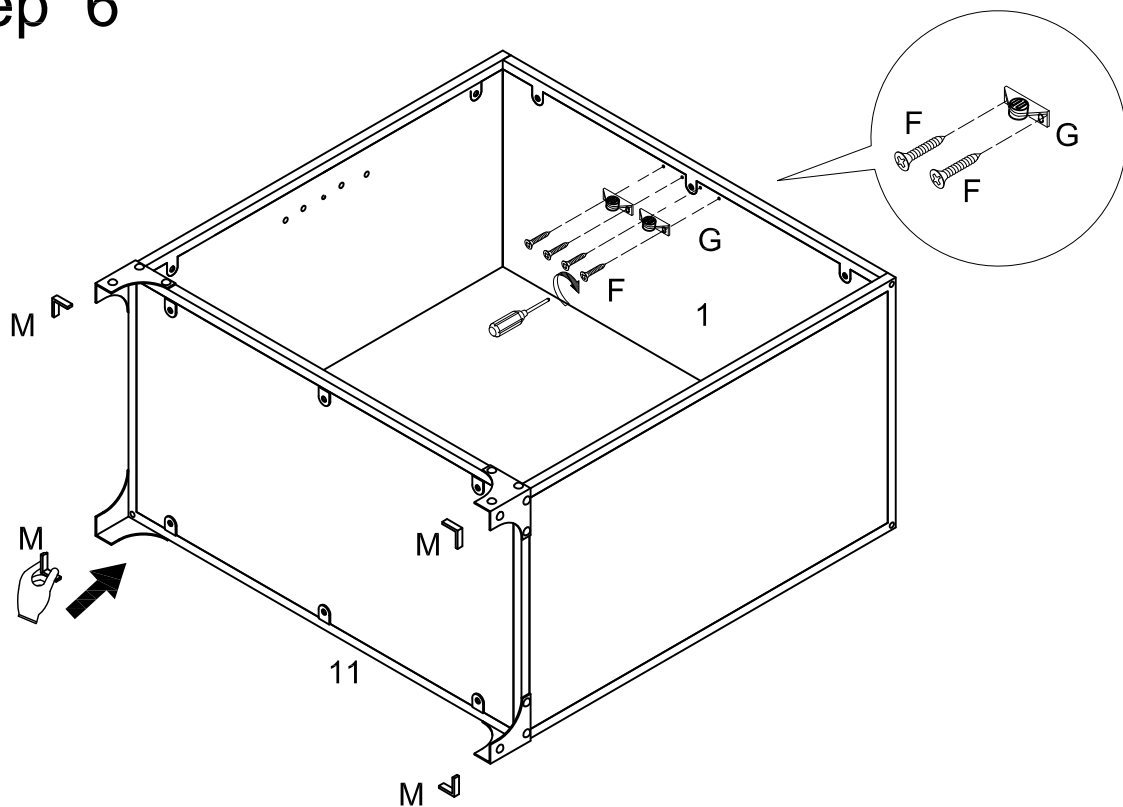


Attach door stopper (G) to part (1) using screw (F) with screwdriver, attach Plastic Cap (M) to part (11).

Step 7

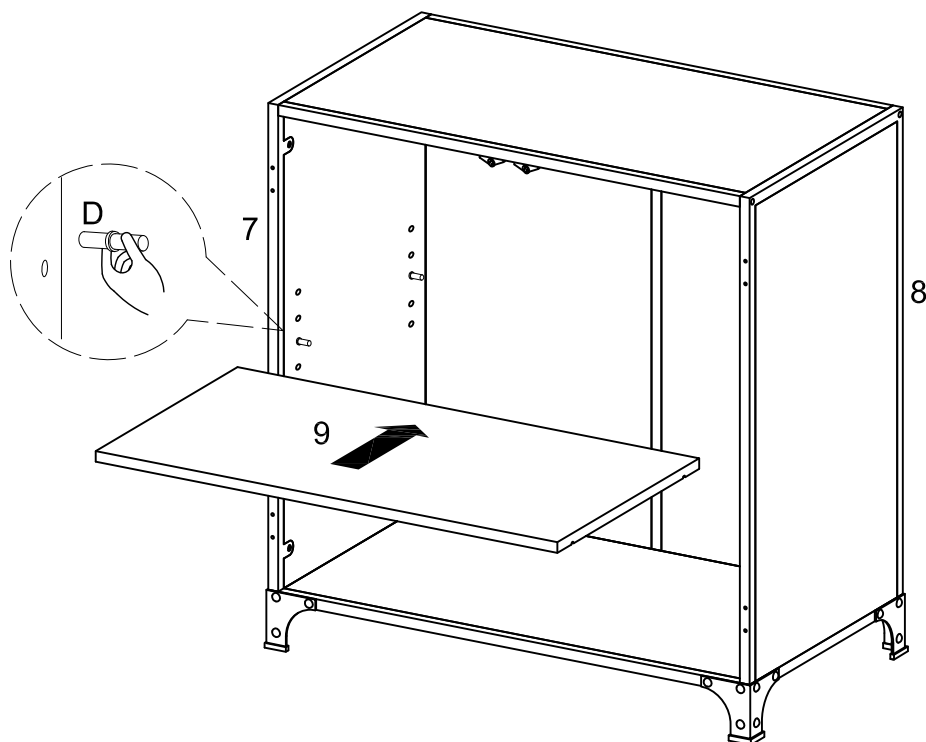


Insert shelf support pin (D) into part (7,8), then place shelf (9) on top of support pin (D).

Step 8

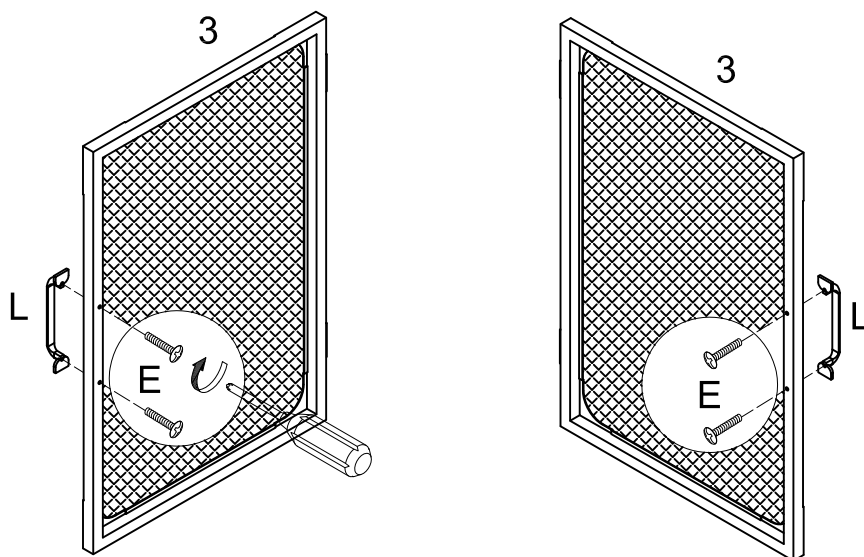


Attach handle (L) to part (3) using bolt (E) with screwdriver.

Step 9

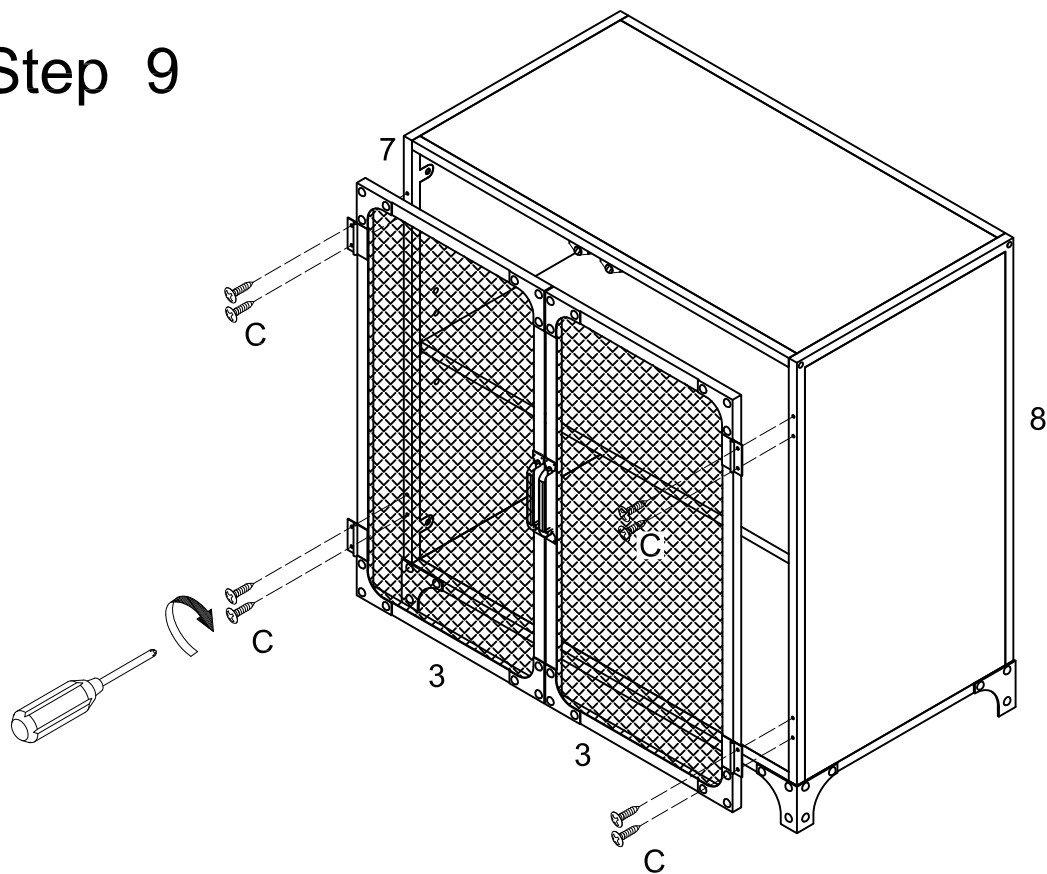

Attach part (3) to part (7,8) using screw (C) with screwdriver.

Step 10

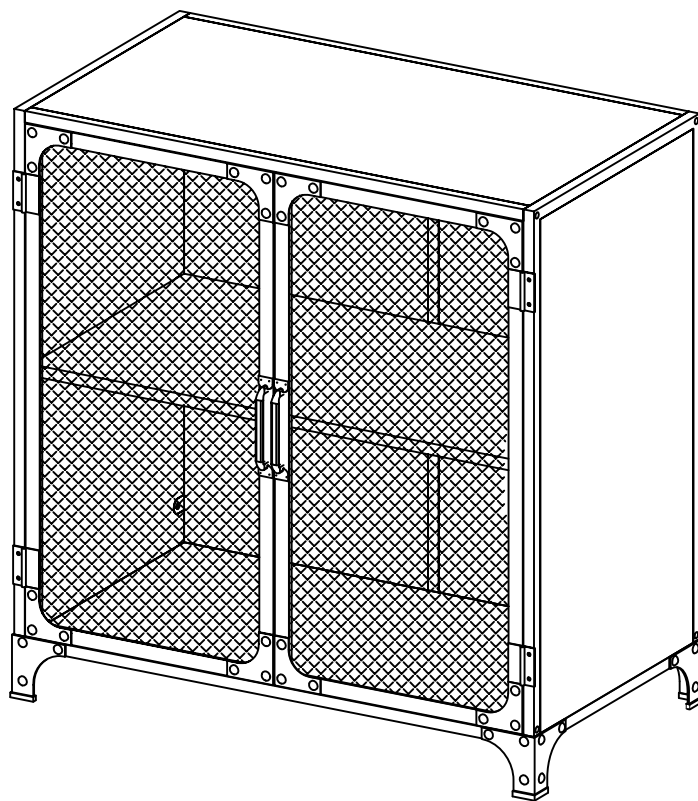

Final Assembly