


Deck Mounted Antique Brass Bathroom Faucet Ceramic Handle

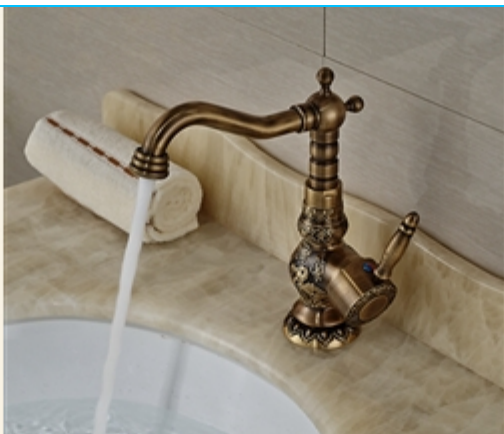


INSTALLATION INSTRUCTIONS

- Before you begin, read the installation instructions below. Observe all local plumbing and building codes.
- For the following installation instructions for your new shower head it is assumed that any old fixtures have been removed and all rough-in work has been completed.
- Unpack and inspect the shower head for any shipping damages. If you find any damages, do not install. Contact Customer Service at 800-684-4489. If you need assistance while installing your new shower head, call Customer Service.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Shut off the water supply lines where the new shower head is being installed.

TOOLS AND MATERIALS:

- Groove Joint Pliers
- Adjustable Wrench
- Plumber’s Tape
- Dry Cloth
- Phillips Screwdriver
- Silicone Sealant
- Damp Cloth
- Allen Wrench (provided)

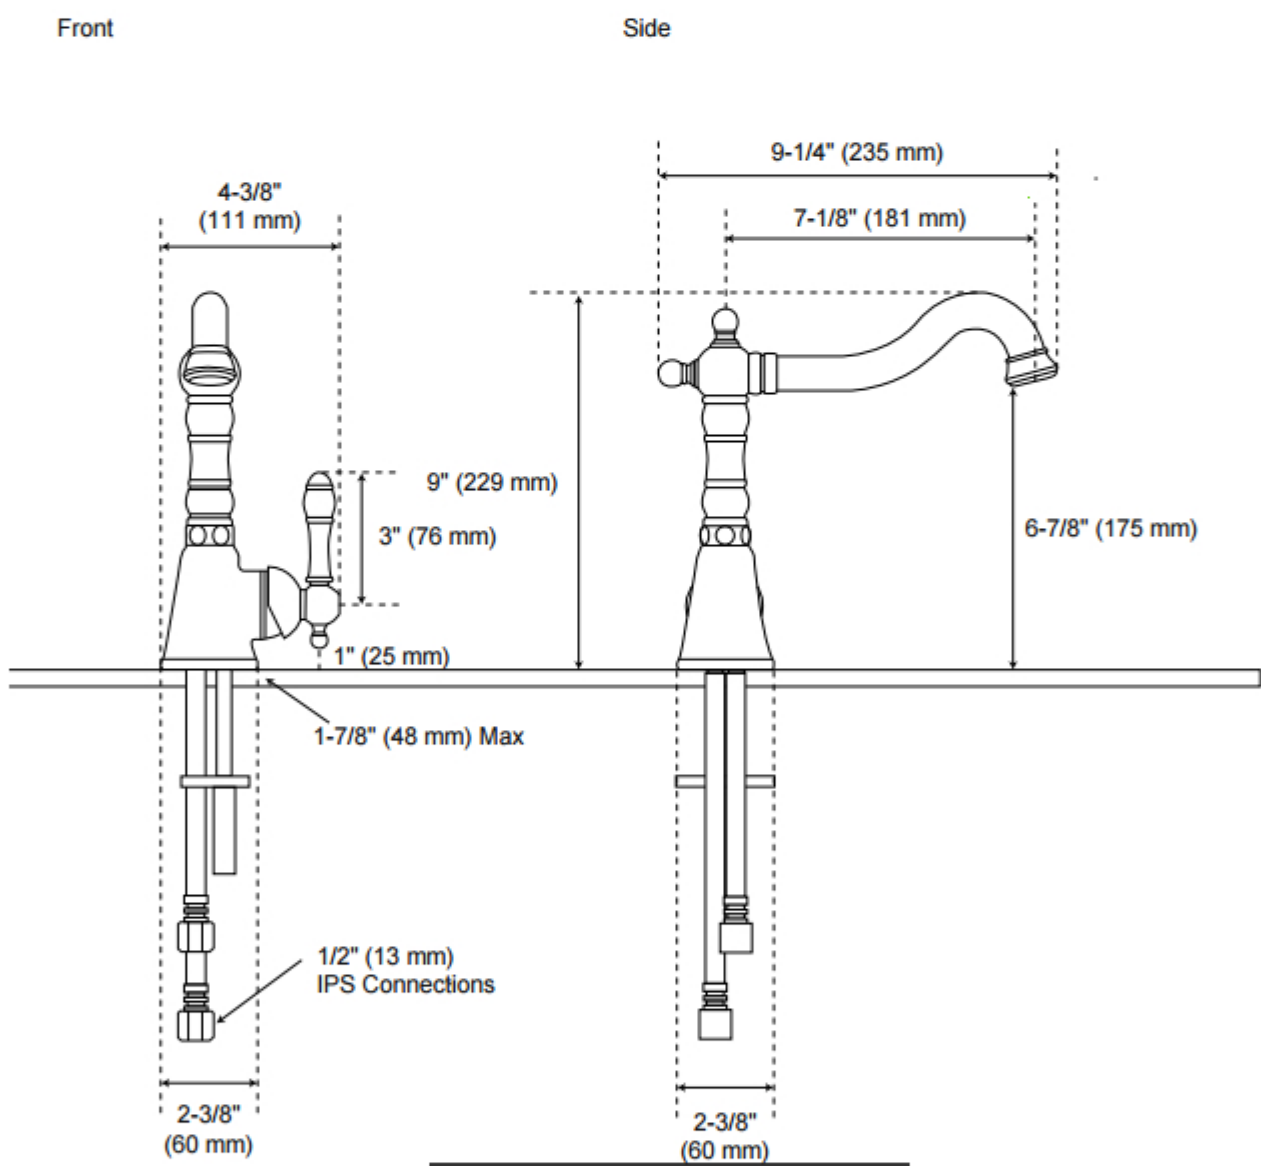

1. Remove the lock nut from the faucet body.
2. If not already connected, attach the flexible water feed tubes to the tail-piece. Hot water is always on the left and cold water is always on the right.
3. Place the metal mounting washer, or clip, and rubber sealing gasket over the mounting hole.
4. If a decorative mounting plate, or escutcheon, is included place over the mounting hole. If there is no decorative plate move on to the next step.
5. Thread the faucet through the mounting hole and mounting hardware and thread the washer (if included) and lock nut onto the tail-piece from underneath the sink. Make sure that faucet is properly aligned and tighten the nut with your adjustable wrench.
Note: If there is a separate mounting rod, remove the mounting nut and screw the rod into the faucet body. Thread the rod through the mounting hole and tighten the mounting nut to secure.
6. If your faucet features a side spray, install by inserting the sprayer housing, and rubber sealing gasket through the mounting hole. Secure by tightening the lock nut from underneath the sink. If your faucet does not have a side spray move on to step 9.
7. Insert the side spray hose through the sprayer housing and attach to the spray hose outlet on the faucet.
Tip: Before you connect the spray hose to the faucet, make sure that it is in a position that will allow you to pull it out easily without getting caught on any other fixtures under the sink
8. Hand tighten to attach the water feed tubes to the main water supply, being careful not to cross the two during installation. Give a ¼ turn with pliers or wrench, but don't over tighten. Curve tubes as necessary to ensure there are no kinks or knots.
9. When your faucet installation is complete, turn on the water supply. Check to make sure that all connections are tight (no water should be leaking) and that the hot and cold supplies are working correctly. Turn the water on and allow the water to flow through the spout for approximately 60 seconds. Divert the water to the spray hose and allow the water to flow through the hose for approximately 60 seconds.

This General diagram and installation instructions are not intended for any specific model, but is presented as a general guideline for Installations!