

ASSEMBLY INSTRUCTION

SUNPAN

Sunpan Product Name: **DANETTE BED - KING**


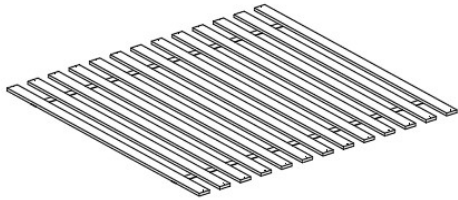



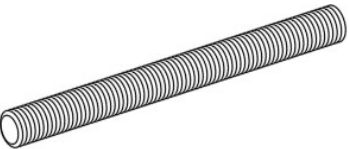



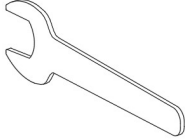
Please visit our website www.sunpan.com for more great products

For assembly questions please call **1-800-787-1019 (or +1-416-736-0094)** outside North America or email to info@sunpan.com

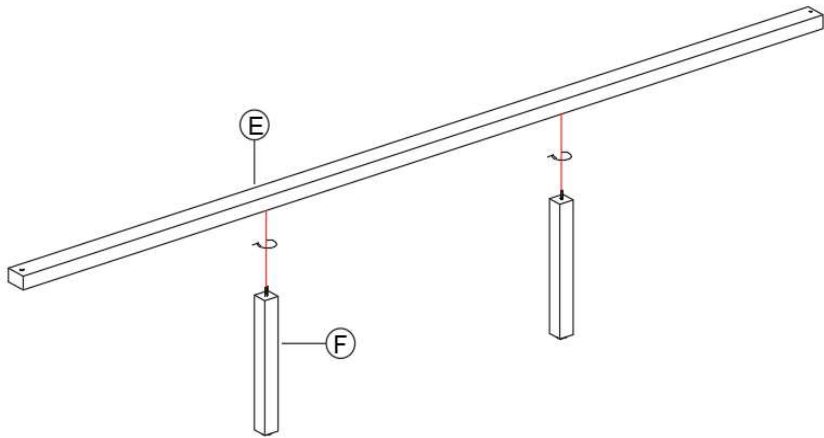
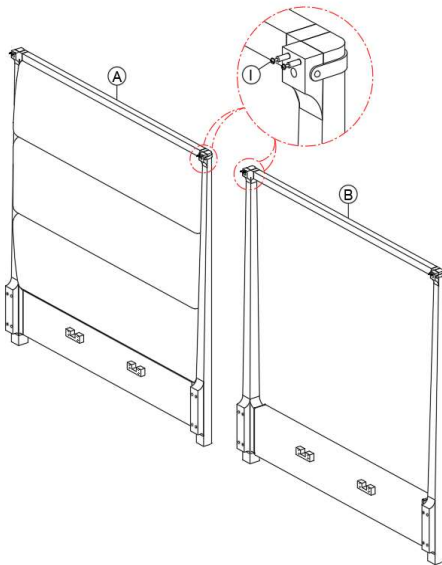
PARTS LIST

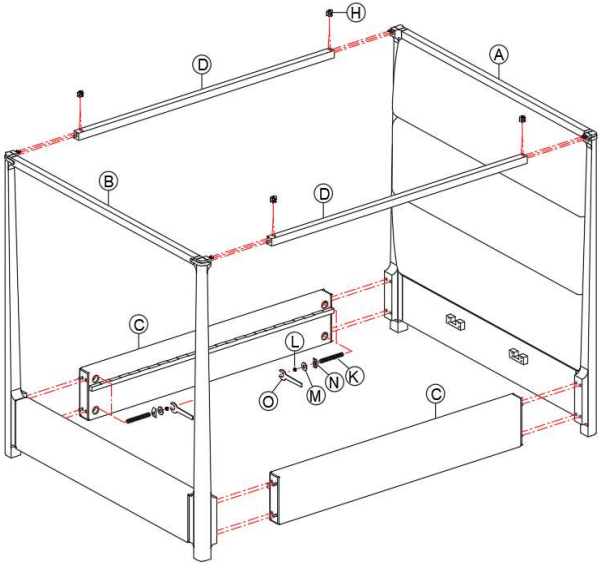
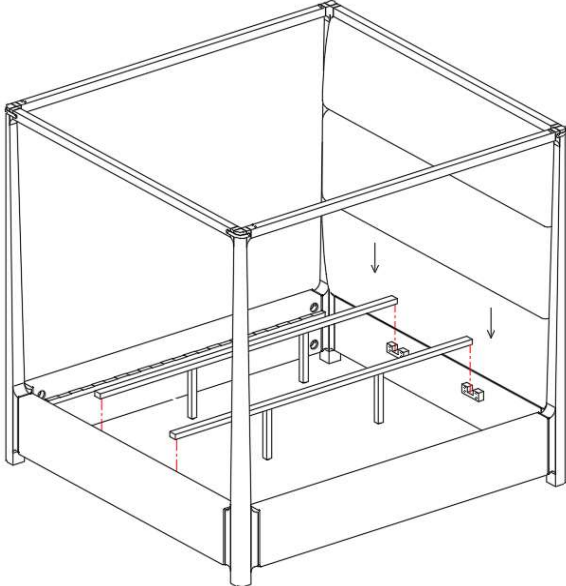
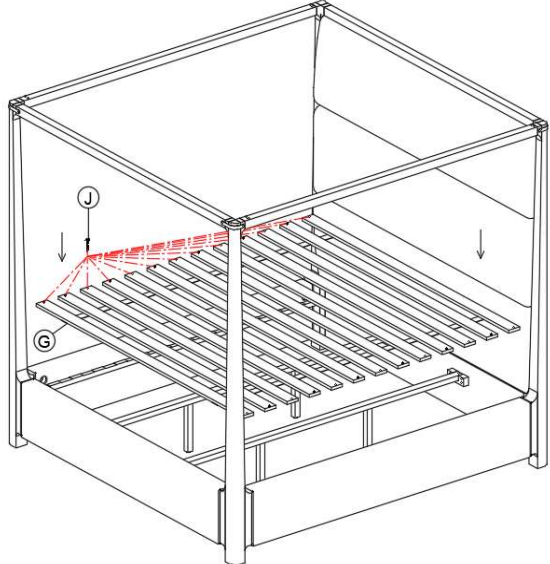
Before you begin, please layout all parts and ensure you have the correct count.

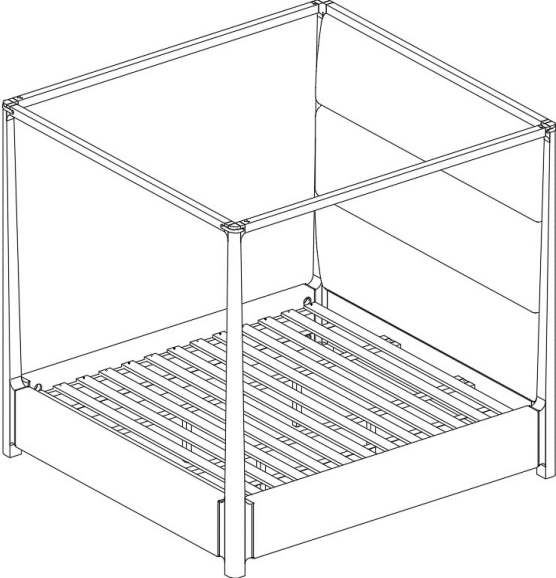
PARTS	DESCRIPTION	QUANTITY	ILLUSTRATION
A	Headboard	1	
B	Footboard	1	
C	Side Frames	2	
D	Side Top Bars	2	
E	Support Slats	2	

F	Support Legs	4	
G	Slat Frame	1	
H	Cam Lock Nuts	8	
I	Cam Lock Screws	8	
J	Screws (M4x35mm)	26	
K	Bolts (Ø8*90mm)	8	
L	Hex Nuts	8	
M	Washers	8	
N	Crescent Nut Washers (M6)	8	
O	Wrench Key	1	

ASSEMBLY INSTRUCTIONS

STEPS	DESCRIPTION	ILLUSTRATION
1	Tighten the Support Legs (F) into the Support Slats (E).	
2	Tighten the Cam Lock Screws (I) into the top corner of the Headboard (A) and Footboard (B).	

3	<p>Place the Side Frames (C) and Side Top Bars (D) between the Headboard (A) and Footboard (B). Tighten the Crescent Nut Washers (N), Washers (M), Hex Nuts (L) and Bolts (K) by using the Wrench Key (O) for Side Frames. Then, tighten the Cam Lock Nuts (H) for Side Top Bars.</p>	 <p>This diagram illustrates the assembly of the side frames and top bars. It shows a perspective view of the bed frame with the headboard (A) and footboard (B) already in place. Side frames (C) and side top bars (D) are being positioned between them. Red dashed lines indicate the placement of various hardware: Crescent nut washers (N), washers (M), hex nuts (L), and bolts (K) are used to secure the side frames, while cam lock nuts (H) are used for the side top bars. A wrench key (O) is shown being used to tighten the side frame hardware.</p>
4	<p>Place the frame assembled during Step 1 in the centre of the bed frame.</p>	 <p>This diagram shows the inner frame being placed into the center of the larger bed frame. Arrows point downwards from the inner frame towards the support slats, indicating the direction of placement.</p>
5	<p>Place the Slat Frame (G) above support slats and attach using the Screws (J).</p>	 <p>This diagram illustrates the final step of attaching the slat frame. The slat frame (G) is shown being placed above the support slats. Red dashed lines and arrows indicate the placement of screws (J) to secure the slat frame to the bed frame.</p>

6	Assembly completed.	
---	---------------------	--

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.

Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.

Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.

Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement.

Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive exposure to sunlight may cause fading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.