





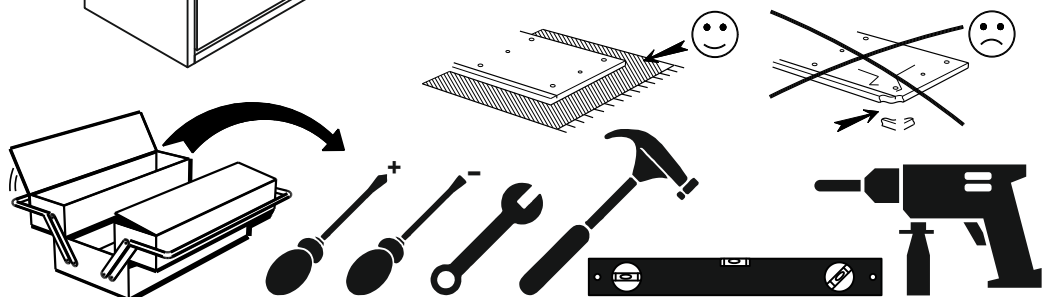

MULTIMO

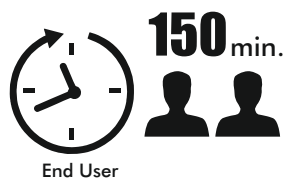



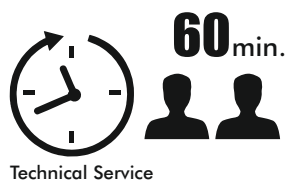



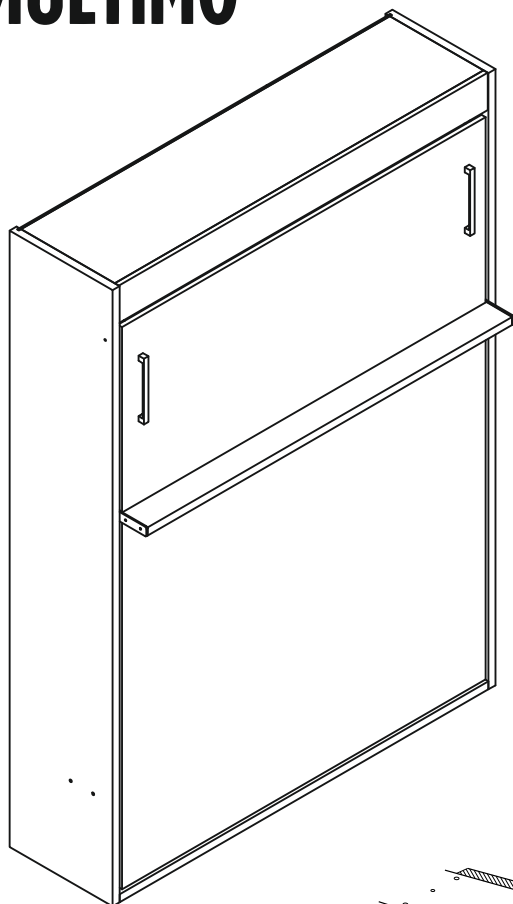











A 203 BELLEZA





Assembly Instructions



Track Title	Piece	(inch)			Piece	(mm)		
		Thickness	Length	Width		Thick	Height	Most
A	2	1,18	89,76	17,32	2	30	2280	440
B	1	1,18	62,05	17,32	1	30	1576	440
C	2	0,71	62,05	15,75	2	18	1576	400
D	1	0,71	62,05	5,43	1	18	1576	138
E	1	0,71	62,05	10,24	1	18	1576	260
F	1	1,18	61,34	4,33	1	30	1558	110
G	1	1,97	61,81	19,69	1	50	1570	500
H	1	0,71	81,89	61,18	1	18	2080	1554
L	3	0,31	88,94	20,87	3	8	2259	530

Accessories List


MNX 02  24/ piece IM - 01 (6x30) mm	MNG - 01  24 / piece AL - 01	OT-054  2 / piece AL - 02	CT - 01 (6x40) mm  2 / piece DSE - 01 (40x90x32) mm
 4 / piece DD - 01 (R10)	 4 VD - 01(6X70) mm	 5 PL - 01 (6x19x2) mm	 3 / piece VDA - 01 (6,5x50) mm
 3 / piece VTB - 01 (4,8x16) mm	 3 / piece KP - 01 (224) mm	 3 / piece VKP - 01 (22) mm	 4 / piece VD - 02 (3,5x25) mm
 12 / piece KVL 01	 2 / piece MKZ - 02 1400N	 4 / piece TTC 01	 26 / piece TAP - 01
 25 / piece	 2 / piece	 4 / piece	 24 / piece

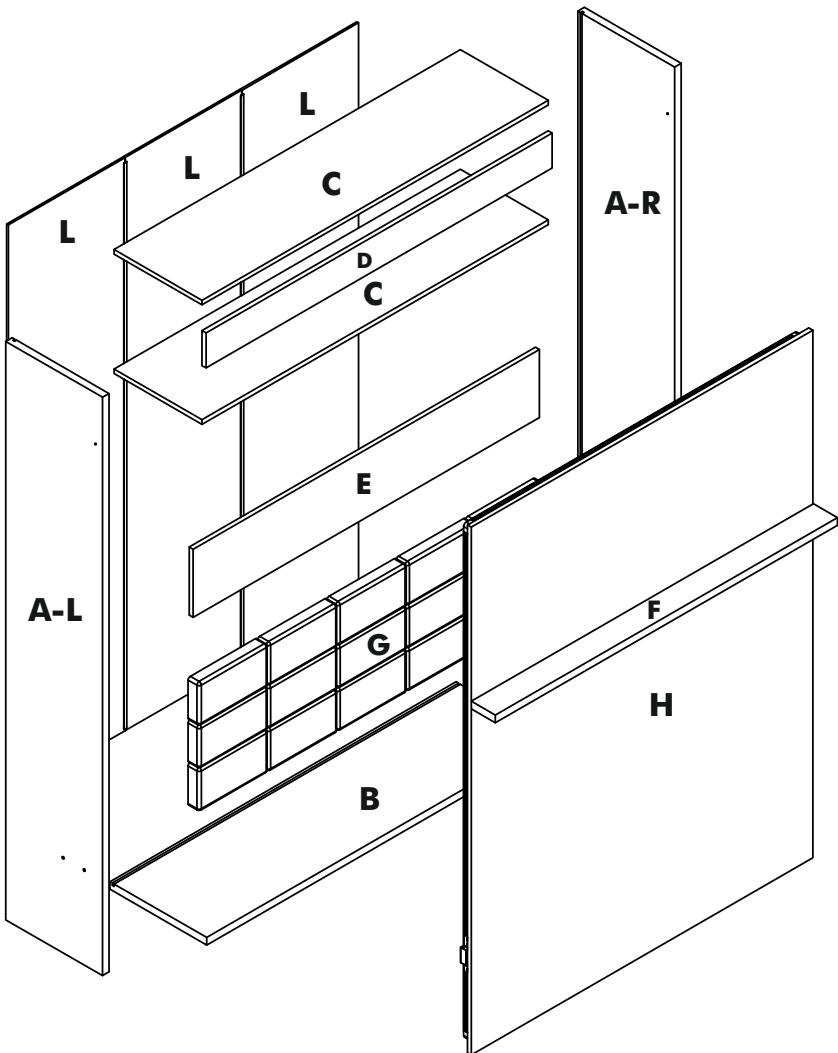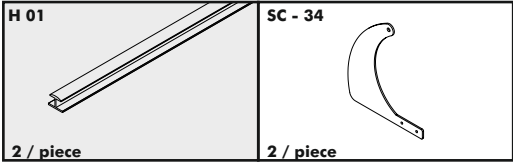

STEP 1

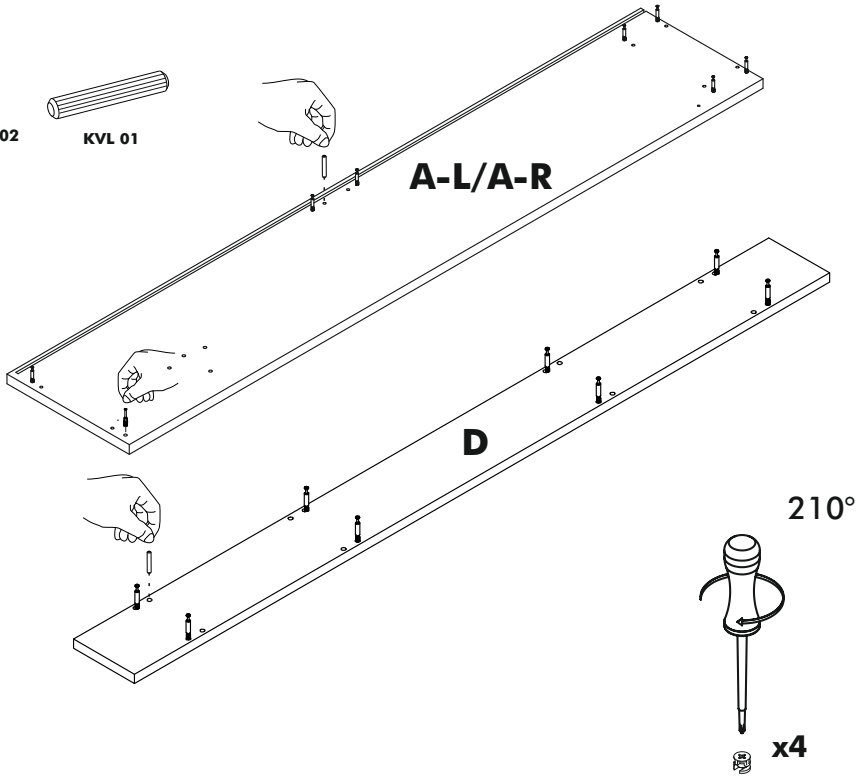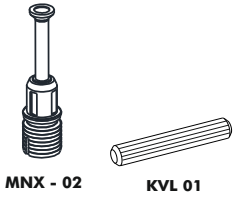

STEP 2

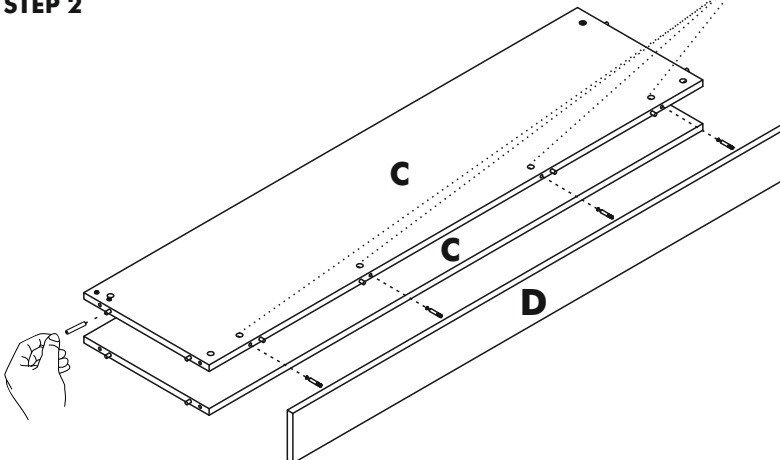


210°




STEP 3




MNG - 01

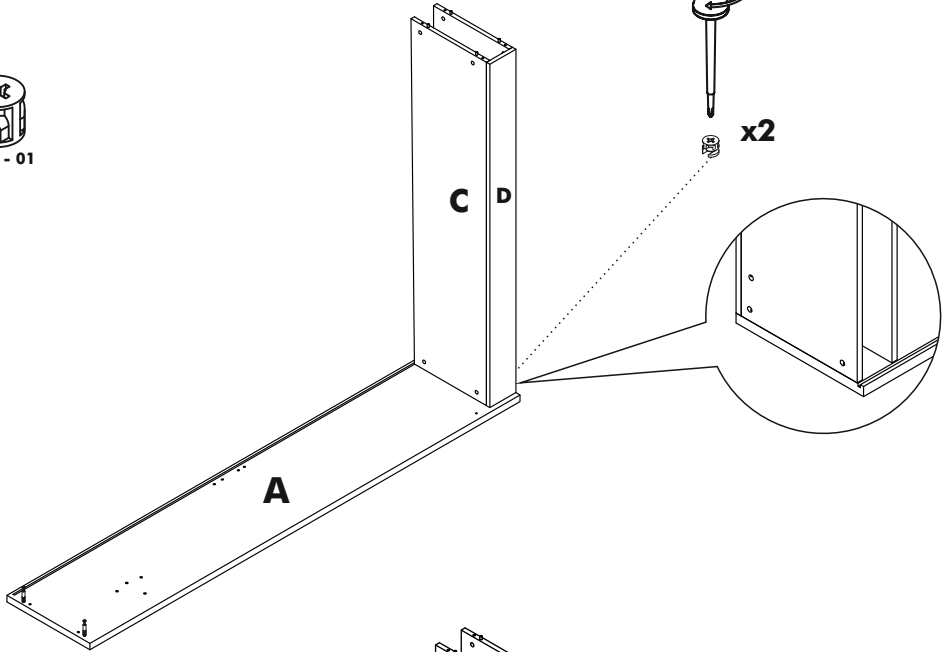


STEP 4

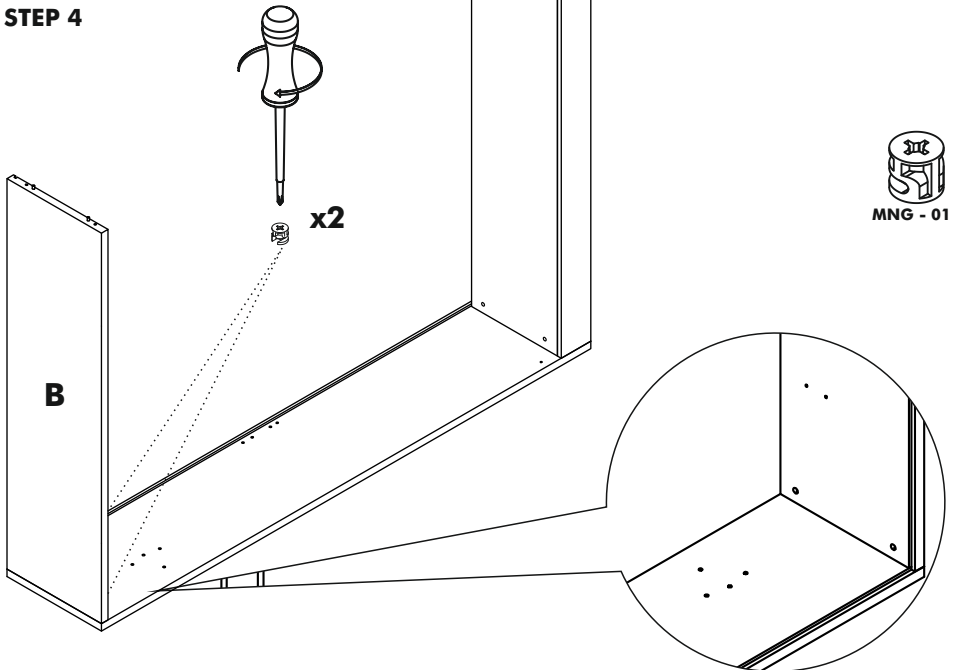


STEP 5

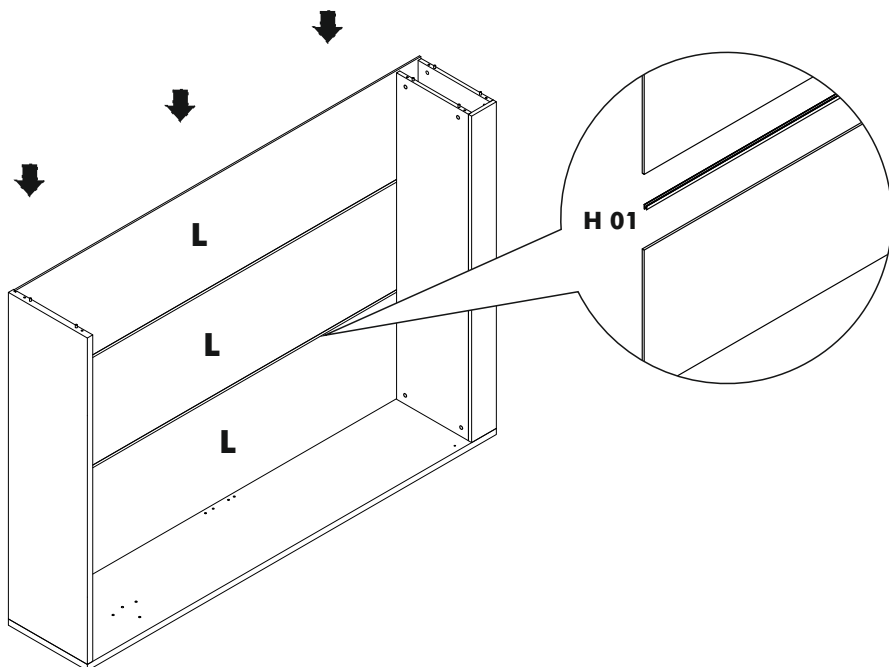


STEP 6

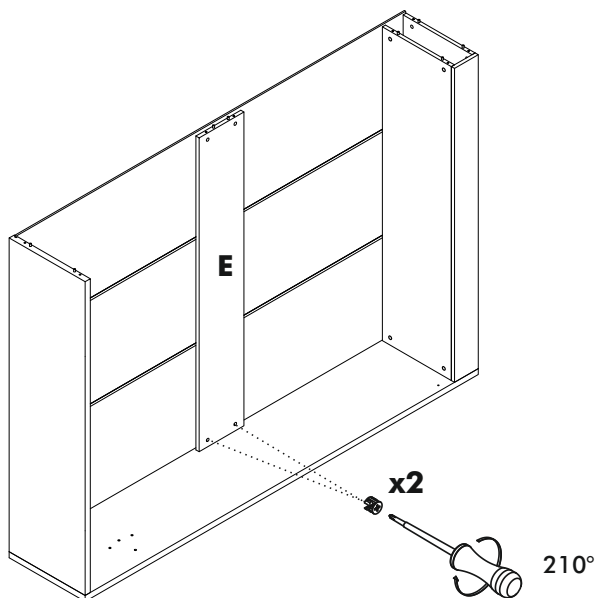




STEP 7

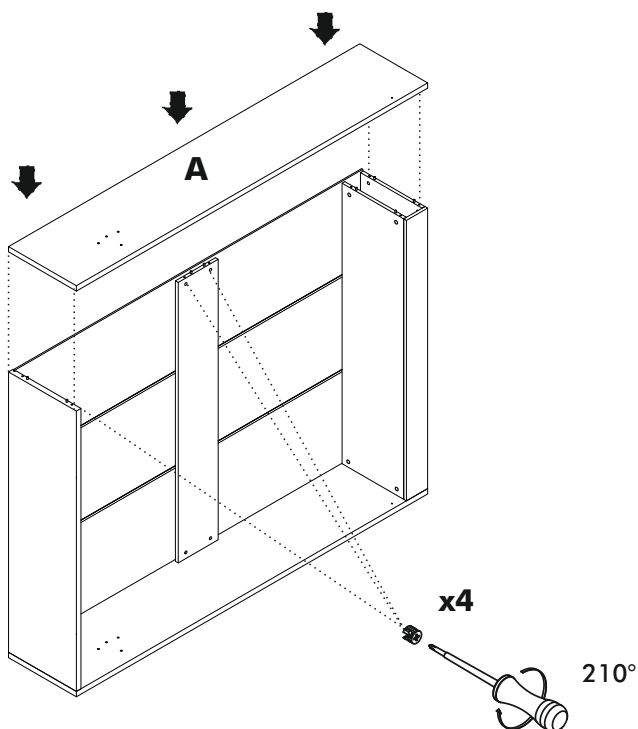



STEP 8

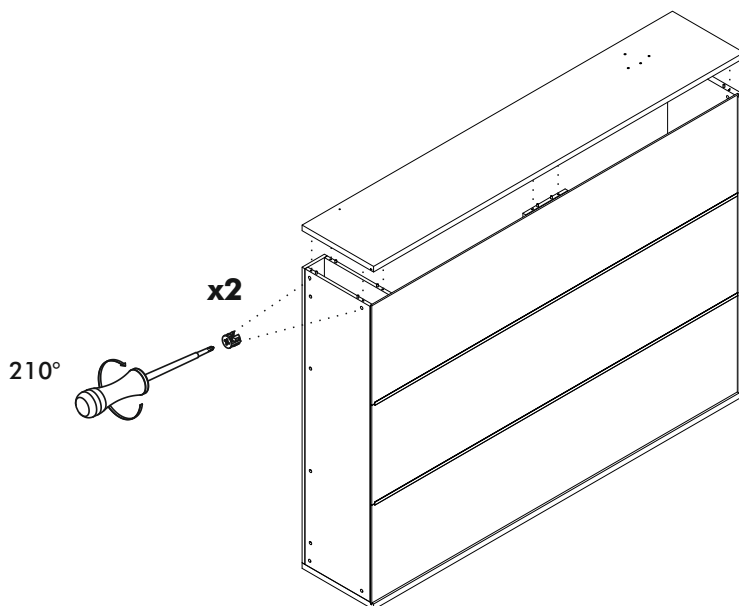


STEP 9

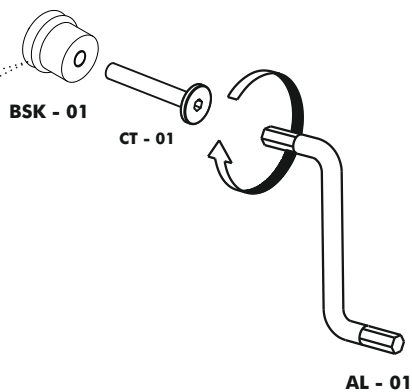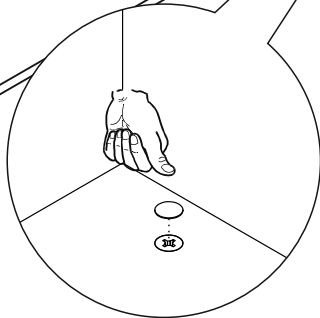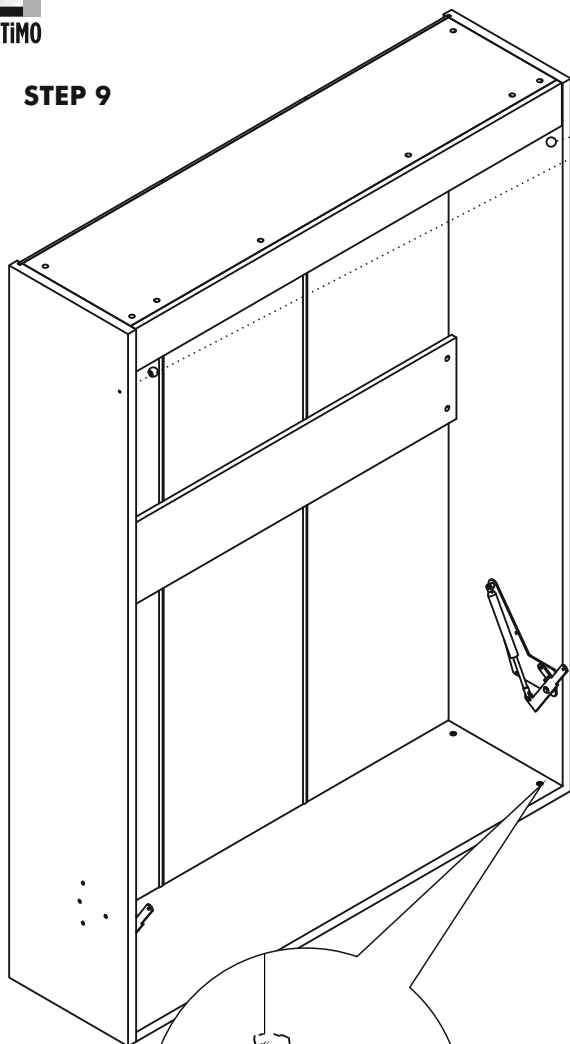

CAUTION
DO NOT UNLOCK BEFORE INSTALL

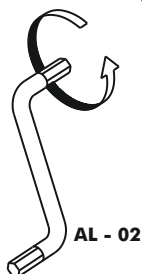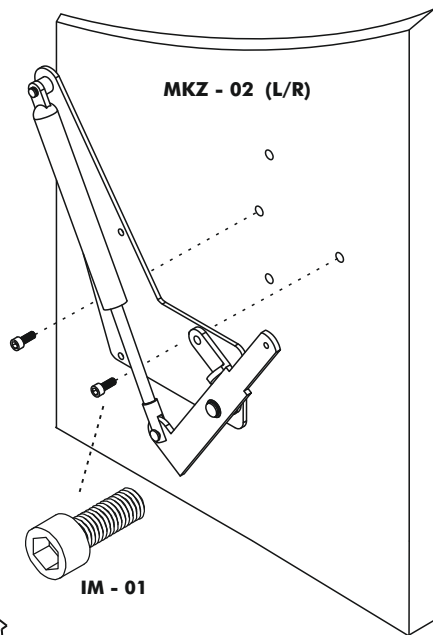

STEP 10

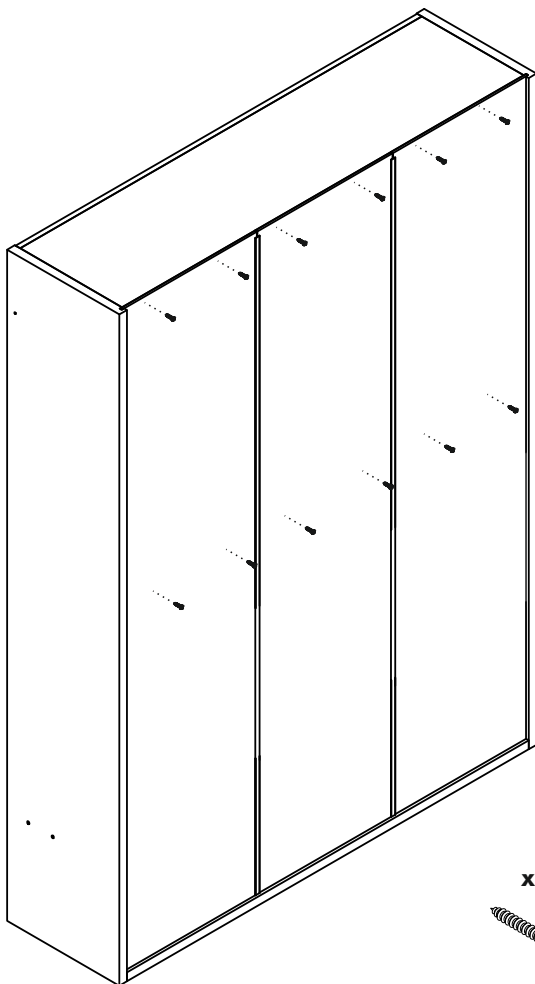


x20




VD - 02



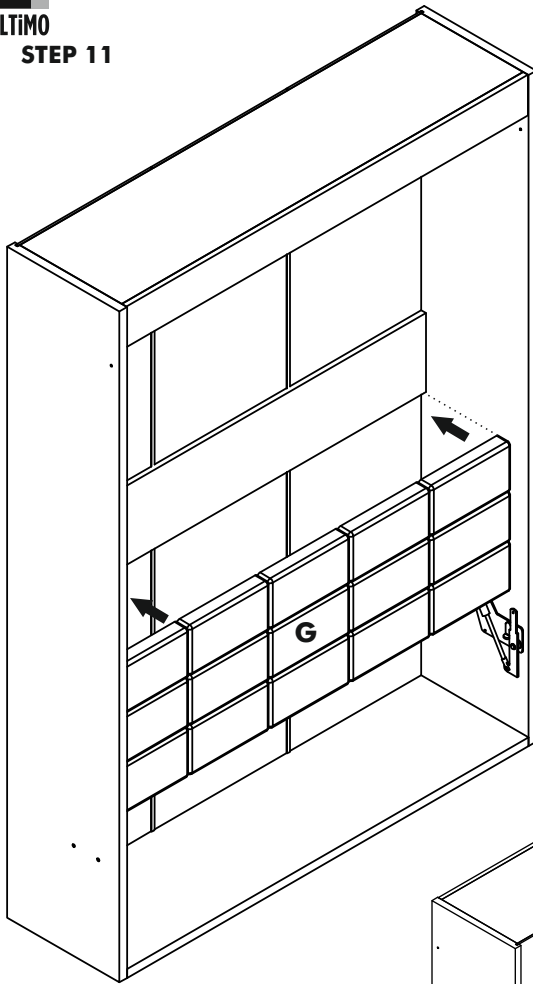

STEP 12

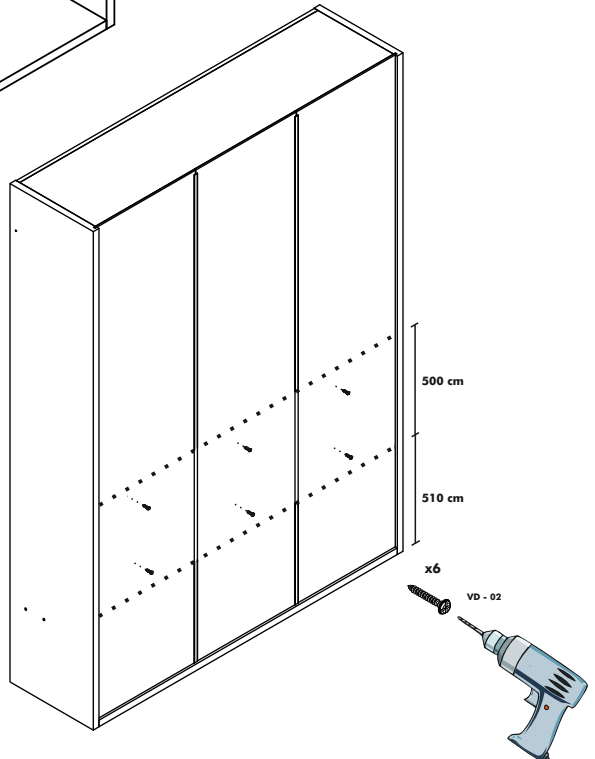

STEP 13

Ø 10 mm / 0,254 inch




DD - 01

PL - 01

VD - 01

VTB - 01


DSE - 01

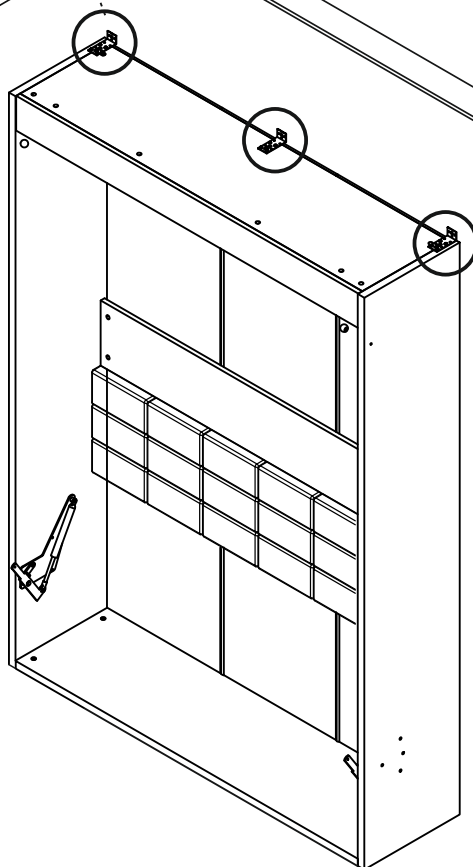



Ø 10 mm / 0,254 inch



STEP 13-2

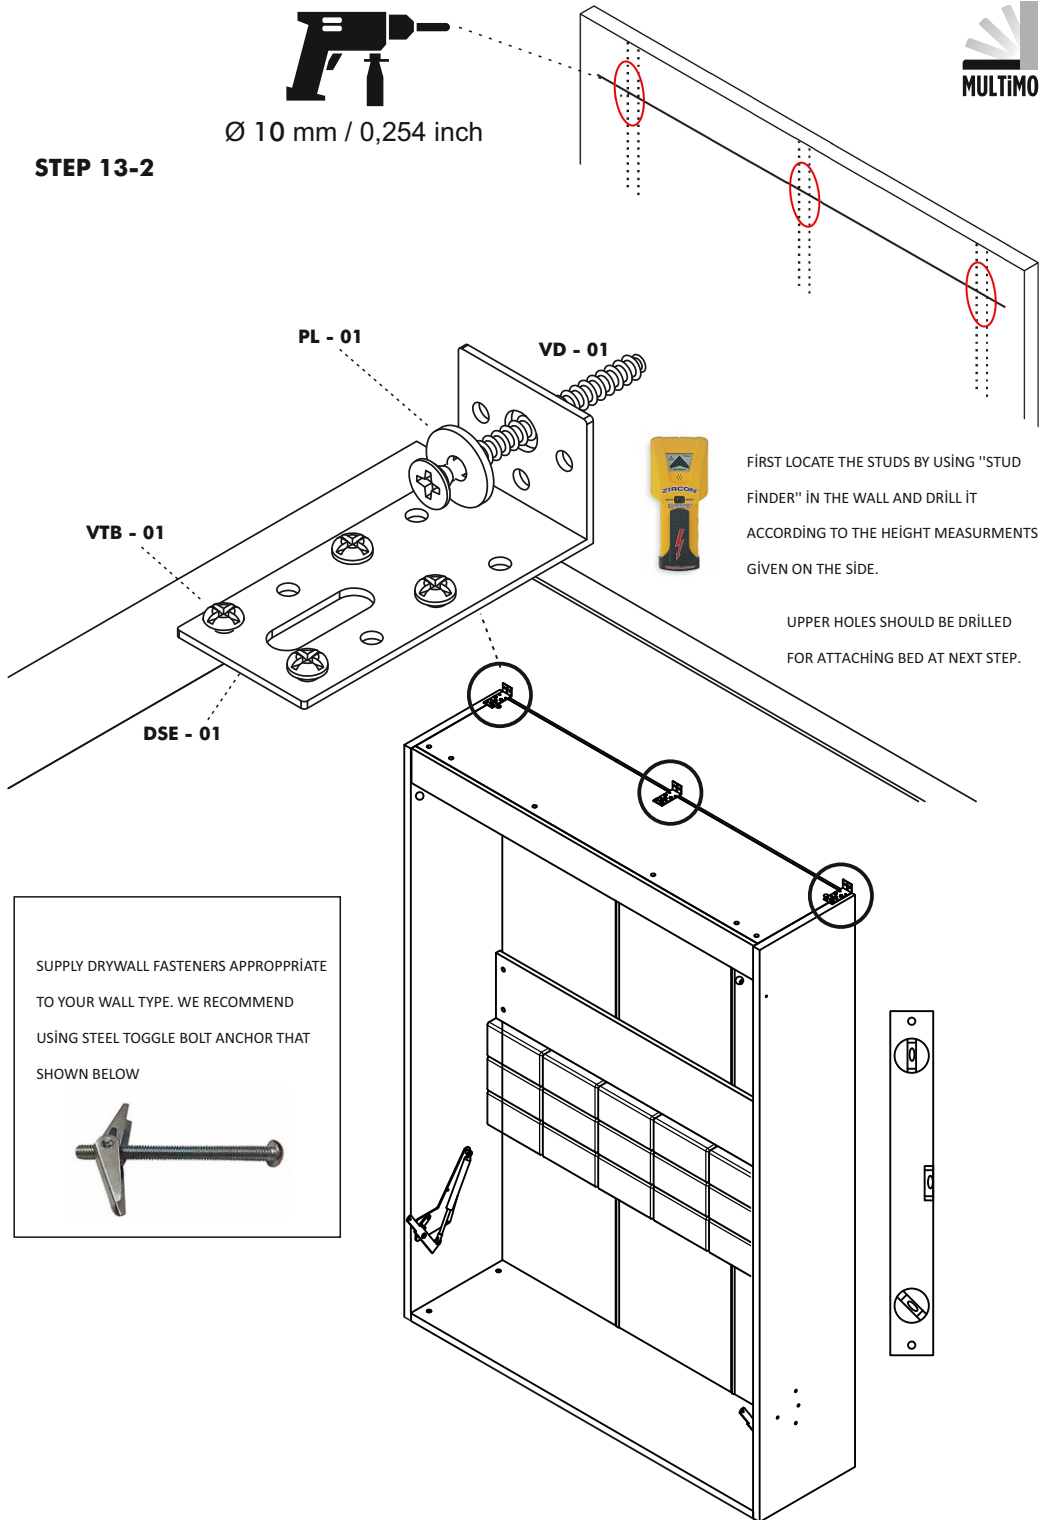


SUPPLY DRYWALL FASTENERS APPROPRIATE TO YOUR WALL TYPE. WE RECOMMEND USING STEEL TOGGLE BOLT ANCHOR THAT SHOWN BELOW




STEP 14

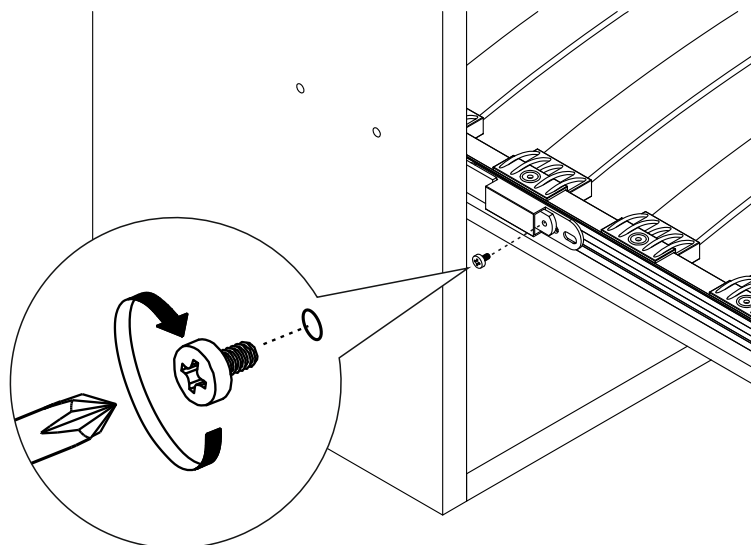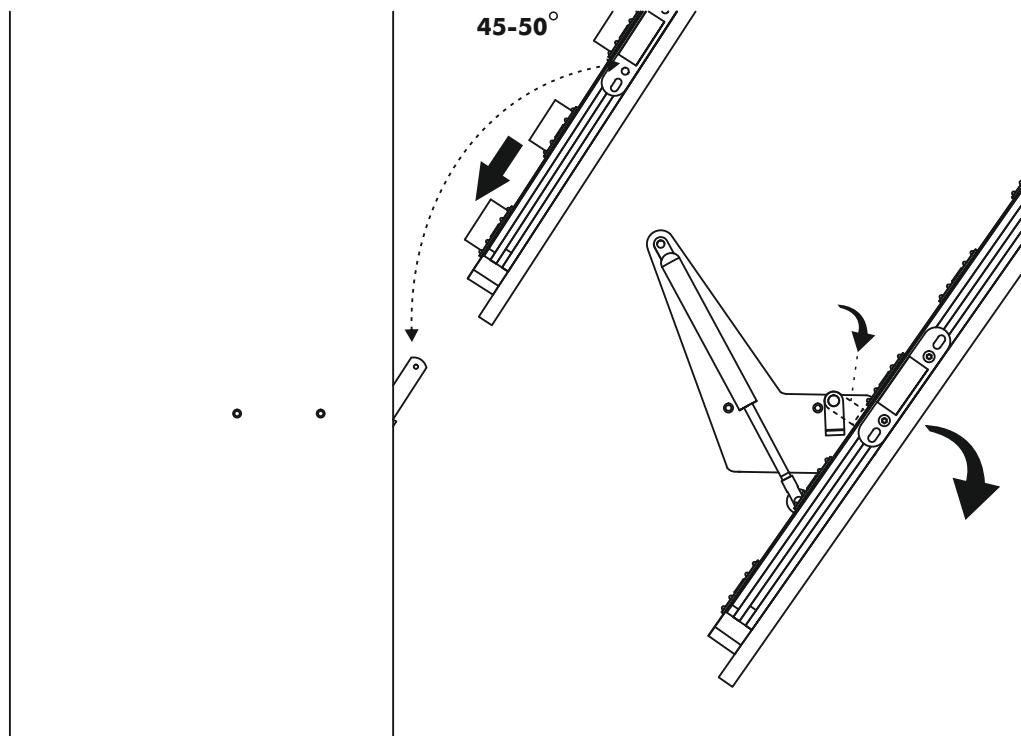


STEP 15

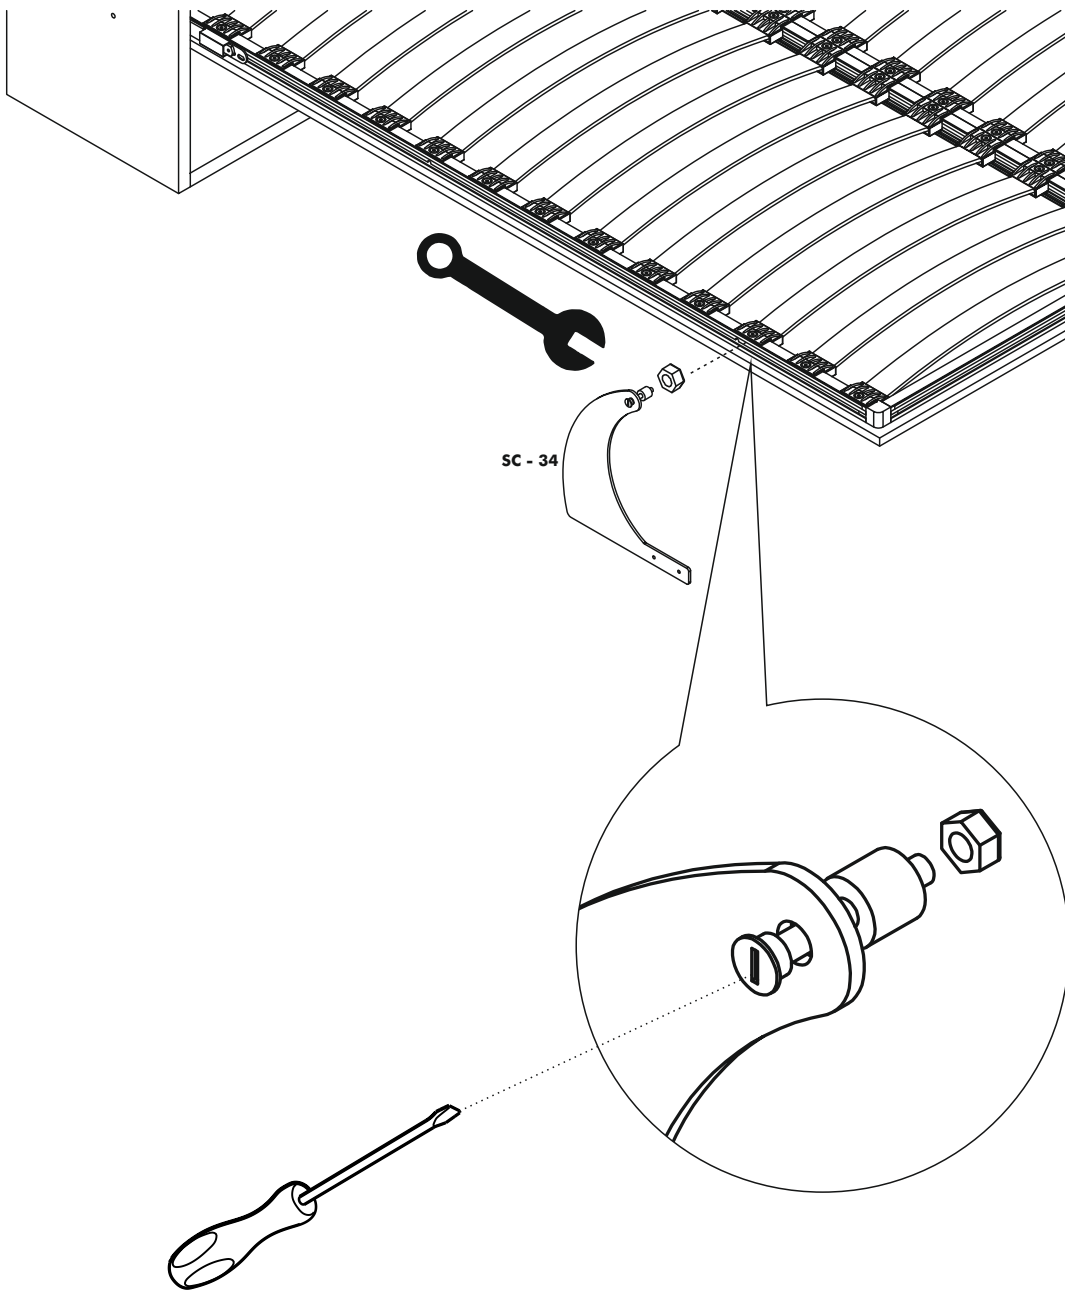


STEP 16

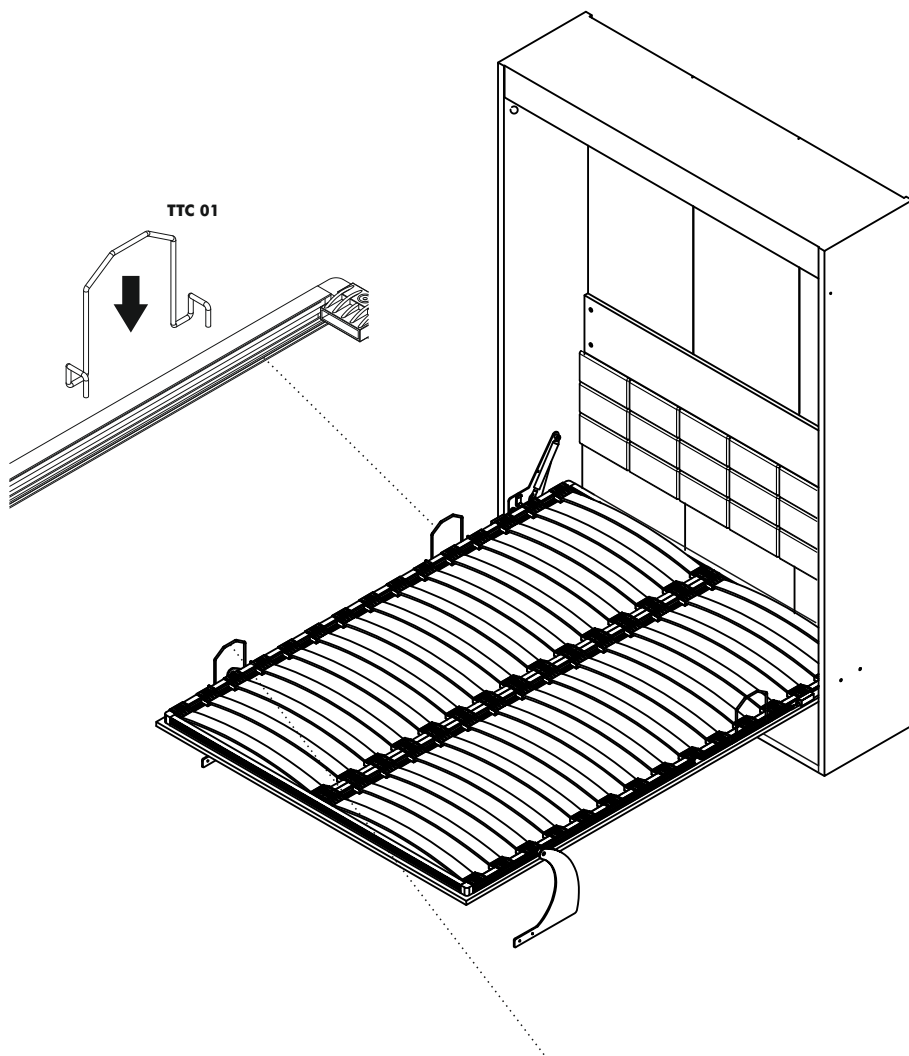

STEP 17

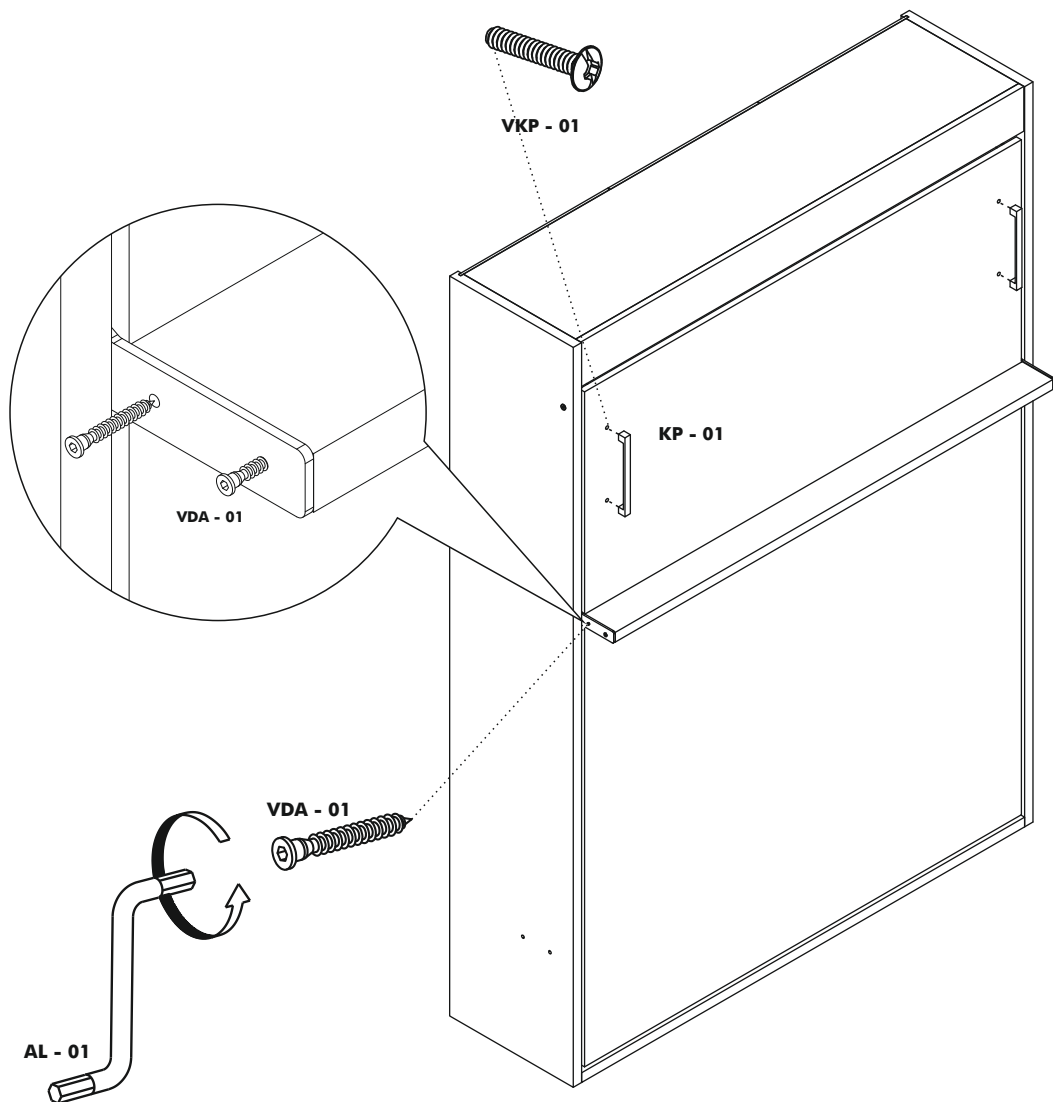

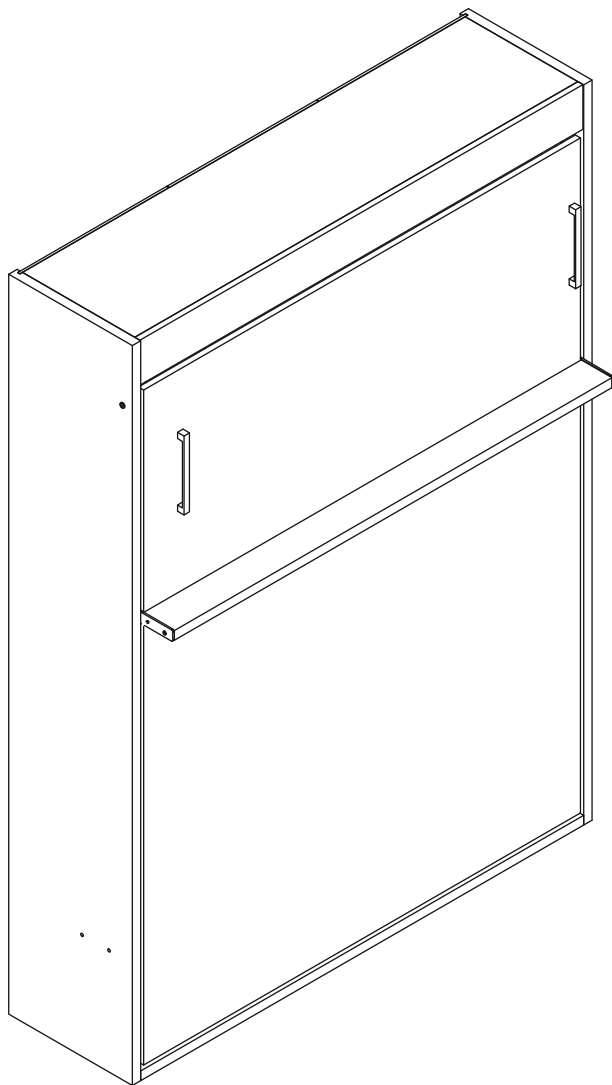

ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. When mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar strong material are also acceptable. Do not mount furniture to paper-mache or sheetrock like material without properly affixing to stud.
2. For safety and product longevity you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm hardware remains properly affixed and connections snug.
3. Wall Bed mattress thickness may not exceed 8 inch. Take care to remove pillows and excess blankets before closing. Doing so keeps mechanism free of obstruction and unnecessary stress.
4. Do not lean or rest heavy objects on side or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use the furniture's beds, desks and shelving as intended. Not designed to be sat, stood, leaned, jumped (etc) on. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change you must inspect interior and exterior of furniture.
7. Single, Twin, Twin XL beds accommodate the weight of one person. Improperly sleeping more than one person risks injury to person and damage to property.
8. Before any un-mounting or disassembly please contact Multimo for technical support and instruction. Failure to properly detach risks injury to person and damage to property.
9. For Bunk Beds:
 - a. Always use provided ladder when accessing top bunk.
 - b. Be slow, careful and aware of surroundings when opening top bunk.
 - c. Do not horseplay. Beds are to be slept on only.
 - d. Some have legs that fully extend when open- be aware of where the leg is and will be.



www.multimobeds.com