








Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

### HARDWARE LIST

- A (4) 1/4" x 3/4" Allen Bolts
- B (4) 1/4" x 1/2" Allen Bolts
- C (12) 1/4" x 2-1/4" Countersunk Allen Bolts
- D (4) Hex Nuts
- E (12) Flat Washers
- F (1) Allen Wrench
- G (1) Hex Wrench

### PARTS LIST

- H (1) Headboard
- I (1) Footboard
- J (2) Leg Extensions
- K (4) Finials
- L (2) Short Canopy Posts
- M (2) Long Canopy Posts
- N (2) Short Canopy Poles
- O (2) Long Canopy Poles

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	4		B	4	
C	12		D	4	
E	12		F	1	
G	1				


### STEP 1

Begin assembly by sliding the Long Canopy Posts (M) onto the Footboard (I) by pressing in firmly and making sure poles remain tight.

### STEP 2 - Figure 1

Next, attach Bed Frame (\*Not Included) to each post on Footboard Panel (I) using 2 Allen Bolts (A), & 2 Flat Washers (E) per post. Tighten all bolts with Allen Wrench (F) provided.

**FIGURE 1**

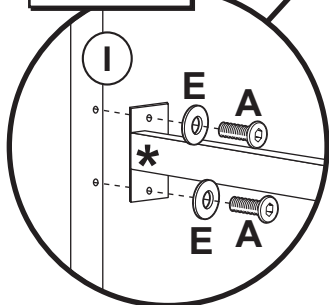


### STEP 3 - Figure 3

Attach Leg Extensions (J) to Headboard (H) using 2 Allen Bolts (B) and 2 Flat Washers (E) each.

### STEP 4 - Figure 2

Next, attach the Bed Frame (\*Not Included) to each Leg Extension (J) using 2 Countersunk Allen Bolts (C) from the outside, and 2 Flat Washers (E) and 2 Hex Nuts (D) per post. Tighten all nuts and bolts using the Allen & Hex Wrenches (F & G) that have been provided.


**FIGURE 2**

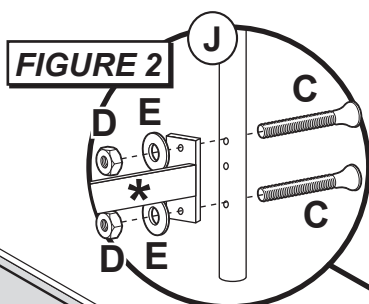

### STEP 5

Slide Short Canopy Posts (L) on to Headboard (H), pressing in firmly and making sure poles remain tight.

**FIGURE 3**

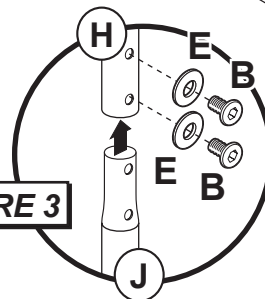

\*Bed Frame  
(not included)

